

Instruction Manual  
Coffee Maker

Mode D'emploi  
Cafetière

Manual de instrucciones  
de cafetera automática

Manuale di istruzioni  
Macchine da caffè



**DC87T / DC89TTC Series / Serié**

**PRODUCT REGISTRATION / Registro Del Producto  
ENREGISTREMENT DU PRODUIT / Registro Del Prodotto**

**Register this product on-line** and receive a free trial issue of Cook's Illustrated.  
Visit [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi). (U.S. and Canada)

**Enregistrez ce produit en ligne** et recevez un numéro gratuit de Cook's Illustrated.  
Visitez [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi). (E.U. et Canada)

**Registre este producto en línea** y reciba un ejemplar gratis de Cook's Illustrated.  
Visite [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi). (Los Estados Unidos y Canada)

**Registra questo prodotto "on-line"** per riceuere una copia omaggio délla rivista.  
Visita [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi). (Stati Uniti e Canada)

**SERVICE CENTERS / Centros De Servicios  
CENTRES DE RÉPARATION / Centri Di Servizio**

Visit [www.delonghi.com](http://www.delonghi.com) for a list of **service centers** near you. (U.S. and Canada)

Visitez [www.delonghi.com](http://www.delonghi.com) pour y voir une liste des centres de réparation  
proches de chez vous. (E.U. et Canada)

Visite [www.delonghi.com](http://www.delonghi.com) para ver la lista de centros de servicios cercanos a  
usted. (Los Estados Unidos y Canada)

Visita [www.delonghi.com](http://www.delonghi.com) per una lista dei centri di servizio a te piu vicini.  
(Stati Uniti and Canada)

Read and Save These Instructions - Lisez et conservez ces instructions  
Guardar estas instrucciones después de haberlas leído - Leggete e conservate queste istruzioni

## INTRODUCTION

Thank you for choosing De'Longhi!

A steadfast commitment to quality and innovation has made De'Longhi a leader in household appliances around the world for over 100 years. Our Italian heritage is reflected in every product, every feature and every design. And we are dedicated to creating products that enhance and benefit the lives of our consumers. We hope that you'll enjoy your De'Longhi appliance for years to come!

Now that you've discovered us, we think you'll agree, that each and every De'Longhi appliance is truly a "Living Innovation".

Get to know us better...visit us at [www.delonghi.com](http://www.delonghi.com) for our full line of products.



*Living innovation*

## TABLE OF CONTENTS

Product Registration.....	<i>Front Cover</i>
Service Centers.....	<i>Front Cover</i>
Important Safeguards.....	4
Short Cord Instructions.....	6
Before First Use.....	6
Know Your Coffee Maker.....	7
Understanding the Controls.....	10
Setting the Clock.....	11
Delaying the Brew Cycle.....	11
Operating Your Coffee Maker.....	12
Decalcification.....	16
Cleaning Your Coffee Maker.....	17
Limited Warranty.....	18
Customer Service.....	19
Purchase Parts and Accessories.....	19
Corporate Information.....	19
Technical Information.....	15

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury.

1. Read all instructions carefully.
2. Watch out for the release of steam, and never open the filter basket door during the brewing cycle.
3. Always lift the filter holder by the handle.
4. Do not touch hot surfaces. Use the handle on the carafe.
5. Never touch the warming plate.
6. To protect against electrical shock, do not place cord, plug or coffee maker in water or other liquid.
7. Close supervision is necessary when any appliance is used by or near children.
8. Turn off and unplug from outlet before filling with water, when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to authorized service facility for examination, repair or adjustment.
10. The use of accessory attachments is not recommended by the manufacturer. It may be dangerous and should be avoided.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces. Wind excess cord into the cord storage device.
13. Do not place on or near hot gas or electric burner, or in heated oven.
14. Always plug cord into the wall outlet before turning on any controls. To disconnect turn power OFF, then remove plug from wall outlet.
15. Always use cold water to make coffee. Warm water or other liquids could cause damage to the coffee maker. Always make sure there is water in the tank before turning the machine on.
16. Scalding may occur if the cover is lifted or removed during the brewing cycle.
17. Do not use this appliance for other than intended use.
18. Do not set a hot carafe on a wet or cold surface.
19. Do not place hot carafe on or near paper, cloth or other flammable material.
20. Never use the carafe on a range top or in a microwave oven.

## IMPORTANT SAFEGUARDS

21. Do not allow liquid to evaporate from carafe. Do not heat carafe when empty.
22. Do not move entire unit when carafe contains hot liquid.
23. Use the lid on the carafe while brewing and pouring coffee.
24. Discard carafe if damaged in any manner, or a carafe having a loose or weakened handle. A chip or crack could result in breakage or contaminate liquid contents with glass particles.
25. Do not clean carafe with scouring powders, steel wool pads or other abrasive materials.
26. This carafe is designed for use with this coffee maker only.
27. **WARNING:** To reduce the risk of fire or electrical shock, do not remove the bottom cover. No user serviceable parts inside. Repairs should be performed by authorized service personnel only. **NOTE:** Do not immerse in any liquid.
28. **WARNING:** Do not lift the water tank lid during operation, could cause severe burns. Always lift the lid by the opening lip and when the unit is turned off.
29. Do not touch hot parts.
30. Save these instructions.

**Household Use Only**  
**SAVE THESE INSTRUCTIONS**

## SHORT CORD INSTRUCTIONS

A short power cord is provided to reduce the risk resulting from entanglement or tripping over a longer cord. Longer detachable power supply cords are available and may be used if care is exercised in their use. If a longer detachable power cord or extension cord is used (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally. The electrical rating of the appliance is listed on the bottom of the unit. If the appliance is of the grounded type, the extension cord should be a grounded type 3 wire cord. This appliance has a polarized plug. One blade is wider than the other. To reduce the risk of electrical shock this plug will fit in a polarized plug only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## BEFORE FIRST USE

Place the box on a large, sturdy flat surface. Carefully unpack your coffee maker and remove all packaging material and literature. Remove any labels or stickers from the coffee maker. To remove any dust that may have accumulated during packaging, you may wipe the unit with a clean, damp cloth. Dry thoroughly. Do not immerse the coffee maker in water or other liquid. Clean the carafe, carafe lid, filter basket and filter in warm water with mild detergent. Rinse and dry thoroughly. Do not use harsh or abrasive cleaners. (See "Cleaning Your Coffee Maker" section of this manual for detailed instructions.) Keep all plastic bags away from children.

**NOTE: We recommend that prior to brewing your first pot of coffee, operate the coffee maker once or twice with water only and without ground coffee or with just a small amount of ground coffee. This will remove any dust that may have settled inside the coffee maker, which may affect the flavor of the coffee.**

**IMPORTANT:** Use cold water only. The automatic drip system works best with cold water.

# KNOW YOUR COFFEE MAKER

MODEL DC87T DESCRIPTION (FIGURE 1)




①

②


- |                                      |                                       |
|--------------------------------------|---------------------------------------|
| 1. Permanent Gold-Tone Filter        | 7. Water Tank Lid                     |
| 2. Filter Basket                     | 8. Control Panel with Digital Display |
| 3. Filter Basket Door                | 9. Door Release Button                |
| 4. Anti-Drip Device (Pause 'N Serve) | 10. Cord Storage                      |
| 5. Glass Carafe and Lid              | 11. Water Level Indicator             |
| 6. Non-Stick Warming Plate           |                                       |

# KNOW YOUR COFFEE MAKER

MODEL DC89TTC DESCRIPTION (FIGURE 2)

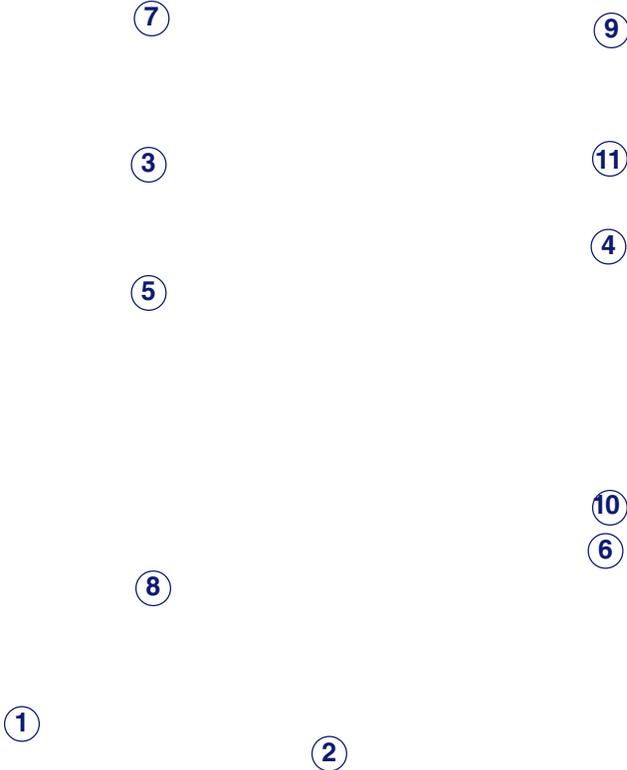

- |   |                                       |
|---|---------------------------------------|
| 1. Permanent Gold-Tone Filter           | 7. Water Tank Lid                     |
| 2. Filter Basket                        | 8. Control Panel with Digital Display |
| 3. Filter Basket Door                   | 9. Door Release Button                |
| 4. Anti-Drip Device (Pause 'N Serve)    | 10. Cord Storage                      |
| 5. Double-Walled Thermal Carafe and Lid | 11. Water Level Indicator             |
| 6. Non-Stick Plate                      |                                       |

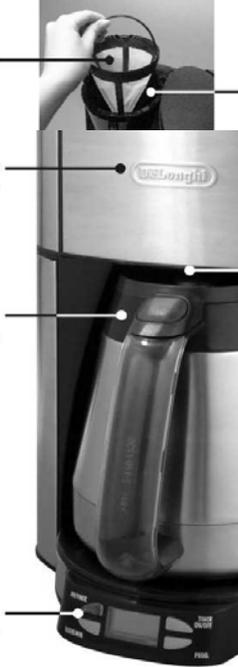

## KNOW YOUR COFFEE MAKER

### *Features Available On Both Series:*

1. **24-HOUR PROGRAMMABLE TIMER** Is convenient and easy-to-use. Just set the timer the night before, and wake up to the aroma of fresh-brewed coffee.
2. **PERMANENT GOLD-TONE FILTER:** Specially designed to keep even the finest grounds out of your coffee. And because it's more durable than most filters, it lasts longer.
3. **ERGONOMIC HANDLE:** For comfortable use and easy handling.
4. **SHOWER HEAD DESIGN:** Helps to extract your coffee's full, natural flavor by allowing water to completely saturate all coffee grounds.
5. **SWING-AWAY FILTER BASKET:** Just swing open the filter basket for quick removal of the permanent gold-tone filter.
6. **WATER LEVEL INDICATOR:** Large easy-to-read numbers indicate how many cups of water have been poured into the coffee maker.
7. **CORD STORAGE:** Keeps power cord out of harm's way when coffee maker is not in use.
8. **PAUSE 'N SERVE:** Allows you to interrupt the brewing cycle and pour a cup of coffee before the entire carafe is finished brewing. To restart the brewing process, return the carafe to the plate and coffee will automatically begin flowing through filter basket. Make sure carafe is placed all the way on the plate. **CAUTION:** Do not remove carafe for longer than 30 seconds or the filter basket will overflow.

### *Features Available Only On The DC87T Series:*

1. **NON-STICK WARMING PLATE:** Keeps coffee hot after brewing is complete, and makes cleanup quick and easy.
2. **2-HOUR AUTOMATIC SHUT-OFF** for safe operation.

### *Features Available Only On The DC89TTC Series:*

1. **DOUBLE-WALLED THERMAL CARAFE** The unique vacuum-sealed design retains heat, to keep coffee hot for hours. And it preserves that great coffee flavor from the moment you brew it.
2. **NON-STICK PLATE:** Makes cleanup quick and easy.
3. **BREW AUTOMATIC SHUT-OFF** Coffee maker automatically shuts itself off after brewing is complete.

## UNDERSTANDING THE CONTROLS

1. CLOCK / TIMER DIGITAL DISPLAY: Clock with AM/PM indicator. It displays the clock and timer settings. See “Setting the Clock” section of this manual for programming the time.
2. ON/TIMER LIGHT:
  - When illuminated “RED” it indicates that the coffee maker is in the brewing stage.
  - When illuminated “GREEN” it indicates that the coffee maker is in the delayed brewing cycle stage, and it’s awaiting the present brew time.
  - When the light is off, this indicates that the coffee maker is OFF.
3. TIMER ON/OFF BUTTON: This button controls three settings.
  - Press the button once for AUTO setting. The light illuminates “GREEN” and will show “AUTO” in the upper left-hand corner of the digital display.
  - Press the button twice for ON. The light illuminates “RED”.
  - Press the button three times to the shut the unit OFF. The light goes off. The digital display will return back to the clock setting unless it is unplugged.
4. HOUR / MIN BUTTON: These buttons advance the **hour** and **minute** display for the clock and timer. See “Setting the Clock” section of this manual for setting the time.
5. PROG BUTTON: This button allows you to program the coffee maker up to 24 hours before the desired brewing time. See “Delaying the Brewing Cycle” section of this manual.



(FIGURE 3)

## SETTING THE CLOCK

1. The number on the digital display will flash until the time is set.
2. To set the correct time of day first press the "PROG" button, and then press the "HOUR / MIN" button until the desired hour is reached.
3. To set the minutes, press the "PROG" button again, and then press the "HOUR / MIN" button until the desired minutes are reached. Once the minutes display stops flashing (after a couple of seconds) the time will be set.
4. Use the AM / PM indicator on the left side of the digital display when setting the time. **NOTE:** Unplugging the unit will reset the clock to 12:00.

## DELAYING THE BREW CYCLE (Timer)

1. To preset your coffee maker to brew at a later time first verify that the clock is set to the correct time. (See "Setting the Clock" section of this manual for details).
2. Press the "PROG" button until the digital display shows "BREW" in the upper right-hand corner. This indicates that you are setting the delayed brew time.
3. Press the "HOUR / MIN" button until the desired brew "HOUR" is reached. To set the minutes, press the "PROG" button again, and then press the "HOUR / MIN" button until the desired brew "MINUTES" are reached.
4. **NOTE:** The AM/PM indicators are on the left side of the digital display.
5. When you have reached the desired delayed brew time, press the "TIMER ON/OFF" button once. "AUTO" will show in the upper left-hand corner of the digital display, the ON/TIMER indicator light will illuminate "GREEN", and the display will show the current time. This indicates that the coffee maker's delayed brew time has been set.
6. **NOTE:** Every timer setting needs to be performed within 7 seconds, otherwise the digital display will automatically default back to the current time.

## OPERATING YOUR COFFEE MAKER

### PREPARING COFFEE MAKER FOR BREWING COFFEE:

1. Place the coffee maker on a flat, level surface away from any edge.
2. Plug the unit into a 120V / 60Hz only outlet.
3. The lid of the carafe must be fitted properly during the brewing process. And the carafe must be set on the non-stick plate.
4. **WARNING: The lid of the coffee maker and the filter basket door must be completely closed during operation.** If the filter basket door is not completely closed, the Pause 'N Serve feature will not function properly. It could cause hot water or hot coffee to overflow.

### FILLING THE WATER TANK:

5. Open the hinged lid of the water tank, located on top of the coffee maker.
6. Fill the tank with the desired amount of cold water. The water level must be between the top and bottom cup marks. **NOTE:** Do not fill above the MAX level.
7. Always use cold water.


**NOTE:** The amount of brewed coffee after the brewing process is complete will always be slightly less than the amount of water placed in the coffee maker's water tank, since some water is absorbed by the coffee grounds and filter. Add a little extra water at the beginning so that you have the exact number of cups desired.

### PREPARING THE COFFEE:

8. Open the filter holder door by pressing the "OPEN" button on the top of the machine. Swing the filter holder door to the left. Be sure the filter basket and filter are properly positioned inside the filter holder. The permanent gold-tone filter (included) may be used instead of or in addition to a paper filter (not included). If using paper filters, insert a #4 cone-shaped filter into the filter basket before filling with coffee.
9. Place the desired amount of ground coffee in the filter. According to coffee industry standards, use one standard coffee measure (2 level tablespoons) of grounds for each cup/mug of water. After using your coffee maker several times, the amount of coffee may be adjusted to suit your particular taste by decreasing or increasing the amount of coffee used. **NOTE:** Be sure to use coffee grounds prepared specifically for use with automatic drip coffee makers.

## OPERATING YOUR COFFEE MAKER

10. Swing the filter door closed until it snaps into place. **WARNING:** Do not operate your coffee maker if the door does not close completely. If the door does not close completely, check to see that the filter basket is properly positioned inside the filter holder.
11. **DC87T Series:** Make sure the carafe lid is down.  
**DC89TTC Series (Figure 4):** Secure the lid on the carafe until it locks into place. Indicators on top of the lid show how to turn the lid for locked and open positions. Place the carafe on the non-stick plate. For brewing, the lid should be completely closed.
12. Plug the unit into an outlet and press the "TIMER ON/OFF" button once. The "ON/TIMER" indicator light will illuminate "GREEN". To begin the brewing process, press the "TIMER ON/OFF" button once again and the "ON/TIMER" indicator light will illuminate "RED".
13. In a few minutes the coffee maker will complete the brewing cycle. **NOTE:** To terminate the brewing process at any time, press the "TIMER ON/OFF" button once and the "ON/TIMER" indicator will no longer be illuminated.
14. **NOTE:** If you would like a cup of coffee before the full pot is brewed, the Pause 'N Serve feature allows you to interrupt the brewing process. The brewing process does not stop during this period; only the flow of coffee from the basket. **Do not remove the carafe for longer than 30 seconds or the coffee may overflow from the basket stops.** While we offer this feature, we do not recommend you pour the coffee before the cycle has reached completion, since the coffee brewed at the beginning of the cycle has a flavor which is very different from the flavor at the end of the cycle. Removing a cup during the brewing cycle will alter the flavor of the finished pot.

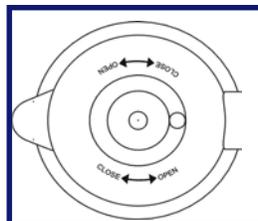

(FIGURE 4)

## OPERATING YOUR COFFEE MAKER


15. **DC87T Series:** The non-stick warming plate ensures that the coffee maintains the correct temperature after brewing is complete. Once brewing is complete, the coffee maker will remain on for 2 hours and then automatically shut itself off.

**DC89TTC Series:** Coffee will remain hot for up to two hours for those models with the double-walled thermal carafe. Once brewing is complete, the coffee maker will automatically shut itself off.

16. The non-stick warming plate (DC87T series only) and thermal carafe (DC89TTC series only) will keep your coffee hot, but the sooner you drink it, the better it will taste.
17. **DC87T Series:** To pour coffee after brewing is complete, remove the carafe from the non-stick warming plate. Once the desired amount of coffee has been poured, return the carafe to the non-stick warming plate.

**DC89TTC Series (Figure 5):** Press the “POUR” button on the top of the carafe’s handle and tilt the carafe to pour into a cup or mug.

18. Push the “TIMER ON/OFF” button to turn the unit OFF when the carafe is empty or when the coffee maker is not in use. After brewing cycle is complete, discard the grounds and rinse the permanent gold-tone filter and filter basket thoroughly with water. (See “Cleaning Your Coffee Maker” section of this manual for more details).
19. **NOTE:** If you have not used the coffee maker in awhile, run one cycle with water only (without coffee) to clean it out. Fill the water tank to the top cup when you perform this procedure. **WARNING:** Never put the carafe in the microwave.

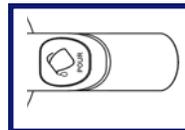

(FIGURE 5)

## OPERATING YOUR COFFEE MAKER

### HINTS FOR GREAT TASTING COFFEE

1. A clean coffee maker is essential for making great tasting coffee. Regular cleaning is recommended, as specified in the “Cleaning Your Coffee Maker” section of this manual.
2. Always use fresh, cold water in your coffee maker.
3. Fine grind coffee promotes fuller extraction and provides rich, full-tasting coffee. Regular grind will require slightly more coffee grounds per cup to provide the strength of a finer grind.
4. Store coffee grounds in a cool, dry place. Once coffee has been opened, keep it tightly sealed in refrigerator to maintain freshness.
5. For optimum coffee, buy whole beans and grind them just before brewing.
6. Do not re-use coffee grounds since this will lessen coffee flavor.
7. Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
8. Small oil droplets on the surface of brewed black coffee are due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffee is used. Over-extraction may also cause oiliness, indicating a need to clean your coffee maker.

## DECALCIFICATION

Calcium deposits may build up in the coffee maker as a result of minerals commonly found in drinking water. The build-up is normal and may result in a slow down of the coffee maker's brewing time. The slow down can be eliminated by periodically decalcifying the coffee maker.

### HOW TO DECALCIFY YOUR COFFEE MAKER

1. To decalcify, fill the carafe with cold water and two tablespoons of white vinegar.
2. Pour the solution into the water tank, and then close the lid. Place the carafe on the non-stick plate and allow the coffee maker to brew the vinegar solution.
3. While decalcifying, do not use a filter in the filter basket. When the vinegar solution has finished brewing, empty the carafe and rinse it out with cold water.
4. Refill the water reservoir with cold water only and run another brew cycle to remove any remaining vinegar solution. Repeat if necessary.

## CLEANING YOUR COFFEE MAKER

1. **WARNING:** Make sure your coffee maker is unplugged before attempting to clean. To protect against electric shock, do not immerse cord, plug or unit in water or other liquid.
2. The outside of your coffee maker can be cleaned by wiping the surface with a damp, soft cloth. **WARNING:** Never immerse the coffee maker in water or other liquid.
3. Clean inside of carafe with a damp cloth and mild detergent. Do not use harsh abrasives or scouring pads on carafe, it will scratch the surface.
4. Carafe lid and removable filter basket may be washed with warm, soapy water. Rinse and dry thoroughly. Alternatively, the carafe lid and filter basket may also be placed in the top rack of the dishwasher. Do not place any other parts of the coffee maker in the dishwasher.
5. To clean the permanent gold-tone filter, empty the grounds and rinse thoroughly.
6. Do not clean the inside of the water tank with a cloth as the cloth may have a lint residue that could clog the coffee maker.
7. For stubborn stains, use a nylon or plastic pad with a non-abrasive cleanser (inside of coffee maker only). Do not use metal scouring pads or abrasive cleansers.
8. To decalcify your coffee maker, please refer to the “Decalcification” section of this manual.

## LIMITED WARRANTY

*De'Longhi is the distributor of Kenwood home appliances. This warranty applies to all home appliances with De'Longhi or Kenwood brand names.*

### **What does the warranty cover?**

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current ( AC ) circuit.

### **How long does the coverage last?**

This warranty runs for one year ( 1 ) from the purchase date found on your receipt and applies only to the original purchaser for use.

### **What is not covered by the warranty?**

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

### **How do you get service?**

If repairs become necessary, see contact information below:

**U.S. Residents:** Please contact our toll free hotline at 1-800-322-3848 or log onto our website at [www.delonghi.com](http://www.delonghi.com). For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

**Residents of Canada:** Please contact our toll free hotline at 1-888-335-6644 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

**Residents of Mexico:** Please refer to the Limited Warranty statement for Mexico.

***Please refer to the back page of the manual for De'Longhi addresses.***

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

### **How does state law apply?**

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

## IMPORTANT INFORMATION

### CUSTOMER SERVICE

Visit [www.delonghi.com](http://www.delonghi.com) or call

**U.S. Residents:** 1-800-322-3848 (8:30 - 5:00 EST) Mon-Fri

**Canada Residents:** 1-800-335-6644 (8:30 - 4:30) Mon-Fri

### PURCHASE PARTS AND ACCESSORIES

Visit [www.delonghi.com](http://www.delonghi.com) or call:

**U.S. Residents:** 1-800-865-6330 (8:30 – 5:00 EST) *Mon-Fri*

**Canada Residents:** 1-888-335-6644 (8:30 – 4:30) *Mon-Fri* or fill out the form provided.

### CORPORATE INFORMATION

De'Longhi America, Inc.  
Park 80 West, Plaza One  
Saddle Brook, NJ 07663  
1-800-322-3848

De'Longhi Canada, Inc.  
6150 McLaughlin Court  
Mississauga, Ontario  
L5R 4E1 Canada  
1-888-335-6644

Centro Nacional de Servicio:  
Fiducia Italiana S.A. de C.V.  
Hortencia 129 Col. Florida  
México D.F., C.P. 01030  
01-800-711-88-05 (lada sin costo)  
56-62-53-68 y 69 (D.F.)

De'Longhi S.p.A.  
Via L. Seitz 47  
Treviso, Italy 31100

[www.delonghi.com](http://www.delonghi.com)

### TECHNICAL INFORMATION

Made in PRC  
Power Requirement: 120 Volts / 60 Hz  
Power Consumption: 900 Watts