 




Member's Mark®

Party Cart Guide

For Model C08PC1

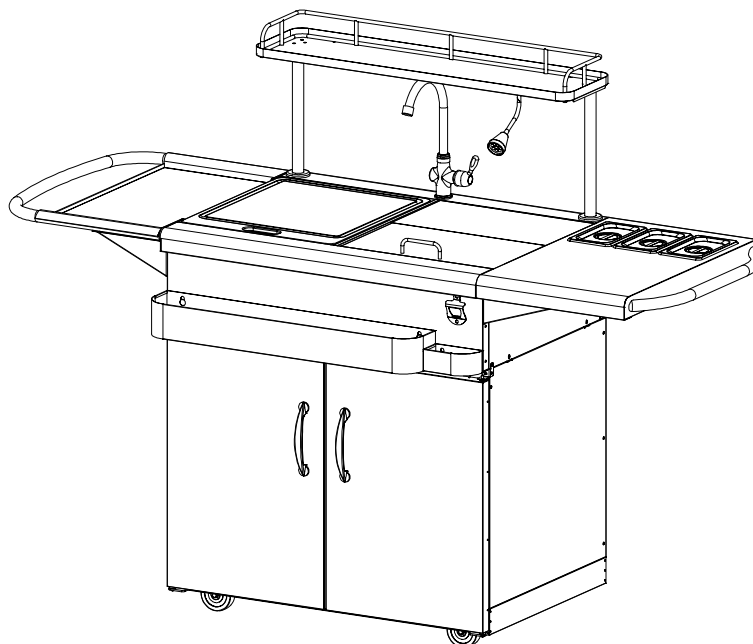

Stop!

Missing a part? No need to go back to SAM'S CLUB!

SAM'S CLUB does not stock parts for this item at the Club, but our team is here to help you. If you need parts, whether they are missing or damaged, please call our Toll Free Help Line **1-800-933-0527**.
Call us 8:30 AM to 5:00 PM Central Time, Monday through Friday.



Member's Mark®

OUR PROMISE

Providing quality products that exceed your expectations is our commitment.
The Member's Mark name stands for innovative products we believe offer a better value than the leading national brands.
You'll agree, or we'll refund your money.

For questions or comments regarding this product,
e-mail us anytime at member.response@membersmark.com
member.response@membersmark.com

Preassembly Information

1. Read through the entire Assembly Instructions before you begin.
2. Choose an area large enough to comfortably lay out all parts and hardware with enough room to easily maneuver.
3. Remove all components from the carton and use the Part and Hardware Diagrams to ensure all items are included and free of damage. If necessary, contact Customer Service at the number above to order any missing or replacement part before assembly.

⚠ WARNING

This product contains one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

TO THE INSTALLER OR PERSON ASSEMBLYING THIS CART:

Leave this Guide with the consumer.

TO THE CONSUMER:

Retain this Guide for future reference.

Limited Warranty

The manufacturer warrants to the **original consumer-purchaser** that this product shall be free from defects in workmanship and materials under normal and reasonable use when assembled and operated according to this Instruction Manual from date of purchase as follows:

One Year from Date of Purchase

The manufacturer will, at its option, refinish or replace any product or part found to be defective during the limited warranty period. There may be a shipping charge. The manufacturer may require you to return the part(s) claimed to be defective for its inspection, freight or postage prepaid. Contact our Customer Support Center as shown below before returning any part(s).

The manufacturer will require reasonable proof of purchase. **We strongly recommend you keep your sales receipt** and register your Party Cart. You can attach your receipt to this manual. This limited warranty does not cover the cost of any inconvenience or property damage due to failure of the product and does not cover damage due to misuse, abuse, alteration, improper or failure to perform normal and routine

maintenance, discoloration, scratches, rust, accident, damage arising out of transportation of the product, or normal wear and tear. This limited warranty will not apply to any Party Cart used for commercial use.

This limited warranty is the sole warranty given by the manufacturer and is in lieu of all other warranties; express or implied, including implied warranty of merchantability or fitness for a particular purpose. Neither manufacturer dealers nor the retail establishment selling this product have any authority to make any warranties or to promise remedies in addition to or inconsistent with those stated above.

This limited warranty applies only to products sold at retail, and is not transferable.

The manufacturer's maximum liability, in any event, shall not exceed the purchase price of the product paid by the original consumer-purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages. Therefore, the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and may also have other rights, which vary from state to state.

Customer Support Center

Thanks for purchasing our Member's Mark ® Party Cart. We're here to help you maximize your enjoyment and appreciation of your new Party Cart. Please don't hesitate to contact us should you have any questions regarding assembly, performance, warranty, or accessories. We have a full line of replacement parts available. Please have your model number ready before you contact us. We're here to serve You!

 
• If you need assistance or to order parts: **Call 1-800-933-0527, send a FAX to 1-847-252-1001, or email us at help@omahagrills.com.**

• Business hours: **Monday through Friday; 8:30AM-5:00PM Central Time.**


• Visit us on the web at: www.omahagrills.com

Parts List


1. Sink Frame Assembly....1PC

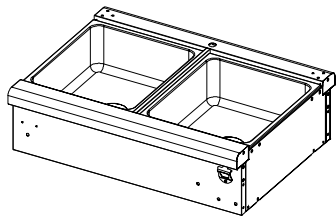

 
2. Sink Cover Assembly....1PC

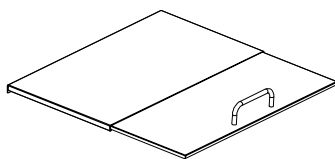

 
3. Cutting Board....1PC

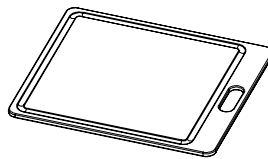

 
4. Faucet Assembly....1PC

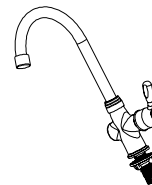

 
5. Bottle Rack....1PC

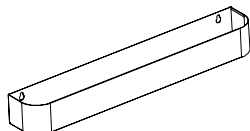

 
6. Bottle Cap Catcher....1PC

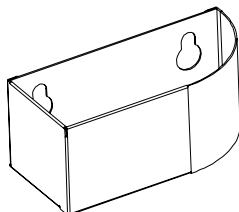

 
7. Drain Hose....1PC

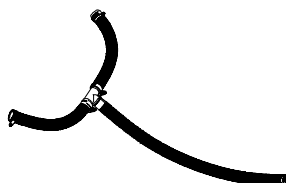

 
8. Cabinet Back Panel1PC

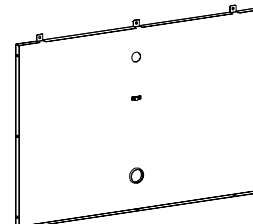

 
9. Cabinet Left Side Panel....1PC



 
10. Cabinet Right Side Panel....1PC

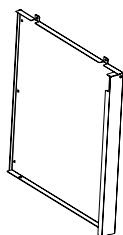

 
11. Crossbar....1PC

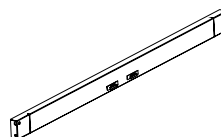

 
12. Cabinet Bottom Panel Assembly....1PC

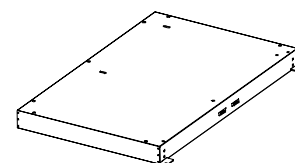

 
13. Faucet Hose....1PC



 
14. Organizer Basket Support....1PC

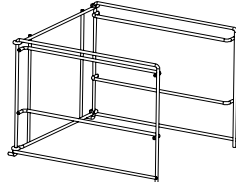

 
15. Organizer Basket2PCS

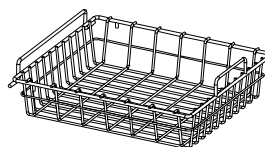

 16. Locking Swivel Caster....2PCS

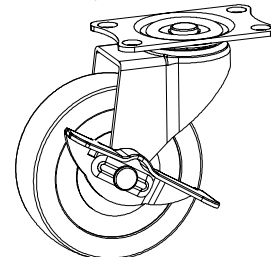

 
17. Swivel Caster....2PCS

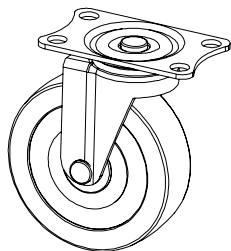


18. Door Handle....2PCS



 
19. Left Door Assembly....1PC

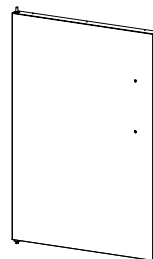

 
20. Right Door Assembly....1PC

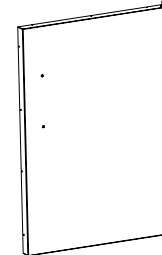

 
21. Top Shelf Support(R/L)....2PCS

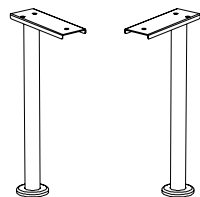

  
22. Top Shelf Railing....1PC








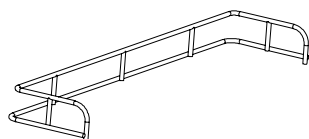






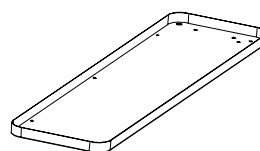

         
23. Top Shelf....1PC

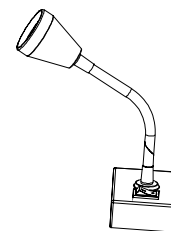

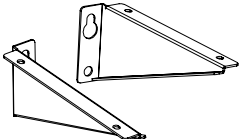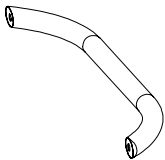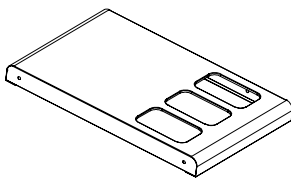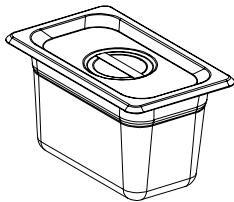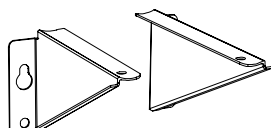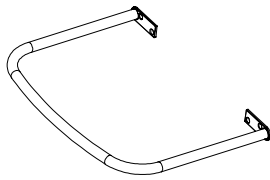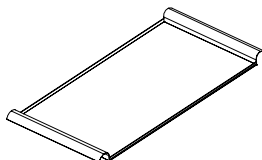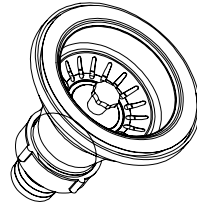  24. LED Spotlight....1PC



25. Side Shelf Front & Back Support....2PCS 	26. Side Shelf Handle....1PC 	27.Side Shelf....1PC 	28.Condiment Pan With Lid....3PCS 
29. Towel Bar Handle Front & Back Support....2PCS 	30. Towel Bar Handle....1PC 	31.Serving Tray....1PC 	32.Drain Hose Connector....2PCS 

 
Hardware List						
A		Phillips Head Bolt M6*16mm	30PCS	E		Phillips Head Screwdriver 1PC
B		Phillips Head Bolt M4*10mm	48PCS	F		Battery Size AAA 3PCS
C		Phillips Head Bolt M4*6mm	4PCS	G		Brass Male Fitting 1PC
D		Door Top Support (L/R)	2PCS			

⚠ WARNING

Always wear protective gloves when assembling your cart.


STEP 1

 Place the Cabinet Bottom Panel (12) upside down and use 16pcs M6*16 (A) bolts to attach two Locking Swivel Casters (16) and two Swivel Casters (17) to the cabinet bottom panel as shown. Note that the Locking Casters go on the back of the panel.

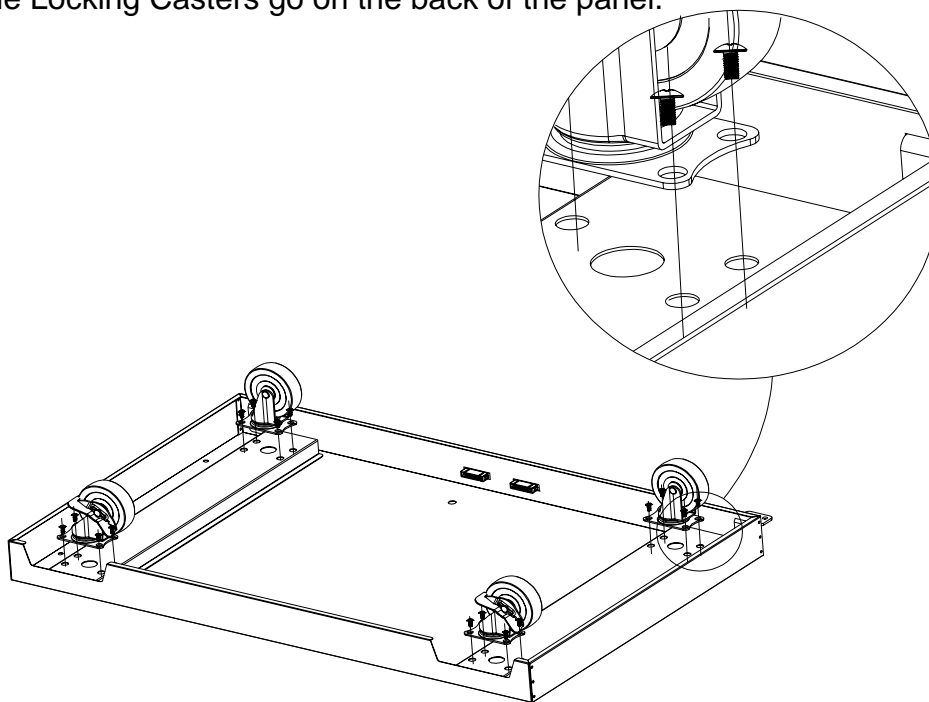


STEP 2

Turn the Cabinet Bottom Panel over and use 3pcs M4*10 (B) bolts to attach Cabinet Left Side Panel (9) to the Cabinet Bottom Panel.

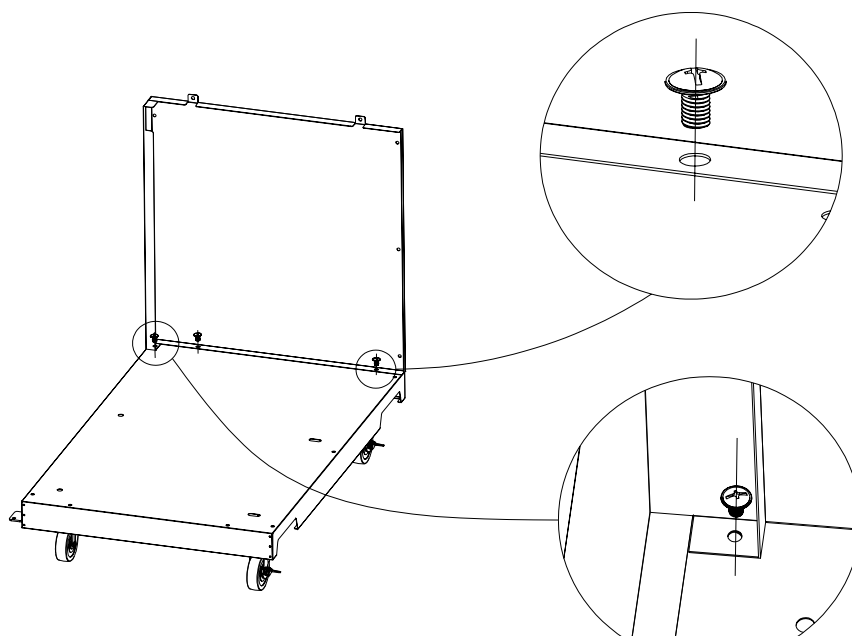


STEP 3

Attach Cabinet Back Panel (8) and Cabinet Left Side Panel using 3pcs M4*10 (B) bolts as shown.

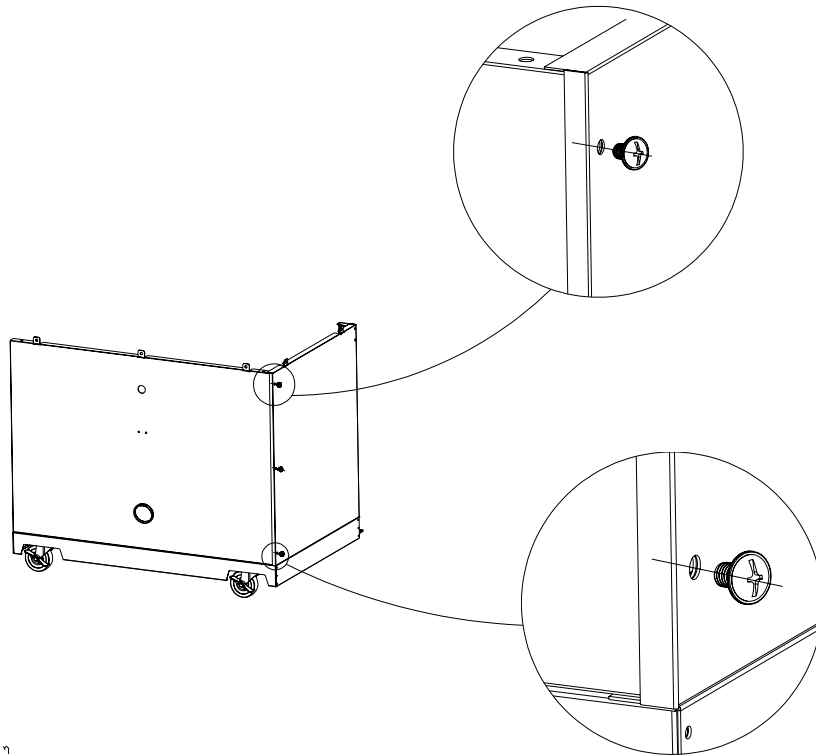


STEP 4

Attach Cabinet Back Panel and Cabinet Right Side Panel (10) using 3pcs M4*10 (B) bolts as shown.

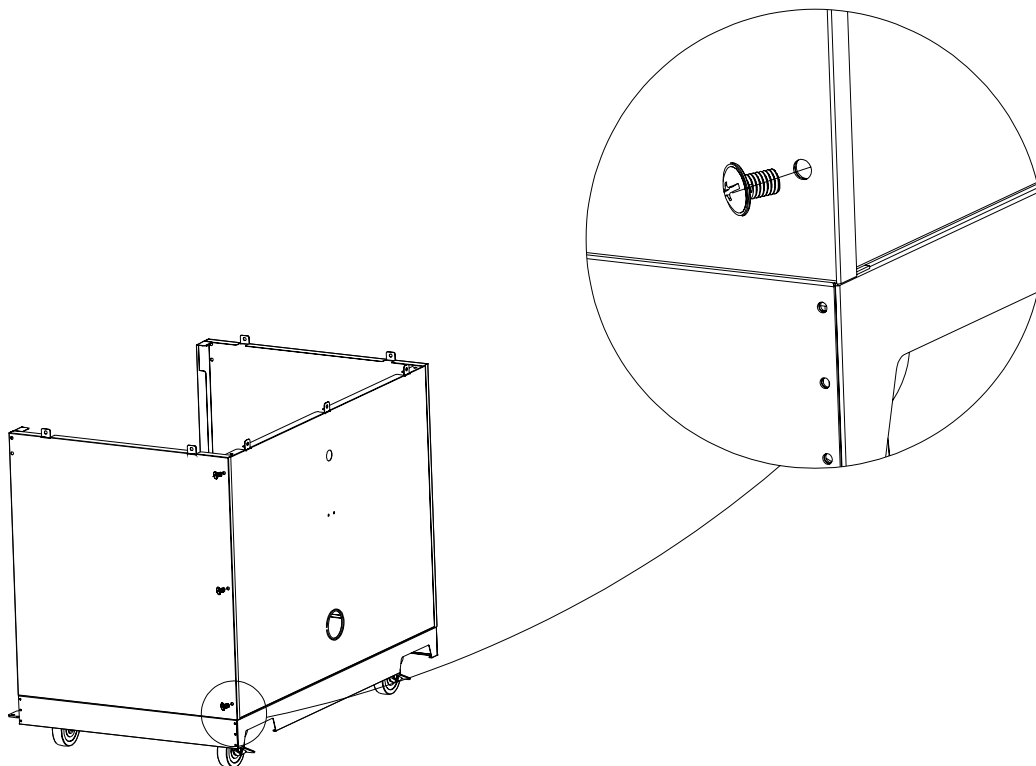


STEP 5

Attach Cabinet Back Panel and Cabinet Right Side Panel to the Cabinet Bottom Panel from inside of the cabinet using 6pcs M4*10 (**B**) bolts as shown.

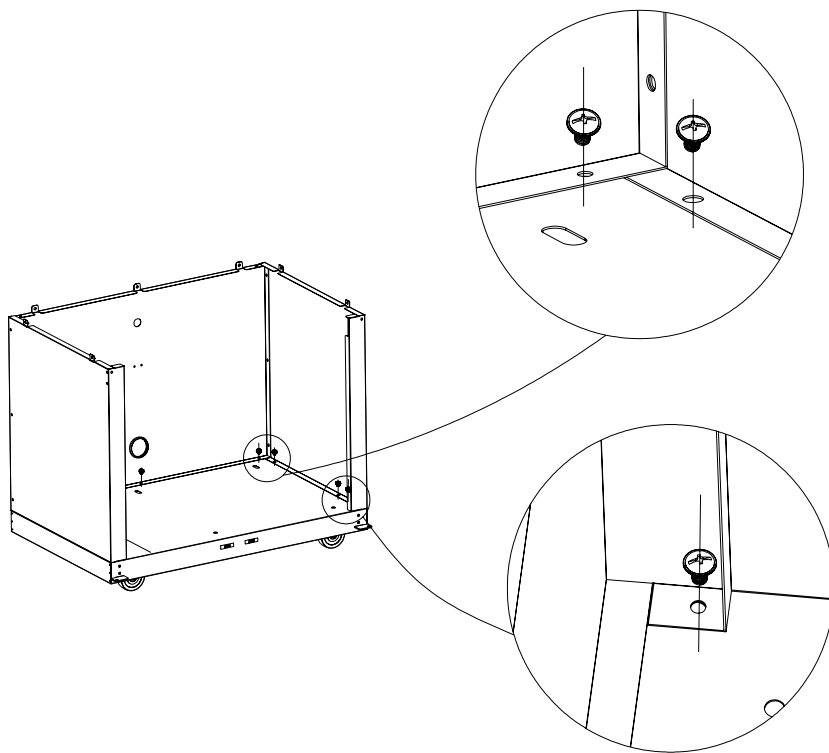


STEP 6

Attach Crossbar (11) to the lower holes of Cabinet Left Side Panel and Cabinet Right Side Panel using 2pcs M4*10 (**B**) bolts as shown. Remove the washer and nut from the Brass Male Fitting (**G**). Insert through the back of the cart and attach using the nut and washer as shown.

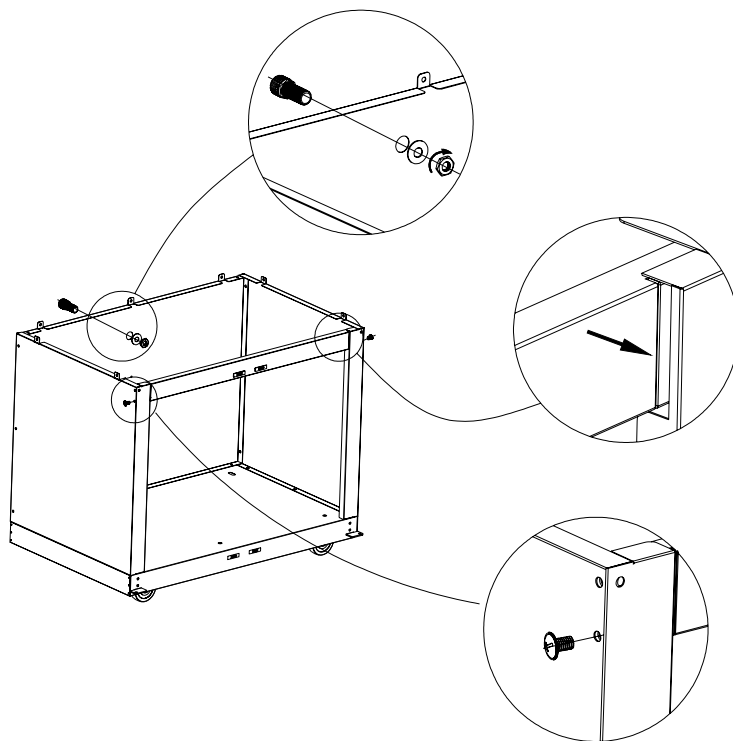


STEP 7

Attach Cabinet Door Right and Left Supports (**D**) to the Cabinet Left Side Panel and Cabinet Right Side Panel using 4pcs M4*10 (**B**) bolts as shown.

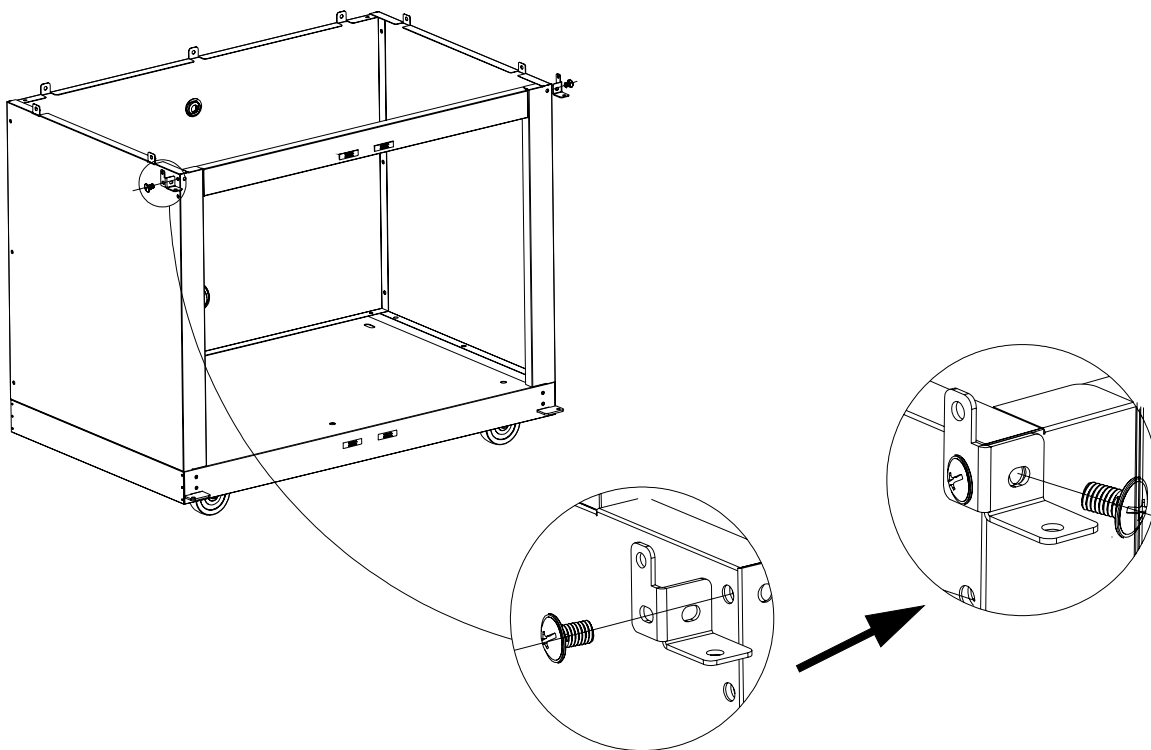

STEP 8


Remove sinks from the Sink Frame Assembly (**1**).

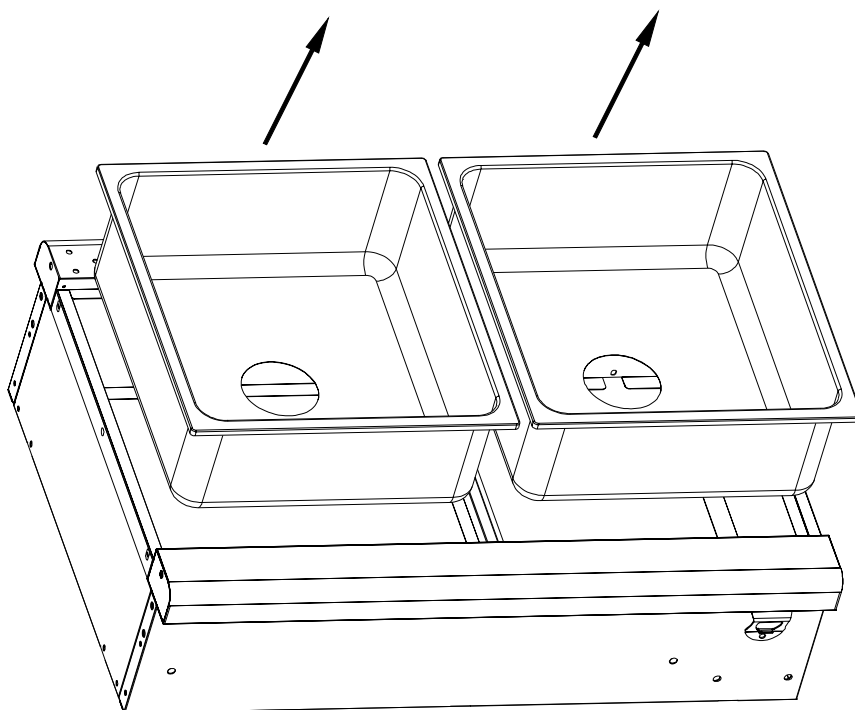

STEP 9


Place Sink Frame Assembly onto the cabinet and use 9pcs M4*10 (B) bolts to attach Sink Frame Assembly to the cabinet.

Note: Do not tighten all the bolts until you line up the holes of the Sink Frame with the holes of the Cabinet.

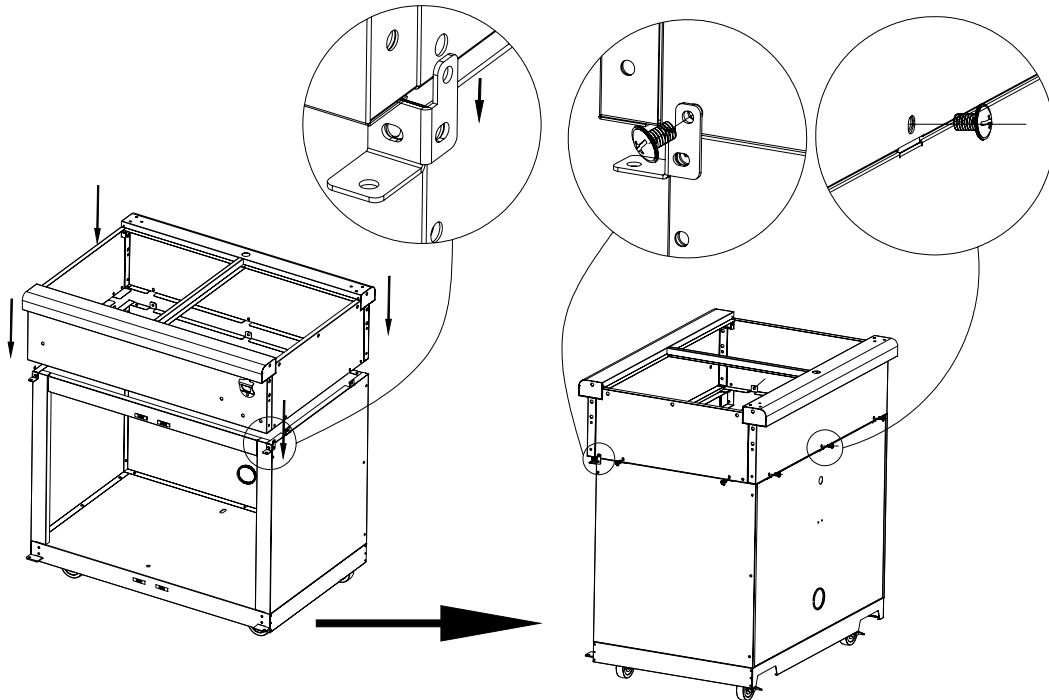

STEP 10

Remove the large plastic nut from the stem of the Faucet Assembly (4). Insert the faucet through the top of the cart and attach using the nut as shown.

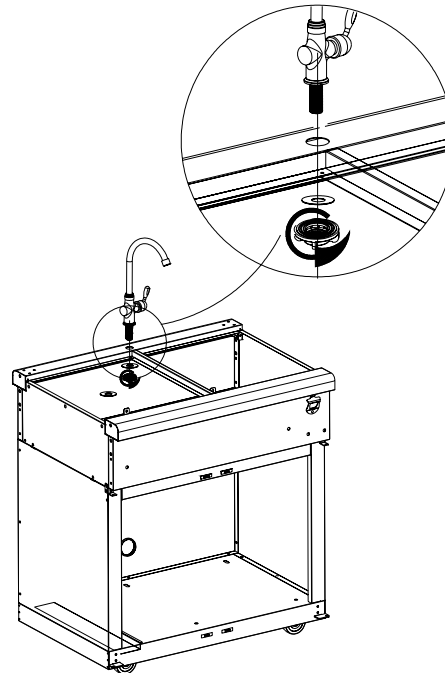


WARNING

We do not recommend using this faucet for drinking water.

STEP 11


Attach the Faucet Hose (13) to the bottom of the Faucet Assembly and to the end of the Brass Male Fitting as shown.

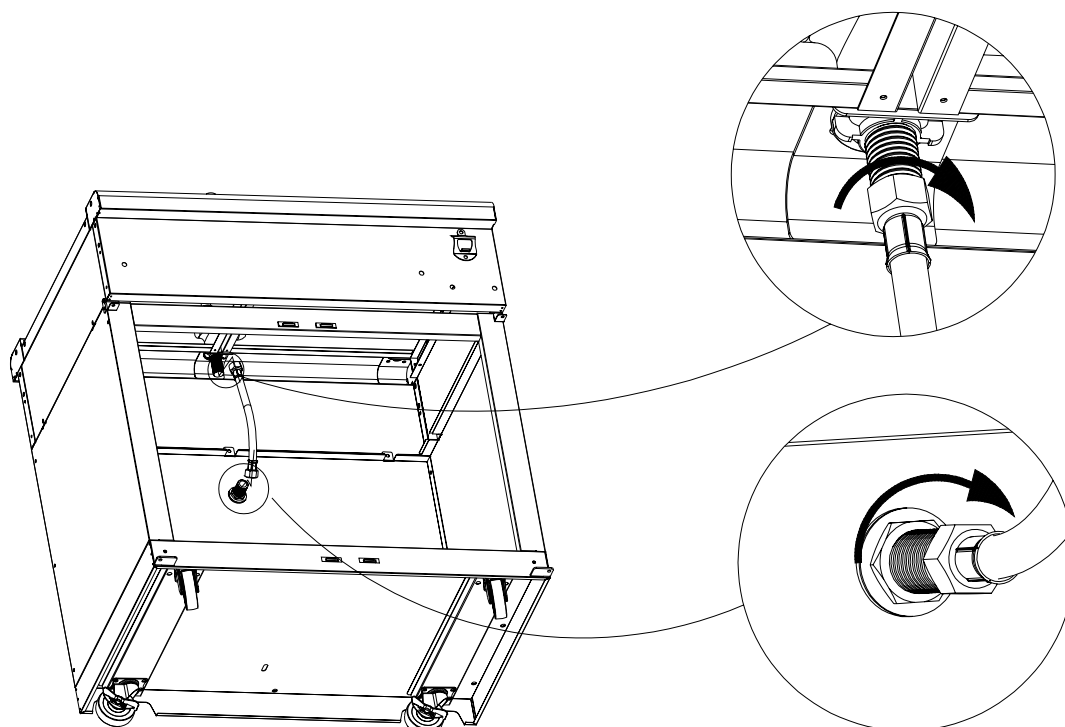

STEP 12


Unscrew the tops from the bottoms of the two Drain Hose Connectors (32). Attach the connectors to the sink as shown. Ensure the tops and bottoms of drain hose connectors are tight. Then insert the two sinks into the Sink Frame Assembly.

Note: Tighten this bolt to prevent any water leak.

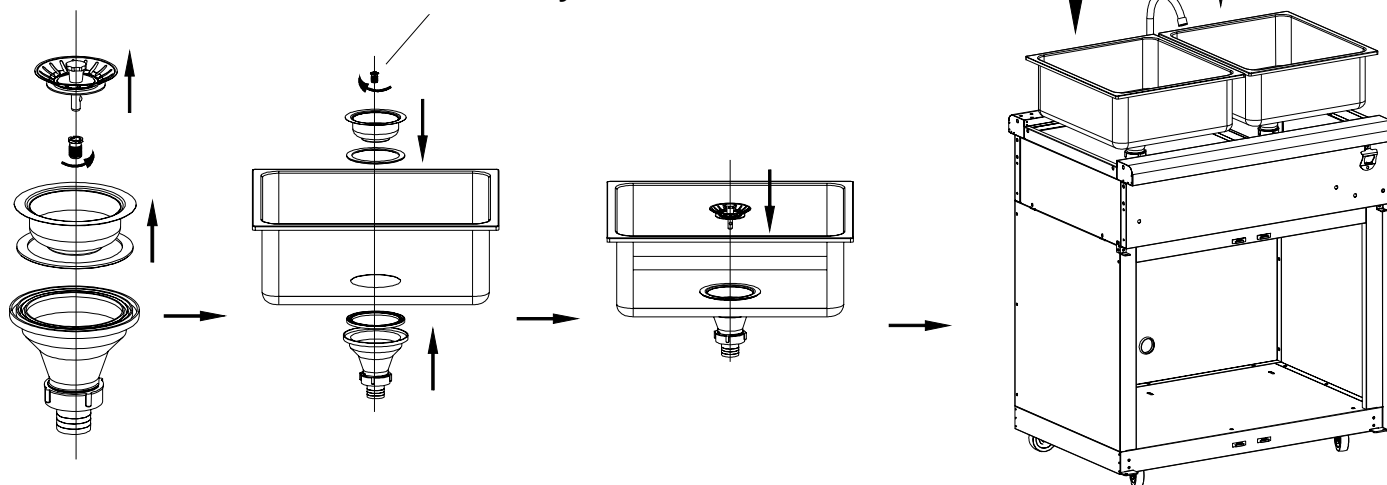


STEP 13

Connect an end of each hose to the drain of each sink. Then hang the lower portion of the Drain Hose (7) through the hose guide on the back panel of the cabinet as shown. Run the drain hose out of the cabinet through the lower hole in the back of the cabinet.

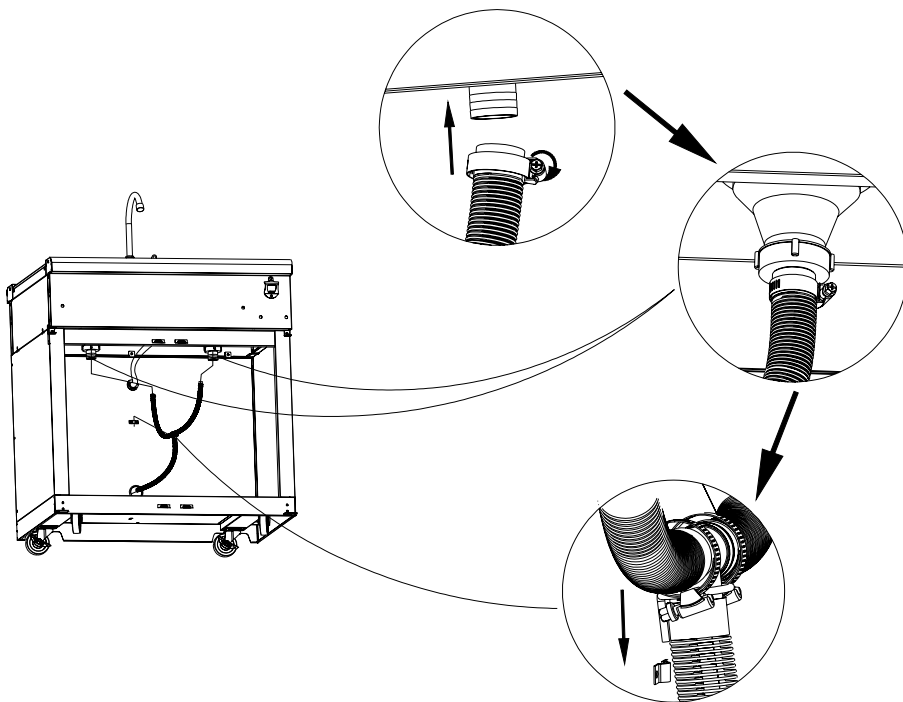


STEP 14

Insert the Organizer Basket Support (14) into the Cabinet Bottom Panel as shown.

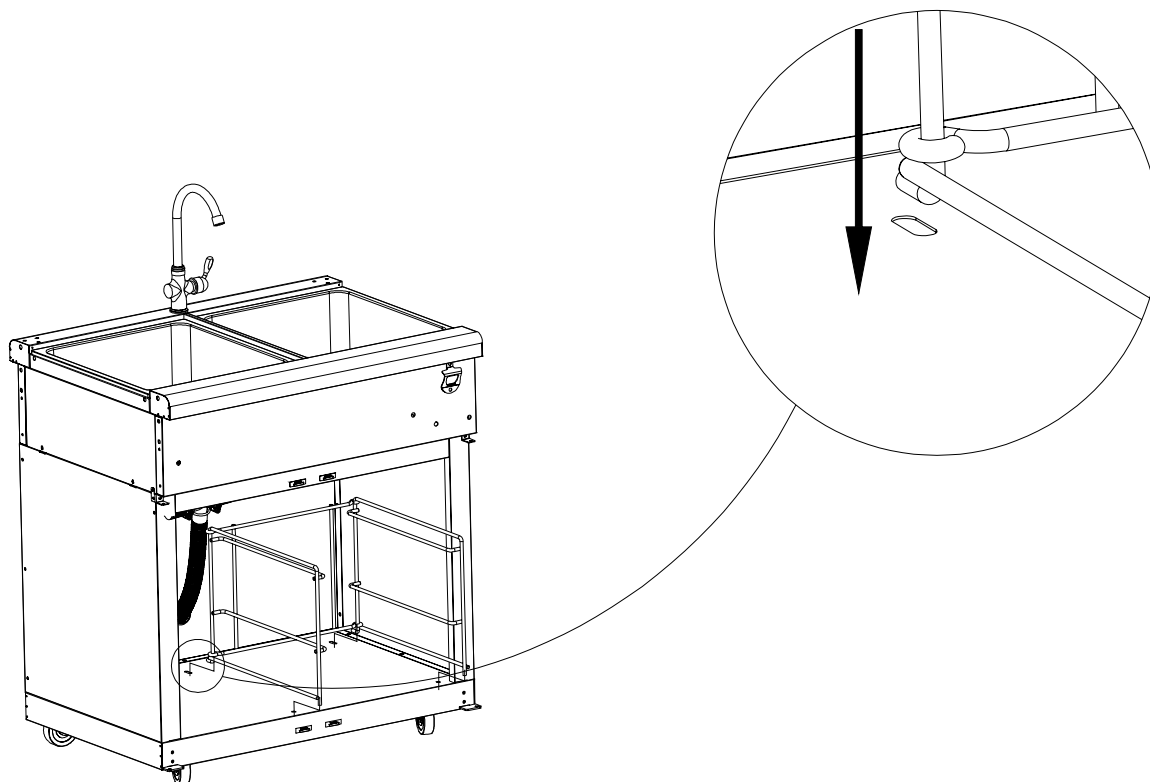


STEP 15

Slide the two Organizer Baskets (15) into the Organizer Basket Support as shown.

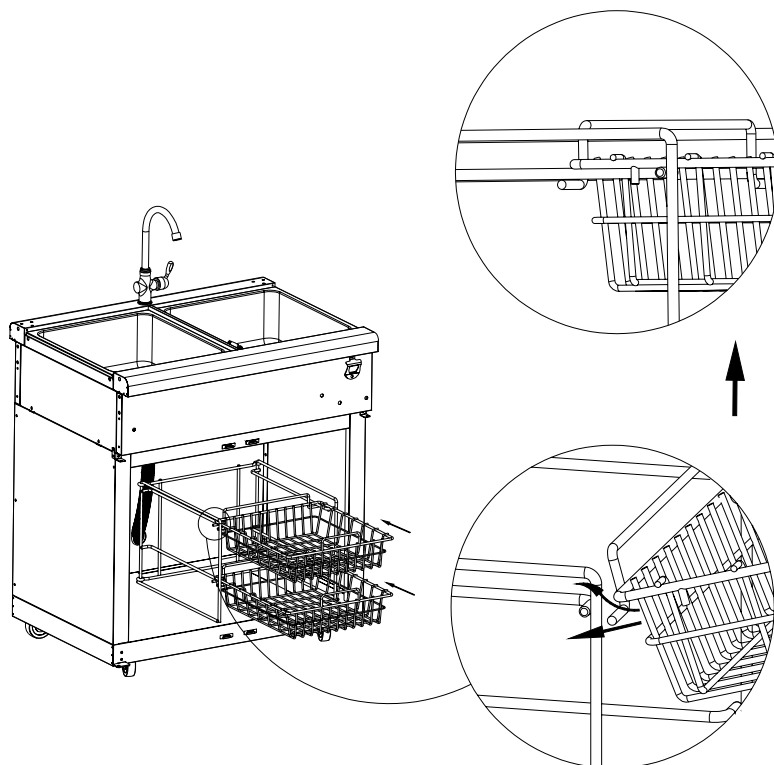


STEP 16

Attach Top Shelf Supports(R/L) (21) to the sink rear-top panel using 6pcs M4*10 (B) bolts as shown.

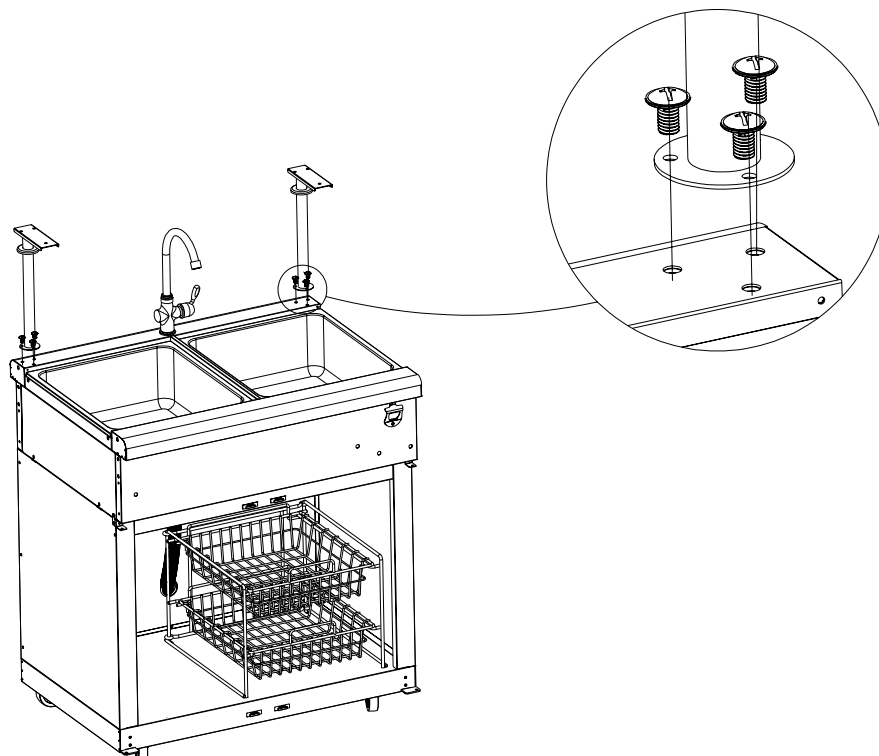


STEP 17

Attach Top Shelf (23) to the Top Shelf Supports using 6pcs M4*10 bolts (B). Place the Top Shelf Railing (22) on the Top Shelf ensuring its ends go into the appropriate holes in the Top Shelf.

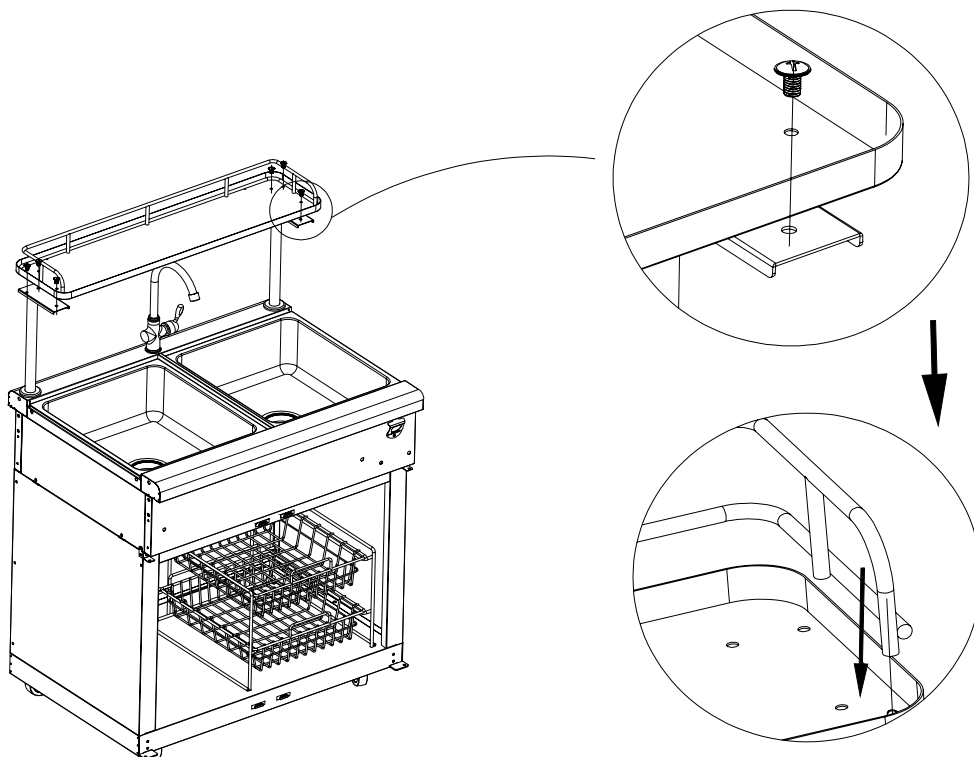


STEP 18

Place Cutting Board (3) and Sink Cover Assembly (2) onto each sink as shown.

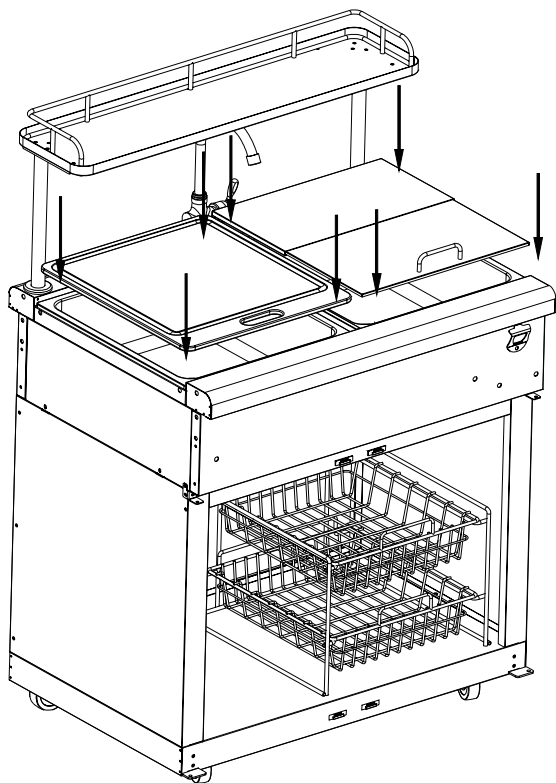


STEP 19

Screw Door Handles (18) to the Right and Left Doors (19 & 20) using 4pcs M4*6 (C) bolts as shown.

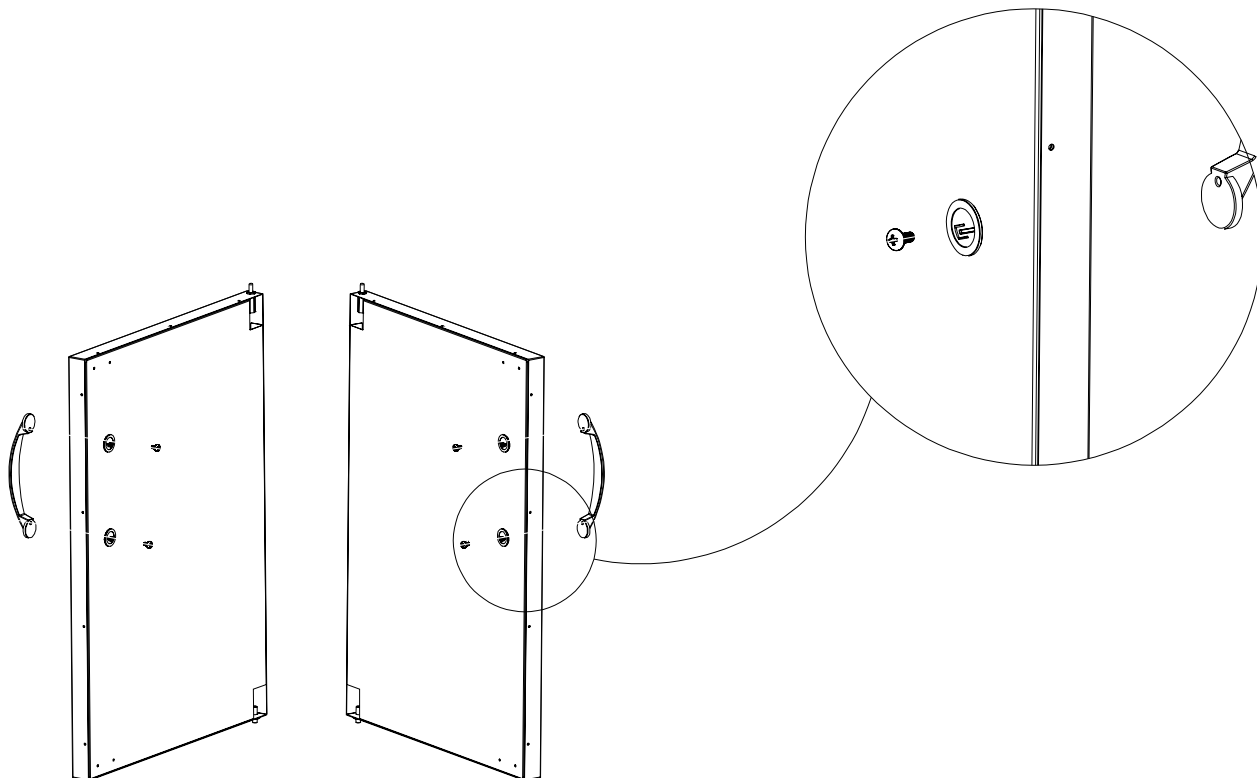


STEP 20

Place the bottom door pins into the door bottom supports on the Cabinet Bottom Panel and push down on top pins to insert the doors into the cabinet as shown.

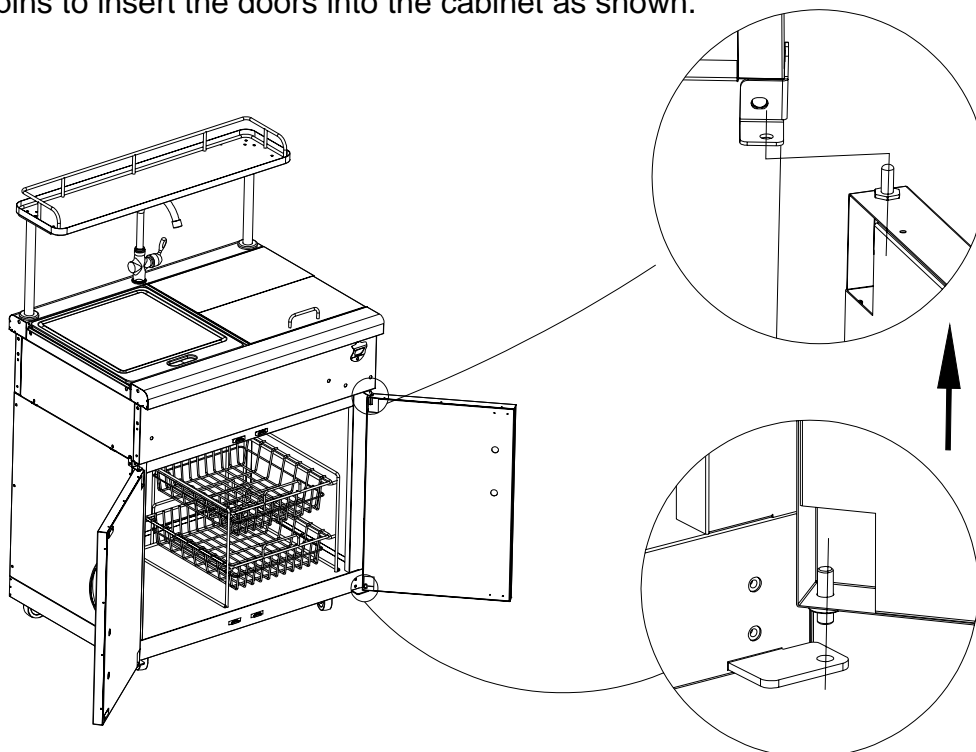


STEP 21

Place the three Batteries (F) into the battery box. Ensure all of them face the correct direction. Then place the LED Spotlight (24) onto the bottom of the Top Shelf. You can move it to your preferred position.

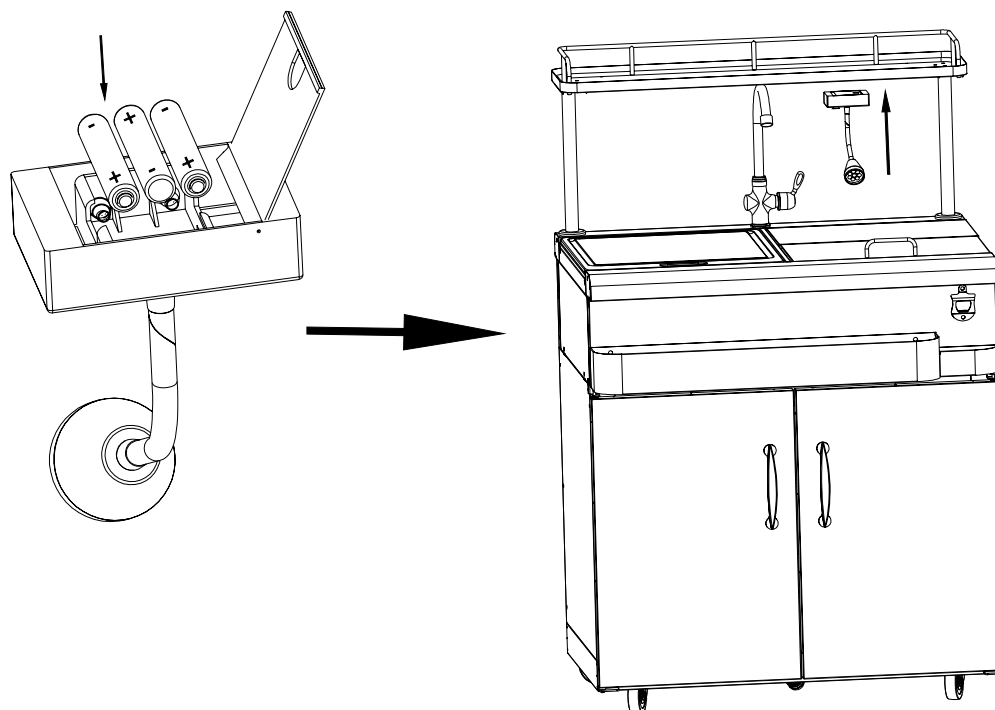


STEP 22

Hang the Bottle Rack (5) and Bottle Cap Catcher (6) on the four bolts screwed into the sink front panel. Then secure them by tightening the bolts as shown.

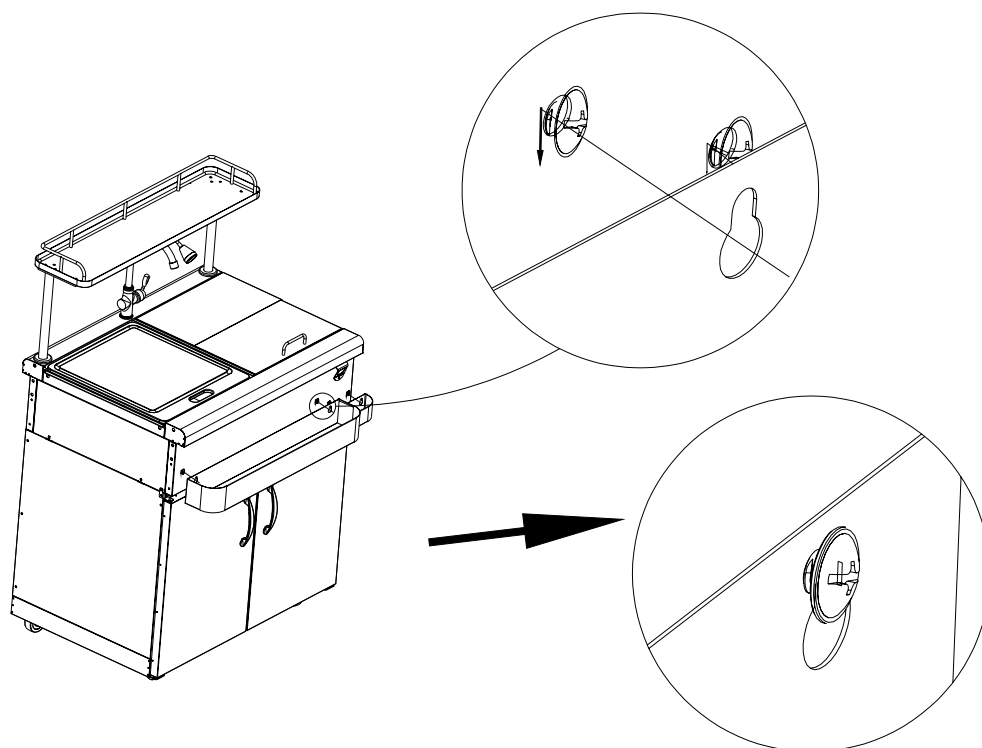


STEP 23

Attach the Side Shelf Handle (26) to the Side Shelf (27) using 2pcs M6*16 (A) bolts.

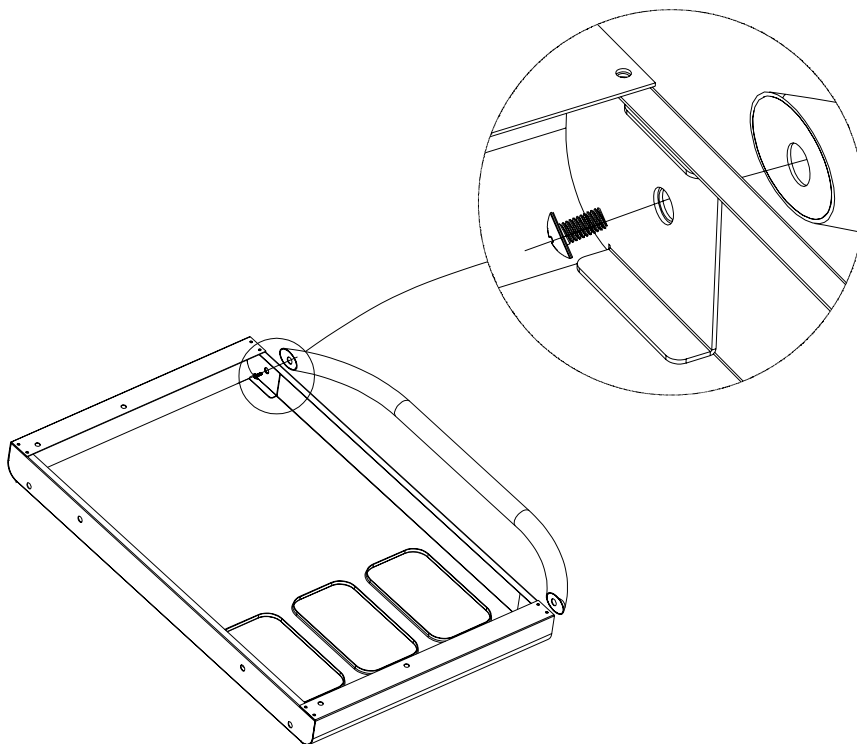


STEP 24

Attach Side Shelf Front and Back Supports (25) to the Side Shelf using 4pcs M4*10 (B) bolts.

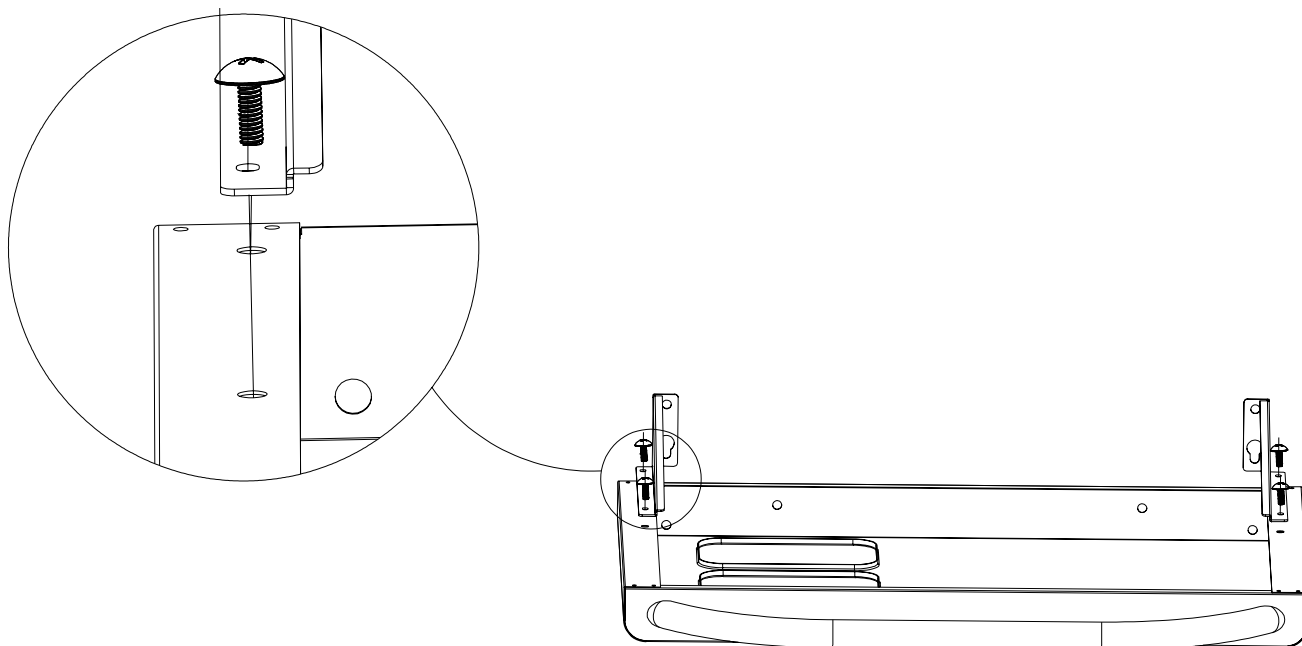


STEP 25

Loosen the two bolts shown on the right side of the Sink Frame Assembly leaving 1/4" extending out to hang the Side Shelf Front and Back Supports over. Use 6pcs M6*16 (A) bolts to attach it to the sink right side panel and tighten the original two top bolts.

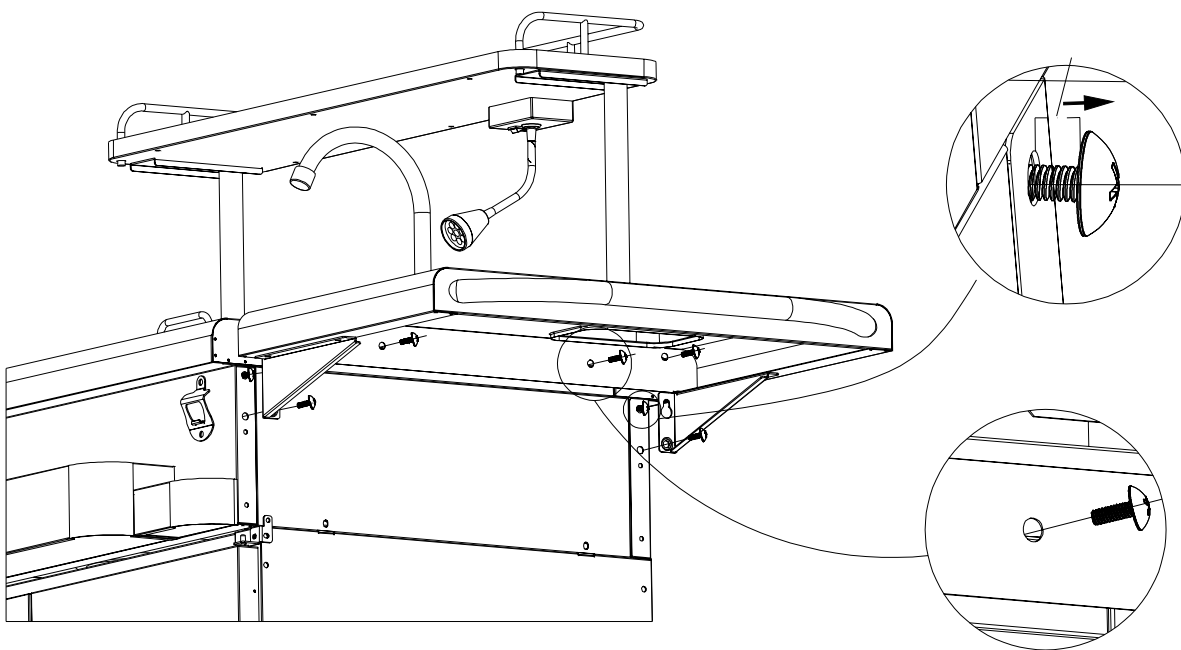


STEP 26

Insert the 3 Condiment Pans (28) into the Side Shelf.

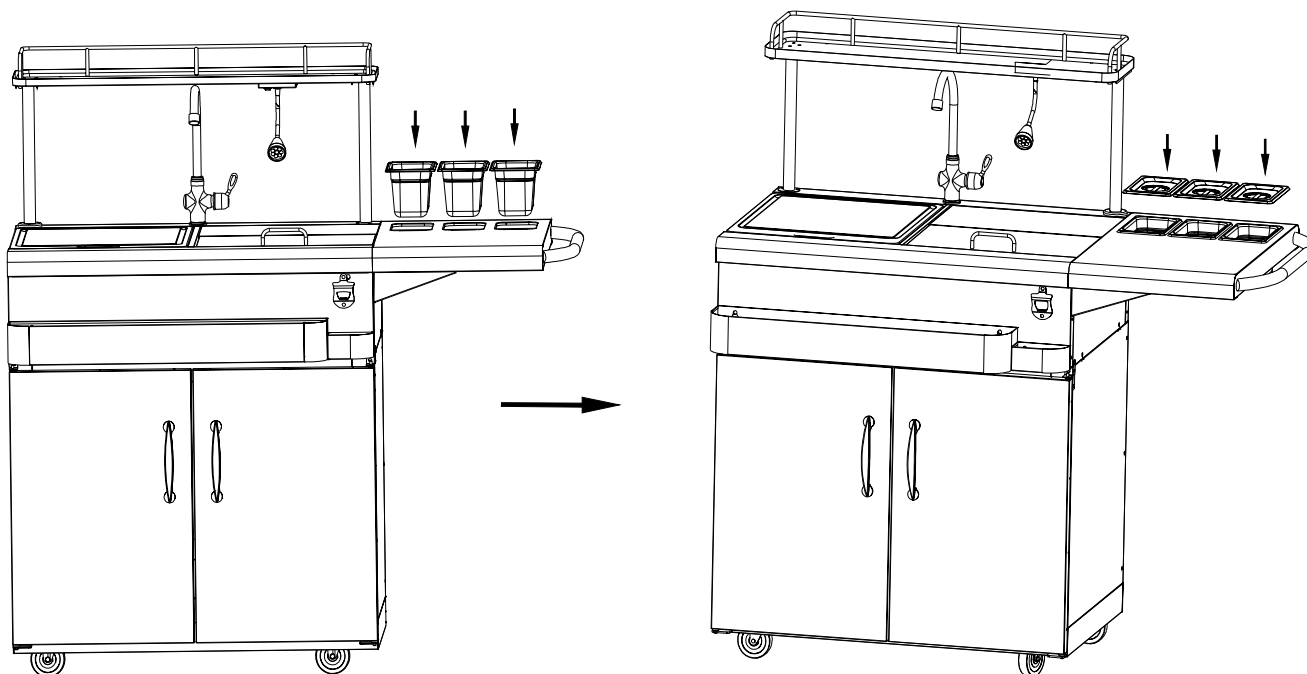


STEP 27

Attach Towel Bar Handle (30) to its Front and Back Supports (29) using 2 M4*10 (B) bolts.

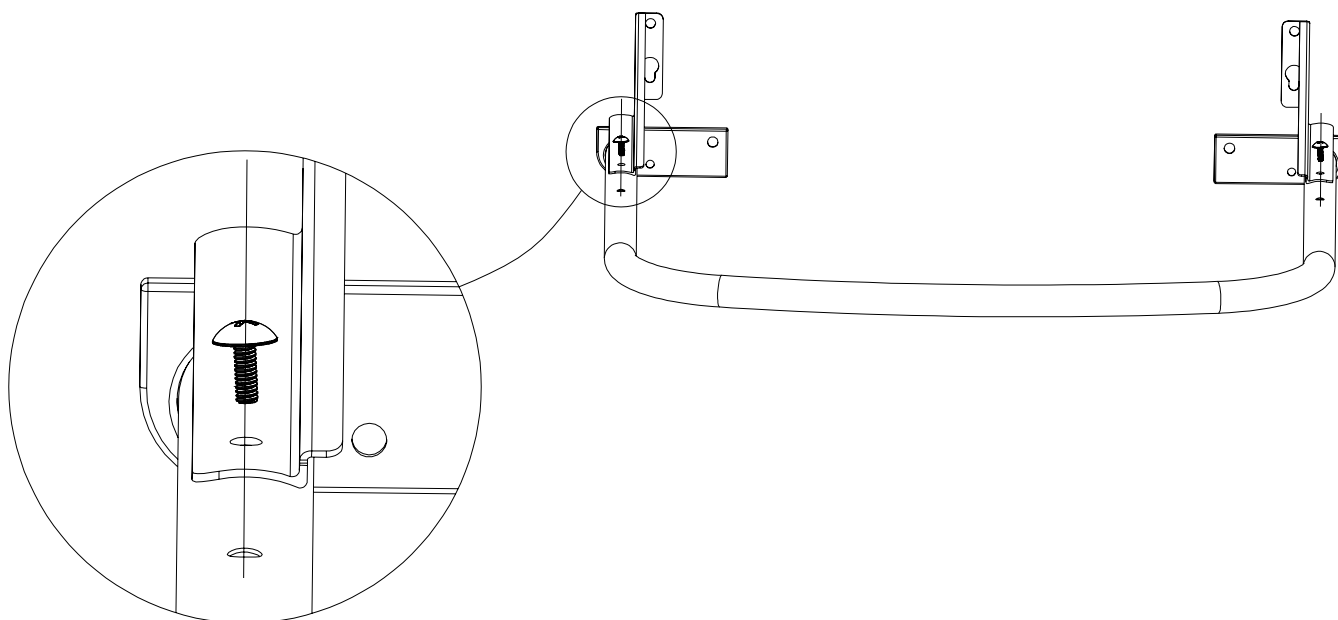


STEP 28

Loosen the two bolts shown on the left side of the Sink Frame Assembly leaving 1/4" extending out to hang the Towel Bar Handle Front and Back Supports over. Use 6pcs M6*16 (A) bolts to attach it to the sink left side panel and tighten the original two top bolts.

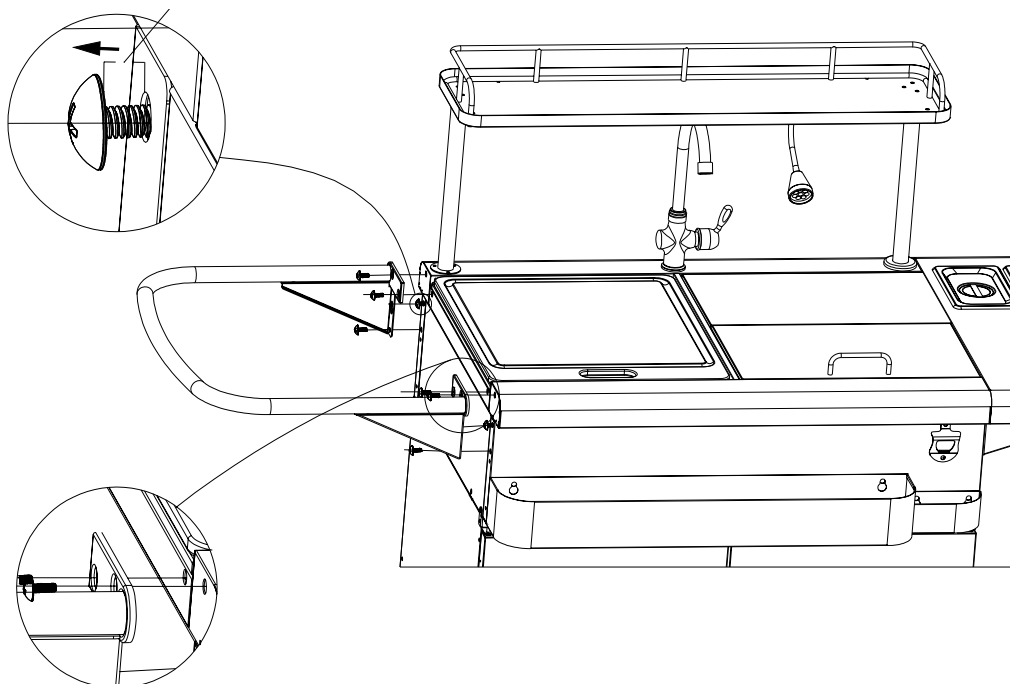


STEP 29

Place the Serving Tray (31) onto the Towel Bar Handle as shown.

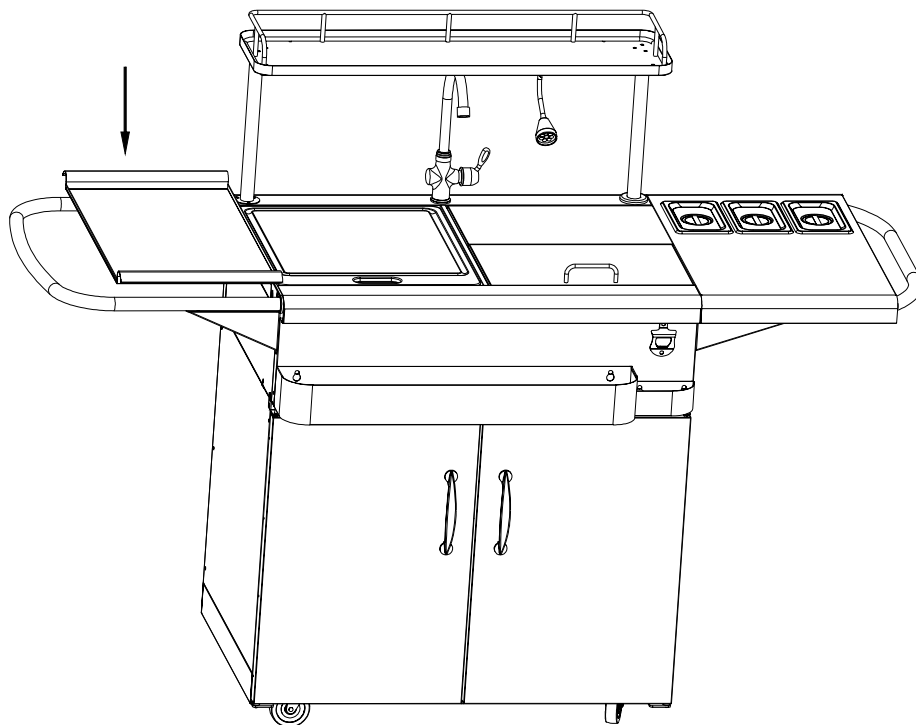**STEP 30**

Remove any additional labels or packing material from the Party Cart. Congratulations! Your Party Cart is now assembled and ready for use

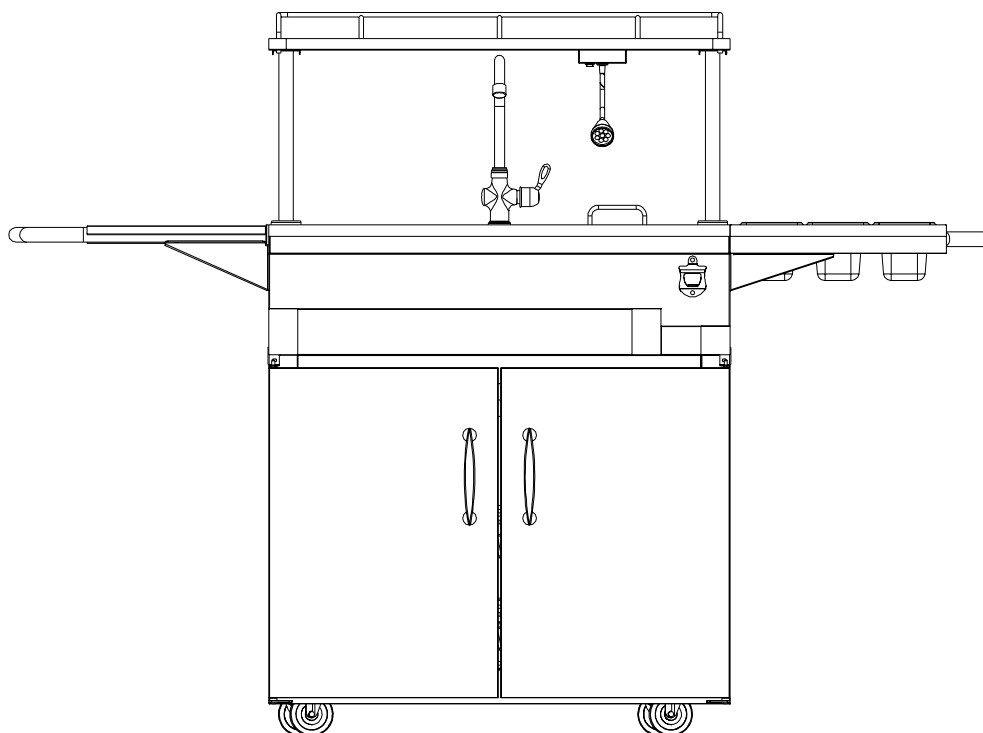

Party Cart Use and Care Information

Feature Information

- Dual Sinks – may be used as traditional sinks or can be filled with ice to keep beverages or foods chilled
- PVC Cutting Board – allows for food preparation without worry of scratching the cart surface. Doubles as a cover for one sink to provide additional countertop space.
- Removable LED Spotlight with Adjustable Gooseneck – may be positioned on any magnetic surface and aimed to provide light when and where you need it
- Removable Serving Tray – use as a means to help carry food and drinks to serve your guests or move things from one place to another
- 3 Condiment Trays with Lids – keeps your condiments fresh. Clean with mild dish soap.
- Front Bottle Rack – holds bottles or other containers
- Bottle Cap Remover and Catcher – opens those “non-twist” bottles and conveniently catches the caps as they come off
- Cabinet Storage with 2 Removable Organizer Baskets – helps to organize and transfer necessities for outdoor entertaining while providing a hiding place for a wastebasket

Water Information

We recommend using a marine and/or camping hose to run water to the sink. These hoses are drinking water safe and use nickel plated brass couplings for additional safety.

Stainless Steel Care

- Wash with a mild dish soap and warm water. Clean and polish with a stainless steel cleaner. Always polish in the direction of the grain.
- Do not allow dirt and grease to accumulate.
- Never use steel wool as it will scratch the surface. Do not use abrasive cleaners and scrubbers.
- Keep away from these substances which can damage stainless steel surfaces: pool chemicals, lawn fertilizer, ice melting salt, sea or salt water, urine, bird droppings, and tree sap. Immediately wash and dry should one or more come in contact with your Party Cart.

Caster Use

- Ensure your Party Cart is located on a level surface.
- Lock the locking casters by pressing or turning the locking lever on the casters counter clockwise before use. Unlock by turning or pressing the locking lever on the casters clockwise.

