

4074EQJ Shunt Resistors for the M6285A1005 and M6285A4009 Motors (160° Stroke)

INSTALLATION INSTRUCTIONS

- For linear indication of shaft position, do not add shunt resistor.
- For W902 Control, add the *white* shunt resistor.
- For slaving a Series 90 motor, add the *red* shunt resistor.
- Select proper shunt resistor (if needed). Connect shunt resistor terminations onto motor G and Y terminals. Push resistor terminations far enough to allow space for connecting field wiring terminations onto motor terminals.



Honeywell

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario M1V 4Z9

