

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# LASKO 1130 Owner's Manual

[Shop genuine replacement parts for LASKO 1130](#)



[Find Your LASKO Humidifier Parts - Select From 20 Models](#)

----- Manual continues below -----

## TROUBLE SHOOTING GUIDE

TROUBLE	PROBABLE CAUSE	SOLUTION
Fan not working or Humidifier doesn't turn on	<ul style="list-style-type: none"> <li>No power</li> <li>Humidistat not set correctly</li> <li>No water in unit</li> </ul>	Make sure unit is plugged in Check that the power switch is on Set humidistat to higher humidity level Refill unit
Pump not running	<ul style="list-style-type: none"> <li>No power</li> <li>Humidistat not set correctly</li> <li>No water in Unit</li> </ul>	Make sure Unit is plugged in Check that the power switch is on Set humidistat to higher humidity level Refill unit
Water leaking	<ul style="list-style-type: none"> <li>Bucket is overfilled</li> <li>Filters are old and dirty</li> <li>Float not working</li> <li>Water splashed when filling</li> </ul>	Reduce water level in bucket Replace filters Check float Fill unit slowly
Float not working	<ul style="list-style-type: none"> <li>Spring not attached or missing</li> <li>Float not attached or missing</li> <li>Plastic string not attached</li> </ul>	Reattach Spring, Float or String If parts are missing see below
Foul odor	<ul style="list-style-type: none"> <li>Filters need to be replaced</li> <li>Bucket needs to be cleaned</li> <li>Whole humidifier needs cleaning</li> </ul>	Replace filters Follow <i>Cleaning Instructions</i> Follow <i>Cleaning Instructions</i>
Filter discoloration	<ul style="list-style-type: none"> <li>Mineral deposits in water</li> </ul>	Replace Filters
Water discoloration	<ul style="list-style-type: none"> <li>Humidifier needs to be cleaned</li> <li>Hard water - Iron in water</li> <li>Some humidifier additives can cause discoloration</li> </ul>	Follow <i>Cleaning Instructions</i> Use filtered or distilled water
Lights don't work: Humidistat	<ul style="list-style-type: none"> <li>Humidity is not yet achieved</li> <li>Low water</li> </ul>	Refill unit
Power	<ul style="list-style-type: none"> <li>Low water light on</li> <li>Humidistat light on</li> </ul>	Refill unit
Low water light	<ul style="list-style-type: none"> <li>Float stuck</li> </ul>	Check float, make sure it is free moving
Excessive dripping noise	<ul style="list-style-type: none"> <li>Drip shield not in place</li> <li>Bucket not pushed in completely</li> </ul>	Check that the drip shield is fully seated Push bucket in
No water show	<ul style="list-style-type: none"> <li>Hose not connected to pump</li> <li>Hose not connected to water show</li> </ul>	Connect hose to pump Connect hose to water show

### FOR PARTS:

**For Replacement Parts or Filters please call: 1-800-966-2028. MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 4 PM EST. "PLEASE DO NOT RETURN PRODUCT TO PLACE OF PURCHASE."** Reference the type and style of product (located on the underside of the product) when you call.

### FOR TECHNICAL ASSISTANCE and SERVICE CENTER LOCATIONS:


For any questions, comments or the location of your nearest service center, **PLEASE CALL OUR TOLL-FREE "HOTLINE" AT 1-800-233-0268. MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 5 PM EST.** Please reference product name and model no. when you call.

- Replace the Tray and move the Humidifier to the location where it is going to be used.


## FILLING and OPERATION

**CAUTION:** Unplug Unit when filling.

- Locate the Water Level Indicator on the Control Panel above the Fill Door. (Figure 2)

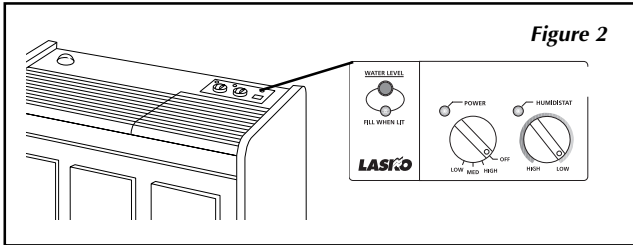

- Open the Fill Door on the top of the Humidifier. Use a pitcher or other container to **slowly** pour water into Unit until the Water Level Indicator shows full. (The Red Dot should be centered in the Indicator) (Figure 3)

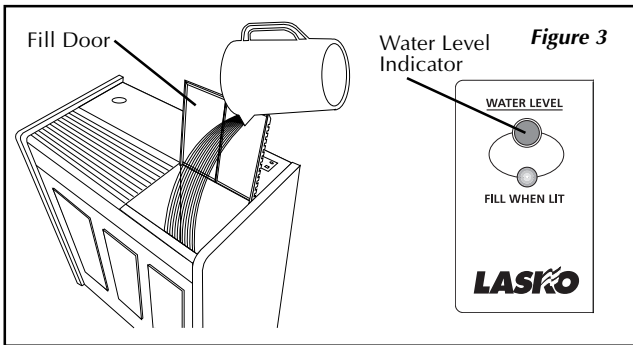


**When filling the Humidifier for the first time:** Fill with 5 gallons of cool tap water. (The Humidifier's Water Tray only holds 5 gallons at one time. DO NOT PUT IN MORE THAN 5 GALLONS OF WATER!)


- CAUTION:**
- Be careful not to overfill.
  - Pour water slowly to avoid splashing.
  - **Do not pour water through Exhaust Grill**, doing so may cause damage and personal injury.
  - Take extra care to prevent water spillage that may damage furniture or flooring. The manufacturer will not accept responsibility for damage to property caused by water spillage.
  - Always be sure the Power Knob is in the **OFF** position when plugging Humidifier into a grounded 120 volt AC wall outlet.
  - To prevent risk of electrical shock and injury to persons, do not plug Humidifier into electrical outlet with wet hands.

- Turn Power **ON** to desired speed of fan. (Figure 4)
  - HIGH** - For fast humidification of large room or house, approximately 12 gallon per day. (Calculations based on ambient room conditions of 70° F and 30% relative humidity in a room of average insulation.)
  - MED** - For normal operation.
  - LOW** - For quiet, night time operation or after desired moisture level is reached.


**NOTE:** Power Light and Fan are on only when the Humidistat is turned to a high enough moisture setting.

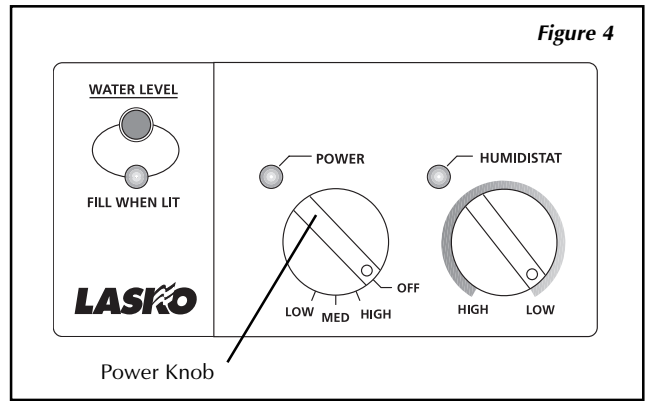

The Presence of water flow in the Water Show Dome indicates the circulation of water to the Filters. (Figure 5)

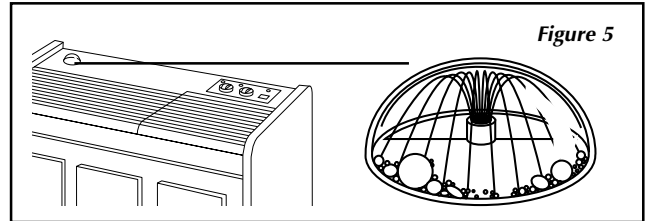

- To set Humidistat to desired level turn Knob towards HIGH until the power is ON. After the room has reached a comfortable humidity level, turn the Humidistat Knob slowly towards LOW until the fan shuts off and the Green Light turns on, the Humidifier will automatically restart when humidity falls below this setting. (Figure 6)

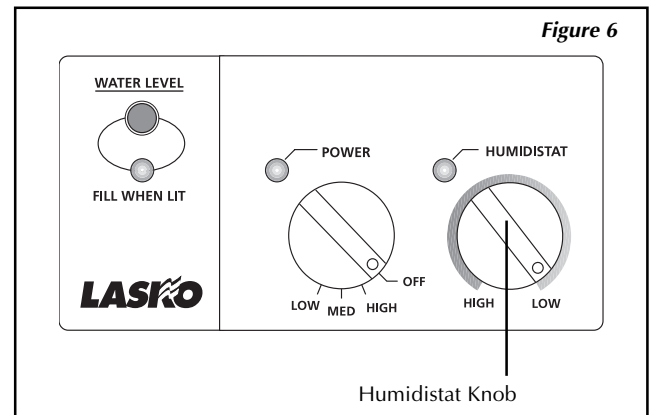

**NOTE:** The Humidifier will only turn on when the Humidistat is set to a high enough setting or when the room humidity is low enough.

- When the Humidifier is out of water an Orange Light turns on to indicate low water level (Figure 7) and the Humidifier shuts off automatically.

