


TROUBLE SHOOTING GUIDE		
TROUBLE	PROBABLE CAUSE	SOLUTION
Fan not working or Humidifier doesn't turn on	<ul style="list-style-type: none"> No power Humidistat not set correctly No water in unit 	Make sure unit is plugged in Check that the power switch is on Set humidistat to higher humidity level Refill unit
Pump not running	<ul style="list-style-type: none"> No power Humidistat not set correctly No water in Unit 	Make sure Unit is plugged in Check that the power switch is on Set humidistat to higher humidity level Refill unit
Water leaking	<ul style="list-style-type: none"> Bucket is overfilled Filters are old and dirty Float not working Water splashed when filling 	Reduce water level in bucket Replace filters Check float Fill unit slowly
Float not working	<ul style="list-style-type: none"> Spring not attached or missing Float not attached or missing Plastic string not attached 	Reattach Spring, Float or String If parts are missing see below
Foul odor	<ul style="list-style-type: none"> Filters need to be replaced Bucket needs to be cleaned Whole humidifier needs cleaning 	Replace filters Follow <i>Cleaning Instructions</i> Follow <i>Cleaning Instructions</i>
Filter discoloration	<ul style="list-style-type: none"> Mineral deposits in water 	Replace Filters
Water discoloration	<ul style="list-style-type: none"> Humidifier needs to be cleaned Hard water - Iron in water Some humidifier additives can cause discoloration 	Follow <i>Cleaning Instructions</i> Use filtered or distilled water
Lights don't work: Humidistat	<ul style="list-style-type: none"> Humidity is not yet achieved Low water 	Refill unit
Power	<ul style="list-style-type: none"> Low water light on Humidistat light on 	Refill unit
Low water light	<ul style="list-style-type: none"> Float stuck 	Check float, make sure it is free moving
Excessive dripping noise	<ul style="list-style-type: none"> Drip shield not in place Bucket not pushed in completely 	Check that the drip shield is fully seated Push bucket in
No water show	<ul style="list-style-type: none"> Hose not connected to pump Hose not connected to water show 	Connect hose to pump Connect hose to water show

FOR PARTS:
 For Replacement Parts or Filters please call: 1-800-966-2028. MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 4 PM EST. "PLEASE DO NOT RETURN PRODUCT TO PLACE OF PURCHASE." Reference the type and style of product (located on the underside of the product) when you call.

FOR TECHNICAL ASSISTANCE and SERVICE CENTER LOCATIONS:
 For any questions, comments or the location of your nearest service center, PLEASE CALL OUR TOLL-FREE "HOTLINE" AT 1-800-233-0268. MONDAY - FRIDAY, BETWEEN the HOURS of 8 AM and 5 PM EST. Please reference product name and model no. when you call.

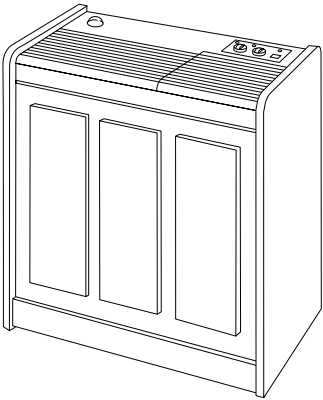

EVAPORATIVE

HIGH PERFORMANCE

RECIRCULATING CONSOLE HUMIDIFIER

Models 1130/1140

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

Congratulations on your purchase of the Recirculating Console Humidifier. Featuring the unique use of pump driven water circulation, this unit provides exclusive features that no other humidifiers offer.

IMPORTANT INFORMATION and FEATURES

Your Recirculating Console Humidifier is an **EVAPORATIVE TYPE HUMIDIFIER**. This means that the air being drawn through the moistened filter naturally evaporates the water and disperses **INVISIBLE MOISTURE** into the air. This type of humidifier **DOES NOT PRODUCE MIST, WATER DROPLETS, STEAM OR EXCESSIVE CONDENSATION** associated with other types of humidifiers.

EXCESSIVE HUMIDITY CAN OFTEN LEAD TO UNANTICIPATED PROBLEMS. Air containing water droplets or mist can create a good habitat for the growth of mold and mildew.

Misting units often oversaturate the air, while the Lasko Recirculating Console Humidifier reaches a maximum humidity output level without oversaturating. With a properly operating Evaporating Humidifier, the evaporation rate increases naturally when the air is dry. When the humidity in your home is high, moisture output automatically decreases to help prevent damaging condensation.

The Watershow Viewing Window and Water Level Indicator provide a visible way for you to know that your Recirculating Console Humidifier is operating. As air passes over the filter, the humidity in the room will increase, and the water level in the Unit will begin to decrease.

Unlike misting humidifiers, the Evaporative Filter in your Humidifier also traps unwanted minerals that reside in normal tap water. This filtering also assures there is **NO WHITE DUST** dispersed into the air.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially where children are present, basic precautions should always be followed in order to reduce the risk of fire, electric shock and injury to persons. Including the following:

- To prevent possible electrical shock, always turn the unit off and unplug before filling, servicing or moving.
- Always place Humidifier on a stable, flat, level surface. Locate Power Cord so the Humidifier or other objects are not resting on it. Keep the Cord away from room traffic.


DO NOT pour water into Grill. DO NOT spill water on Control Panel. Water should only be poured into the Unit using the Fill Door.

- Do not place Humidifier near a heat source such as stoves, radiators or heaters.
- This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is designed to fit in a polarized outlet only one way. If plug does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Never tilt or attempt to move the Humidifier while it is operating.
- Always direct air flow away from walls or furniture as excessive moisture may cause damage.
- Humidifiers require regular cleaning to maintain proper operating conditions. Refer to **Cleaning Instructions** for proper cleaning procedures.

NOTE: A few droplets of water may be present in your humidifier as a result of our quality testing prior to packaging and shipment.

UNPACKING and FIRST TIME USE

- It is recommended that all Humidifiers be cleaned and disinfected prior to use. Please read Cleaning Instructions for Water Tray cleaning.
- Slide the Water Tray out from the back of the Unit. Remove the Red Tape from the Float and allow the Float to hang down inside the Water Tray. (Figure 1)

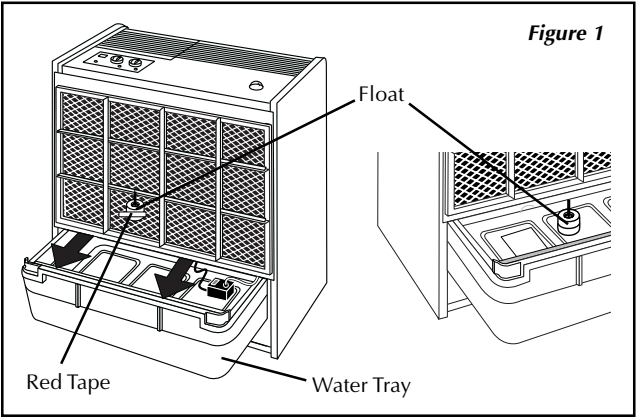


3. Replace the Tray and move the Humidifier to the location where it is going to be used.


FILLING and OPERATION

CAUTION: Unplug Unit when filling.

4. Locate the Water Level Indicator on the Control Panel above the Fill Door. (Figure 2)

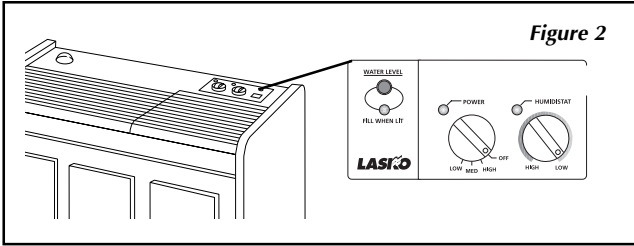

5. Open the Fill Door on the top of the Humidifier. Use a pitcher or other container to **slowly** pour water into Unit until the Water Level Indicator shows full. (The Red Dot should be centered in the Indicator) (Figure 3)

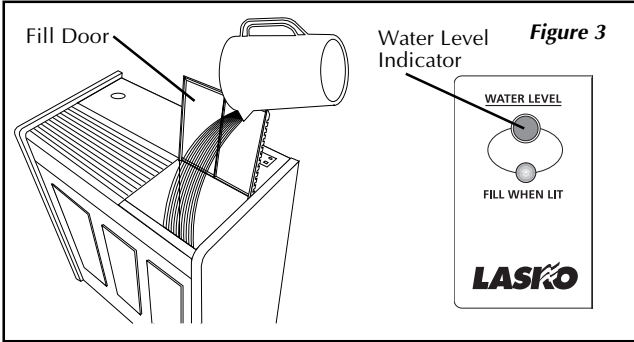


When filling the Humidifier for the first time: Fill with 5 gallons of cool tap water. (The Humidifier's Water Tray only holds 5 gallons at one time. **DO NOT PUT IN MORE THAN 5 GALLONS OF WATER!**)


CAUTION:

- Be careful not to overfill.
 - Pour water slowly to avoid splashing.
 - **Do not pour water through Exhaust Grill**, doing so may cause damage and personal injury.
 - Take extra care to prevent water spillage that may damage furniture or flooring. The manufacturer will not accept responsibility for damage to property caused by water spillage.
 - Always be sure the Power Knob is in the **OFF** position when plugging Humidifier into a grounded 120 volt AC wall outlet.
 - To prevent risk of electrical shock and injury to persons, do not plug Humidifier into electrical outlet with wet hands.
6. Turn Power **ON** to desired speed of fan. (Figure 4)
- HIGH** - For fast humidification of large room or house, approximately 12 gallon per day. (Calculations based on ambient room conditions of 70° F and 30% relative humidity in a room of average insulation.)
- MED** - For normal operation.
- LOW** - For quiet, night time operation or after desired moisture level is reached.


NOTE: Power Light and Fan are on only when the Humidistat is turned to a high enough moisture setting.

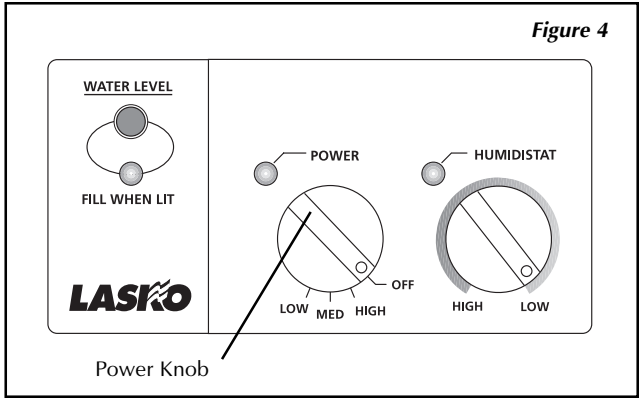

The Presence of water flow in the Water Show Dome indicates the circulation of water to the Filters. (Figure 5)

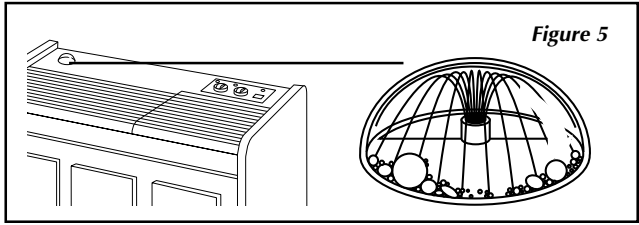


7. To set Humidistat to desired level turn Knob towards **HIGH** until the power is **ON**. After the room has reached a comfortable humidity level, turn the Humidistat Knob slowly towards **LOW** until the fan shuts off and the Green Light turns on, the Humidifier will automatically restart when humidity falls below this setting. (Figure 6)

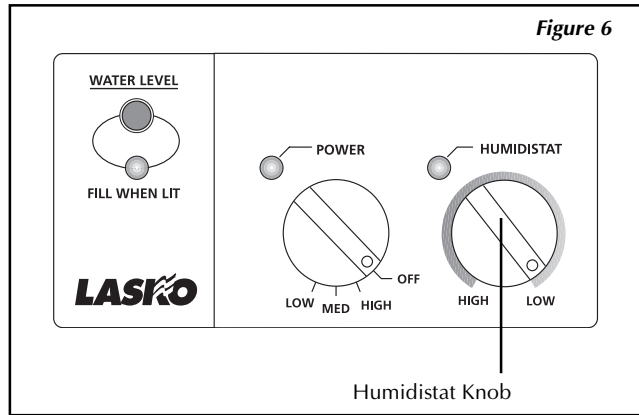

NOTE: The Humidifier will only turn on when the Humidistat is set to a high enough setting or when the room humidity is low enough.

8. When the Humidifier is out of water an Orange Light turns on to indicate low water level (Figure 7) and the Humidifier shuts off automatically.

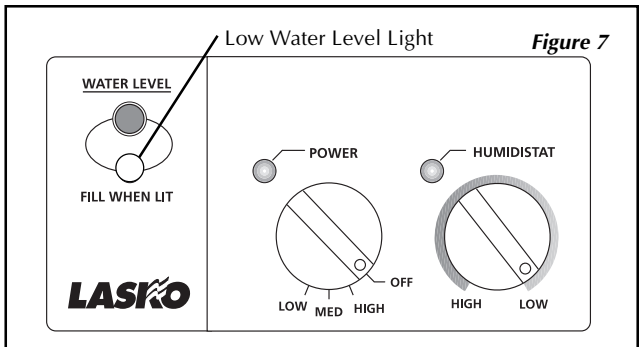

CLEANING and FILTER CARE


The Filters inside your Humidifier play a very important part in its operation. In order to maintain peak performance, it is highly recommended to **use only LASKO REPLACEMENT FILTERS**. Some imitation filters do not comply with Lasko's quality standards, resulting in decreased performance of your unit.

9. Regular cleaning is necessary to ensure proper and efficient operation. The frequency of cleaning depends on the amount of impurities which may be found in the water or how often the Humidifier is in operation. In either instance, it is recommended that the humidifier be cleaned at least once a week.


DO NOT FLATTEN, SQUEEZE OR TWIST FILTER WHEN CLEANING

CAUTION: To prevent electrical shock, **always turn the Power Knob to the OFF position and unplug before cleaning.**

10. Pull Water Tray out. You may need to lift the Float out of the way.
11. The Pump will need to be removed in order to pull the Water Tray completely out of the Unit. The Bracket holding the Pump down is installed for shipping purposes only. Unscrew the 2 phillips head Screws and remove the Bracket. (Figure 8)

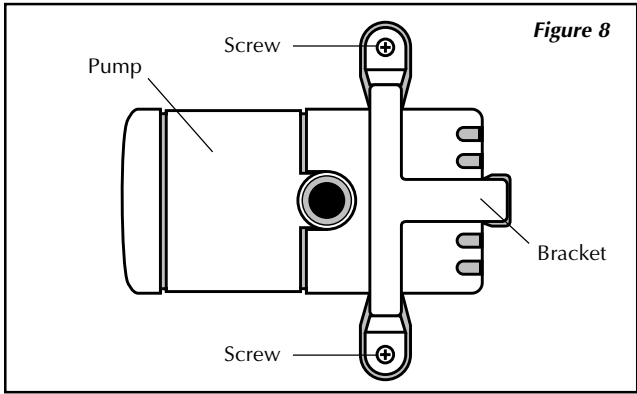

12. Use a sponge with mild soap and water solution to clean the Tray. **Do not use abrasive cleaners or scrubbing pad.** Rinse the Tray thoroughly.
13. Discoloration of the Evaporative Filter Pads are normal after extended use. The discoloration is caused by mineral deposits in the water, and the degree of discoloration will vary depending upon the amount of mineral content in the water. When the Filter surface areas are thoroughly discolored, or you notice a reduced water usage, it is a good indication that the pads need to be replaced. The Evaporative Filter Pads should be replaced at least once every season. We recommend only using **LASKO Replacement Filters**. The Replacement Filters to be used in this unit are: **LASKO Recirculating Console Humidifier Replacement Filter Set - Model CHF 13**
14. **TO REMOVE SCALE** from inside of Tray, use undiluted white vinegar. Let vinegar stand in Tray for 20 minutes then wipe away any scale buildup using a soft brush or cloth.
15. **TO DISINFECT TRAY** fill with one gallon of water and one tablespoon of chlorine bleach. Let solution stand for 20 minutes, stirring occasionally to wet all surfaces. Carefully empty solution and rinse Tray thoroughly with warm water to remove bleach odor. Refill Tray with fresh cool tap water.
16. Commercial "Descalers" and "Bacteriostats" are available for cleaning and disinfecting the Tray. These products are available at your local home improvement center.
17. To clean the Pump Filter unsnap Cover and remove Filter. Rinse Filter with warm water and replace Filter and Cover. (Figure 9)
18. Reposition Pump in Tray and replace in Unit.

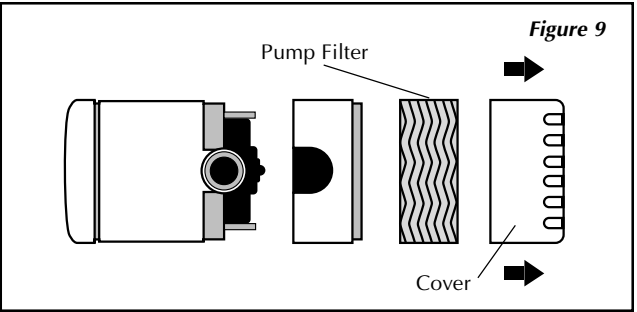

OFF-SEASON STORAGE

1. Clean and dry Humidifier thoroughly per the Cleaning Instructions. **Do not leave any water in the Unit when storing.**
2. Dispose of the Evaporative Filter Pads. Do not store used Evaporative Filter Pads in the Humidifier.
3. Place Humidifier back into its carton and store in a cool dry place.

LIMITED WARRANTY

SHOULD ACCESSORY PARTS BE NEEDED, CONTACT THE MANUFACTURER FOR IN-WARRANTY REPLACEMENT PARTS. A COPY OF PROOF-OF-PURCHASE MUST BE INCLUDED ALONG WITH THE TYPE AND STYLE, WHICH IS LOCATED ON THE BOTTOM OF YOUR APPLIANCE.

This product is warranted for one year from the date of original purchase against defects in workmanship and/or materials. At our option, parts that prove to be defective will either be repaired or replaced or the whole product will be replaced.

Should electrical or mechanical repair become necessary during the warranty period, send your complete product, postage or freight prepaid to the nearest service center. Call the number below for the service station nearest you.

Should a part need replacement, you must give us the type and style of your appliance. You will find this at the bottom of the appliance. In either case, a copy of your proof of purchase is requested.

This warranty does not apply if the damage occurs because of accident, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, or the use of the product for commercial service.

ALL WARRANTIES, EXPRESSED OR IMPLIED, LAST FOR ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. THIS WARRANTY DOES NOT COVER LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR ANY CAUSE WHATSOEVER.

Some states do not allow limitations on how long any implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so that the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

FOR PARTS:

For Replacement Parts or Filters please call: **1-800-966-2028. MONDAY THROUGH FRIDAY, BETWEEN THE HOURS OF 8 AM AND 4 PM EST. "PLEASE DO NOT RETURN PRODUCT TO PLACE OF PURCHASE."** Reference the type and style of product (located on the underside of the product) when you call.

FOR TECHNICAL ASSISTANCE and SERVICE CENTER LOCATIONS: For any questions, comments or the location of your nearest service center, **PLEASE CALL OUR TOLL-FREE "HOTLINE" AT 1-800-233-0268. MONDAY THROUGH FRIDAY, BETWEEN THE HOURS OF 8 AM AND 5 PM EST.** Please reference product name and model no. when you call.

Appliance Service Dept. • 300 Confederate Drive Franklin, TN 37065-0569
PLEASE DO NOT SEND PRODUCT TO THIS LOCATION!