 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HAMILTON BEACH 04255 Owner's Manual

[Shop genuine replacement parts for HAMILTON
BEACH 04255](#)

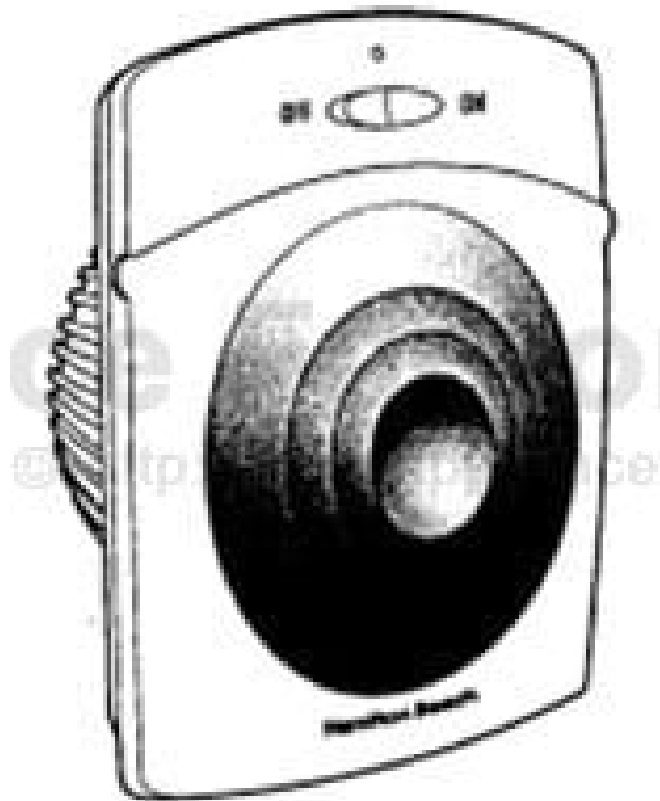

 
[Find Your HAMILTON BEACH Air Cleaner Parts - Select From 11 Models](#)

----- Manual continues below -----

Hamilton Beach.

TrueAir™ Air Cleaner

Épurateur d'air TrueAir™

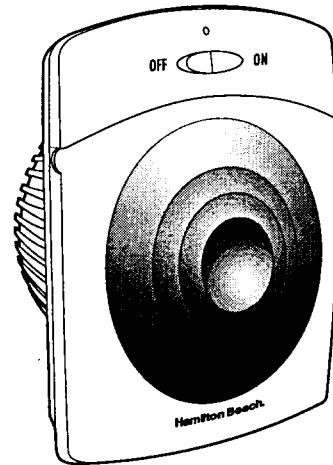

English	2
USA: 1-800-851-8900	
Français	9
Canada : 1-800-267-2826	

840076500

Air Cleaner Safety

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

 
1. Read all instructions before using the appliance.
2. To reduce the risk of fire or shock hazard, plug the air cleaner directly into a 120V AC electrical outlet.
3. To protect against electrical hazards do not immerse in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children, or by invalids.
5. Always unplug the air cleaner before moving it, opening the grill, changing filters, before cleaning, or whenever the air cleaner is not in use.
6. Do not put foreign objects inside the air cleaner.
7. Do not operate any appliance with a damaged plug, if fan fails to rotate, or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance to Hamilton Beach/Proctor-Silex for examination, electrical or mechanical adjustment or repair.
8. Use the appliance only for intended household use as described in this manual.
9. Do not use outdoors.
10. Never block the air opening.
11. Keep away from heated surfaces.
12. This appliance is NOT a toy.

**READ AND SAVE
THESE INSTRUCTIONS**

2


Consumer Safety Information

- This appliance is intended for household use.
- Do not immerse in water.
- Do not install the unit where water can splash onto an open window.
- Do not place foreign objects inside the unit.
- Do not use air cleaner with a customized or modified power cord.
- Do not obstruct the vents. Keep clear of drapes, curtains, etc.
- Not suitable for use in hazardous locations such as areas with flammable or volatile vapors.
- Instruct children never to interfere with the operation of the appliance.
- Do not use with extension cords or multi-plug adapters.
- Use with a properly functioning electrical outlet.
- **WARNING:** To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control switch.
- This product is not a toy. For adult use only.

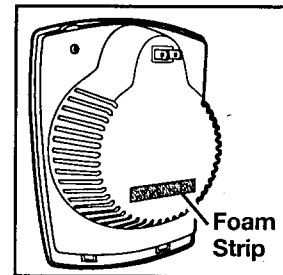



The foam strip is for proper placement and operation. Do not remove. For customer service or replacement strip information, see the back of the manual.

 3



Parts and Features

  
1. Opening Tabs
2. Vents
3. Housing
4. ON Light
5. Filter Replacement Indicator (see inset)
6. ON/OFF Switch
7. Filter
8. Grill

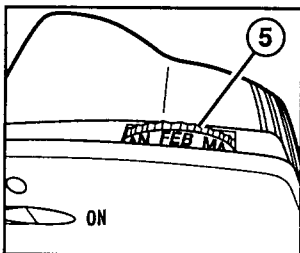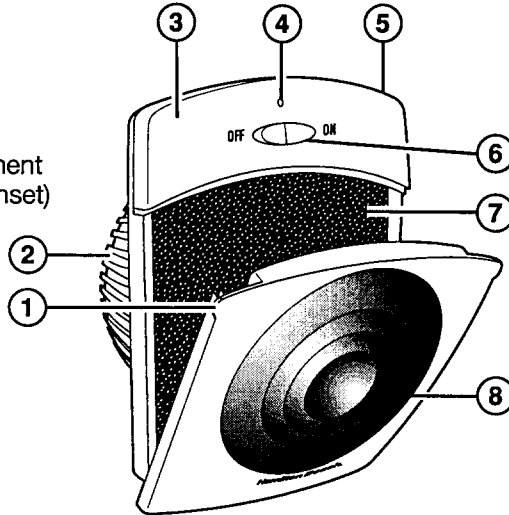


4

How to Use Your Air Cleaner

 1. Open the cover of air cleaner as illustrated.
2. Remove plastic bag from the filter before installing the filter. Place the filter in the air cleaner, fitting notched corner of filter around notched edge of air cleaner.
3. Close the cover of the air cleaner until it snaps into place.
4. Advance the Filter Replacement Indicator **two months** ahead of the current month if the air cleaner is used **occasionally**. Advance the indicator up to **four months** ahead if the air cleaner is used only **occasionally**.



5

 


5. Plug in air cleaner as illustrated.

NOTE: Outlets in older homes may not hold the air cleaner securely. If the air cleaner seems "loose" within the outlet, please contact a qualified electrician to replace the obsolete outlet.

6. Press the ON switch. The green ON Light will indicate that the unit is on.

 NOTE: You may leave the air cleaner on constantly or only use occasionally for strong odors. The air cleaner must be within six feet of odor or it will not work efficiently. The air cleaner will reduce, not completely eliminate, very strong odors.

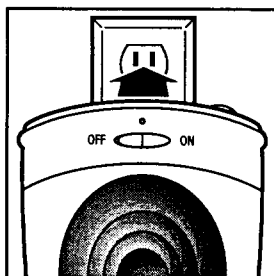

Cleaning

1. Unplug the unit before cleaning.
2. Wipe the exterior housing with a clean, dry cloth only.
3. To clean the grill, wipe with a damp cloth or use a vacuum cleaner to remove lint or debris.
4. Do not use detergents, solvents, or spray cleaners.

Do not immerse unit in water or other liquid.

To Replace the Filter

NOTE: A filter should last 2 to 4 months.

1. Remove air cleaner from the outlet. Open the front panel and remove the used filter.
2. Discard used filter. Remove plastic bag before installing. Use Hamilton Beach model 04290.
3. Reset the Filter Replacement Indicator.

Customer Service

If you have a question about your air cleaner, call our toll-free customer service number. Before calling, note the model, type, and series number of your air cleaner. This information is located on the back of your air cleaner. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____

TWO-YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of two (2) years from the date of original purchase, except as noted. There is no warranty with respect to the following, which may be supplied with this appliance: glass parts, glass containers, cutter/strainer, blades and/or agitators. This warranty extends only to the original consumer purchaser and does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. EXPRESSLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY HEREUNDER IS EXPRESSLY LIMITED TO THE REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID THEREFOR, AND ALL CLAIMS FOR SPECIAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model and serial numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In Canada 1-800-267-2826

Web site address: www.hamiltonbeach.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province.