

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Kenmore 580.53301300 Owner's Manual

[Shop genuine replacement parts for Kenmore
580.53301300](#)



[Find Your Kenmore Dehumidifier Parts - Select From 135 Models](#)

----- Manual continues below -----

SEARS

**REPAIR
PARTS
LIST**

Model No.
580.53301300


To Call
Toll Free
For Parts:

1-800-366-PART
(1-800-366-7278)

For Service:

1-800-4-MY-HOME
(1-800-469-4663)

Kenmore®
DEHUMIDIFIER

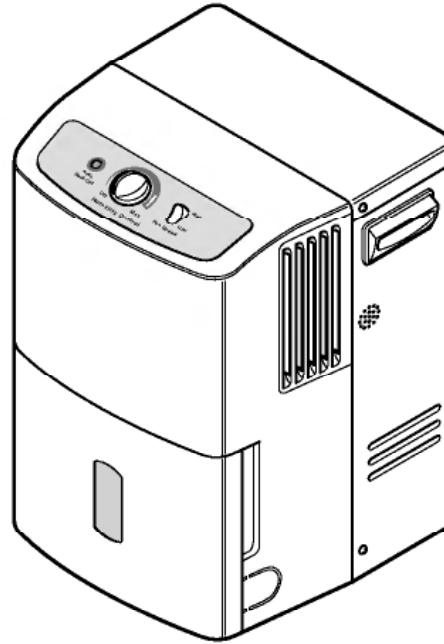

The model number of your Dehumidifier can be found on the name plate on the front of the unit behind the condensate bucket

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Service Center, or the Service Department at most Sears stores. To order parts by phone, call the toll free parts number listed to the left.

When requesting service or ordering parts, always provide the following information:

- ◆ Product Type
- ◆ Model Number
- ◆ Part Number
- ◆ Part Description


REPAIR PARTS

Dehumidifier
Model No. 580.53301300

To order Parts call Toll Free
1-800-4-MY-HOME®(1-800-469-4663)

CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

OUTER CASE PARTS AND CONTROL PART

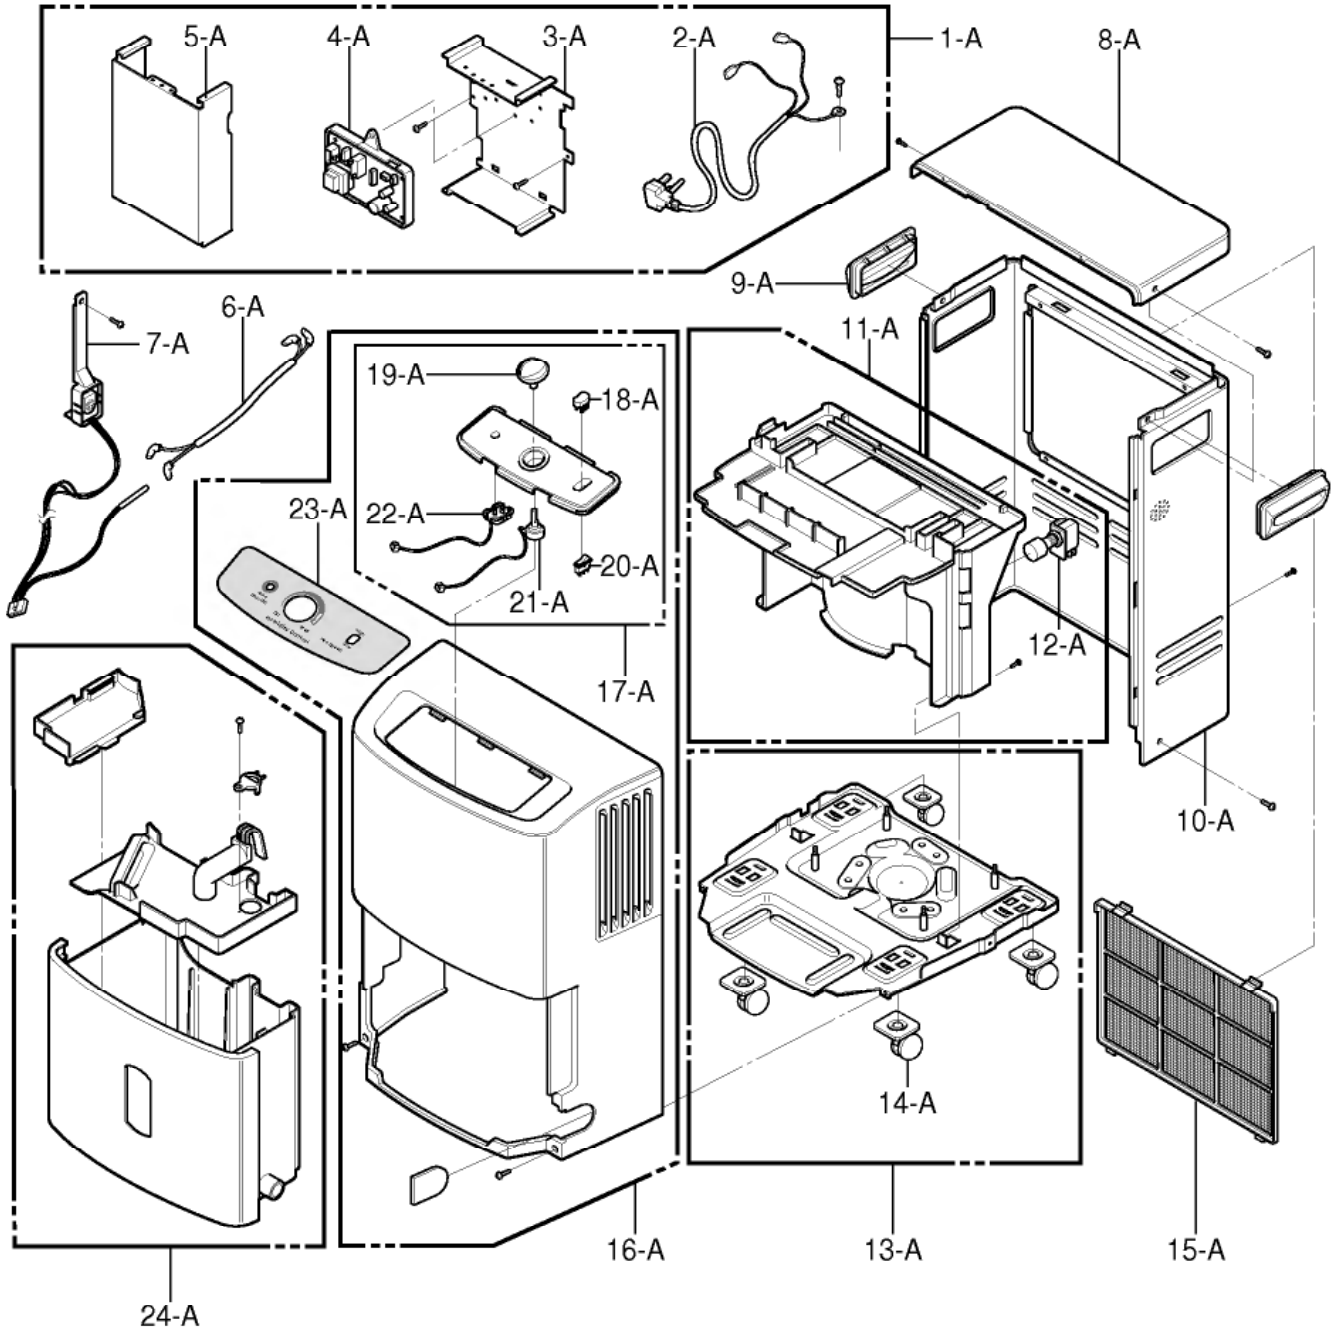


CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

OUTER CASE PARTS AND CONTROL PART

ILLUSTRATION NUMBER	PART NUMBER	DESCRIPTION
1 - A	4995A10074B	CONTROL BOX, ASSEMBLY
2 - A	6411A20001Y	POWER CORD ASSEMBLY
3 - A	4994A20056A	CONTROL BOX, SINGLE(LOWER)
4 - A	6871A30032B	PWB(PCB) ASSEMBLY, MAIN
5 - A	4994A20057A	CONTROL BOX, SINGLE(UPPER)
6 - A	6877A20025G	CONNECTOR ASSEMBLY
7 - A	6877A30013G	SENSOR ASSEMBLY
8 - A	3550A20162B	COVER(TOP)
9 - A	3650A20003A	HANDLE
10 - A	3091A20015D	CABINET ASSEMBLY, SINGLE
11 - A	3087A10011B	DRAIN PAN ASSEMBLY
12 - A	6600A30003C	SWITCH ASSEMBLY, MICRO
13 - A	3041A10028C	BASE ASSEMBLY, SINGLE
14 - A	4441A30001B	CASTER ASSEMBLY, ROLLER
15 - A	5230A20026A	FILTER, AIR
16 - A	3111A10012G	CASE ASSEMBLY, SINGLE
17 - A	3551A10021A	COVER ASSEMBLY, DISPLAY
18 - A	4940A30057A	KNOB
19 - A	4941A30019A	KNOB ASSEMBLY
20 - A	6600FX5001E	SWITCH, ROCKER
21 - A	6601A30001B	SWITCH ASSEMBLY, ROTARY
22 - A	6871A20169B	PWB(PCB) ASSEMBLY, DISPLAY
23 - A	3831A20051F	ESCUTCHEON
24 - A	4839A10001G	TANK ASSEMBLY, BUCKET

CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

CYCLE PARTS

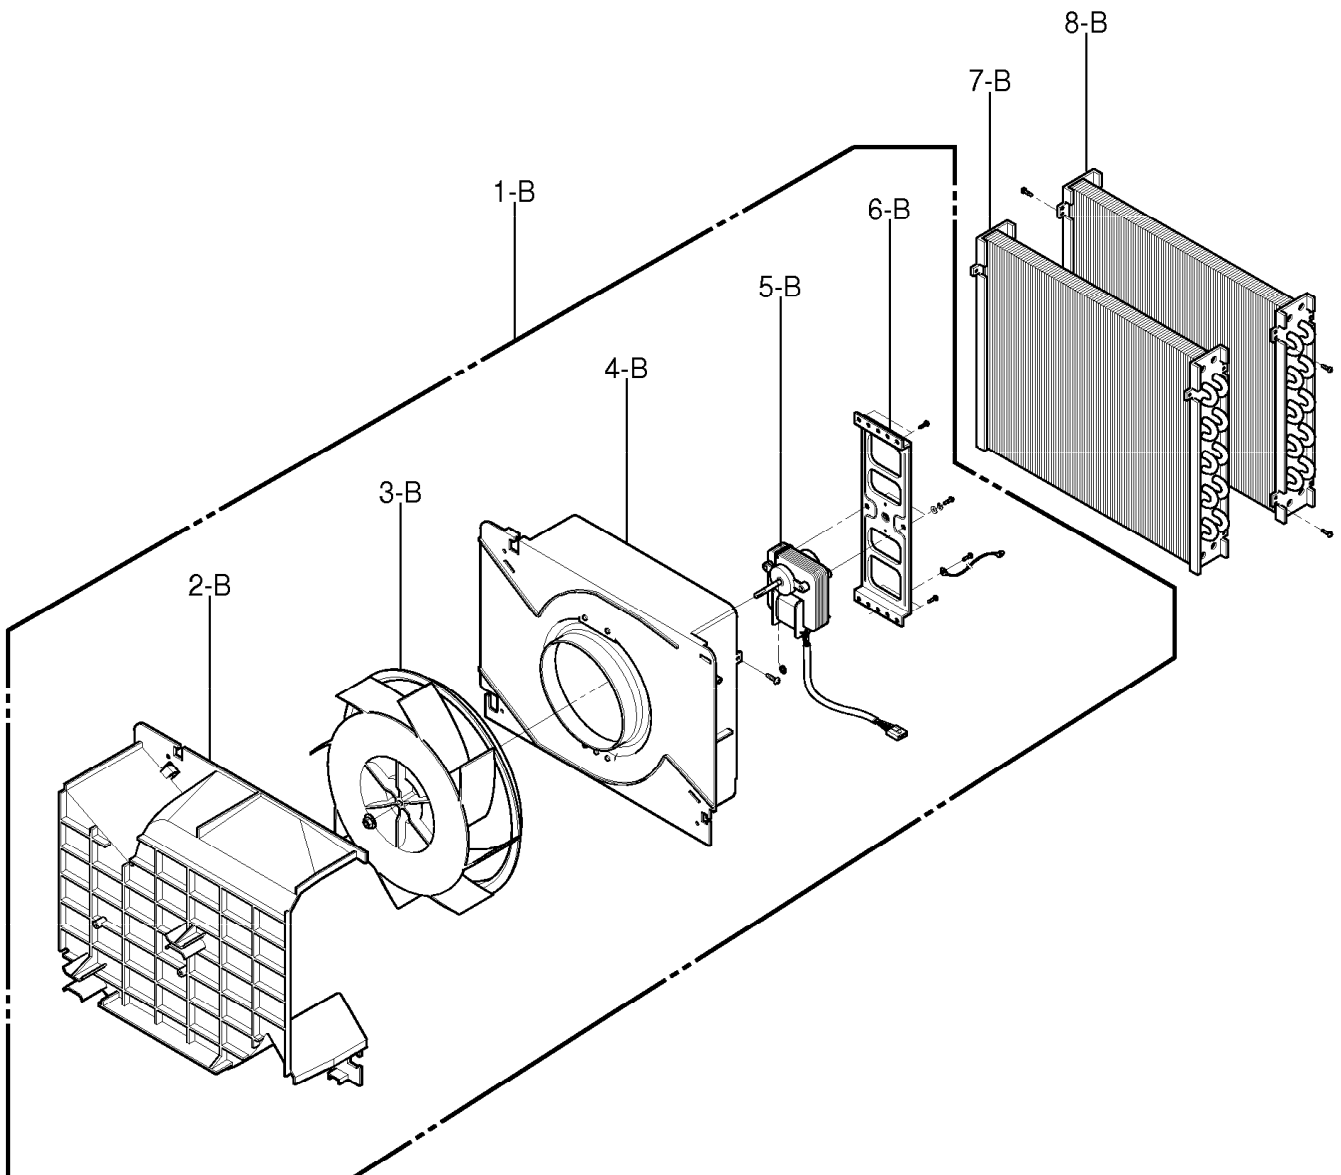


CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

CYCLE PARTS

ILLUSTRATION NUMBER	PART NUMBER	DESCRIPTION
1 - B	3661A10019A	HOUSING ASSEMBLY
2 - B	3660A10003A	HOUSING, SINGLE
3 - B	5900A20032A	FAN, TURBO
4 - B	4948A10023A	ORIFICE
5 - B	4681A20040E	MOTOR ASSEMBLY, SINGLE
6 - B	4960A20009A	MOUNT, MOTOR
7 - B	5403A20110A	CONDENSER ASSEMBLY
8 - B	5421A20131B	EVAPORATOR ASSEMBLY

CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

COMPRESSOR PARTS

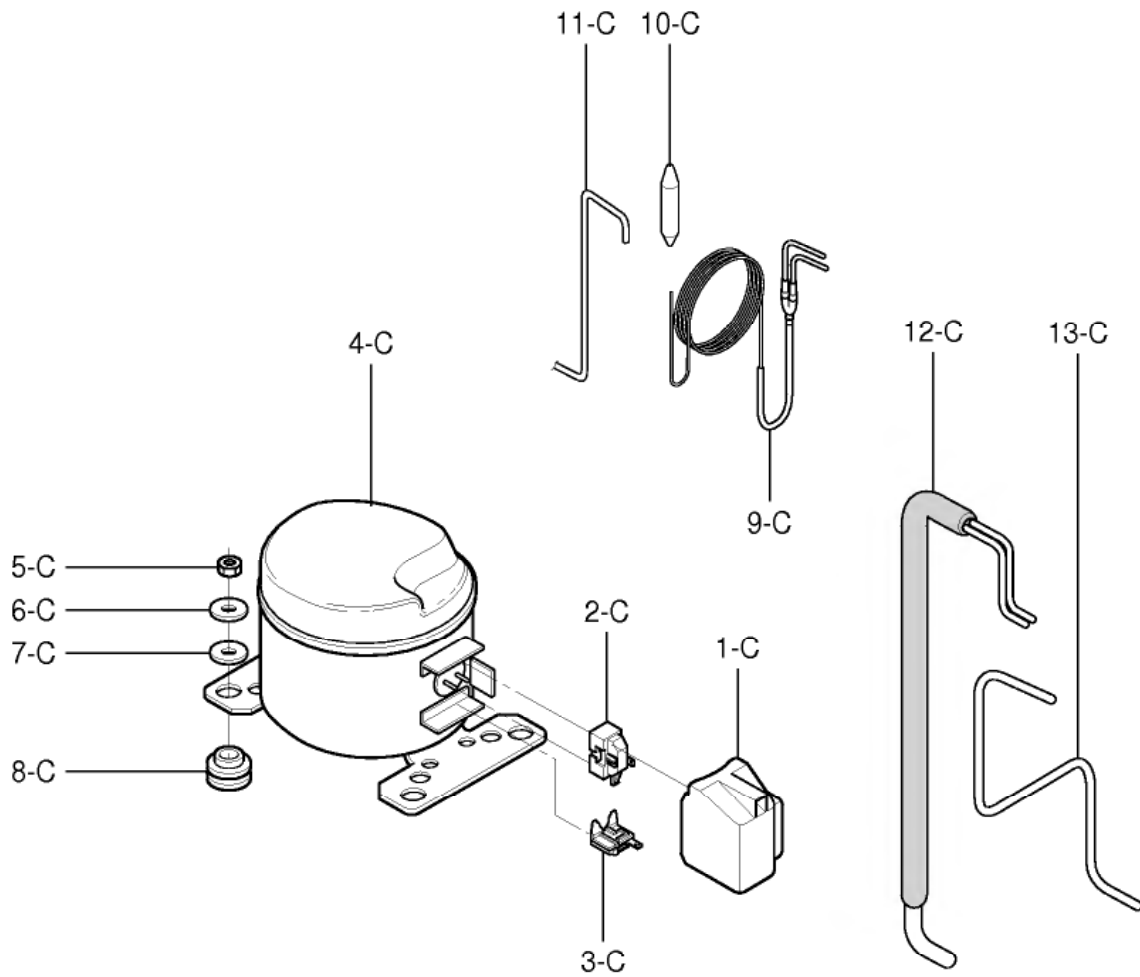

CAUTION: Use the Kenmore part number on all orders, **not** the illustration number.

COMPRESSOR PARTS

ILLUSTRATION NUMBER	PART NUMBER	DESCRIPTION
1 - C	3550C-0011A	COVER, P.T.C
2 - C	6748C-0003D	P.T.C, ASSEMBLY
3 - C	6750C-0009E	O.L.P.
4 - C	2521C-A8626	RE-COMPRESSOR, SET
5 - C	1NHA0801206	NUT, HEXAGON
6 - C	4H00972G	WASHER, DRAWING
7 - C	4H01029A	WASHER, DRAWING
8 - C	5040AR4195A	ISOLATOR, COMP.
9 - C	5211A20814A	TUBE ASSEMBLY, CAPILLARY
10 - C	5851A30001A	DRIER, ASSEMBLY
11 - C	5210A21845A	TUBE CONNECTOR
12 - C	5211A20812A	TUBE ASSEMBLY, SUCTION
13 - C	5210A21843A	TUBE, DISCHARGE

Get it fixed, at your home or ours!

Your Home

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call or go on-line for the location of your nearest **Sears Parts & Repair Center.**

1-800-488-1222

Call anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

SEARS

[®] Registered Trademark / [™] Trademark / SM Service Mark of Sears, Roebuck and Co.

[®] Marca Registrada / [™] Marca de Fábrica / SM Marca de Servicio de Sears, Roebuck and Co.

^{MC} Marque de commerce / ^{MD} Marque déposée de Sears, Roebuck and Co.

© Sears, Roebuck and Co.

Part No.: 3828A20090J