


# Service Manual

Room Air Conditioner

**CW-XC55HU**

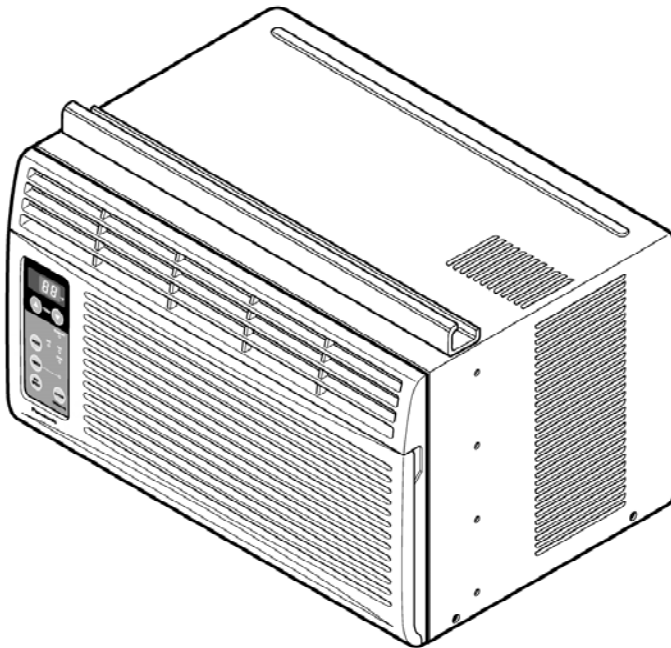

## **WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products deal with in this service information by anyone else could result in serious injury or death.

# Panasonic®

© 2005 Matsushita Electric Industrial co., Ltd.  
All rights reserved. Unauthorized copying and distribution is violation of law.

# CONTENTS

## 1. PREFACE

1.1 SAFETY PRECAUTIONS .....	3
1.2 INSULATION RESISTANCE TEST .....	3
1.3 SPECIFICATIONS .....	3
1.4 ABOUT THE CONTROLS ON THE AIR CONDITIONER .....	4

## 2. DISASSEMBLY INSTRUCTIONS

2.1 MECHANICAL PARTS .....	6
2.1.1 FRONT GRILLE .....	6
2.1.2 CABINET .....	6
2.1.3 CONTROL BOX .....	6
2.2 AIR HANDLING PARTS .....	7
2.2.1 AIR GUIDE UPPER .....	7
2.2.2 ORIFICE, TURBO FAN AND FAN .....	7
2.2.3 MOTOR .....	8
2.2.4 AIR GUIDE .....	8
2.3 ELECTRICAL PARTS .....	8
2.3.1 OVERLOAD PROTECTOR .....	8
2.3.2 COMPRESSOR .....	9
2.3.3 CAPACITOR .....	9
2.3.4 THERMISTOR .....	9
2.3.5 CONTROL PANEL .....	9
2.3.6 POWER CORD .....	10
2.4 REFRIGERANT CYCLE .....	10
2.4.1 CONDENSER .....	10
2.4.2 EVAPORATOR .....	11
2.4.3 CAPILLARY TUBE .....	11

## 3. INSTALLATION

3.1 SELECT THE BEST LOCATION .....	13
3.2 HOW TO INSTALL .....	13
3.3 ELECTRICAL DATA .....	16

## 4. TROUBLESHOOTING GUIDE

4.1 OUTSIDE DIMENSIONS .....	16
4.2 PIPING SYSTEM .....	17
4.3 TROUBLESHOOTING GUIDE .....	18

## 5. SCHEMATIC DIAGRAM

5.1 CIRCUIT DIAGRAM .....	27
5.2 ELECTRONIC CONTROL DEVICE .....	28
5.3 COMPONENTS LOCATION (FOR MAIN P.C.B ASSM) .....	29
5.4 COMPONENTS LOCATION (FOR DISPLAY P.C.B ASSM) .....	29

## 6. EXPLODED VIEW .....

## 7. SERVICE PARTS LIST .....

# 1. PREFACE

This service manual provides various service information, including the mechanical and electrical parts, etc. This room air conditioner was manufactured and assembled under a strict quality control system. The refrigerant is charged at the factory. Be sure to read the safety precautions prior to servicing the unit.

## 1.1 SAFETY PRECAUTIONS

1. When servicing, set the POWER of CONTROL BOX to Off and unplug the power cord.
2. Observe the original lead dress.  
If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
3. After servicing, make an insulation resistance test to prevent the customer's exposure to shock hazards.

## 1.2 INSULATION RESISTANCE TEST

1. Unplug the power cord and connect a jumper between 2 pins (black and white).
2. The grounding conductor (green or green and yellow) is to be open.
3. Measure the resistance value with an ohm meter between the jumpered lead and each exposed metallic part on the equipment.
4. The value should be over 1 MΩ.


## 1.3 SPECIFICATIONS

ITEMS \ MODELS	CW-XC55HU
COOLING CAPACITY (BTU/h)	5,200
POWER SUPPLY (Phase, V, Hz)	1ø, 115V, 60Hz
INPUT (W)	480
OPERATING CURRENT (AMP.)	4.4
REFRIGERANT CONTROL	CAPILLARY TUBE
REFRIGERANT CHARGE (R-22)	300g(10.6 Oz)
INSIDE FAN	TURBO
OUTSIDE FAN	PROPELLER FAN WITH SLINGER RING
AIR DISCHARGE	2-WAY (RIGHT AND LEFT)
CHASSIS	TOP-DOWN
PROTECTOR	• OVERLOAD PROTECTOR FOR COMPRESSOR • INTERNAL PROTECTOR FOR FAN MOTOR
TEMPERATURE CONTROL	THERMISTOR
FAN MOTOR	6 POLES

- **NOTE:** Specifications are subject to minor change without notice for further improvement.

## 1.4 ABOUT THE CONTROLS ON THE AIR CONDITIONER

### 1.4.1 CONTROLS (Model: CW-XC55HU)

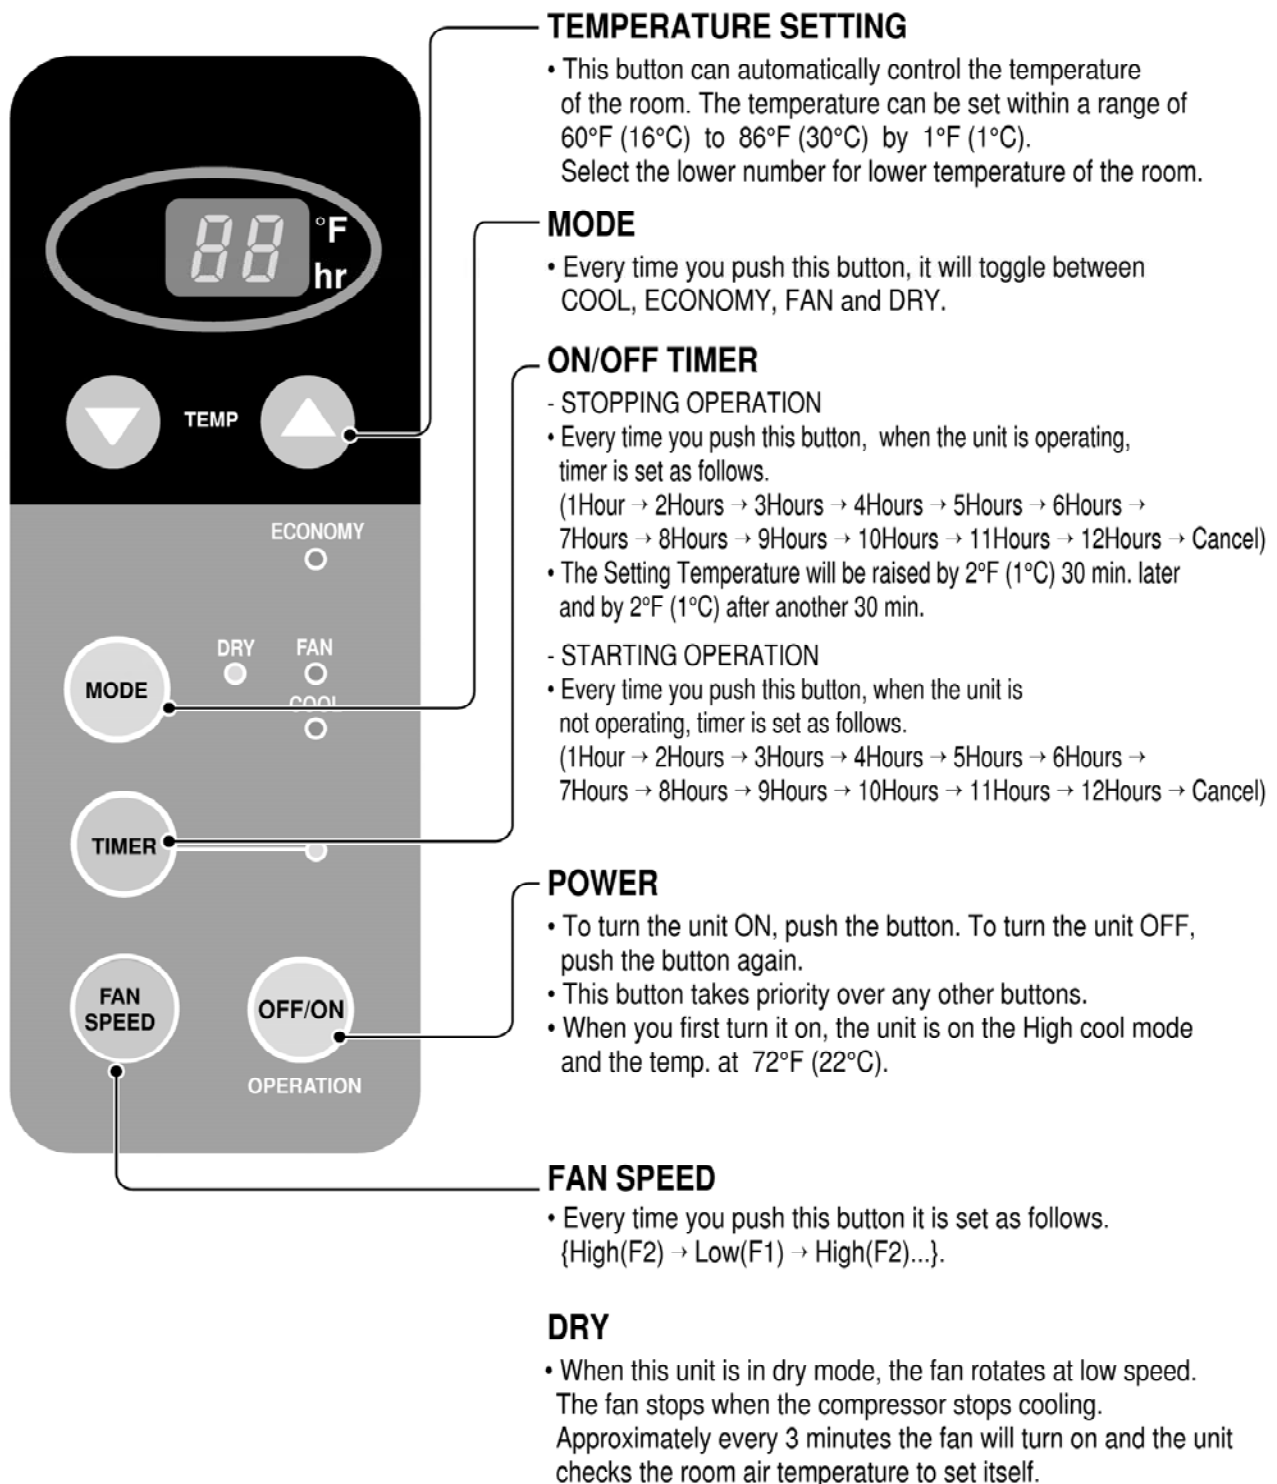



### 1.4.3 REMOTE CONTROLLER

**Precaution:** The Remote Controller will not function properly if strong light strikes the sensor window of the air conditioner or if there are obstacles between the Remote Controller and the air conditioner.

#### OPERATION BUTTON

- To turn the air conditioner ON, push the button. To turn the air conditioner OFF, push the button again.
- This button takes priority over any other buttons.
- When you first turn it on, the air conditioner is on the High cool mode and the temp. at 72°F (22°C).

#### ROOM TEMPERATURE SETTING BUTTON

This button can automatically control the temperature of the room. The temperature can be set within a range of 60°F to 86°F by 1°F. (16°C to 30°C by 1°C)  
Select the lower number for lower temperature of the room.

#### ON/OFF TIMER BUTTON

- You can set the time when the unit will turn on or turn off automatically by pressing the timer button. If the unit is in operation, this button controls the time it will be turned off. If the unit is in off state, this button controls the time it will start. Every time you push this button, the remaining time will be set as follows:

##### - STOPPING OPERATION

- Every time you push this button, when the air conditioner is operating, timer is set as follows : (1Hour → 2Hours → 3Hours → 4Hours → 5Hours → 6Hours → 7Hours → 8Hours → 9Hours → 10Hours → 11Hours → 12Hours → 0Hour → 1Hour → 2Hours → ...)
- The Setting Temperature will be raised by 2°F (1°C) 30 min. later and by 2°F (1°C) after another 30 min.

##### - STARTING OPERATION

- Every time you push this button, when the air conditioner is not operating, timer is set as follows : (1Hour → 2Hours → 3Hours → 4Hours → 5Hours → 6Hours → 7Hours → 8Hours → 9Hours → 10Hours → 11Hours → 12Hours → 0Hour → 1Hour → 2Hours → ...)

#### OPERATION MODE SELECTION BUTTON


- Every time you push this button, it will toggle between COOL, FAN and DRY. (Model: CW-XC54HK)
- Every time you push this button, it will toggle between COOL, ECONOMY, FAN and DRY. (Model: CW-XC54HU)

#### ECONOMY

- If you push this button, the fan stops when the compressor stops cooling. Approximately every 3 minutes the fan will turn on and check the room air to determine if cooling is needed.

#### FAN SPEED SELECTION BUTTON

Every time you push this button, it is set as follows.  
{High(F2) → Low(F1) → High(F2)...}.

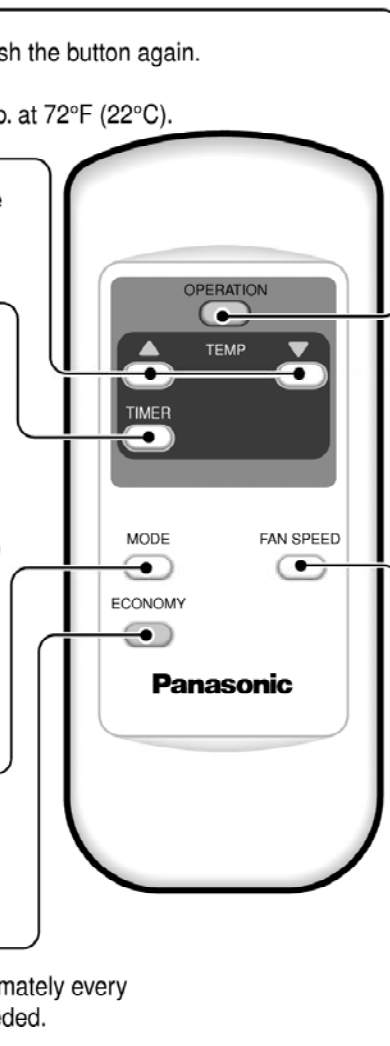

### How to Insert Batteries

1. Remove the cover from the back of the remote controller
2. Insert two batteries.
  - Be sure that the (+) and (-) directions are correct.
  - Be sure that both batteries are new.
3. Re-attach the cover.



- Do not use rechargeable batteries. Such batteries differ from standard dry cells in shape, dimensions, and performance.
- Remove the batteries from the remote controller if the air conditioner is not going to be used for an extended length of time.

## 2. DISASSEMBLY INSTRUCTIONS

### 2.1 MECHANICAL PARTS

#### 2.1.1 FRONT GRILLE

1. Disconnect the unit from source of power.
2. Using a screwdriver, remove the screw that secures the front grille to control board. (See Figure 1)
3. Push the front grille up from the bottom. Pull the top of the front grille away from the cabinet as the top tabs lift out of their slots. (See Figure 2)
4. Replace the grille by placing the tabs in the slots and push the grille until it snaps into place.

Figure 1


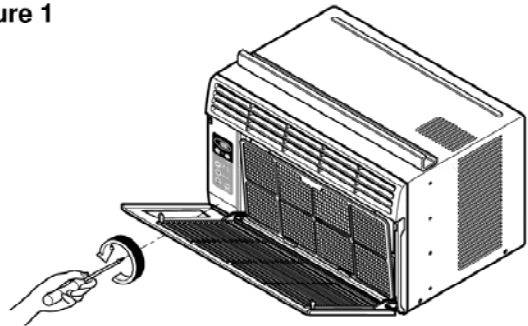


Figure 2

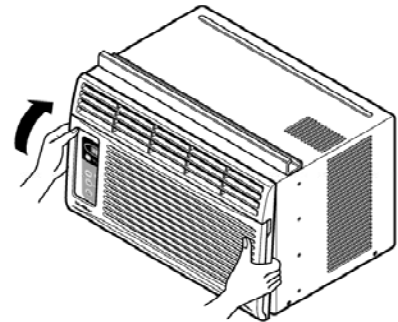

#### 2.1.2 CABINET

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to section 2.1.1)
3. Remove 9 screws that secure the cabinet to the base pan and condenser. (See figure 3)
4. Lift the cabinet from the unit.
5. Re-install by referring to the procedures above.

Figure 3

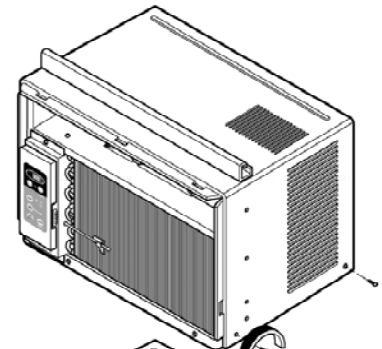


Figure 4


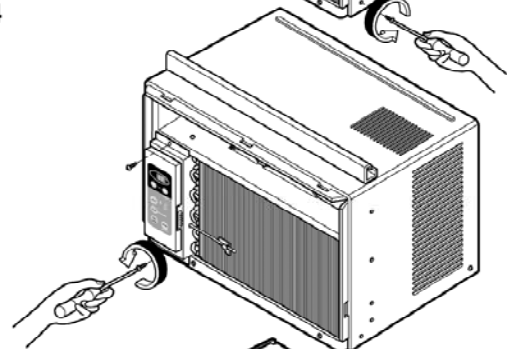


Figure 5

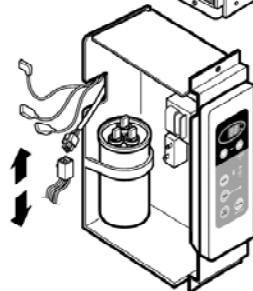

#### 2.1.3 CONTROL BOX

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove 2 screws that secure the control box to base pan and air guide. (See Figure 4)
5. Pull the control box toward yourself.

**NOTE :** Controls, wires, and capacitor are now accessible for servicing. Discharge the capacitor before servicing. See step 2.3.3 on page 8 for procedures.


6. Disconnect one housing terminal and 3 wires for the fan motor and compressor. (See Figure 5)
7. Re-install components by referring to procedures above. (Refer to wiring diagram on page 26 in this manual or inside control board.)

## 2.2 AIR HANDLING PARTS

### 2.2.1 AIR GUIDE UPPER

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove the control box.  
(Refer to Section 2.1.3)
5. Remove 2 screws that secure the air guide upper to air guide lower. (See Figure 6)
6. Lift air guide upper upward.
7. Re-install by referring to the procedures above.

Figure 6

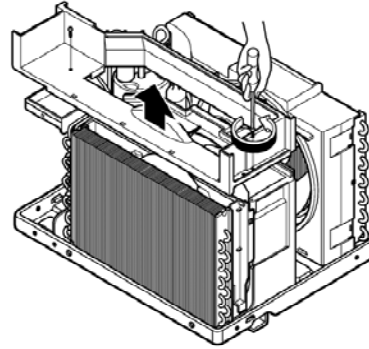

### 2.2.2 ORIFICE, TURBO FAN AND FAN

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove the control box.  
(Refer to Section 2.1.3)
5. Remove the air guide upper.  
(Refer to Section 2.2.1)
6. Remove 2 screws that secure the base pan to condenser. (See Figure 7)
7. Remove screw that secures the shroud to channel of condenser.
8. Press the snap area of shroud with your thumbs.  
This allows you to remove it from the condenser.
9. Lift the compressor upward with the evaporator and condenser. (See Figure 7)
10. Remove the orifice by pushing the snap area of the air guide turbo. (See Figure 8)
11. Remove the clamp springs which are clamped to the boss of fan and turbo fan by hand pliers. (See Figure 9)
12. Pull the fan and turbo fan outward.
13. Remove the shroud.
14. Re-install by referring to the procedures above.

Figure 7

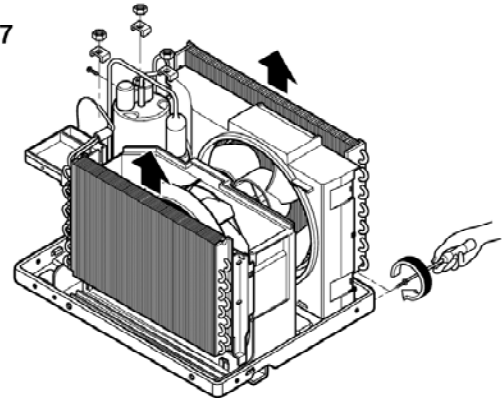


Figure 8


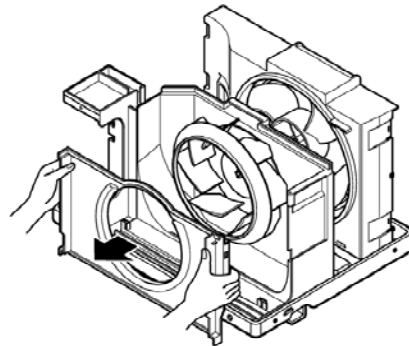



Figure 9

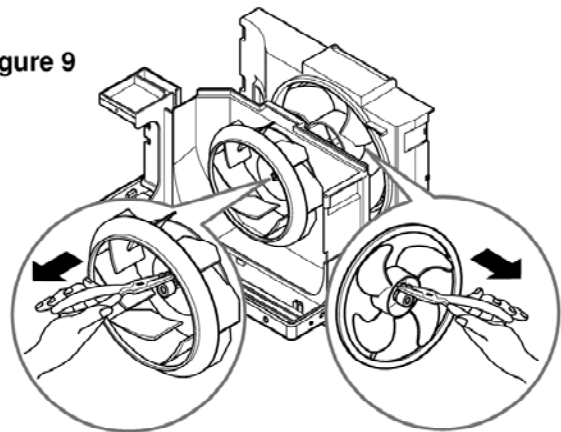

### 2.2.3 MOTOR

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove the control box.  
(Refer to Section 2.1.3)
5. Remove the air guide upper.  
(Refer to Section 2.2.1)
6. Remove the compressor, turbo fan, fan and shroud. (Refer to Section 2.2.2)
7. Remove 2 screws that secure the motor to the airguide. (See figure 10)
8. Remove the motor.
9. Re-install by referring to the procedures above.


Figure 10

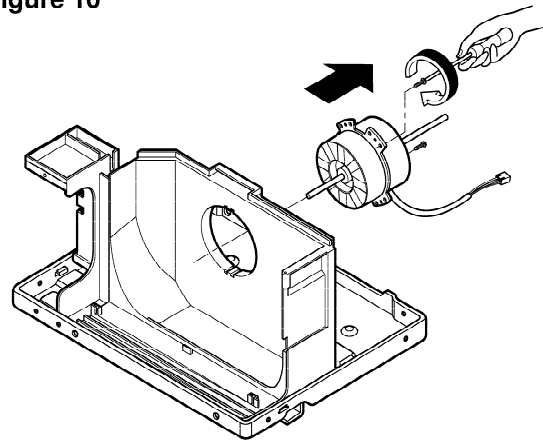

### 2.2.4 AIR GUIDE

1. Disconnect the unit from the power source.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove the control box.  
(Refer to Section 2.1.3)
5. Remove the air guide upper.  
(Refer to Section 2.2.1)
6. Remove the compressor, turbo fan, fan and shroud. (Refer to Section 2.2.2)
7. Remove the motor. (Refer to Section 2.2.3)
8. Remove 2 screws that secure the air guide to the base pan. (See Figure 11)
9. Push the air guide backward and lift it upward.  
(See Figure 11)
10. Re-install by referring to the procedures above.

Figure 11

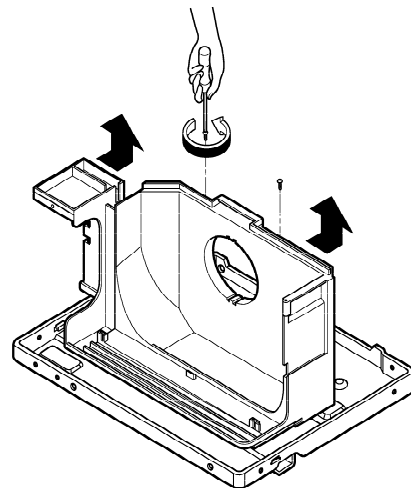

## 2.3 ELECTRICAL PARTS

### 2.3.1 OVERLOAD PROTECTOR

1. Remove the front grille and cabinet.  
(Refer to Section 2.1)
2. Remove the nut which fastens the terminal cover.
3. Remove the terminal cover.
4. Remove all the leads from the overload protector.
5. Remove the overload protector.
6. Re-install the components by referring to the removal procedure above.  
(See Figure 12 and 13)

Figure 12


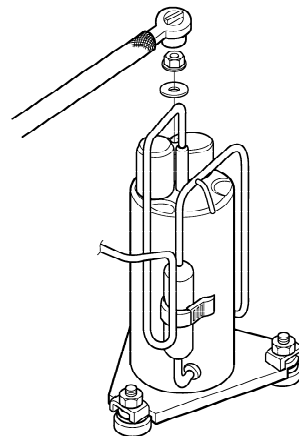



Figure 13

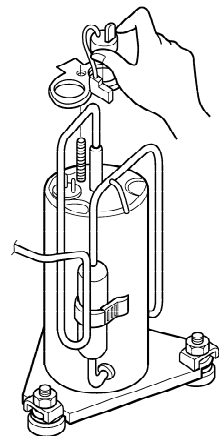

### 2.3.2 COMPRESSOR

1. Remove the front grille and cabinet.  
(Refer to Section 2.1)
2. Discharge the refrigerant by using a refrigerant recovery system.
3. Remove the overload protector.  
(Refer to Section 2.3.1)
4. After discharging the refrigerant from unit completely, disassemble the suction and discharge pipes at the compressor connections.
5. Remove 3 nuts which fasten the compressor.
6. Remove the compressor.
7. Re-install by referring to the removal procedure above. (See Figure 14)


Figure 14

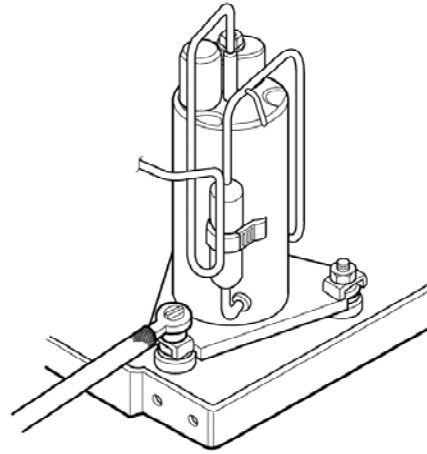

### 2.3.3 CAPACITOR

1. Remove the cabinet. (Refer to Section 2.1.2)
2. Remove the control box.  
(Refer to Section 2.1.3)
3. Discharge the capacitor by placing a 20 K $\Omega$  resistor across the capacitor terminals.
4. Remove the screw which fastens the capacitor clamp.
5. Remove all the leads of capacitor terminals.
6. Re-install the components by referring to the removal procedure above. (See Figure 15)


Figure 15

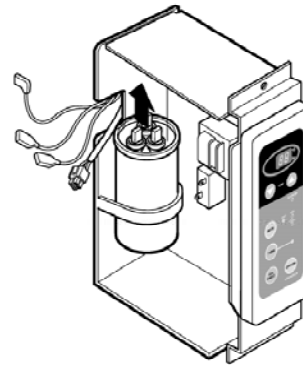

### 2.3.4 THERMISTOR

1. Remove the control box. (Refer to section 2.1.3)
2. Open the control box. (Refer to section 2.3.3)
3. Disconnect the thermistor terminals from main P.C.B assembly.
4. Remove the thermistor.
5. Re-install the components by referring to the above removal procedure. (See Figure 16)


Figure 16

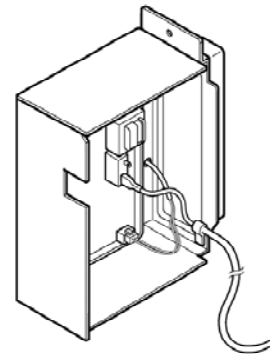

### 2.3.5 CONTROL PANEL

1. Remove the cabinet. (Refer to Section 2.1.2)
2. Remove the control box.  
(Refer to Section 2.1.3)
3. Pull the control panel forward and pull out it.
4. Remove 2 lead wire terminals.
5. Re-install the components by referring to the removal procedure above. (See Figure 17)


Figure 17

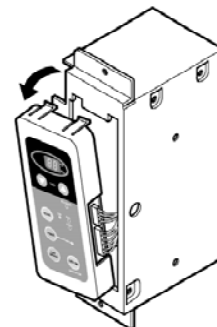

### 2.3.6 POWER CORD

1. Disconnect the unit from source of power.
2. Remove the front grille. (Refer to Section 2.1.1)
3. Remove the cabinet. (Refer to Section 2.1.2)
4. Remove a screw that secures control box to base pan. (Refer to Section 2.1.3)
5. Pull the control box toward you.
6. Disconnect the 2 receptacles and remove the grounding screw.
7. Remove a screw securing the clip with cord to the control box.
8. Pull the power cord.
9. Re-install by referring to procedures above.

Figure 18

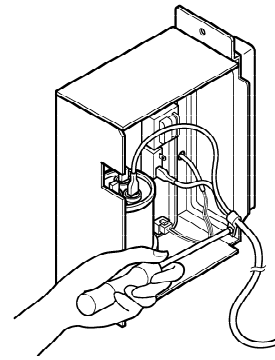


## 2.4 REFRIGERANT CYCLE

### 2.4.1 CONDENSER

1. Remove the cabinet. (Refer to Section 2.1.2)
2. Discharge the refrigerant by using a refrigerant recovery system.
3. Remove the air guide. (Refer to Section 2.2.1)
4. Remove 2 screws which fasten the condenser.
5. After discharging the refrigerant completely, unbrazed the interconnecting tube at the condenser connections.
6. Remove the condenser.
7. Re-install by referring to the procedures above.

Figure 19

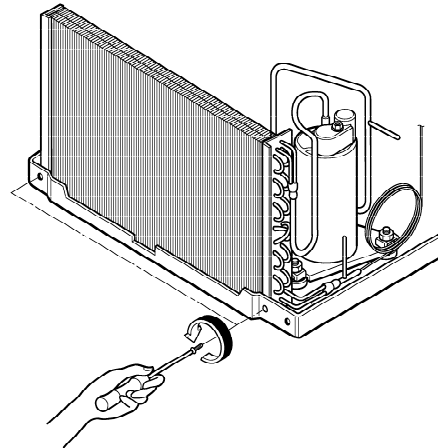

### 2.4.2 EVAPORATOR

1. Remove the cabinet.
2. Discharge the refrigerant by using a refrigerant recovery system.
3. Remove the air guide upper. (Refer to Section 2.2.1)
4. After discharging the refrigerant completely, unbrazed the interconnecting tube at the condenser connections.
5. Remove the evaporator.
6. Re-install by referring to the procedures above.

### 2.4.3 CAPILLARY TUBE

1. Remove the cabinet.
2. Discharge the refrigerant by using a refrigerant recovery system.
3. Remove the air guide upper. (Refer to Section 2.2.1)
4. After discharging the refrigerant completely, unbrazed the interconnecting tube of the capillary tube.
5. Remove the capillary tube.
6. Re-install by referring to the procedures above.

### NOTES

Replacement of the refrigeration cycle.

1. When replacing the refrigerating cycle, be sure to discharge the refrigerant by using a refrigerant recovery system.
2. After discharging the refrigerant from unit completely, remove the desired components, and unbrazed the pinch-off tubes.
3. Braze service valves into the pinch-off tube ports, leaving the valves open.
4. Braze the pinch-off tubes with service valves.
5. After completing the above procedures, the valve must be closed and left in place on the system for any subsequent procedures.
6. Evacuate as follows:
  - 6-1. Connect the vacuum pump, as illustrated in figure 21A.
  - 6-2. Start the vacuum pump. Slowly open manifold valves A and B with two full turns counter-clockwise and leave the valves closed. The vacuum pump is now pulling through valves A and B up to valve C (figure 21B) by means of manifold and the entire system.



**CAUTION :** If high vacuum equipment is used, just slightly loosen the valves A and B for a few minutes, then open slowly with the two full turns

counter-clockwise. This will keep oil from foaming and being drawn into the vacuum pump.


- 6-3. Operate the vacuum pump for 20 to 30 minutes, until 600 micron vacuum is obtained. Close valves A and B and observe vacuum gauge for a few minutes. A rise in pressure would indicate a possible leak or moisture remaining in the system. With valves A and B closed, stop the vacuum pump.
- 6-4. Remove the hose from the vacuum pump and place it on the charging cylinder. See figure 21B. Open valve C. Discharge the line at the manifold connection.
- 6-5. The system is now ready for final charging.
7. Recharge as follows:
  - 7-1. Rotary compressor systems are charged from the high-side. If the total charge cannot be put in the high-side, the balance will be put in the suction line through the access valve which is installed as the system is opened.
  - 7-2. Connect the charging cylinder as shown in figure 21B. With valve C open, discharge the hose at the manifold connection.
  - 7-3. Open valve A and allow the proper charge to enter the system. Valve B is still closed.
  - 7-4. If more charge is required, the high-side will not take it. Close valve A.
  - 7-5. With the unit running, open valve B and add the balance of the charge.
    - a. Do not add the liquid refrigerant to the low-side.
    - b. Watch the low-side gauge, allow pressure to rise to 30 lbs(0.2MP).
    - c. Turn off valve B and allow the pressure to drop.
    - d. Repeat steps B and C until the balance of the charge is in the system.
  - 7-6. When the unit is operating correctly, use the pinch-off tool with the unit still running and the clamp on the pinch-off tube. Using a tube cutter, cut the pinch-off tube about 5cm(2") from the pinch-off tool. Use sil-fos brazing rod and braze the pinch-off tube closed. Turn off the unit, allow setting for a while and then test the leakage of the pinch-off connection.



**Equipment needed:** Vacuum pump, charging cylinder, manifold gauge, brazing equipment, pinch-off tool capable of making a vapor proof seal, leak detector, tubing cutter, hand tools to remove components and service valve.

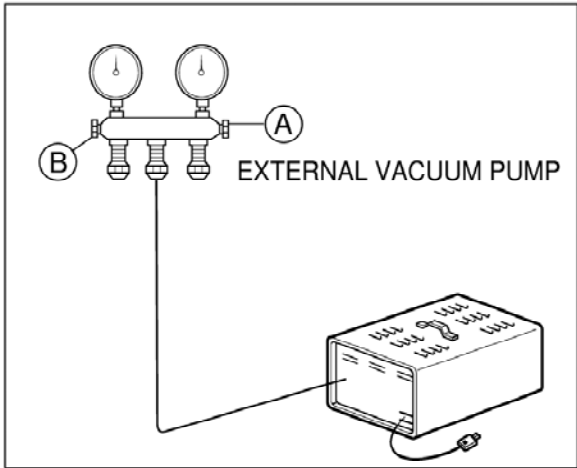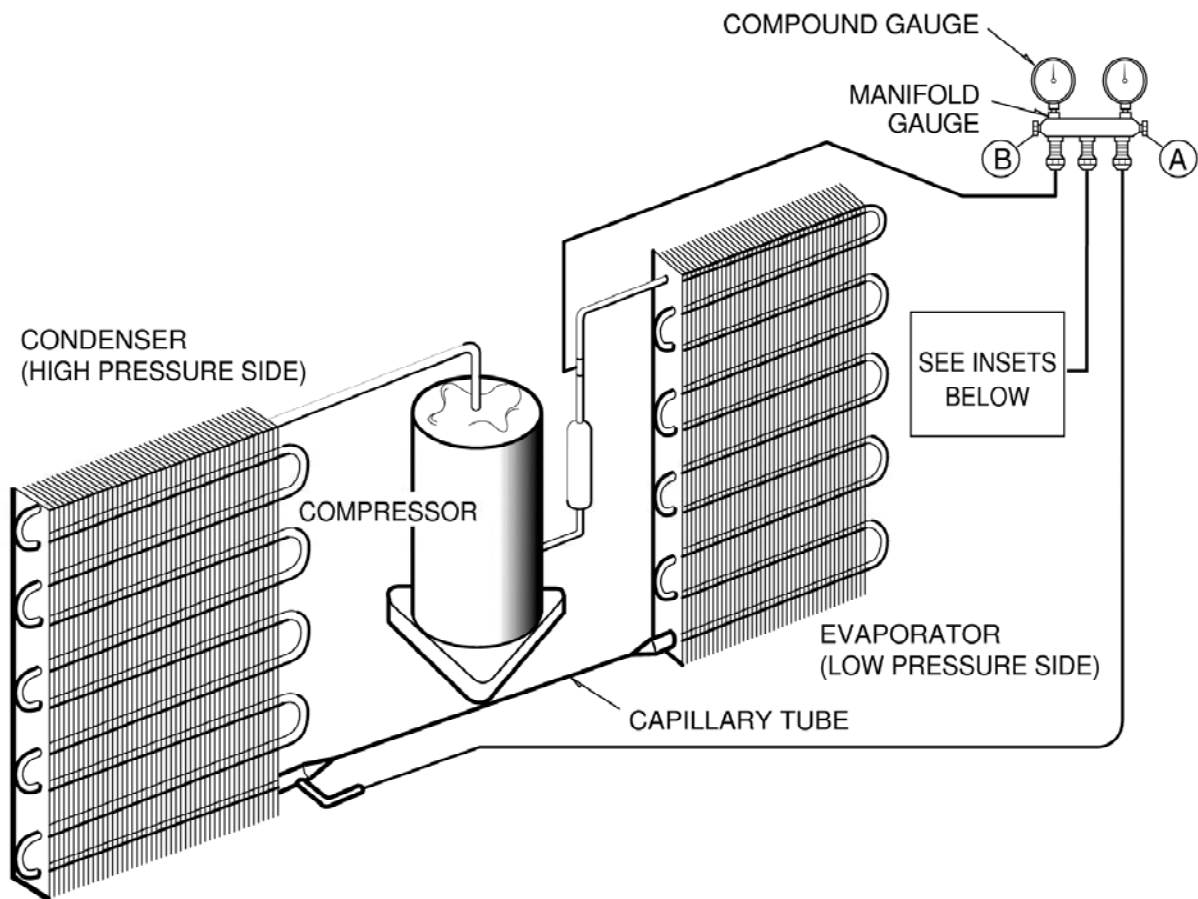

**Figure 21A-Pulling Vacuum**

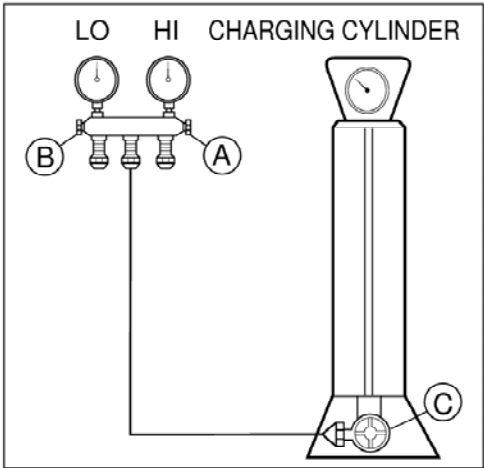

**Figure 21B-Charging**



## 3. INSTALLATION

This air conditioner is designed with a button-down chassis so it can be easily installed in a window.

### 3.1 SELECT THE BEST LOCATION

1. To prevent vibration and noise, make sure the unit is installed securely and firmly.
2. Install the unit where the sun does not shine directly on the unit.
3. The outside of the cabinet must extend outward for at least 25.4cm(10") and there should be no obstacles, such as a fence or wall, within 50.8cm(20") from the back of the cabinet because it will prevent heat radiation of the condenser. Restriction of outside air will greatly reduce the cooling efficiency of the air conditioner.

#### ⚠ CAUTION

All side louvers of the cabinet must remain exposed on the outside of the structure.

4. Install the unit slanted slightly so the back is slightly lower than the front (about 6.35mm( $\frac{1}{4}$ ")). This will force condensed water to the outside.
5. Install the unit with the bottom about 76.2cm(30")~152.4cm(60") above the floor level.

### 3.2 HOW TO INSTALL

#### 3.2.1 WINDOW REQUIREMENTS

**NOTE:** All supporting parts should be secured to firm wood, masonry, or metal.

1. This unit is designed for installation in standard double hung windows with actual opening widths of 55.88cm(22") to 91.44cm(36"). The upper and lower sash must open sufficiently to allow a clear vertical opening of 13cm(5") from the bottom of the sash to the window stool.
2. If a storm window presents interference, fasten a 5.08cm(2") wide wood strip to the inner window sill across the full width of the sill. The wood strip should be thick enough to raise the height of the window sill so that the unit can be installed without interference by the storm window frame. See Fig. 24. Top of the wood strip should be approximately 1.9cm( $\frac{3}{4}$ ") higher than the storm window frame (STORM WINDOW FRAME) or wood strip (OUTDOORS) to help condensation to drain properly to the outside.
3. Install a second wood strip (approximately 15.24cm(18") long by 3.81cm( $1\frac{1}{2}$ ") wide and same thickness as first strip) in the center of the outer sill flush against the back off the inner sill. This will raise the L bracket as shown Fig. 24. The thickness of the second wood strip may not be the same as the first wood strip. The thickness of the second wood strip must be defined to keep the 1.9cm( $\frac{3}{4}$ ") distance between the inner sill or the top of the first wood strip and the outer sill.

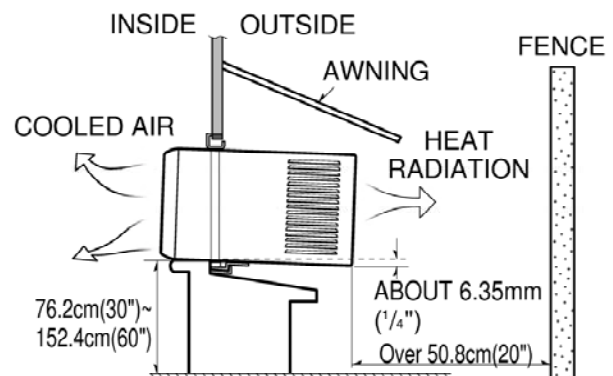


Figure 22

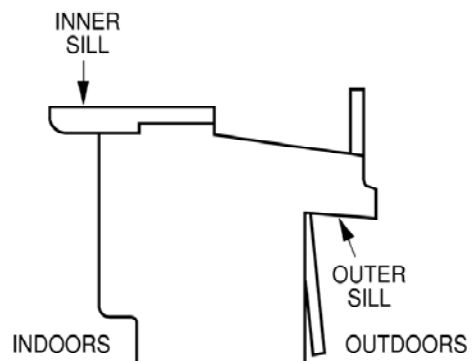


Figure 23



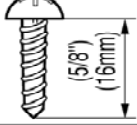
 



 



Figure 24

## Installation

HARDWARE			
TYPE A: Qty:11 (SHORT SCREW)	TYPE B: Qty:5 (WOOD SCREW)	TYPE C: Qty:3 (L BRACKET)	DRAIN PIPE: Qty:1
			
TYPE D: Qty:1 (SEAL STRIP)	TYPE E: Qty:1 (SASH SEAL)	TYPE F: Qty:2 (GUIDE PANEL)	TYPE G: Qty:1 (SUPPORT BRACKET)
(Adhesive backed) 	(Not adhesive backed) 		
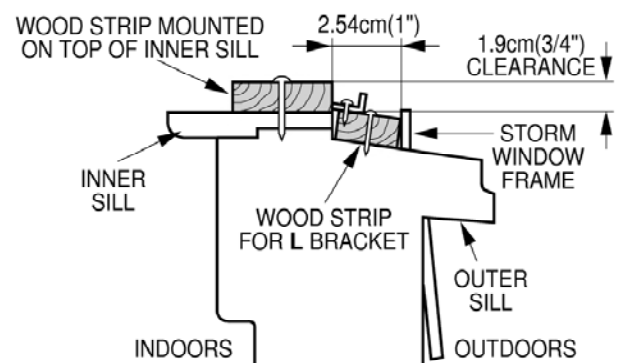
### 3.2.2 BEFORE INSTALLATION

1. Insert the guide panels into the guides of the air conditioner. Fasten the curtains to the unit with screws (TYPE A), as shown Fig. 25.
2. Cut the adhesive-backed seal strip (TYPE D) to the window width. Remove the backing from the seal strip and attach the seal strip to the underside of the bottom window. (Fig. 26)

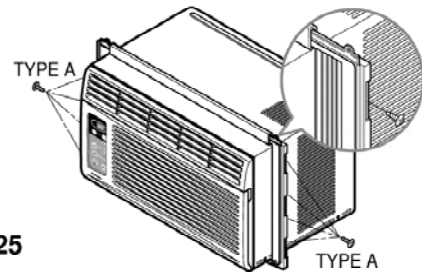


Figure 25

### 3.2.3 NOW START INSTALLATION

#### 1. LOCATING UNIT IN A WINDOW

Open the window and mark center line on the center of the inner sill, as shown in Fig. 27.

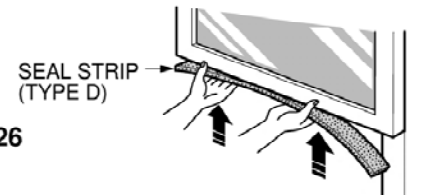


Figure 26

#### 2. ATTACH L BRACKET

- a. Install the L brackets behind the inner window sill, with the short side of bracket as shown. Use the 2 screws (TYPE A) provided.
- b. The bracket helps to hold unit securely in place. Be sure to place bracket edge flush against back of inner sill. See Fig. 27.

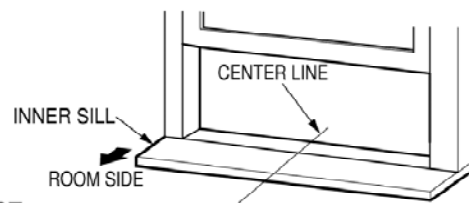



Figure 27

#### CAUTION

During the following step, hold unit firmly until window sash is lowered to top channel behind side panel frames. Personal injury or property damage may result if unit falls from window.

### 3.2.4 HOW TO INSTALL WIRE NET ON THE BACKSIDE OF THE CABINET (Optional : CW353020031B)

- Insert the rear grille wire ends into the 4 respective slots provided along the groove at the back of unit.

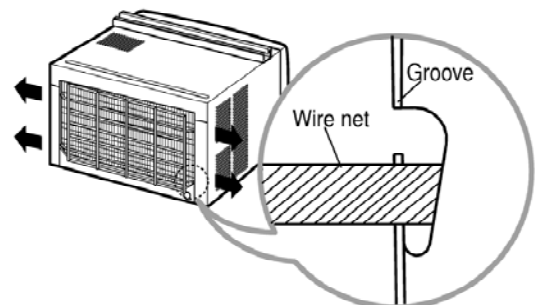

### 3. INSTALL THE AIR CONDITIONER IN THE WINDOW

- Carefully lift the air conditioner and slide it into the open window. Make sure the bottom guide of the air conditioner drops into the notches of the L bracket. See Fig. 28.

#### IMPORTANT :

When the air conditioner drops into the L bracket, the air conditioner will be centered in window opening as shown in Fig. 29.

- While steadying the air conditioner, carefully bring the window sash down behind the upper guide of the air conditioner, as shown in Fig. 30.

### 4. SECURE THE GUIDE PANELS

Extend the guide panels (TYPE F) to fill the window opening using 4 screws (TYPE B) to secure them, as shown in Fig. 31.

### 5. INSTALL THE SASH SEAL AND SASH LOCK

- Cut the sash seal (TYPE E) to the window width. Stuff the sash seal between the glass and the window to prevent air and insects from getting into the room, as shown in Fig. 31.
- Fasten the L bracket using a screw (TYPE A), as shown in Fig. 31.

- Remove the screws that secure the cabinet and base pan in the right side.
- Fasten the support bracket (TYPE G) using a removed screw. Attach the support bracket (TYPE G) in the inner window sill with a screw (TYPE B), as shown Fig. 32.

7. Window installation of room air conditioner is now completed. See ELECTRICAL DATA for attaching power cord to electrical outlet.

#### 3.2.4 How to Secure the Drain pipe

In humid weather, excess water may cause the BASE PAN to overflow. To drain the water, remove the DRAIN CAP and secure the DRAIN PIPE to the rear hole of the BASE PAN. (Fig. 33) Press the drain pipe into the hole by pushing down and away from the fins to avoid injury.

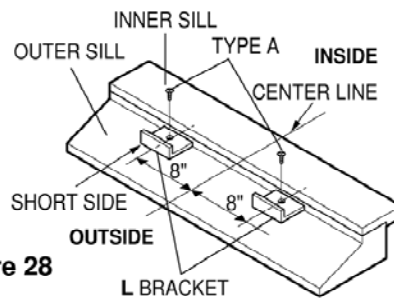


Figure 28

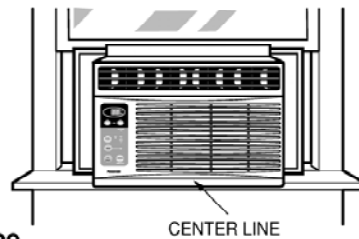


Figure 29

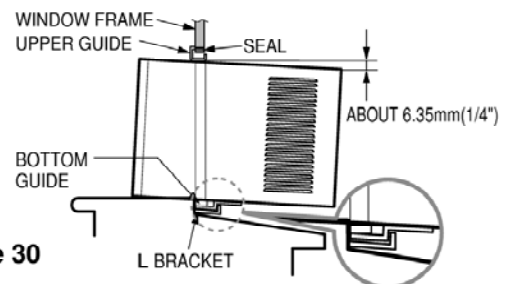


Figure 30

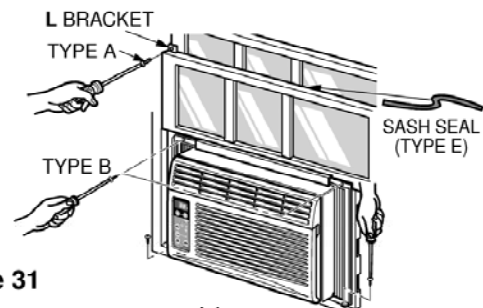


Figure 31

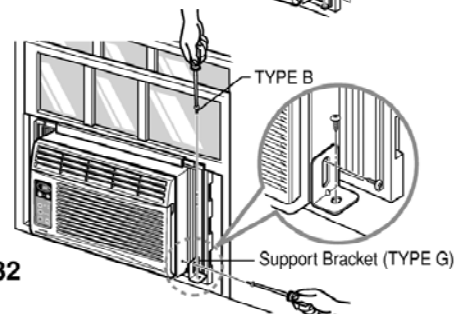


Figure 32

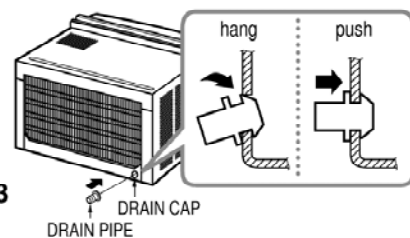



Figure 33

## REMOVAL FROM WINDOW

Turn the air conditioner off, disconnect the power cord, remove the Support Bracket, L bracket and the screws installed through the top and bottom of the guide panels, and save for reinstallation later. Close the guide panels. Keeping a firm grip on the air conditioner, raise the sash, and carefully tilt the air conditioner backward, draining any condensate. Lift the air conditioner from the window and remove the sash seal from between the windows.

## 3.3 ELECTRICAL DATA


Use Wall Receptacle	Power Supply
 <p>Standard 125V, 3-wire grounding receptacle rated 15A, 125V AC</p>	<p>Use 15 AMP, time delay fuse, or circuit breaker.</p>

## USE OF EXTENSION CORDS


Because of potential safety hazards, we strongly discourage the use of an extension cord. However, if you wish to use an extension cord, use a CSA certified/UL-listed 3-wire (grounding) extension cord, rated 15A, 125V.

# 4. TROUBLESHOOTING GUIDE


## 4.1 OUTSIDE DIMENSIONS (unit: mm [in])

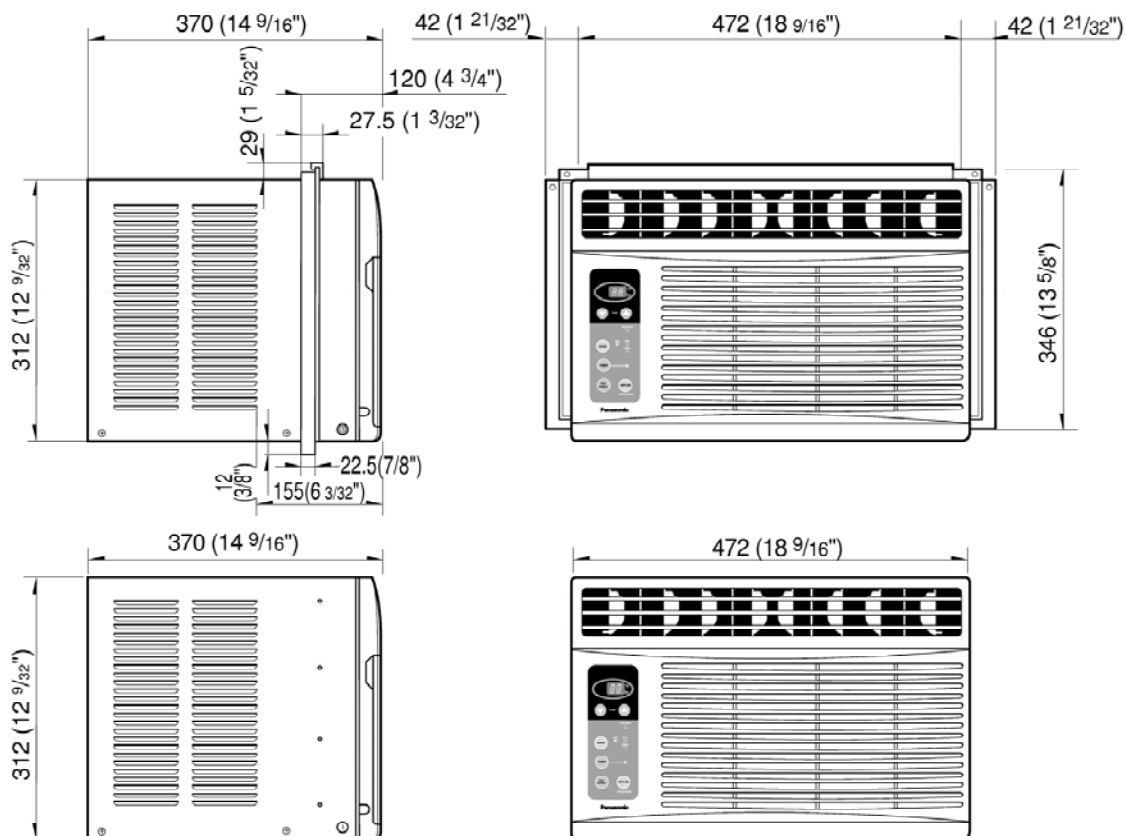

4.2 PIPING SYSTEM

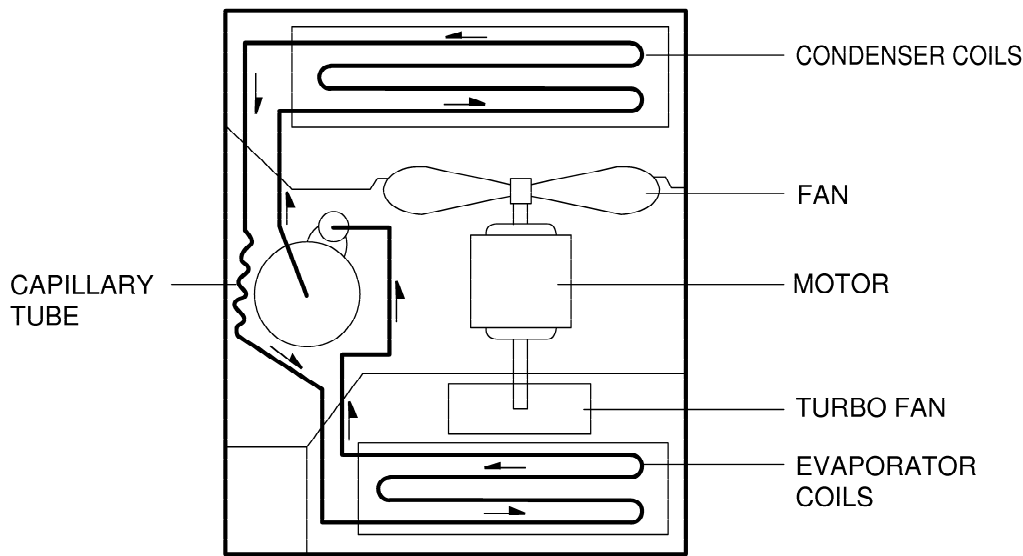

Following is a brief description of the important components and their function in what is called the refrigeration system. Reference should be made to Figure 34 to follow the refrigerating cycle and the flow of the refrigerant in the cooling cycle.

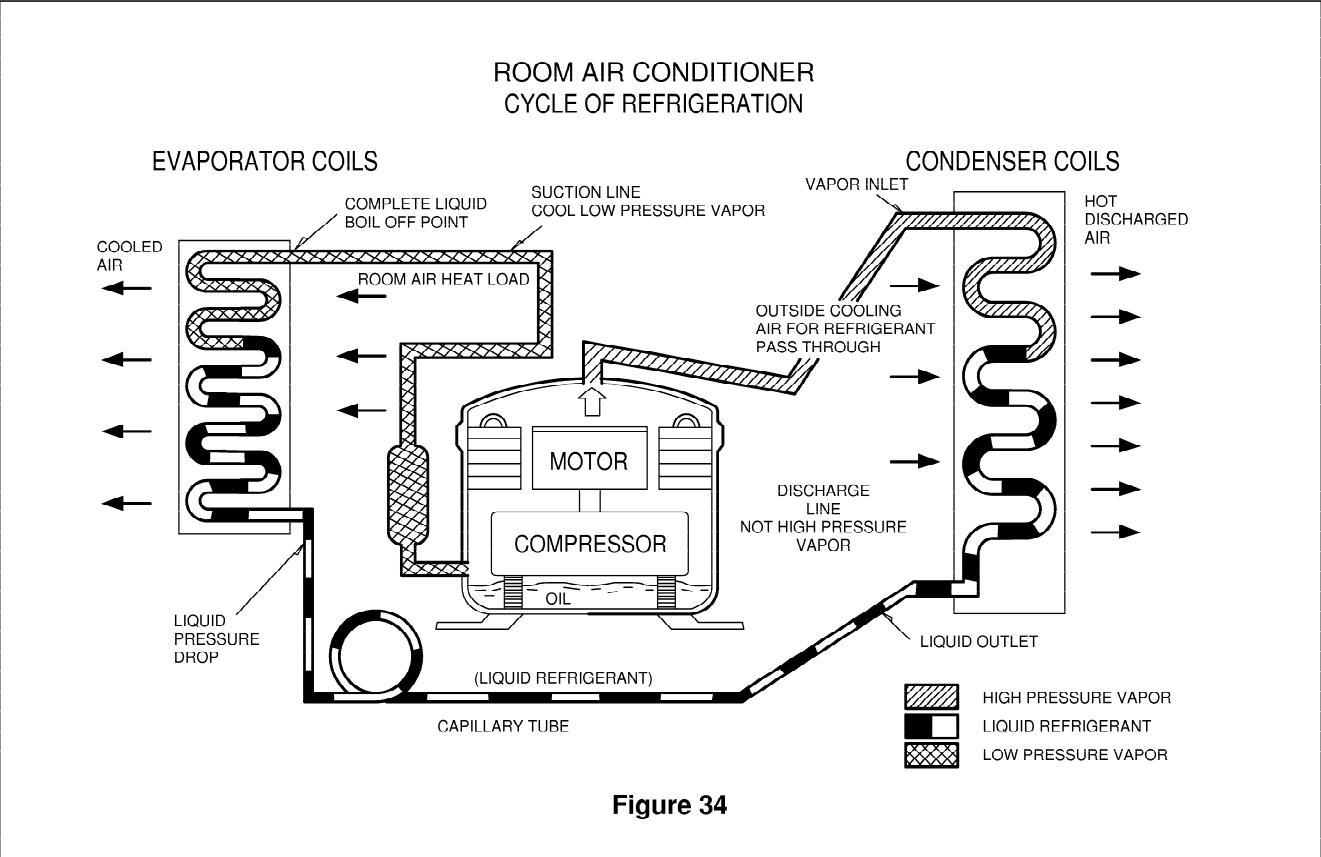



### 4.3 TROUBLESHOOTING GUIDE

In general, possible trouble is classified in two kinds.

The one is called **Starting Failure** which is caused by an electrical defect. The other is **Ineffective Air Conditioning** caused by a defect in the refrigeration circuit and improper application.

**Unit is running but cooling is ineffective.**

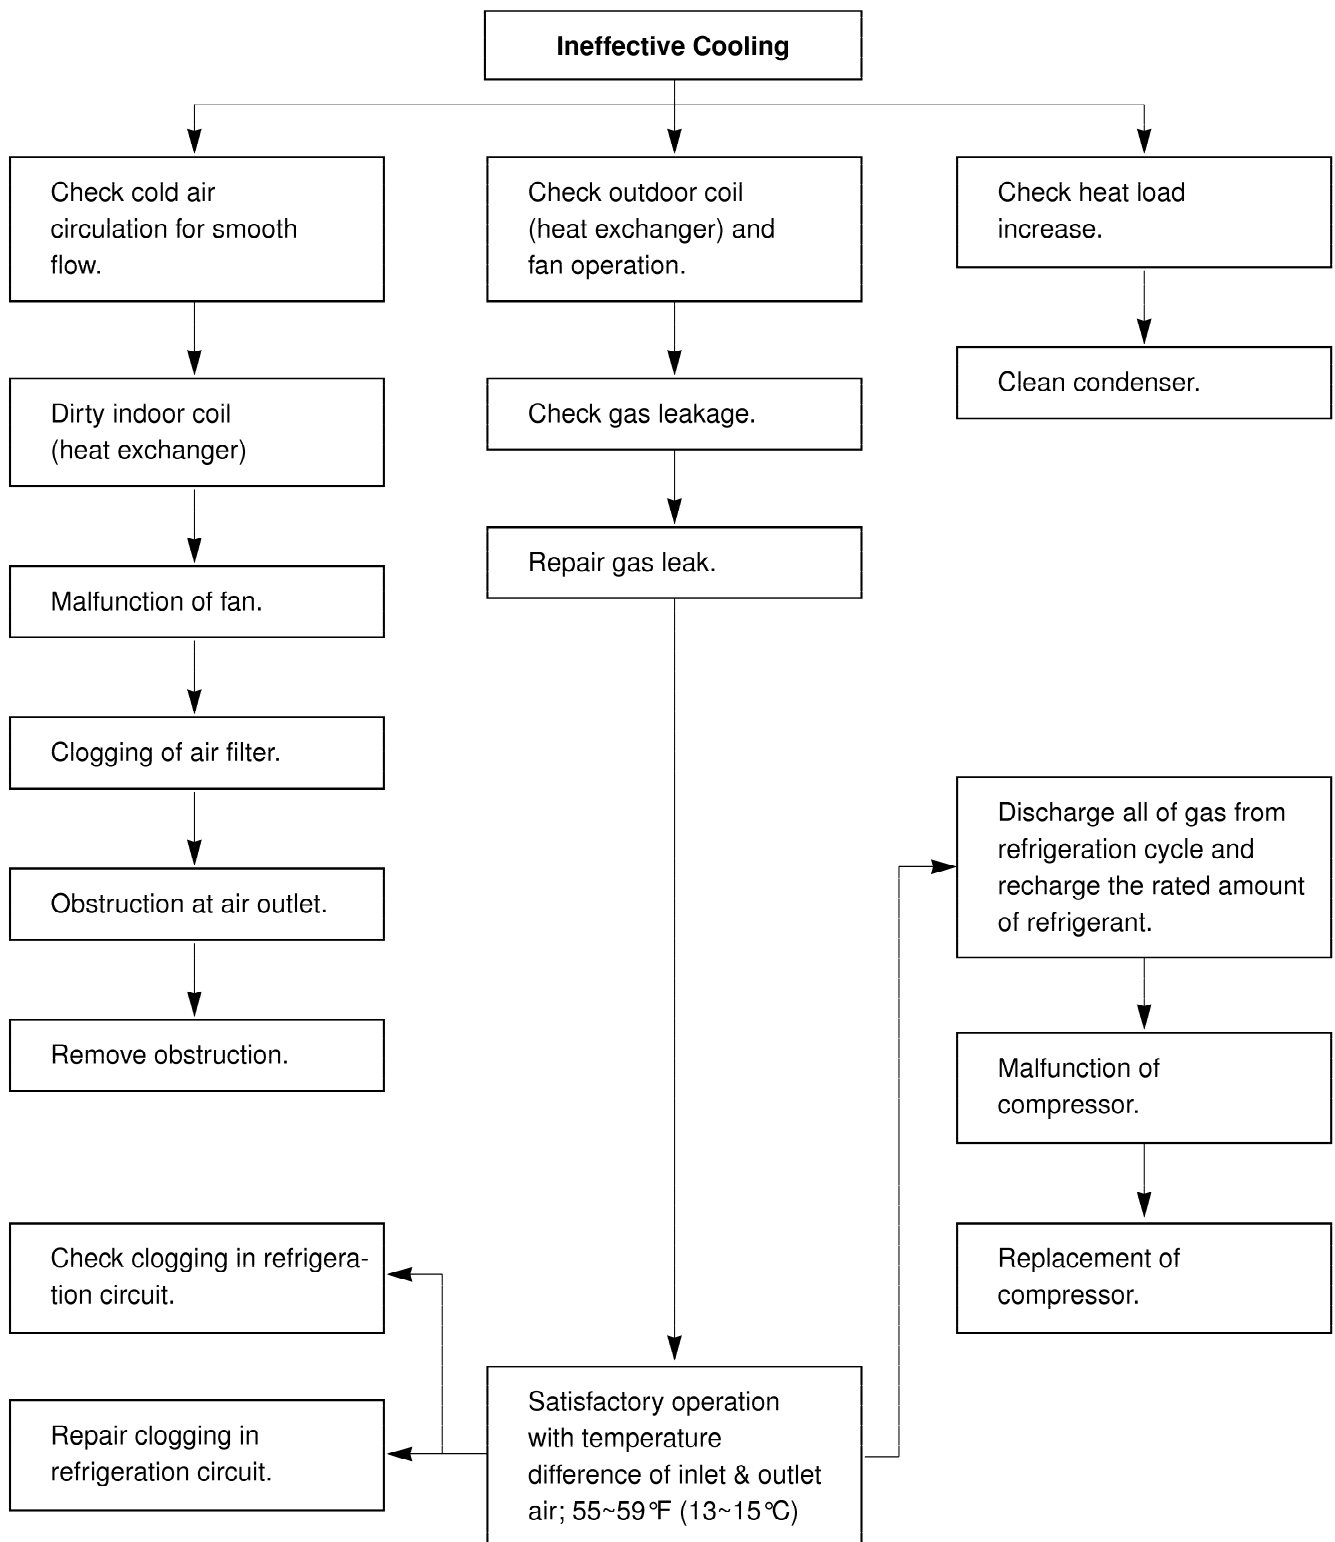


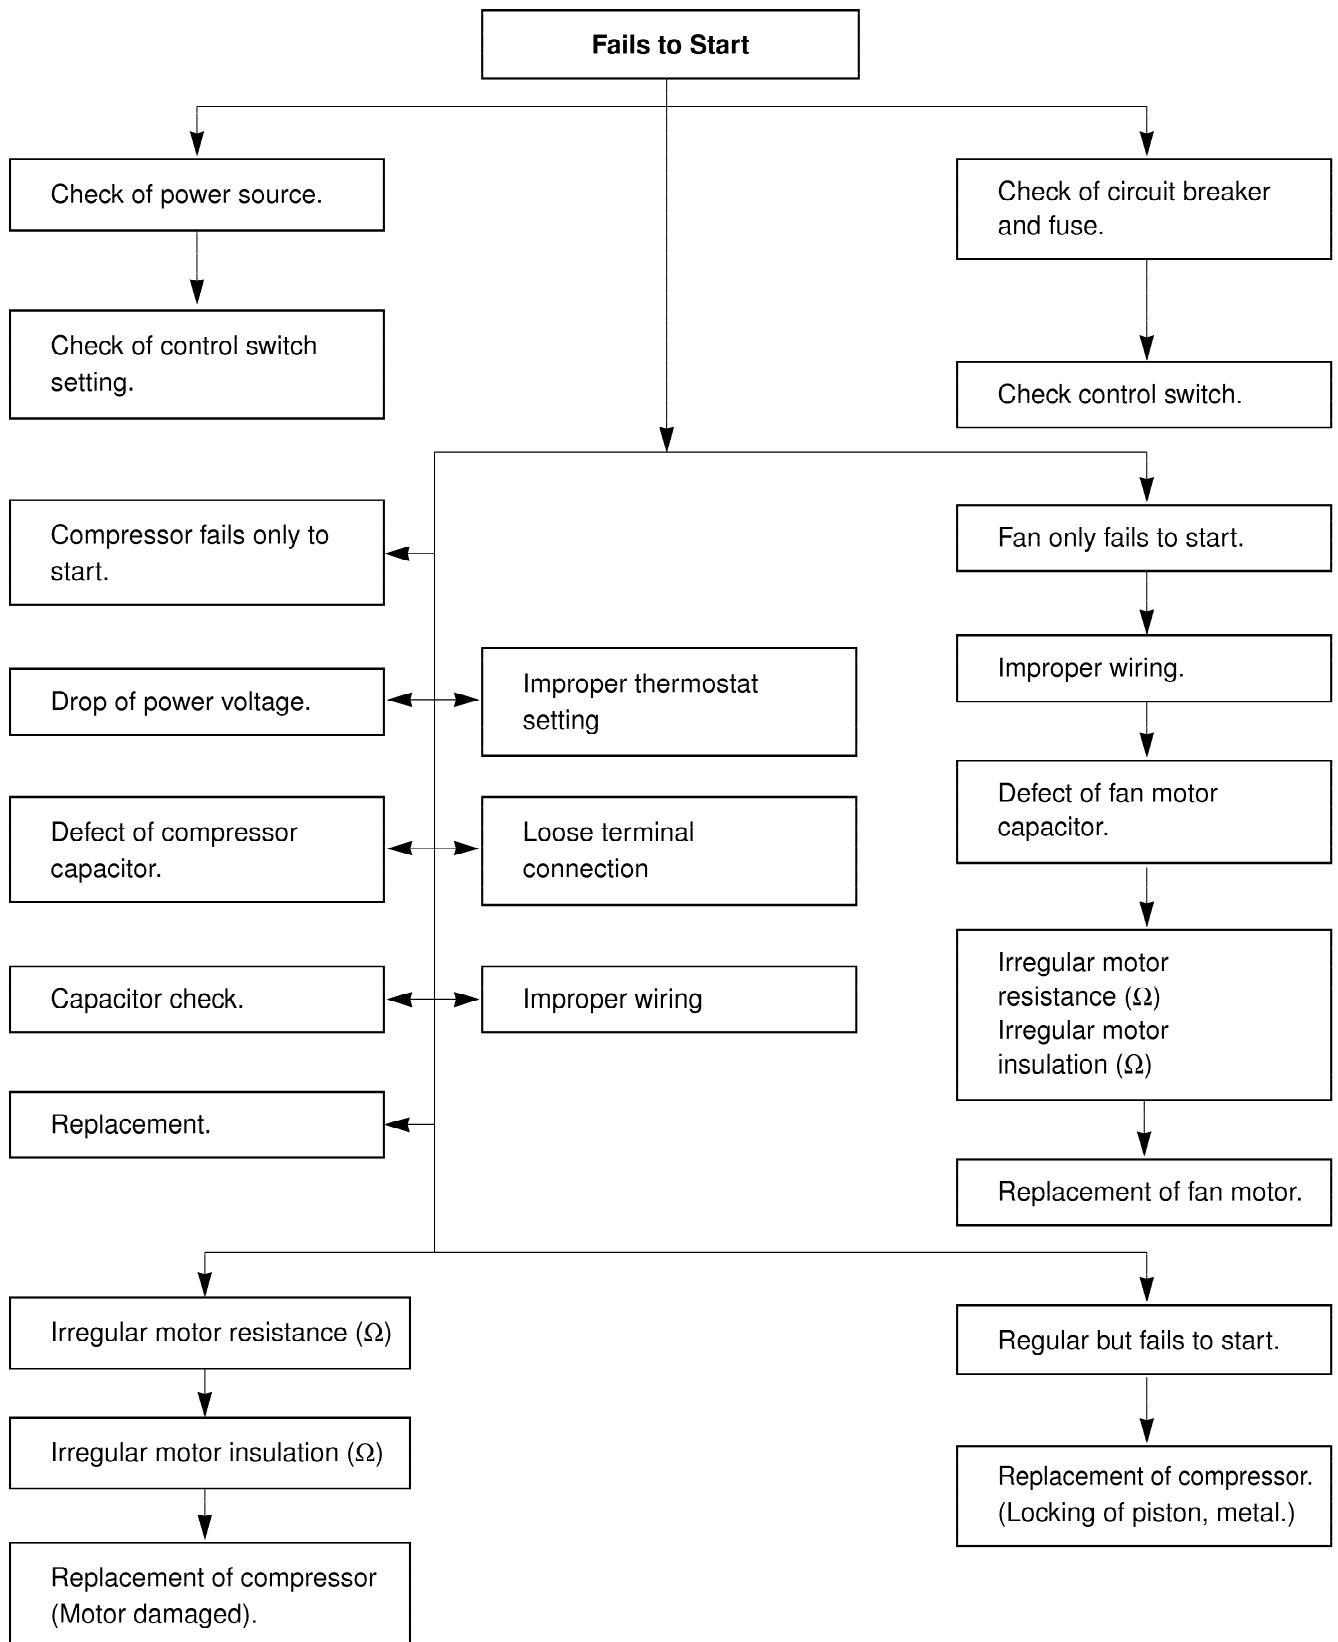

## ELECTRIC PARTS TROUBLESHOOTING GUIDE:

### Possible Trouble 1


- The unit does not operate.

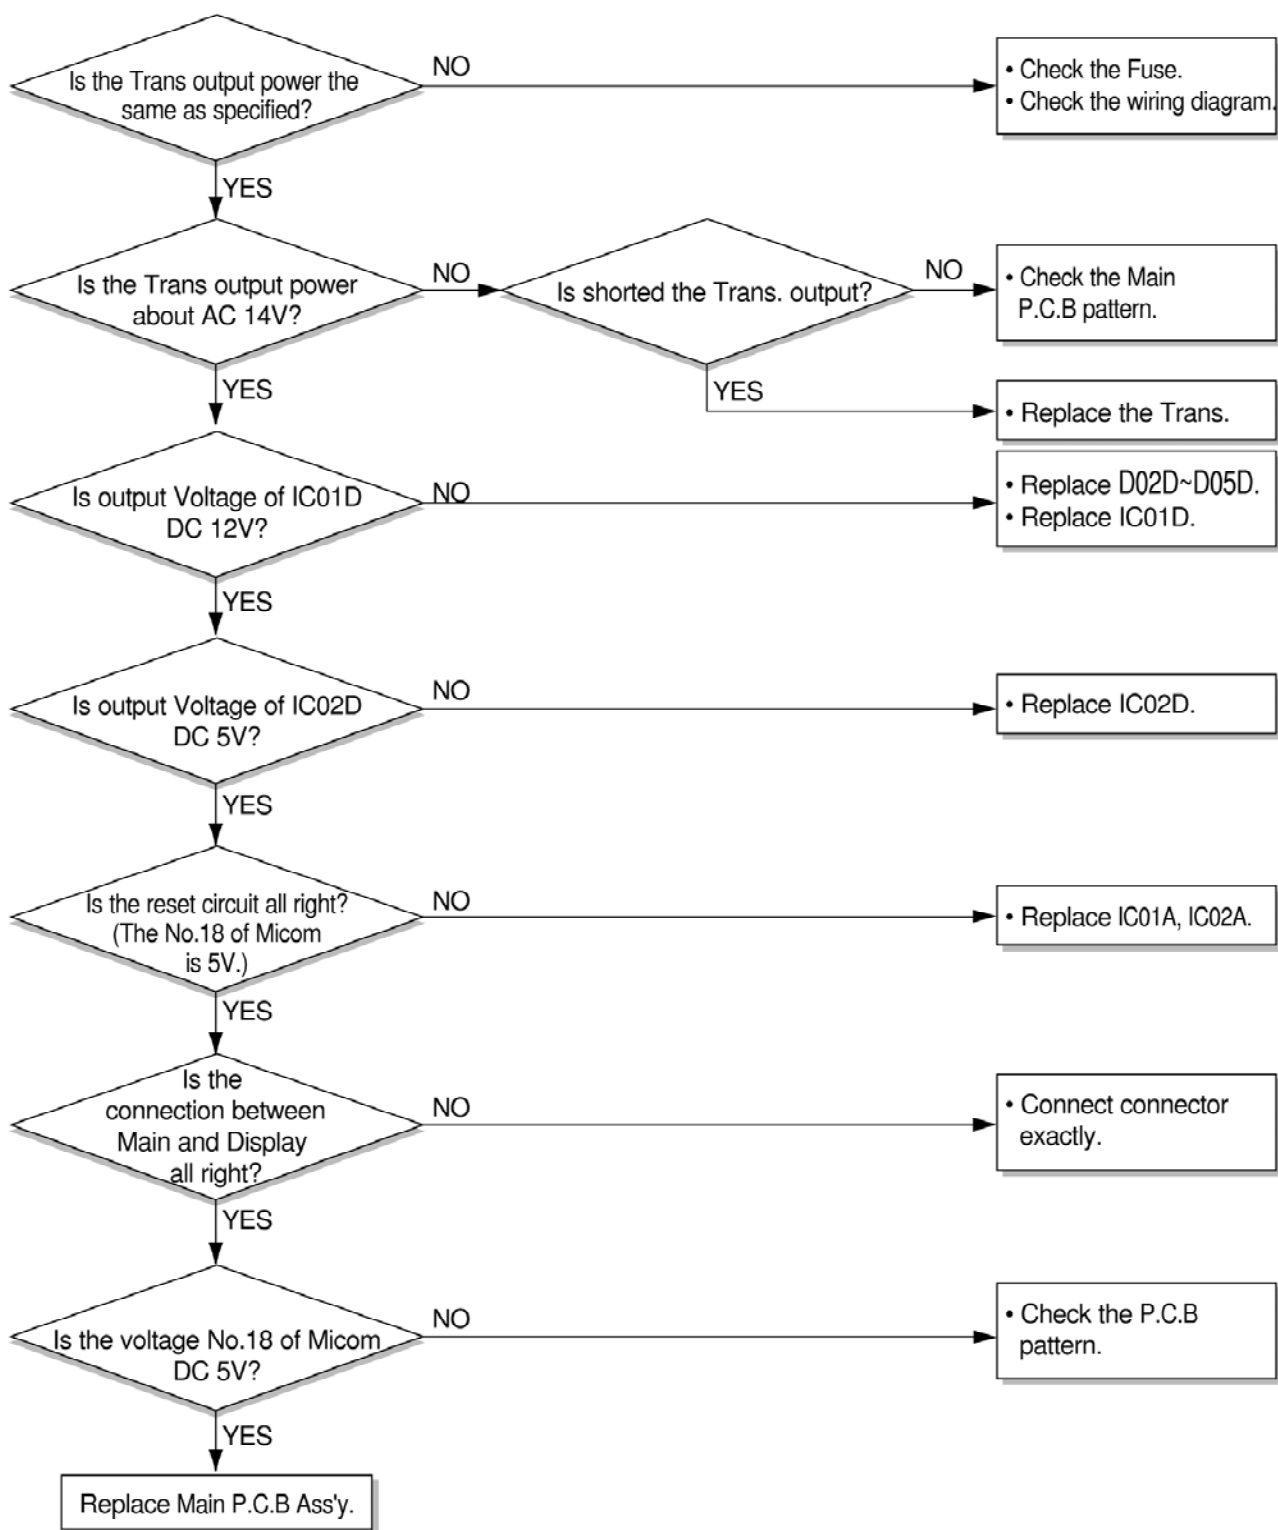



### Possible Trouble 2

• The compressor does not operate.

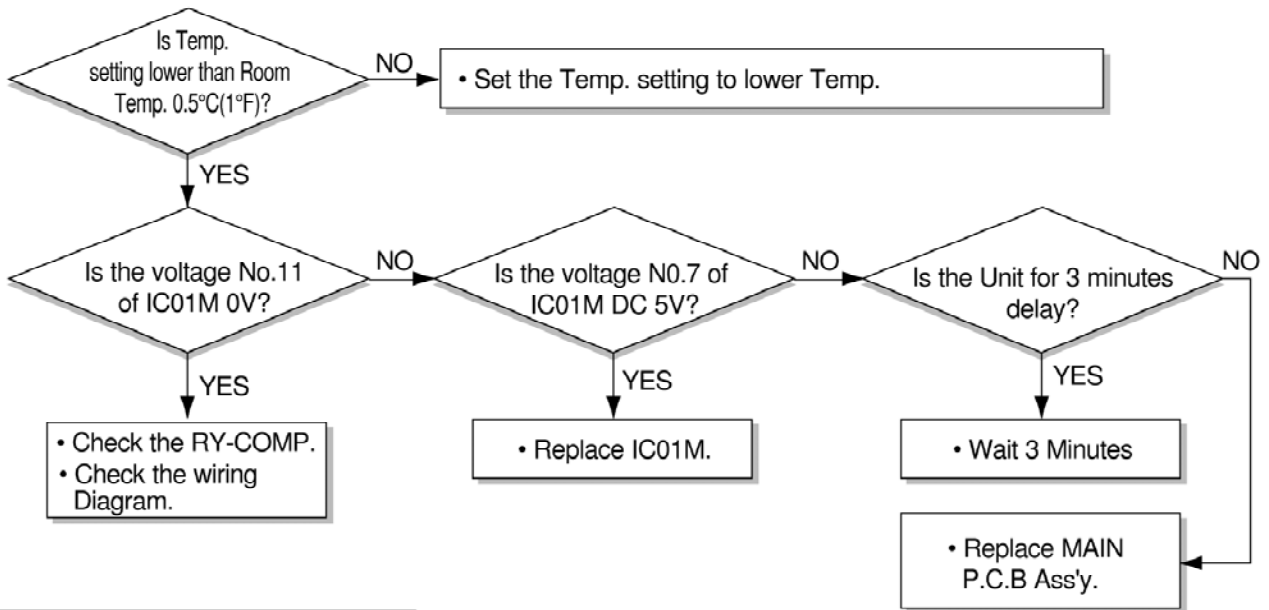


### Possible Trouble 3

• The compressor always operate.




### Possible Trouble 4

• Fan does not operate.

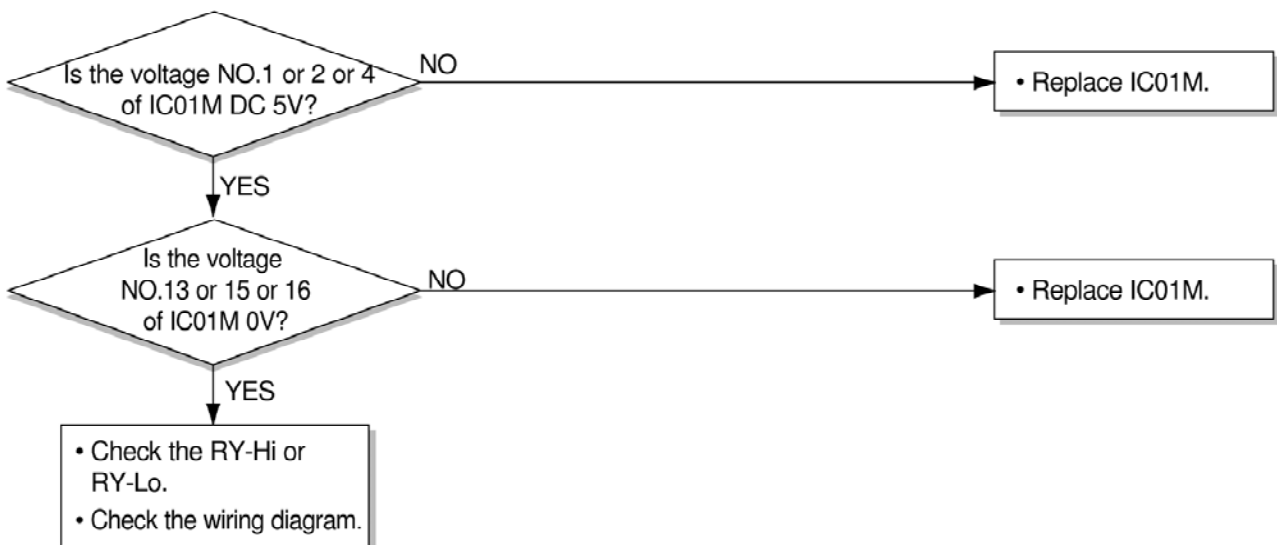


### Possible Trouble 5

• Remote controller does not operate.

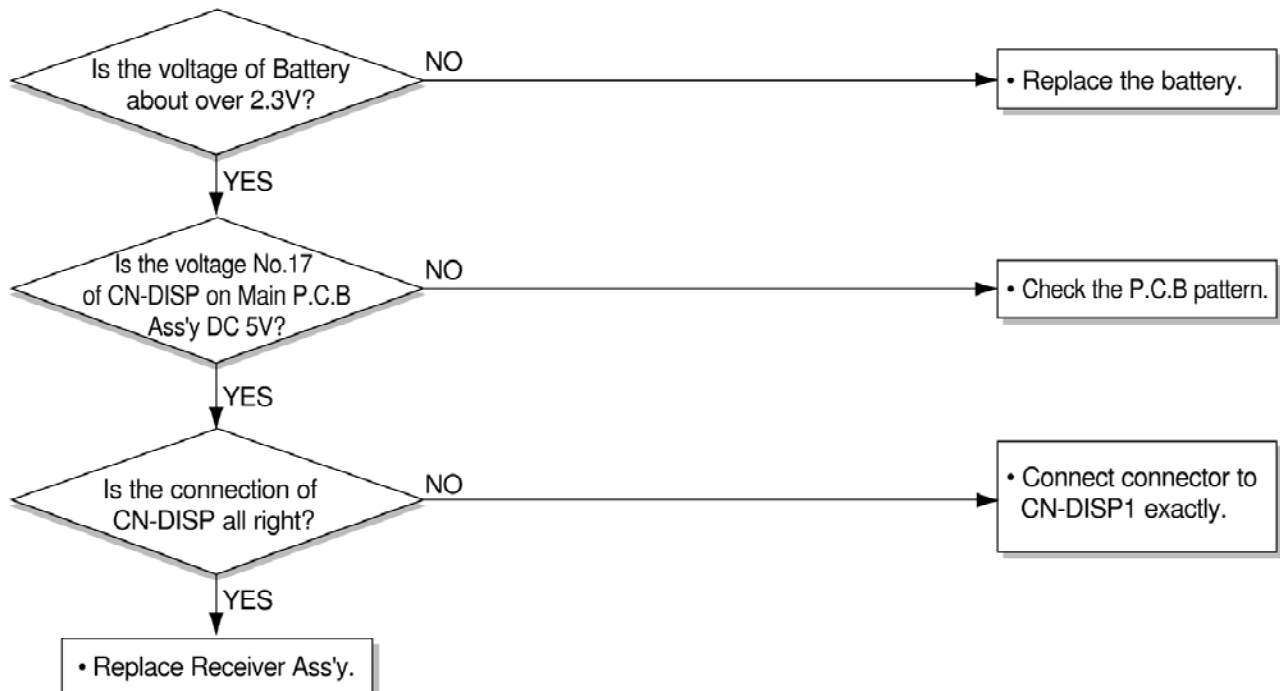

### Possible Trouble 6

• It displays abnormally on Display P.C.B Ass'y.

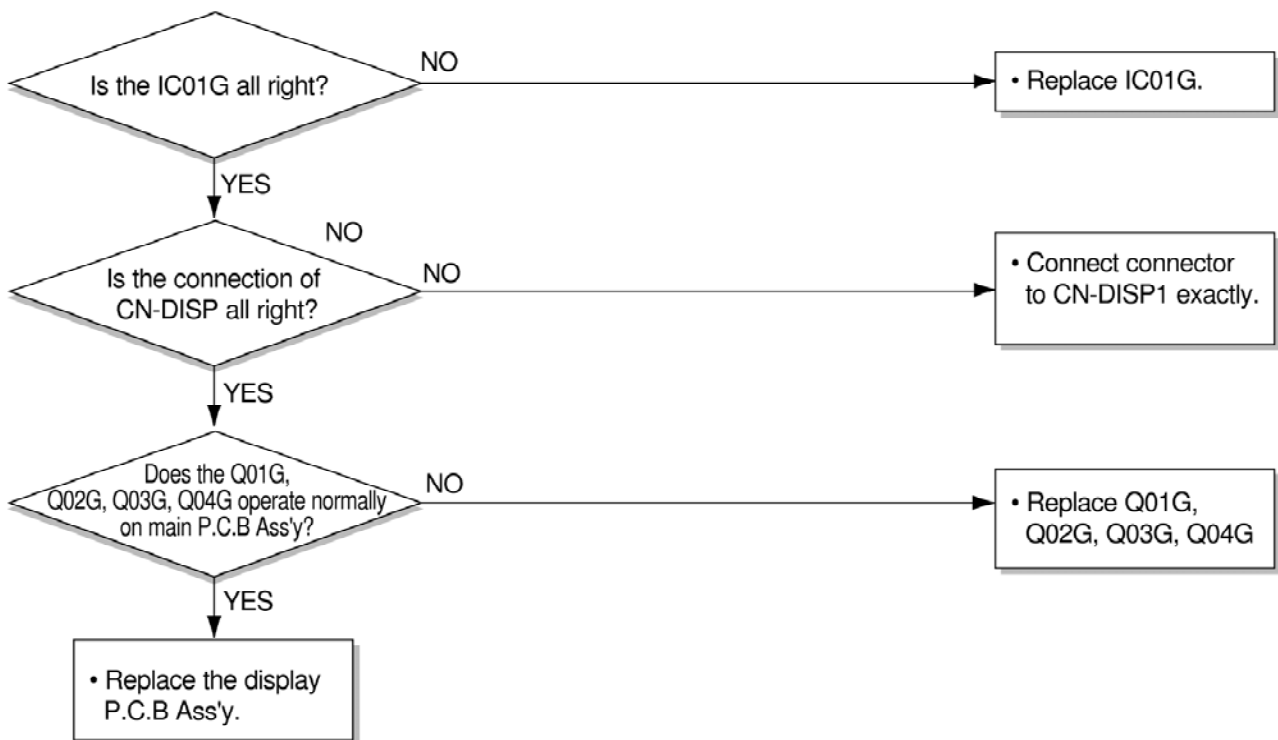

**ROOM AIR CONDITIONER VOLTAGE LIMITS**

NAME PLATE RATING	MINIMUM	MAXIMUM
AC 115V $\pm$ 10%	AC 103.5V	AC 126.5V


COMPLAINT	CAUSE	REMEDY
Fan motor will not run.	No power	Check voltage at outlet. Correct if none.
	Power supply cord	Check voltage to control box. If none, check power supply cord. Replace cord if circuit is open.
	Wire disconnected or connection loose	Connect wire. Refer to wiring diagram for terminal identification. Repair or replace loose terminal.
	Capacitor (Discharge capacitor before testing.)	Test capacitor. Replace if not within $\pm 10\%$ of manufacturer's rating. Replace if shorted, open, or damaged.
	Will not rotate	Fan blade hitting shroud or blower wheel hitting scroll. Re-align assembly.  Units using slinger ring condenser fans must have 5.6mm(7/32")~6.35mm(1/4") clearance to the base. If necessary, shim up the bottom of the fan motor with mounting screw(s).  Check fan motor bearings; if motor shaft will not rotate, replace the motor.
Fan motor runs.	Revolves on overload	Check voltage. See limits on this page.  If not within limits, call an electrician.  Test capacitor. Check bearings. Does the fan blade rotate freely? If not, replace fan motor.  Pay attention to any change from high speed to low speed. If the speed does not change, replace the motor.

COMPLAINT	CAUSE	REMEDY
Fan motor noise.	Fan	If cracked, out of balance, or partially missing, replace it.
	Turbo	If cracked, out of balance, or partially missing, replace it.
	Loose set screw	Tighten it.
	Worn bearings	If knocking sounds continue when running or loose, replace the motor. If the motor hums or noise appears to be internal while running, replace motor.
Compressor will not run, fan motor runs.	Voltage	Check voltage. See the limits on the preceding page. If not within limits, call an electrician.
	Wiring	Check the wire connections; if loose, repair or replace the terminal. If the wires are disconnected, refer to wiring diagram for identification, and replace the wires. Check the wire connections; If not according to the wiring diagram, correct the connections.
	Thermistor	Check the TEMP control. If not at the lowest number, set TEMP control to this setting and restart the unit.
		Check the continuity of the thermistor. Replace the thermistor if the circuit is open.
	Capacitor (discharge capacitor before servicing.)	Check the capacitor. Replace if not within $\pm 10\%$ of manufacturer's rating, replace if shorted, open, or damaged.
	Compressor	Check the compressor for open circuit or ground. If open or grounded, replace the compressor.
Compressor cycles on overload.	Overload	Check the compressor overload if externally mounted. Replace if open. (If the compressor temperature is high, remove the overload, cool, and retest.)
	Voltage	Check the voltage. See the limits on the preceding page. If voltage is not within these limits, call an electrician.
Compressor cycles on overload.	Overload	Check overload, if externally mounted. Replace if open. (If the compressor temperature is high, remove the overload, cool, and retest.)

COMPLAINT	CAUSE	REMEDY
Compressor cycles on overload.	Fan motor	If not running, determine the cause. Replace if required.
	Condenser air flow restriction	Remove the cabinet, inspect the interior surface of the condenser. If restricted, clean carefully with a vacuum cleaner (do not damage fins) or brush. Clean the interior base before re-assembling.
	Condenser fins (damaged)	If the condenser fins are closed over a large area on the coil surface, head pressures will increase, causing the compressor to cycle. Straighten the fins or replace the coil.
	Capacitor	Test the capacitor.
	Wiring	Check the terminals. If loose, repair or replace.
	Refrigeration system	Check the system for a restriction.
Insufficient cooling	Air filter	If restricted, clean or replace.
	Unit undersized	Determine if the unit is properly sized for the area to be cooled.
Excessive noise	Turbo or fan	Check the set screw, or clamp. If loose or missing, correct. If the turbo or fan is hitting scroll or barrier, rearrange the air handling parts.
	Copper tubing	Remove the cabinet and carefully rearrange the tubing not to contact the cabinet, compressor, shroud, and barrier.

# 5. SCHEMATIC DIAGRAM


## 5.1 CIRCUIT DIAGRAM

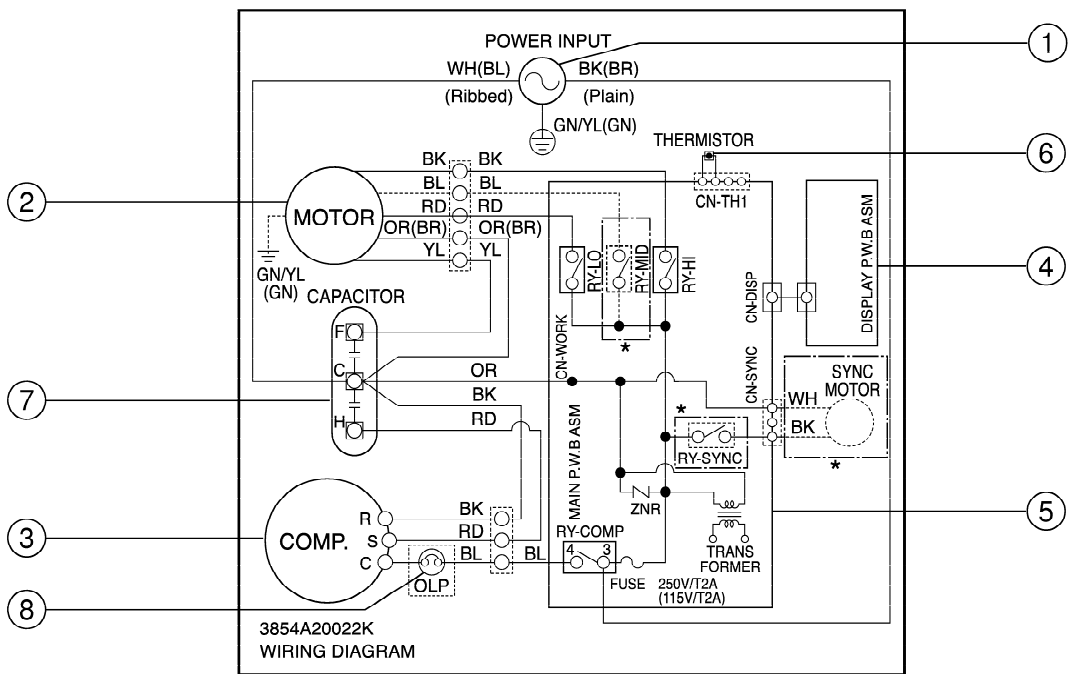


Remarks: \* mark parts are not equipped on this model.

LOCATION NO.	DESCRIPTION	Q'TY PER SET
1	POWER CORD ASSEMBLY	1
2	FAN MOTOR	1
3	COMPRESSOR	1
4	DISPLAY P.C.B ASSEMBLY	1
5	MAIN P.C.B ASSEMBLY	1
6	THERMISTOR	1
7	CAPACITOR	1
8	OVERLOAD PROTECTOR	1

### 5.3 COMPONENTS LOCATION(FOR MAIN P.C.B ASM)

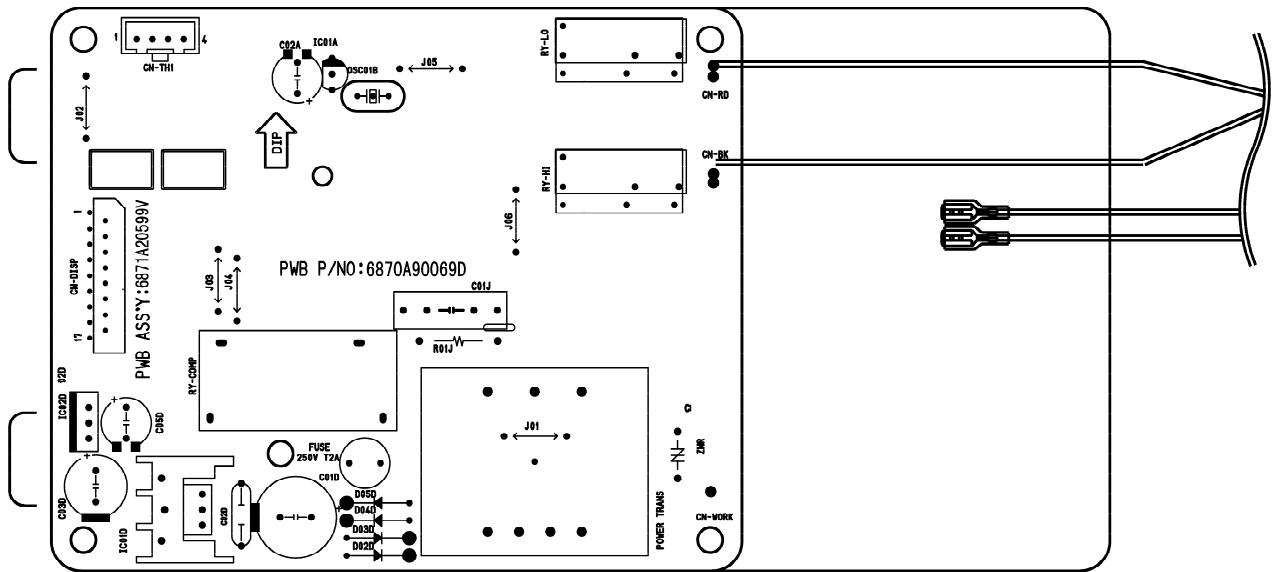


## 5.4 COMPONENTS LOCATION (FOR DISPLAY P.C.B ASM)

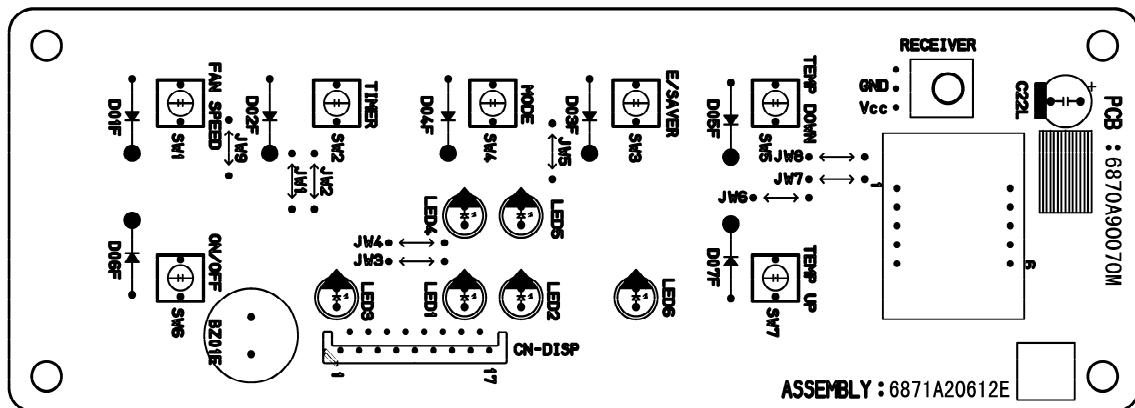



6. EXPLODED VIEW

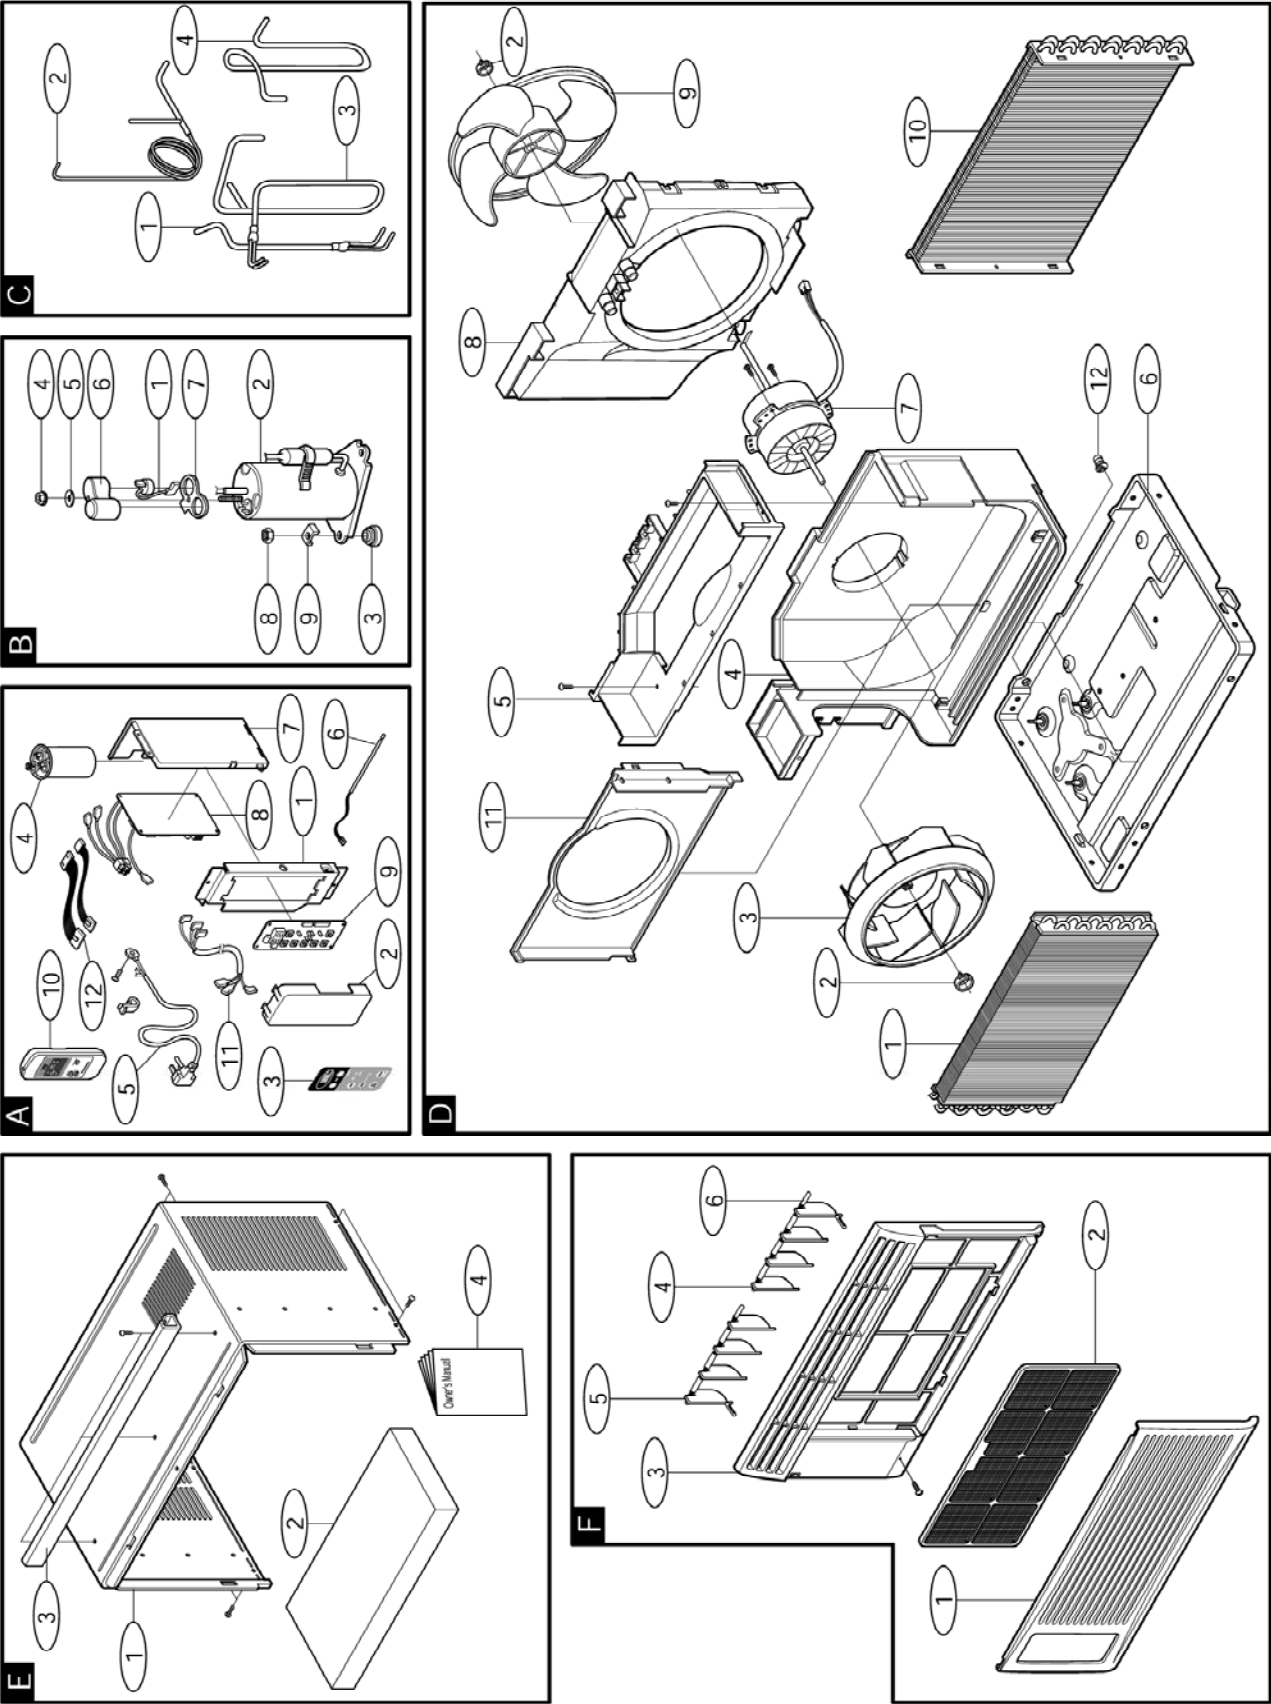

## 7. SERVICE PARTS LIST

R: RECOMMANDABLE PARTS

LEF. NO	DESCRIPTION & NAME	Q' TY	PART. NO	REMARKS
			CW-XC55HU	
A	CONTROL BOX ASSEMBLY	1	CW499520309V	
A-1	CONTROL BOX, SINGLE	1	CW499420020A	
A-2	CONTROL PANEL	1	CW372020017A	
A-3	ESCUTCHEON	1	CW383110001T	
A-4	CAPACITOR	1	CW0ZZA20005B	R
A-5	POWER CORD ASSEMBLY	1	CW641120048V	
A-6	THERMISTOR	1	CW632320003S	R
A-7	COVER	1	CW499420021A	
A-8	MAIN P. C. B ASSEMBLY	1	CW687120599V	R
A-9	DISPLAY P. C. B ASSEMBLY	1	CW687120612E	R
A-10	REMOTE CONTROLLER ASSEMBLY	1	CW671190018B	R
A-11	CONNECTOR ASSEMBLY	1	CW6631R3843R	
A-12	CABLE, FLAT	1	CW685090001F	
B-1	OVERLOAD PROTECTOR	1	CWL00013	R
B-2	COMPRESSOR	1	CW2520ABC2JA	R
B-3	RUBBER, MOUNTING	3	CWL00015	
B-4	NUT, TERMINAL COVER	1	CWL00101	
B-5	GASKET-NUT	1	CWL00102	
B-6	COVER	1	CW3550TL006A	
B-7	GASKET	1	CW4986TL001G	
B-8	HEXAGON NUT	3	CWL00101	
B-9	BRACKET, WASHER	3	CWL00103	
C-1	TUBE ASSEMBLY, EVAPORATOR	1	CW521110063E	
C-2	TUBE, CAPILLARY	1	CW5211A3332N	
C-3	TUBE ASSEMBLY, SUCTION	1	CW521110062G	
C-4	TUBE ASSEMBLY, DISCHARGE	1	CW521110129C	
D-1	EVAPORATOR ASSEMBLY	1	CW542120016K	
D-2	CLAMP SPRING	1	CWL00027	
D-3	FAN, TURBO	1	CW590010005B	R
D-4	AIR GUIDE	1	CW523930003D	
D-5	AIR GUIDE	1	CW523820013A	
D-6	BASE ASSEMBLY	1	CW304120036N	

R: RECOMMANDABLE PARTS

LEF. NO	DESCRIPTION & NAME	Q' TY	PART. NO	REMARKS
			CW-XC55HU	
D-7	MOTOR ASSEMBLY	1	CW468110016D	R
D-8	SHROUD	1	CW4998R1608A	
D-9	FAN, PROPELLER	1	CW590120011B	R
D-10	CONDENSER ASSEMBLY	1	CW540320009N	
D-11	ORIFICE	1	CW494810016B	
D-12	DRAIN PIPE	1	CWL00037	
E-1	CABINET	1	CW3091R6055X	
E-2	INSTALLATION KIT	1	CW312720074B	R
E-3	GUIDE	1	CWL00040	
E-4	OPERATING INSTRUCTION	1	CW382820391M	
F	FRONT GRILLE ASSEMBLY	1	CW353110182C	
F-1	GRILLE, INLET	1	CW353010133A	
F-2	AIR FILTER	1	CW5231R2148H	
F-3	GRILLE, FRONT	1	CW353010132B	
F-4	VANE	6	CWL00047	
F-5	VANE	2	CWL00048	
F-6	LINK	2	CWL00049	
	REAR GRILL WIRE		CW353020031B	

