

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



LG HMC018VB Owner's Manual

[Shop genuine replacement parts for LG HMC018VB](#)




[Find Your LG Air Conditioner Parts - Select From 2328 Models](#)

----- Manual continues below -----


Wiring Diagram

(1) Indoor Unit


1. LS-K1820/1860/1861/2420/2460/2621/2661CL/CM/CN

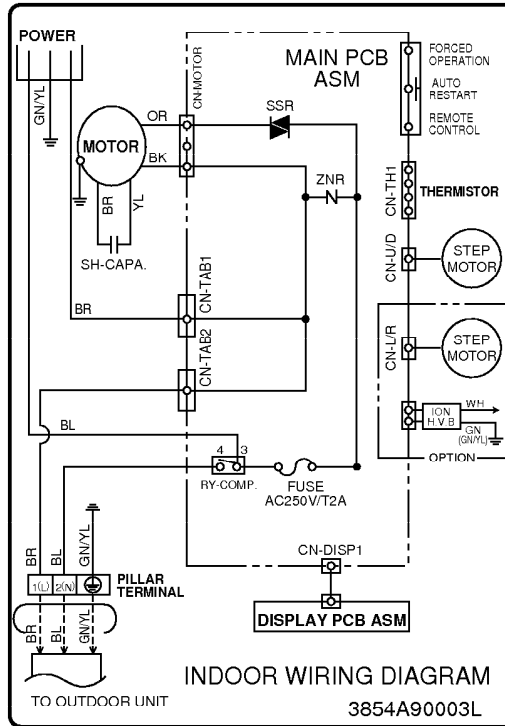


2. LS-K1820/1860/1861/1865/2420/2460/2621/2661HL/HM/HN/EL

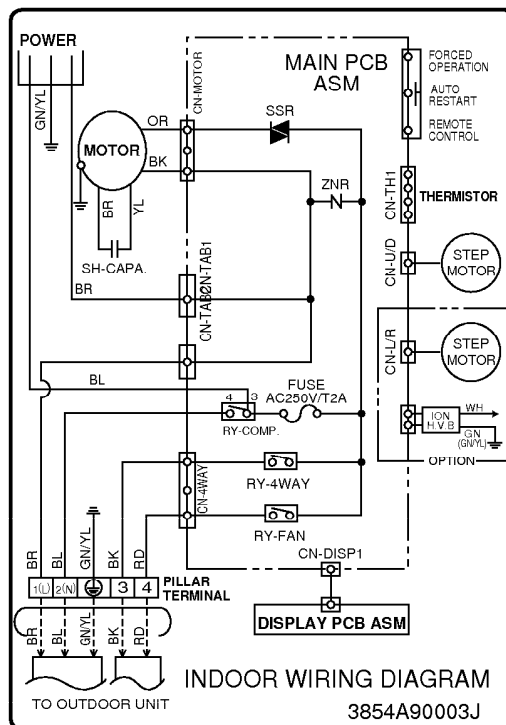

3. LS-K1822/1862/2422/2462/2662CL/CM/CN/AL

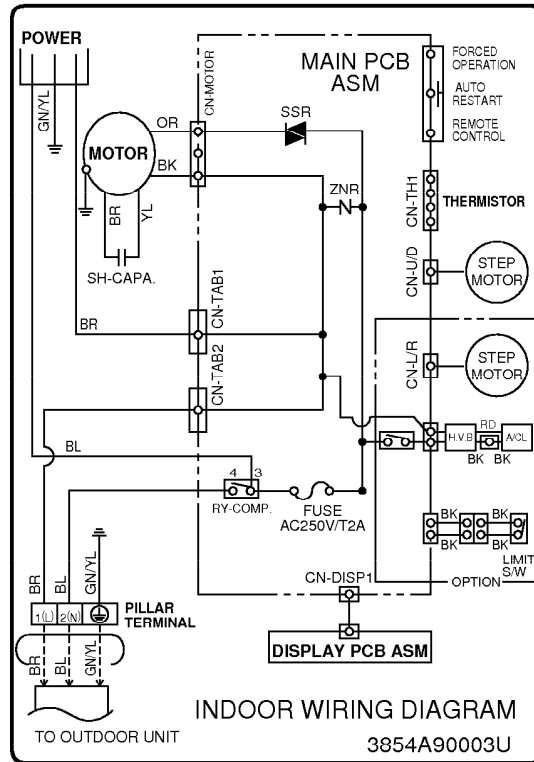


4. LS-K1822/1862/1866/2422/2462/2662HL/HM/HN/EL

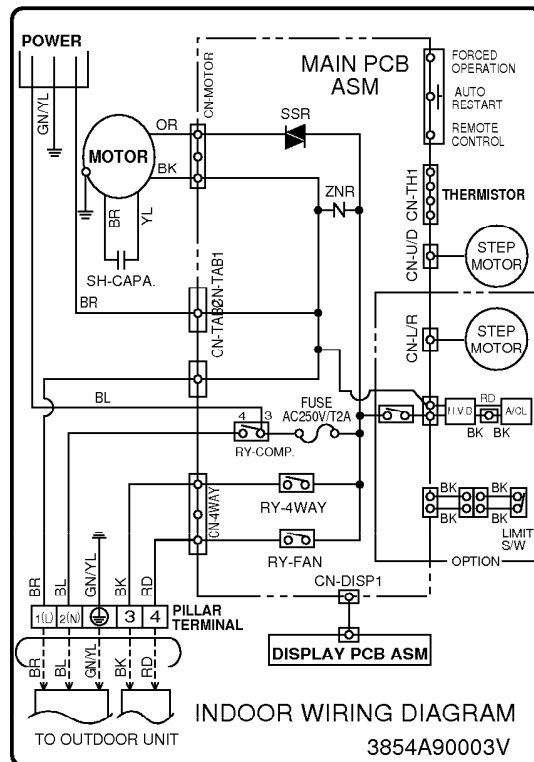


(2) Outdoor Unit

1. LS-K1820/1860/1861/1862/2420/2422/2460/2462/2621/2622/2661/2662CL/CM/CN/CN/AL

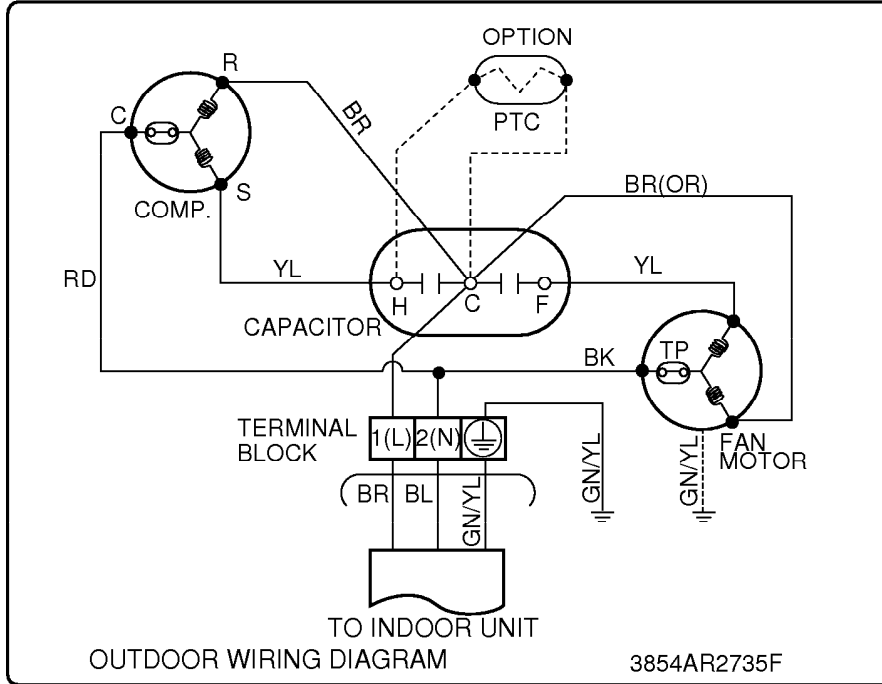

2. LS-K1820/1822/1865/1866/HL/HM/HN/EL

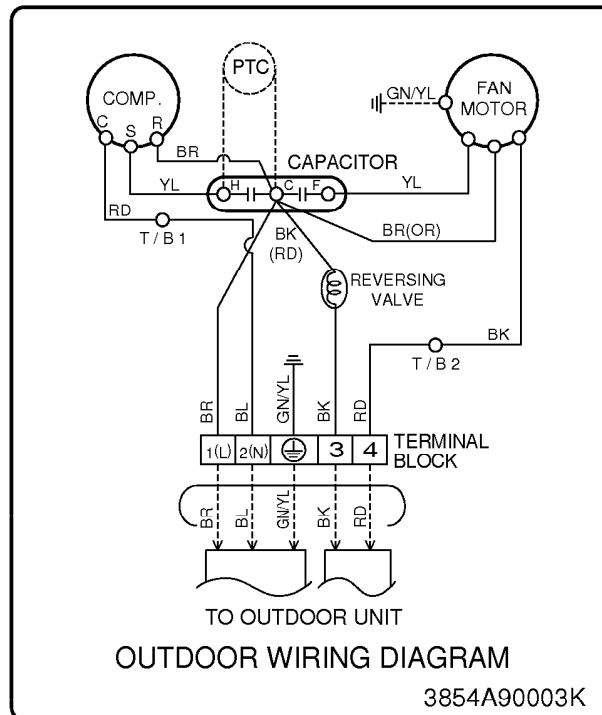

3. LS-K1860/1861/1862/2420/2460/2621/2661HL/HM/HN

