

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




Thermos 4618226 Owner's Manual

[Shop genuine replacement parts for Thermos 4618226](#)




[Find Your Thermos Grill Parts - Select From 1975 Models](#)


----- Manual continues below -----

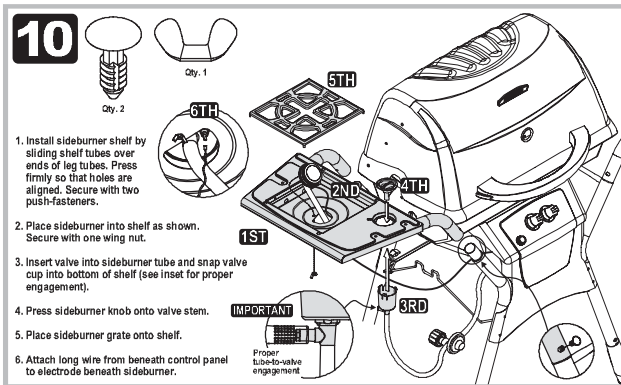

1. Install sideburner shelf by sliding shelf tubes over ends of leg tubes. Press firmly so that holes are aligned. Secure with two push-fasteners.
2. Place sideburner into shelf as shown. Secure with one wing nut.
3. Insert valve into sideburner tube and snap valve cup into bottom of shelf (see inset for proper engagement).
4. Press sideburner knob onto valve stem.
5. Place sideburner grate onto shelf.
6. Attach long wire from beneath control panel to electrode beneath sideburner.

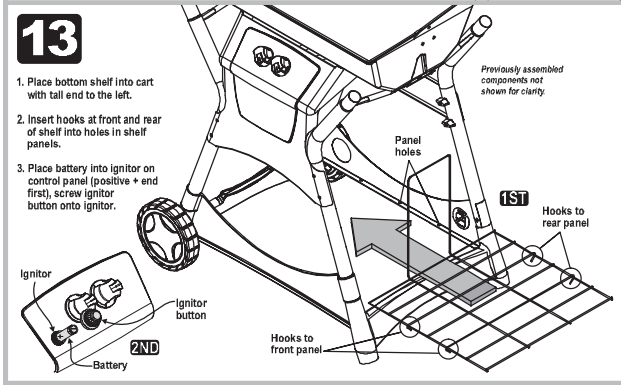

1. Place bottom shelf into cart with tall end to the left.
2. Insert hooks at front and rear of shelf into holes in shelf panels.
3. Place battery into ignitor on control panel (positive + end first), screw ignitor button onto ignitor.

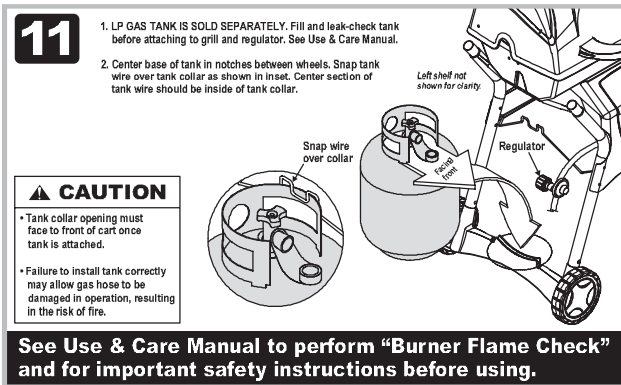

1. LP GAS TANK IS SOLD SEPARATELY. Fill and leak-check tank before attaching to grill and regulator. See Use & Care Manual.
2. Center base of tank in notches between wheels. Snap tank wire over tank collar as shown in inset. Center section of tank wire should be inside of tank collar.

CAUTION

- Tank collar opening must face to front of cart once tank is attached.
- Failure to install tank correctly may allow gas hose to be damaged in operation, resulting in the risk of fire.

See Use & Care Manual to perform "Burner Flame Check" and for important safety instructions before using.



1. Snap front of wheel extension onto grill bottom.
2. Hang grill bottom extension from bottom of grill with notches.

CAUTION

- Failure to install can in clip from bottom of grill with notches.

Parts List - Model 4618226

Key	Qty.	Description	Part #	Key	Qty.	Description	Part #
A	1	Tank Wire	4151003	W	2	Control Knob	4154470
B	1	Bottom Shelf	4151007	X	1	Grill Bottom	4580149
C	1	Lower Warming Rack	4152125	Y	1	Back Panel	4502064
D	1	Cooking Grate	4152741	Z	4	#10x1-1/4" Self-Tap Screw	4080041
E	1	Leg Extender Assembly	4154468	AA	1	Side Shelf	4154459
F	1	Handle	4154474	BB	2	Shelf Arm	4502121
G	1	Condiment Basket	4154498	CC	1	Sideburner Shelf Assembly	4520031
H	1	Bottom Shelf Panel Set	4154504	DD	1	Grill Lid	4581009
I	1	Sideburner Grate	4156179	EE	1	#10-24 Wing Nut	4080063
J	1	Drip VapoRISER Bar	4156418	FF	1	Sideburner Knob	4154471
K	1	Upper Warming Rack	4156449	GG	1	Heat Indicator with Bracket	4156800
L	1	LP Gas Tank	4158015	HH	1	Logo Plate Assembly	4157144
M	1	Wheel Assembly	4158100	II	1	Button and Battery Pack	4158120
N	---	Briquets (1 bag)	4158125	JJ	1	Sideburner	5068013
O	1	Front Panel	4502232	KK	1	Grease Clip	5156607
P	6	#10x1/2", T-20, Self-Tap Screw	4080043		1	Hardware Bag	4253990
Q	1	Briquet Grate	4151002		1	Hardware Bag - Cond. Basket	4254006
R	2	Valve Clip	4156172			Replacement Ignition Module Bag	5995067
S	2	Castling Seal Bracket	4500222				
T	2	Leg Assembly	4502156				
U	1	Burner/Collector Assembly	4505069				
V	1	Control Panel Assembly	4530078				

