


HOOVER Original

ELITE

Models U4459, U4459-940, U4461-9, U4463-9, U4701-970, U4483

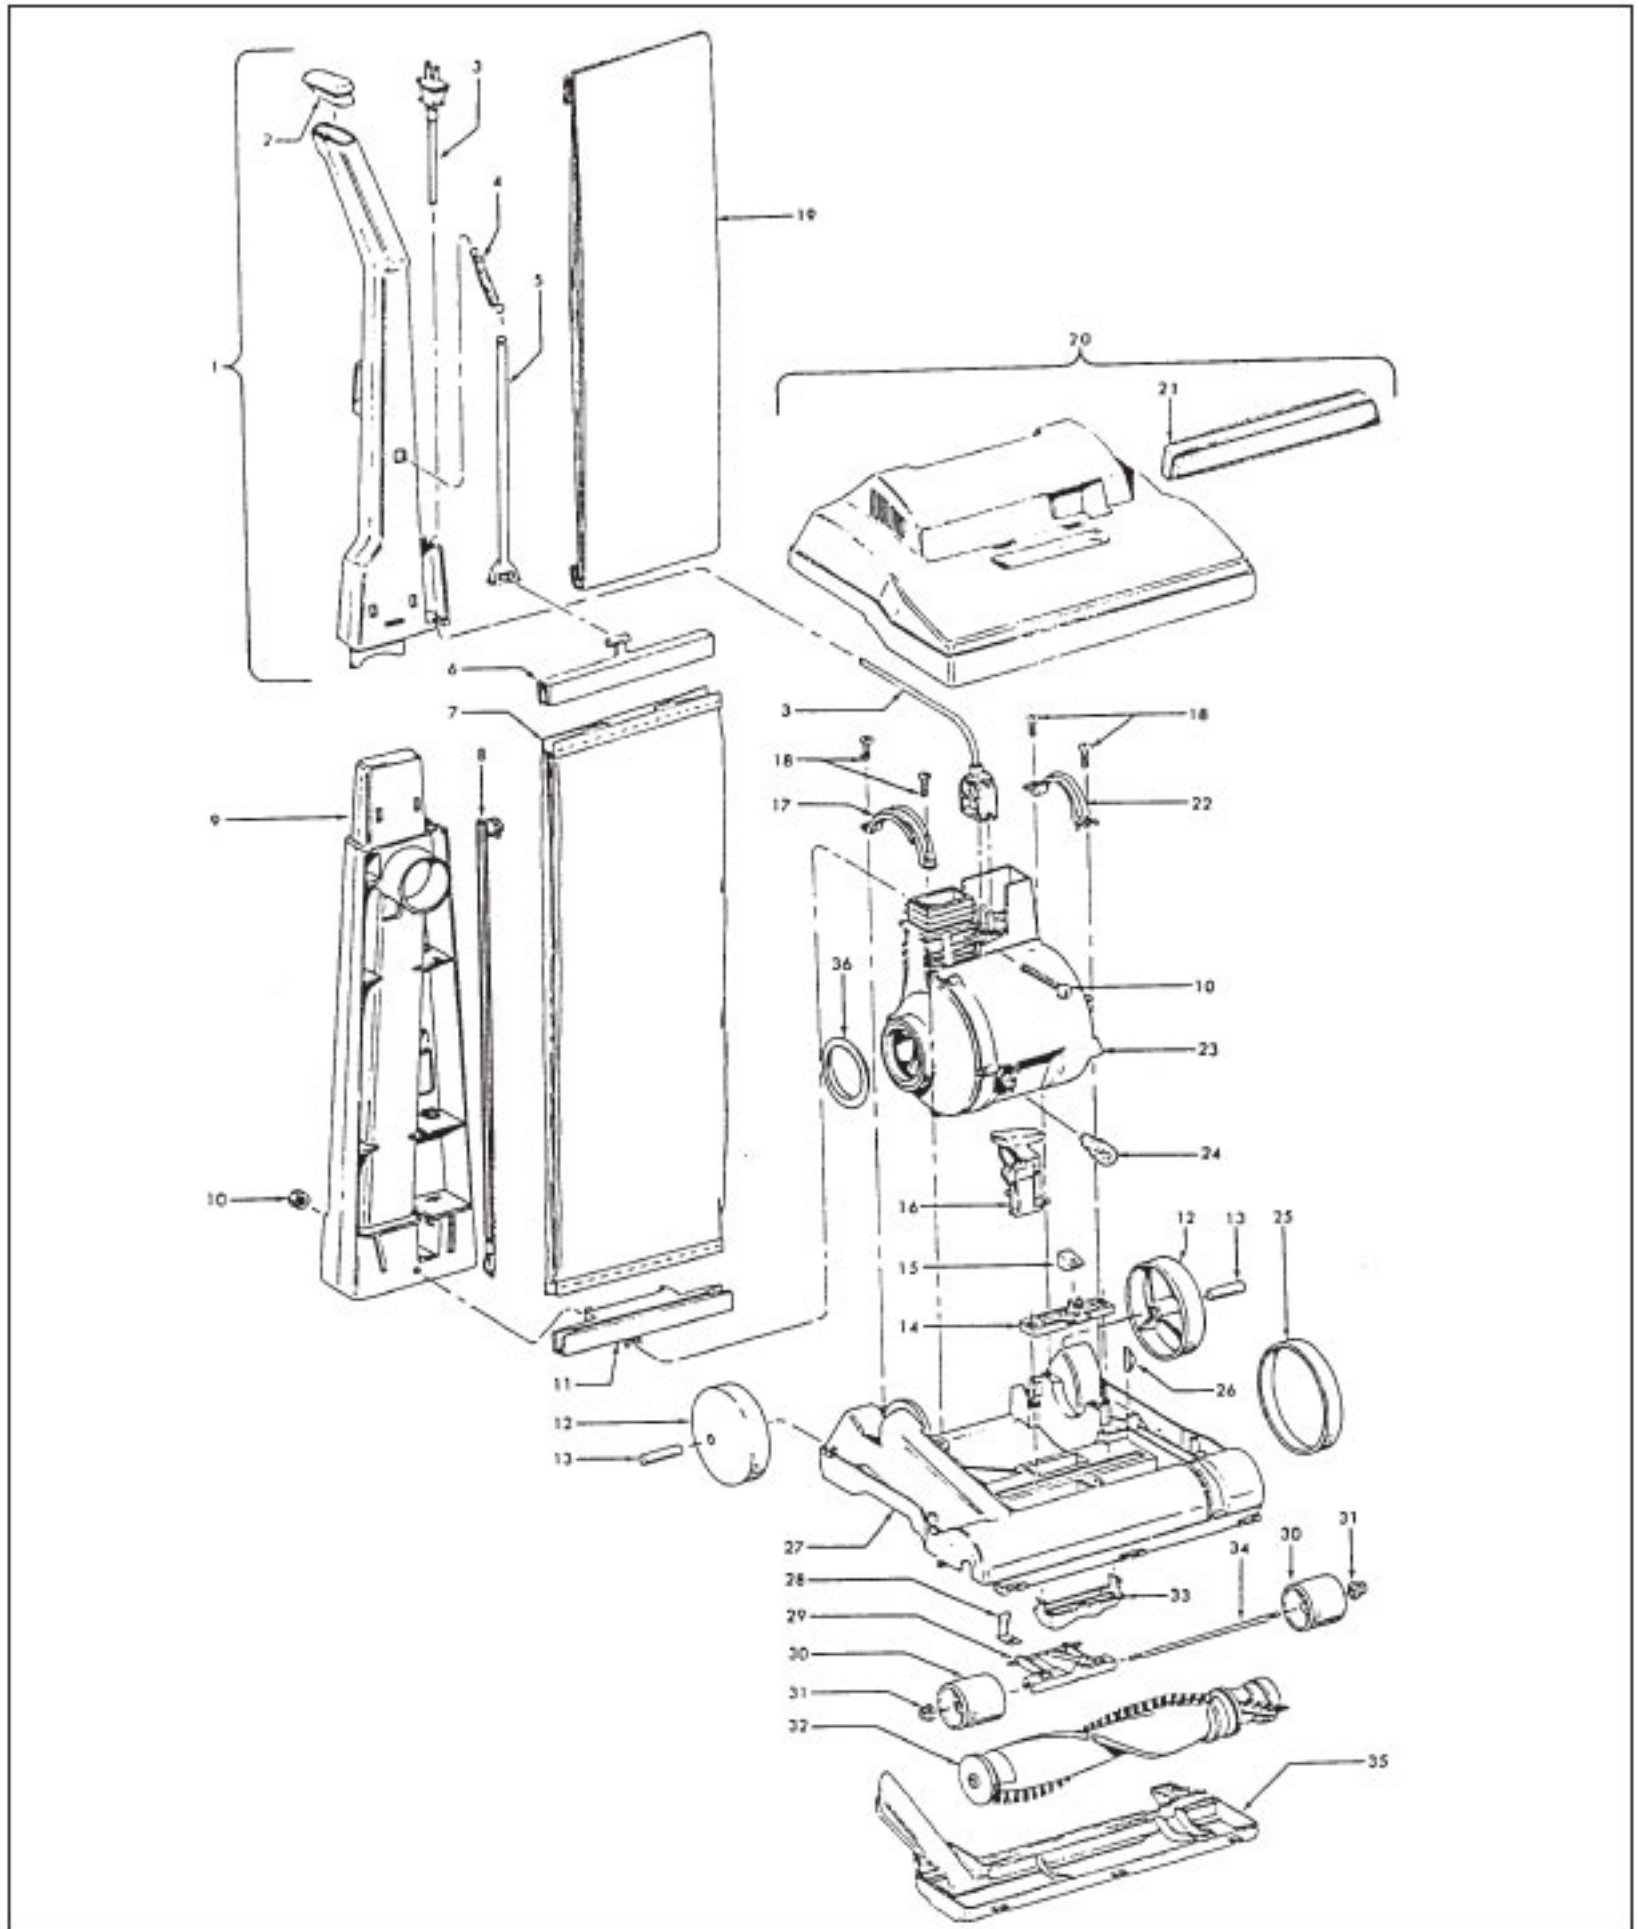

Original

HOOVER

ELITE


Models U4459, U4459-940, U4461-9, U4463-9, U4701-970, U4483

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	H-48663142	Upper Handle Ass'y	21	H-39383090	Dirt Finder Lens - KC
2	H-37911018	Handle Cap - MW	22	H-36131053	Motor Retainer Cap - LH - KE
3	H-46388016	Attach. Cord - AAP - 30'	23	H-43576211	Motor Ass'y
4	H-38335020	Bag Strap Spring - AY	24	H-27313101	Dirt Finder Lamp
5	H-36425051	Bag Strap - MW	25	H-38528040	Belt
6	H-36425056	Jacket Support - Upper - MW	26	H-13261 AY	Rug Nozzle Rib Shoe
7	NLA	Outer Bag - MD	27	H-42242270	Main Body Ass'y - AG (Incl. Items 16, 26)
7	NLA	Outer Bag - AAK/AAP - U4461-9	28	H-34572002	Cam Actuator Spring - FW
7	NLA	Outer Bag - U4463-9	29	H-36432023	Wheel Support
7	NLA	Outer Bag - U4483	30	H-38521023	Wheel - AG (2)
7	NLA	Outer Bag - ABC - U4701-970	31	H-36131056	Wheel Retainer (2)
8	H-38456034	Switch Control Rod - AG	32	H-48414036	Agitator Ass'y Comp. - AG
9	H-39464004	Lower Handle - MW		H-48414035	Agitator Ass'y Comp. - AG - U4483
10	H-40201085	Nut & Bolt Ass'y	33	H-38563011	Nozzle Height Adj. Cam - KE
11	H-36425055	Jacket Support - Lower - MW	34	H-32563012	Wheel Shaft - AY
12	H-38522011	Wheel - Rear - AG (2)	35	H-37245015	Bottom Plate - AG
13	H-31523010	Wheel Shaft - AY (2)	36	H-38784016	Seal
14	H-38567008	Cam Actuator - KE	ITEMS NOT ILLUSTRATED		
15	H-38421051	Indicator Knob - MR		H-56511334	Owner Manual (Standard Fit Tools)
	H-38421052	Indicator Knob - JM - U4461-9		H-56511347	Owner Manual (Friction Fit Tools)
	H-38421053	Indicator Knob - AAP - U4463-9		H-58175030	Carton - U4459
	H-38421057	Indicator Knob - AAU - U4483		H-58175031	Carton - U4459-940, U4461-9, U4463-9, (Standard Fit Tools) (Use 59814012)
	H-38421072	Indicator Knob - ABC - U4701-970		H-59814012	Carton - U4459-940, U4461-9, U4463-9, U4701-970 (Friction Fit Tools)
16	H-38458022	Handle Release Lever - AG		H-58369055	Cleaning Tool Carton
17	H-36131057	Motor Retainer Cap - RH - KE		H-58346004	Front Support
18	H-21447003	Screw - Self Tapping (4)		H-58353009	Rear Support
19	H-4010001A	Throw Away Bag (3-Pk.)			
20	H-42252130	Hood Ass'y - MR			
	H-42252205	Hood Ass'y - MR - U4459-940			
	H-42252135	Hood Ass'y - JM - U4461-9			
	H-42252165	Hood Ass'y - AAP - U4463-9			
	H-42252147	Hood Ass'y - AAU - U4483			
	H-42252302	Hood Ass'y - ABC - U4701-970			

HOOVER Original


LEGACY & ELITE

Models U4459, U4459-940, U4461-9, U4463-9, U4465-9, U4471, U4471-9, U4471-960, U4473, U4473-080, U4483, U4485, U4507, U4507-9, U4509, U4511, U4511-9, U4533-9, U4545-900, U4557-910, U4569-910, U4581-910, U4599-900, U4601-900, U4609, U4617-910, U4641-910, U4649-910, U4671-910, U4681, U4681-910, U4689-910, U4697-910, U4701-970, U4709-910, U4713-910, U4731-910, U5069-910, U5079-910

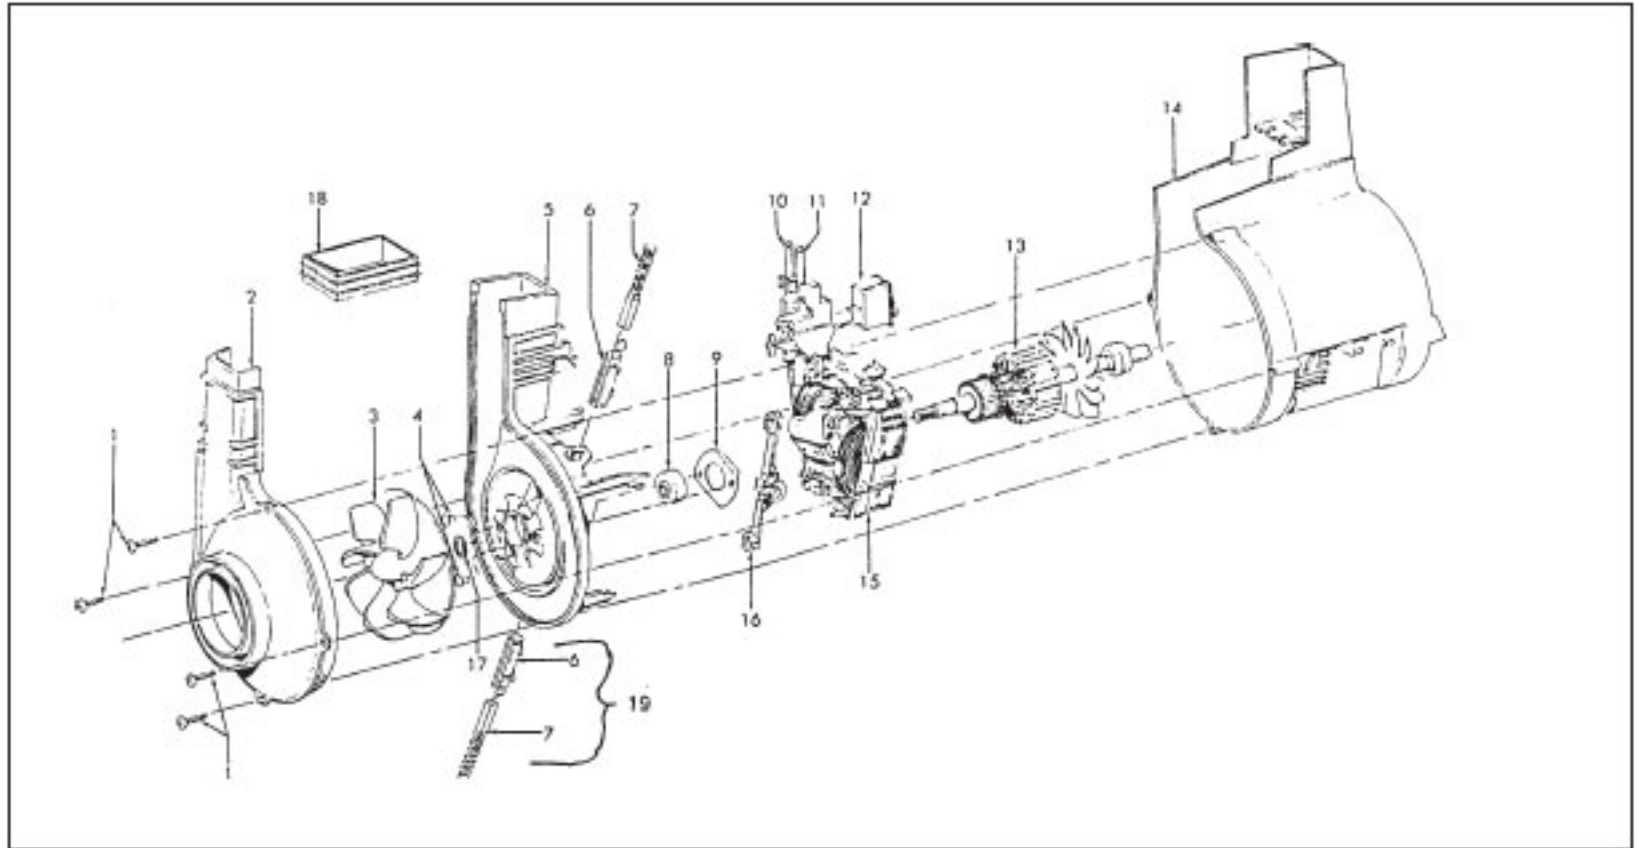


KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
	NLA	Motor Ass'y Comp. - Order H-43576211 (See Page 22-225)	13	NLA	Armature/Bearing Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4641-910, U4649-910, U4681, U4689-910, U4697-910, U4731-910
1	H-214793 DA	Screw - Self Tapping (4)		NLA	Armature/Bearing Ass'y
2	H-38736032	Fan Chamber - MW	14	H-37194034	Motor End Cap Ass'y - MW
3	H-38755030	Fan	15	NLA	Field Ass'y - U4465-9, U4473, U4473-080, U4485, U4507, U4507-9, U4641-910, U4649-910, U4681, U4681-910, U4689-910, U4697-910 (Incl. Items 10, 11, 12, 16)
4	H-12503 EF	Rivet - Semi Tubular (2)		NLA	Field Ass'y (Incl. Items 10, 11, 12, 16)
5	NLA	Motor Housing Ass'y (Incl. Items 4, 6, 8, 9)		NLA	Field Ass'y - U4511, U4511-9, U4545-900, U4557-910
6	H-41311011	Motor Brush Holder (2)		NLA	Field Ass'y - U4569-910, U4581-910, U4731-910, U5069-910, U5079-910 (Incl. Items 10, 11, 12, 16)
7	H-41311011 H-47318024	Motor Brush Ass'y (2) Motor Brush Ass'y (2) - U4511, U4511-9, U4545-900, U4557-910, U4569-910, U4581-910, U4731-910		NLA	Lamp Holder Ass'y
8	H-24152808	Bearing	16	H-47171018	Lamp Holder Ass'y
9	H-37913020	Bearing Retainer	17	H-21312793	Washer
10	H-36914004	Switch Bus Bar	18	H-38783014	Molded Duct Seal
11	H-39116005	Attachment Terminal	19	H-41311011	Motor Brush Holder Ass'y - (Incl. Items 6, 7)
12	H-28218043	Switch Ass'y			

H-48414035

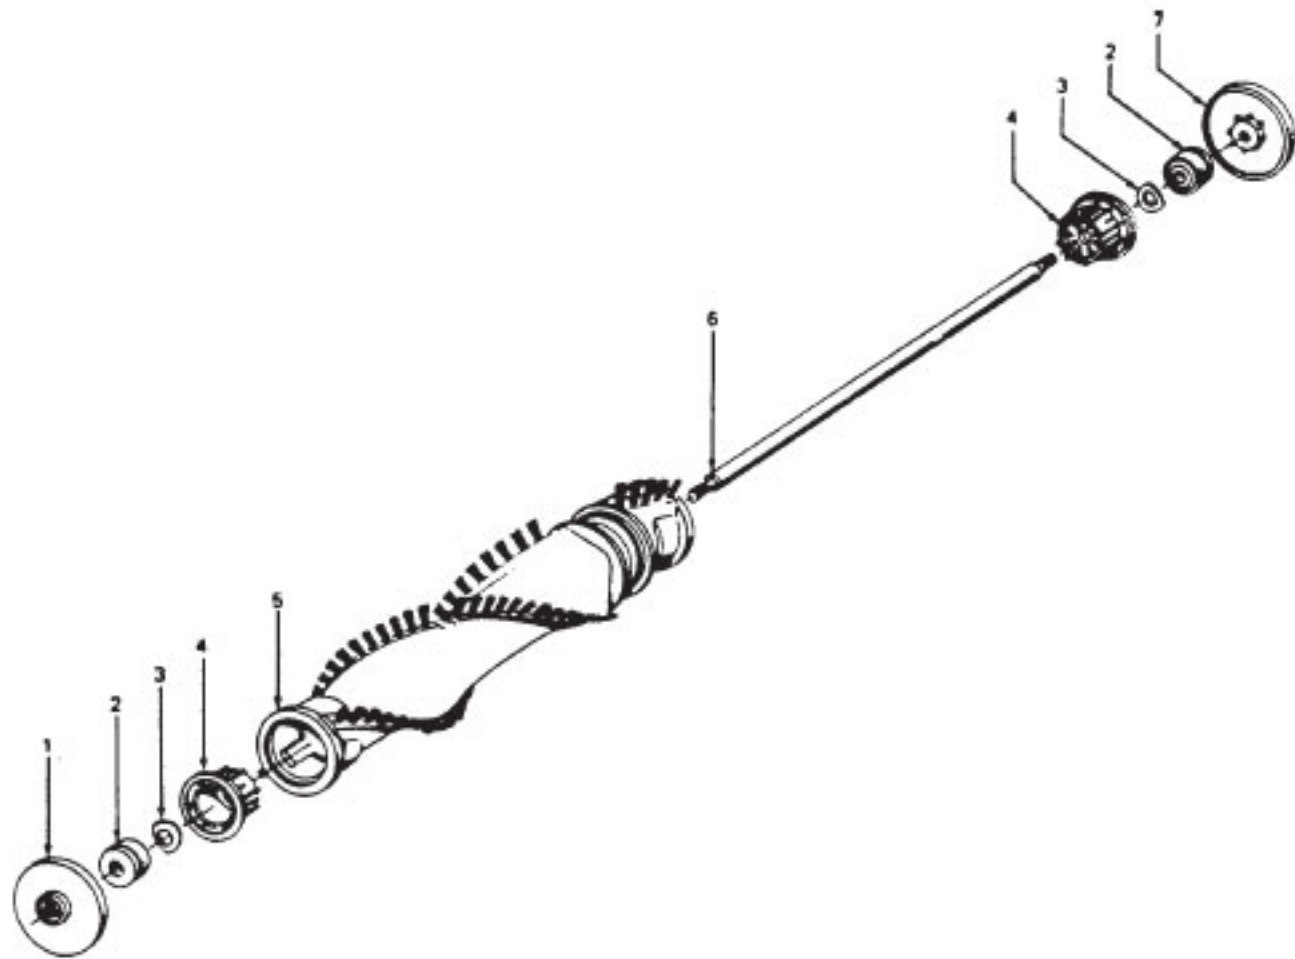

KEY	PART NO.	DESCRIPTION
	H-48414036	Agitator Ass'y Complete 2 Row
	H-48414035	Agitator Ass'y Complete 4 Row
1	H-36423016	Thread Guard - R.H.
2	H-43267002	Agitator Bearing Ass'y (2)
3	H-21347003	Conical Washer(2)
4	H-36422022	Agitator End (2)
5	H-48414032	Agitator Body
6	H-32724013	Agitator Shaft
7	H-36423017	Thread Guard - L.H. - AG

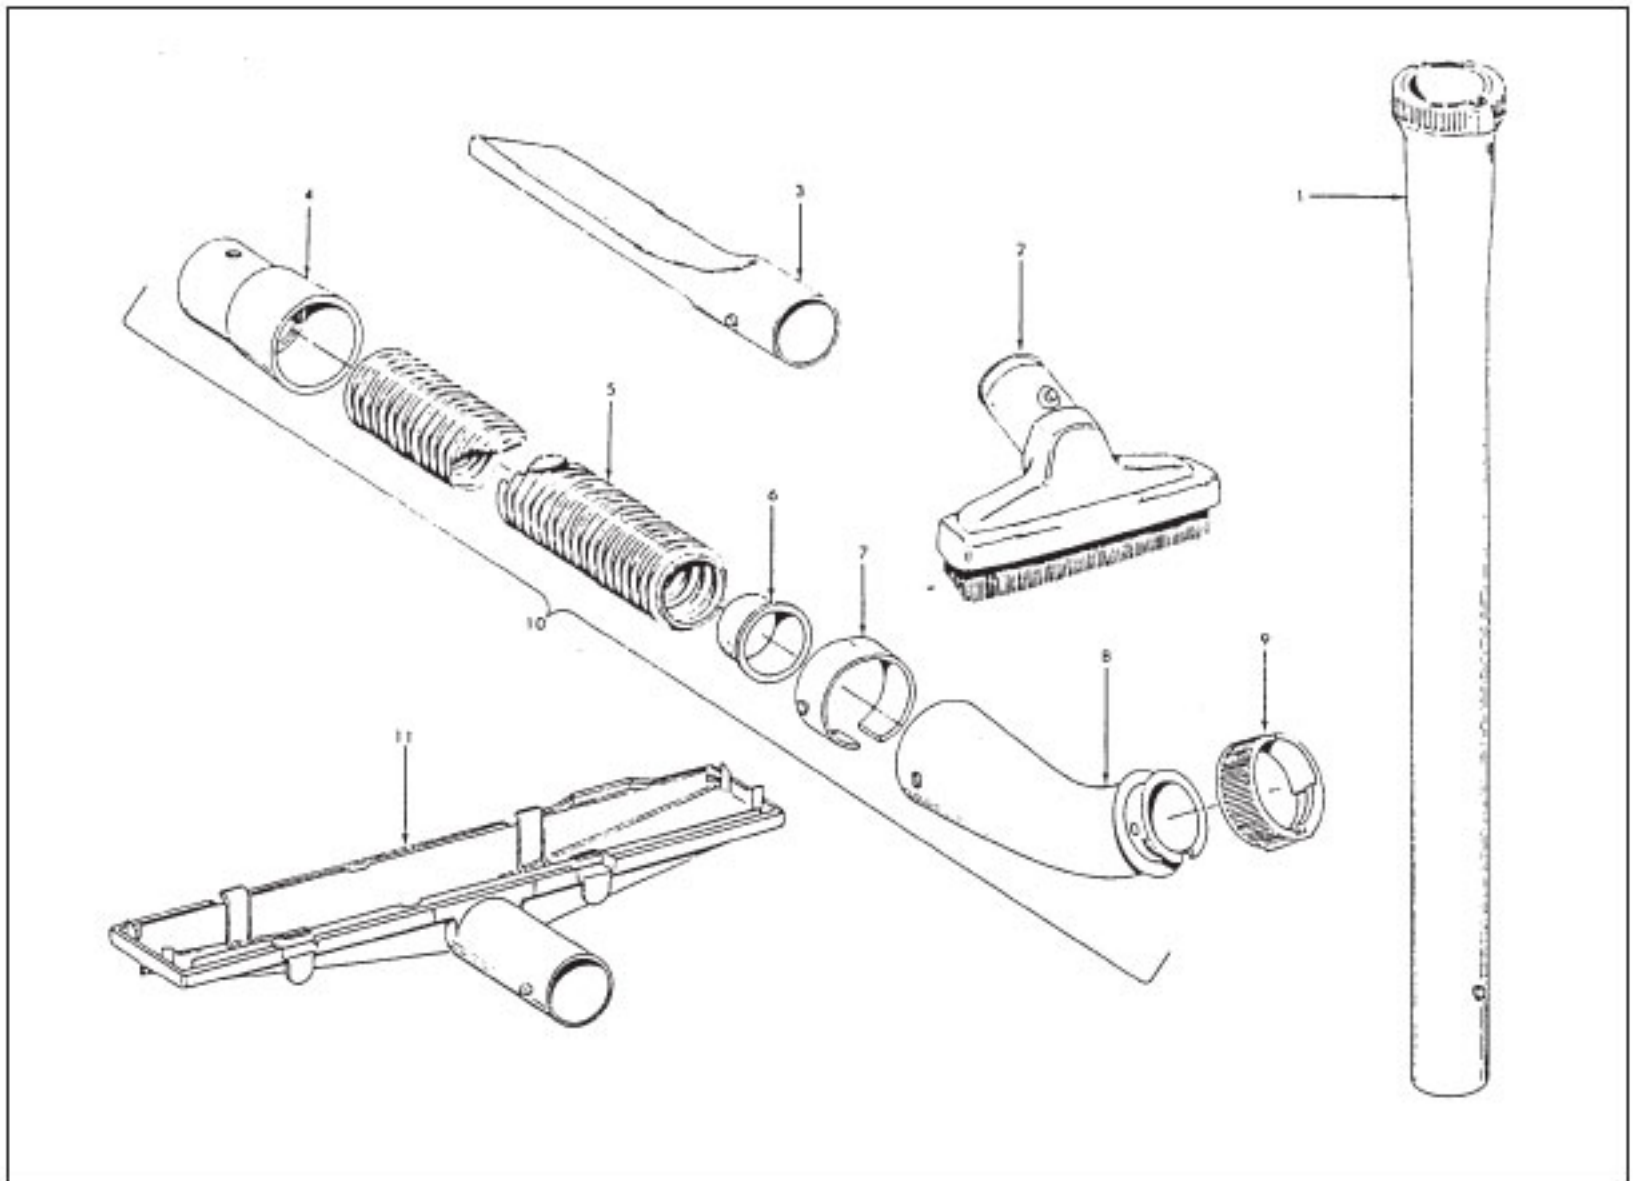

Standard Fit Tools (w/Retention Pin) (Shown)

KEY	PART NO.	DESCRIPTION
1	H-43453043	Extension Tube - AAP
2	H-43414017	Multi-Purpose Brush - AAP
3	H-38617018	Crevice Tool - AAP
4	H-32288004	Hose Connector - AAP
5	H-38671018	Hose - Less Ends - AAP
6	H-32156010	Hose Sleeves
7	H-36171025	Hose Connector - Curved - AAP
8	H-43466058	Hose Connector - Curved - AAP (Incl. Item 9)
9	H-36153021	Latch Ring
10	H-43434210	Hose Comp.
11	H-38656016	Convertor Body - AAP
	H-43414071	Furniture Nozzle - AAP
	H-43414087	Dusting Brush - AAP
	H-43414088	Wall/Floor Brush - AAP

Friction Fit Tools (w/o Retention Pin) (Not Shown)

PART NO.
H-38634074
Not Available
H-38617023
H-32288004
H-38671025
Not Available
Not Available
H-39454053 (Hand Grip)
Not Available
H-43434225
H-38656016
H-38614026
H-43414129
H-43414135