


Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847


Nozzle Housing

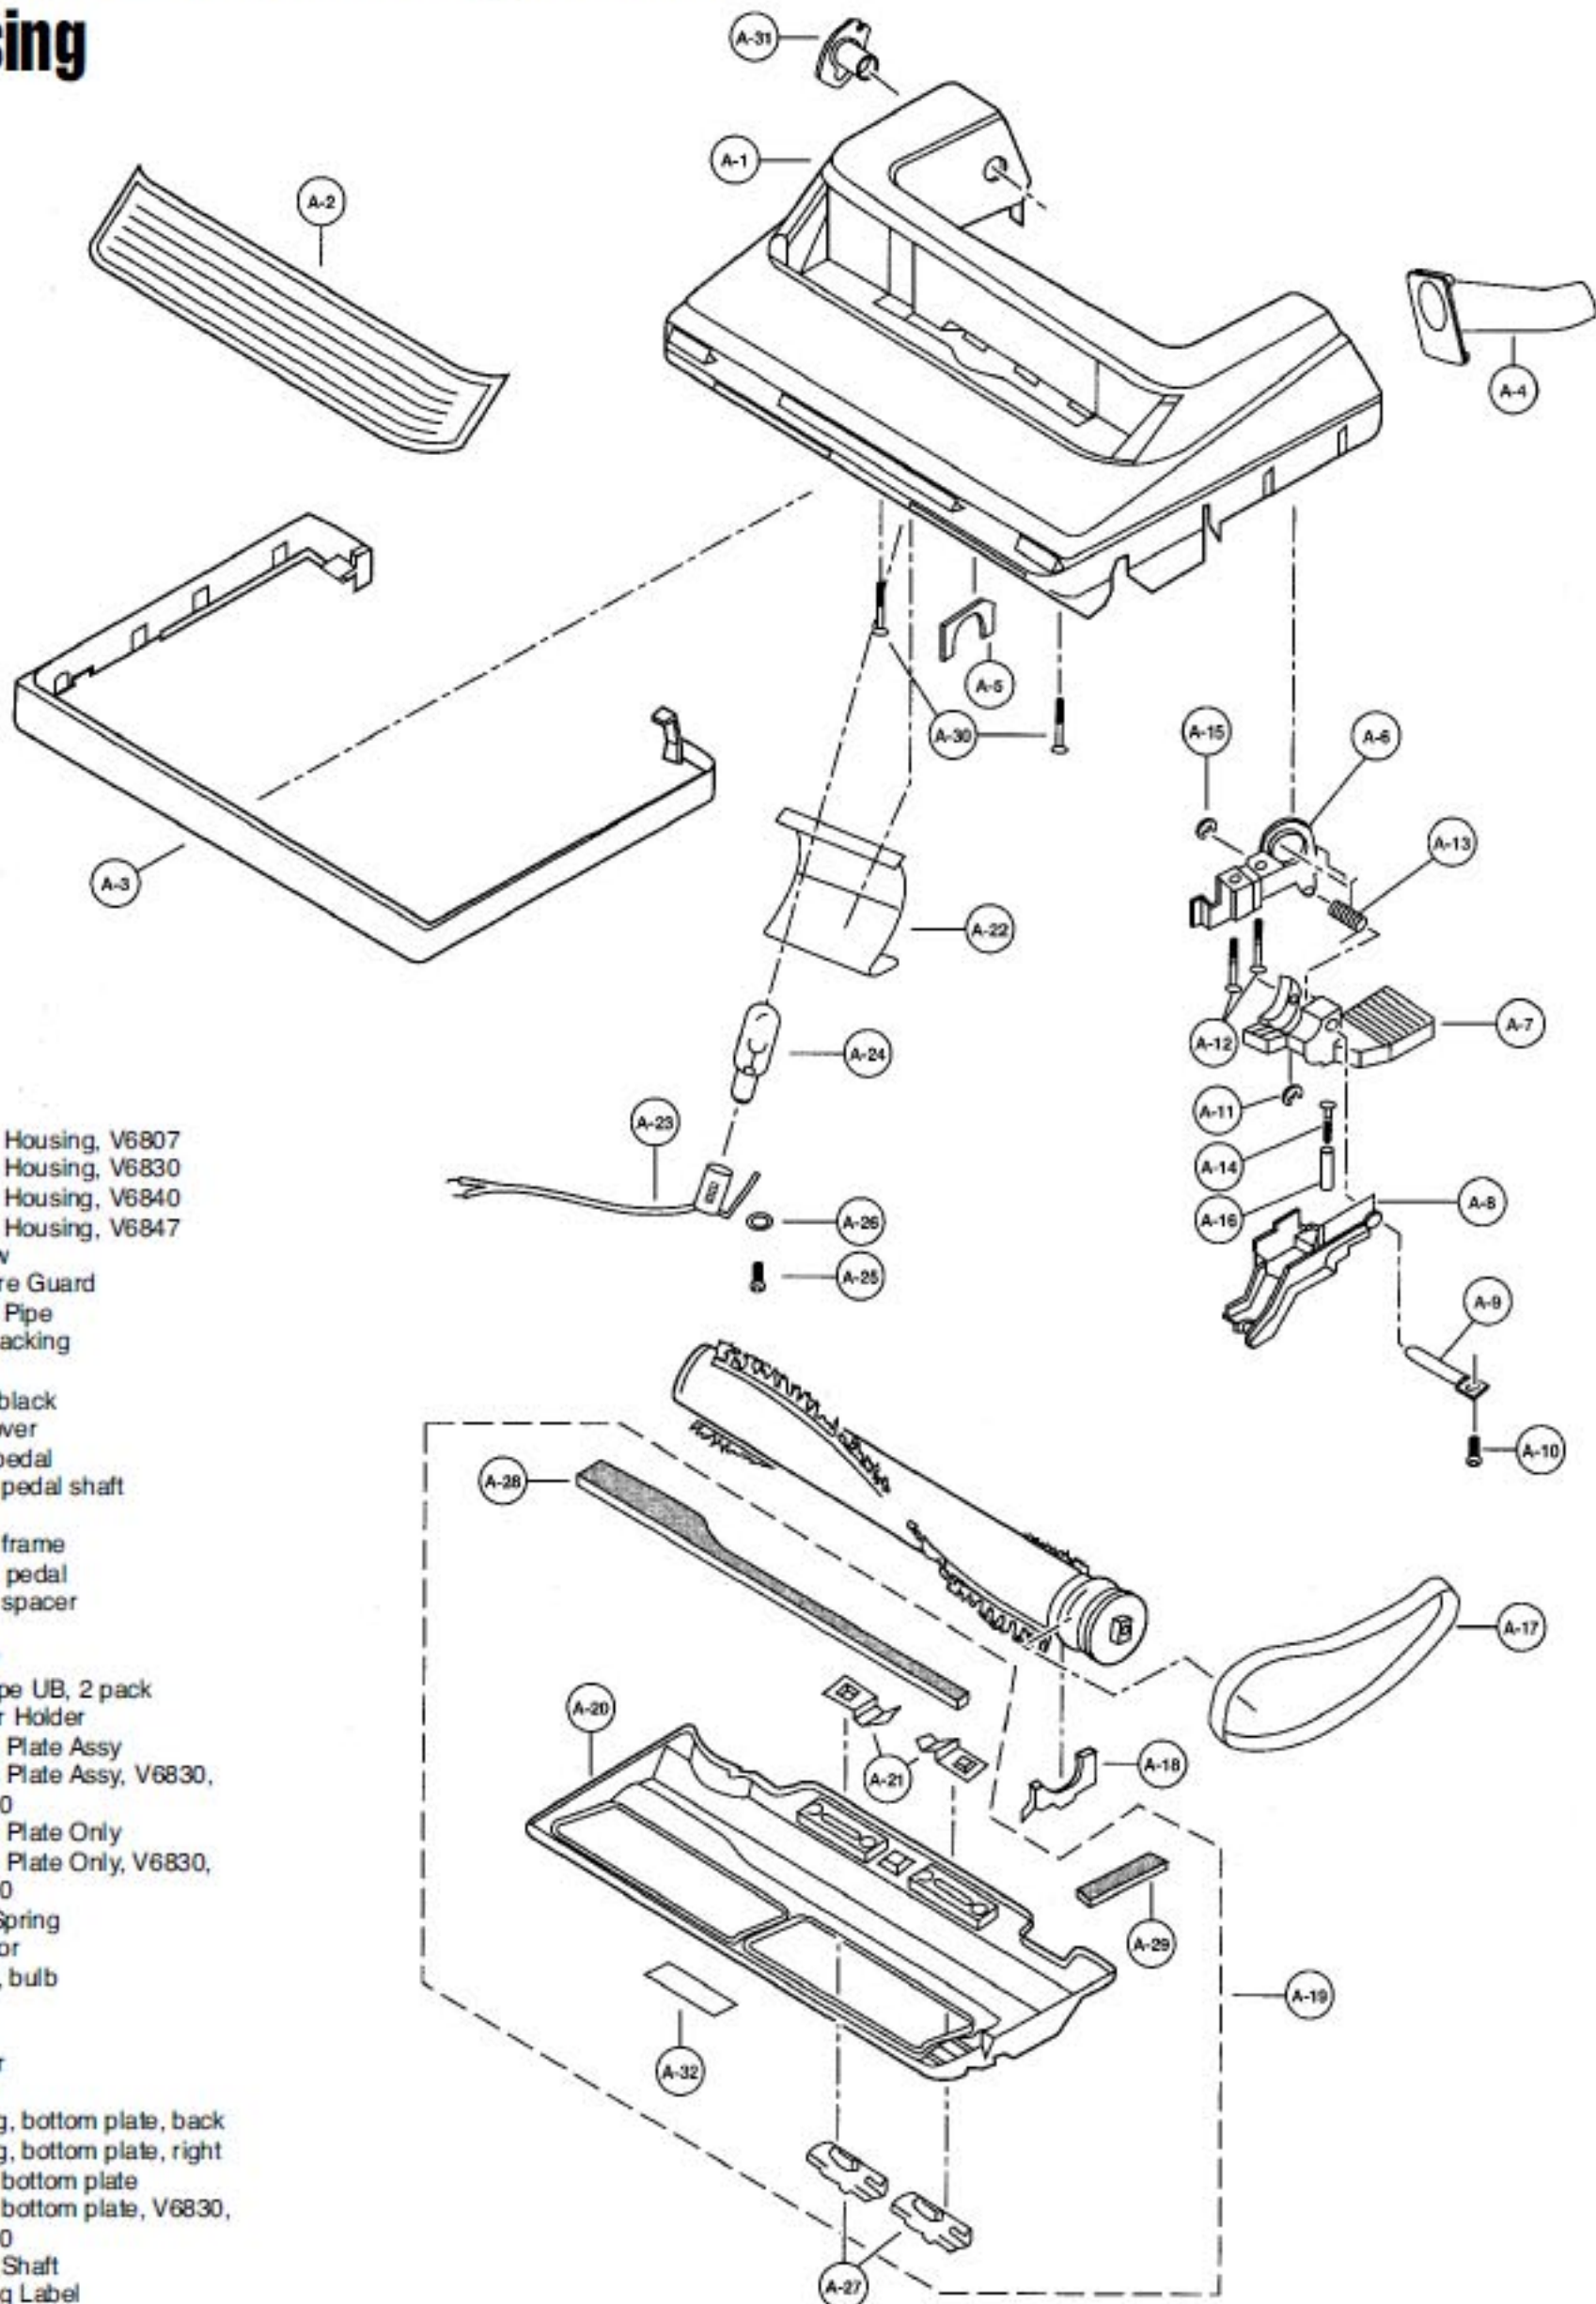

- | | | |
|----|----------|-----------------------------------|
| 1 | P-1105 | Nozzle Housing, V6807 |
| 1 | P-1513 | Nozzle Housing, V6830 |
| 1 | P-01103 | Nozzle Housing, V6840 |
| 1 | P-01101 | Nozzle Housing, V6847 |
| 2 | P-2125 | Window |
| 3 | P-000274 | Furniture Guard |
| 4 | P-10108 | Nozzle Pipe |
| 5 | P-81 | Tight Packing |
| 6 | P-000095 | Frame |
| 7 | P-4720 | Pedal, black |
| 8 | P-1124 | Belt Cover |
| 9 | P-00051 | Shaft, pedal |
| 10 | P-6140 | Screw, pedal shaft |
| 11 | P-411 | E-Clip |
| 12 | P-6140 | Screw, frame |
| 13 | P-000010 | Spring, pedal |
| 14 | P-428 | Screw, spacer |
| 15 | P-411 | E-Clip |
| 16 | P-7411 | Spacer |
| 17 | P-2287 | Belt, type UB, 2 pack |
| 18 | P-8220 | Agitator Holder |
| 19 | P-8939 | Bottom Plate Assy |
| 19 | P-000013 | Bottom Plate Assy, V6830, V6840 |
| 20 | P-000133 | Bottom Plate Only |
| 20 | P-2701 | Bottom Plate Only, V6830, V6840 |
| 21 | P-704 | Latch Spring |
| 22 | P-10109 | Reflector |
| 23 | N/A | Socket, bulb |
| 24 | P-2810 | Bulb |
| 25 | P-000610 | Screw |
| 26 | P-587 | Washer |
| 27 | P-2751 | Latch |
| 28 | P-742 | Packing, bottom plate, back |
| 29 | P-392 | Packing, bottom plate, right |
| 30 | P-683 | Screw, bottom plate |
| 30 | P-000015 | Screw, bottom plate, V6830, V6840 |
| 31 | P-2500 | Plastic Shaft |
| 32 | P-07000 | Warning Label |

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847


Body Assembly

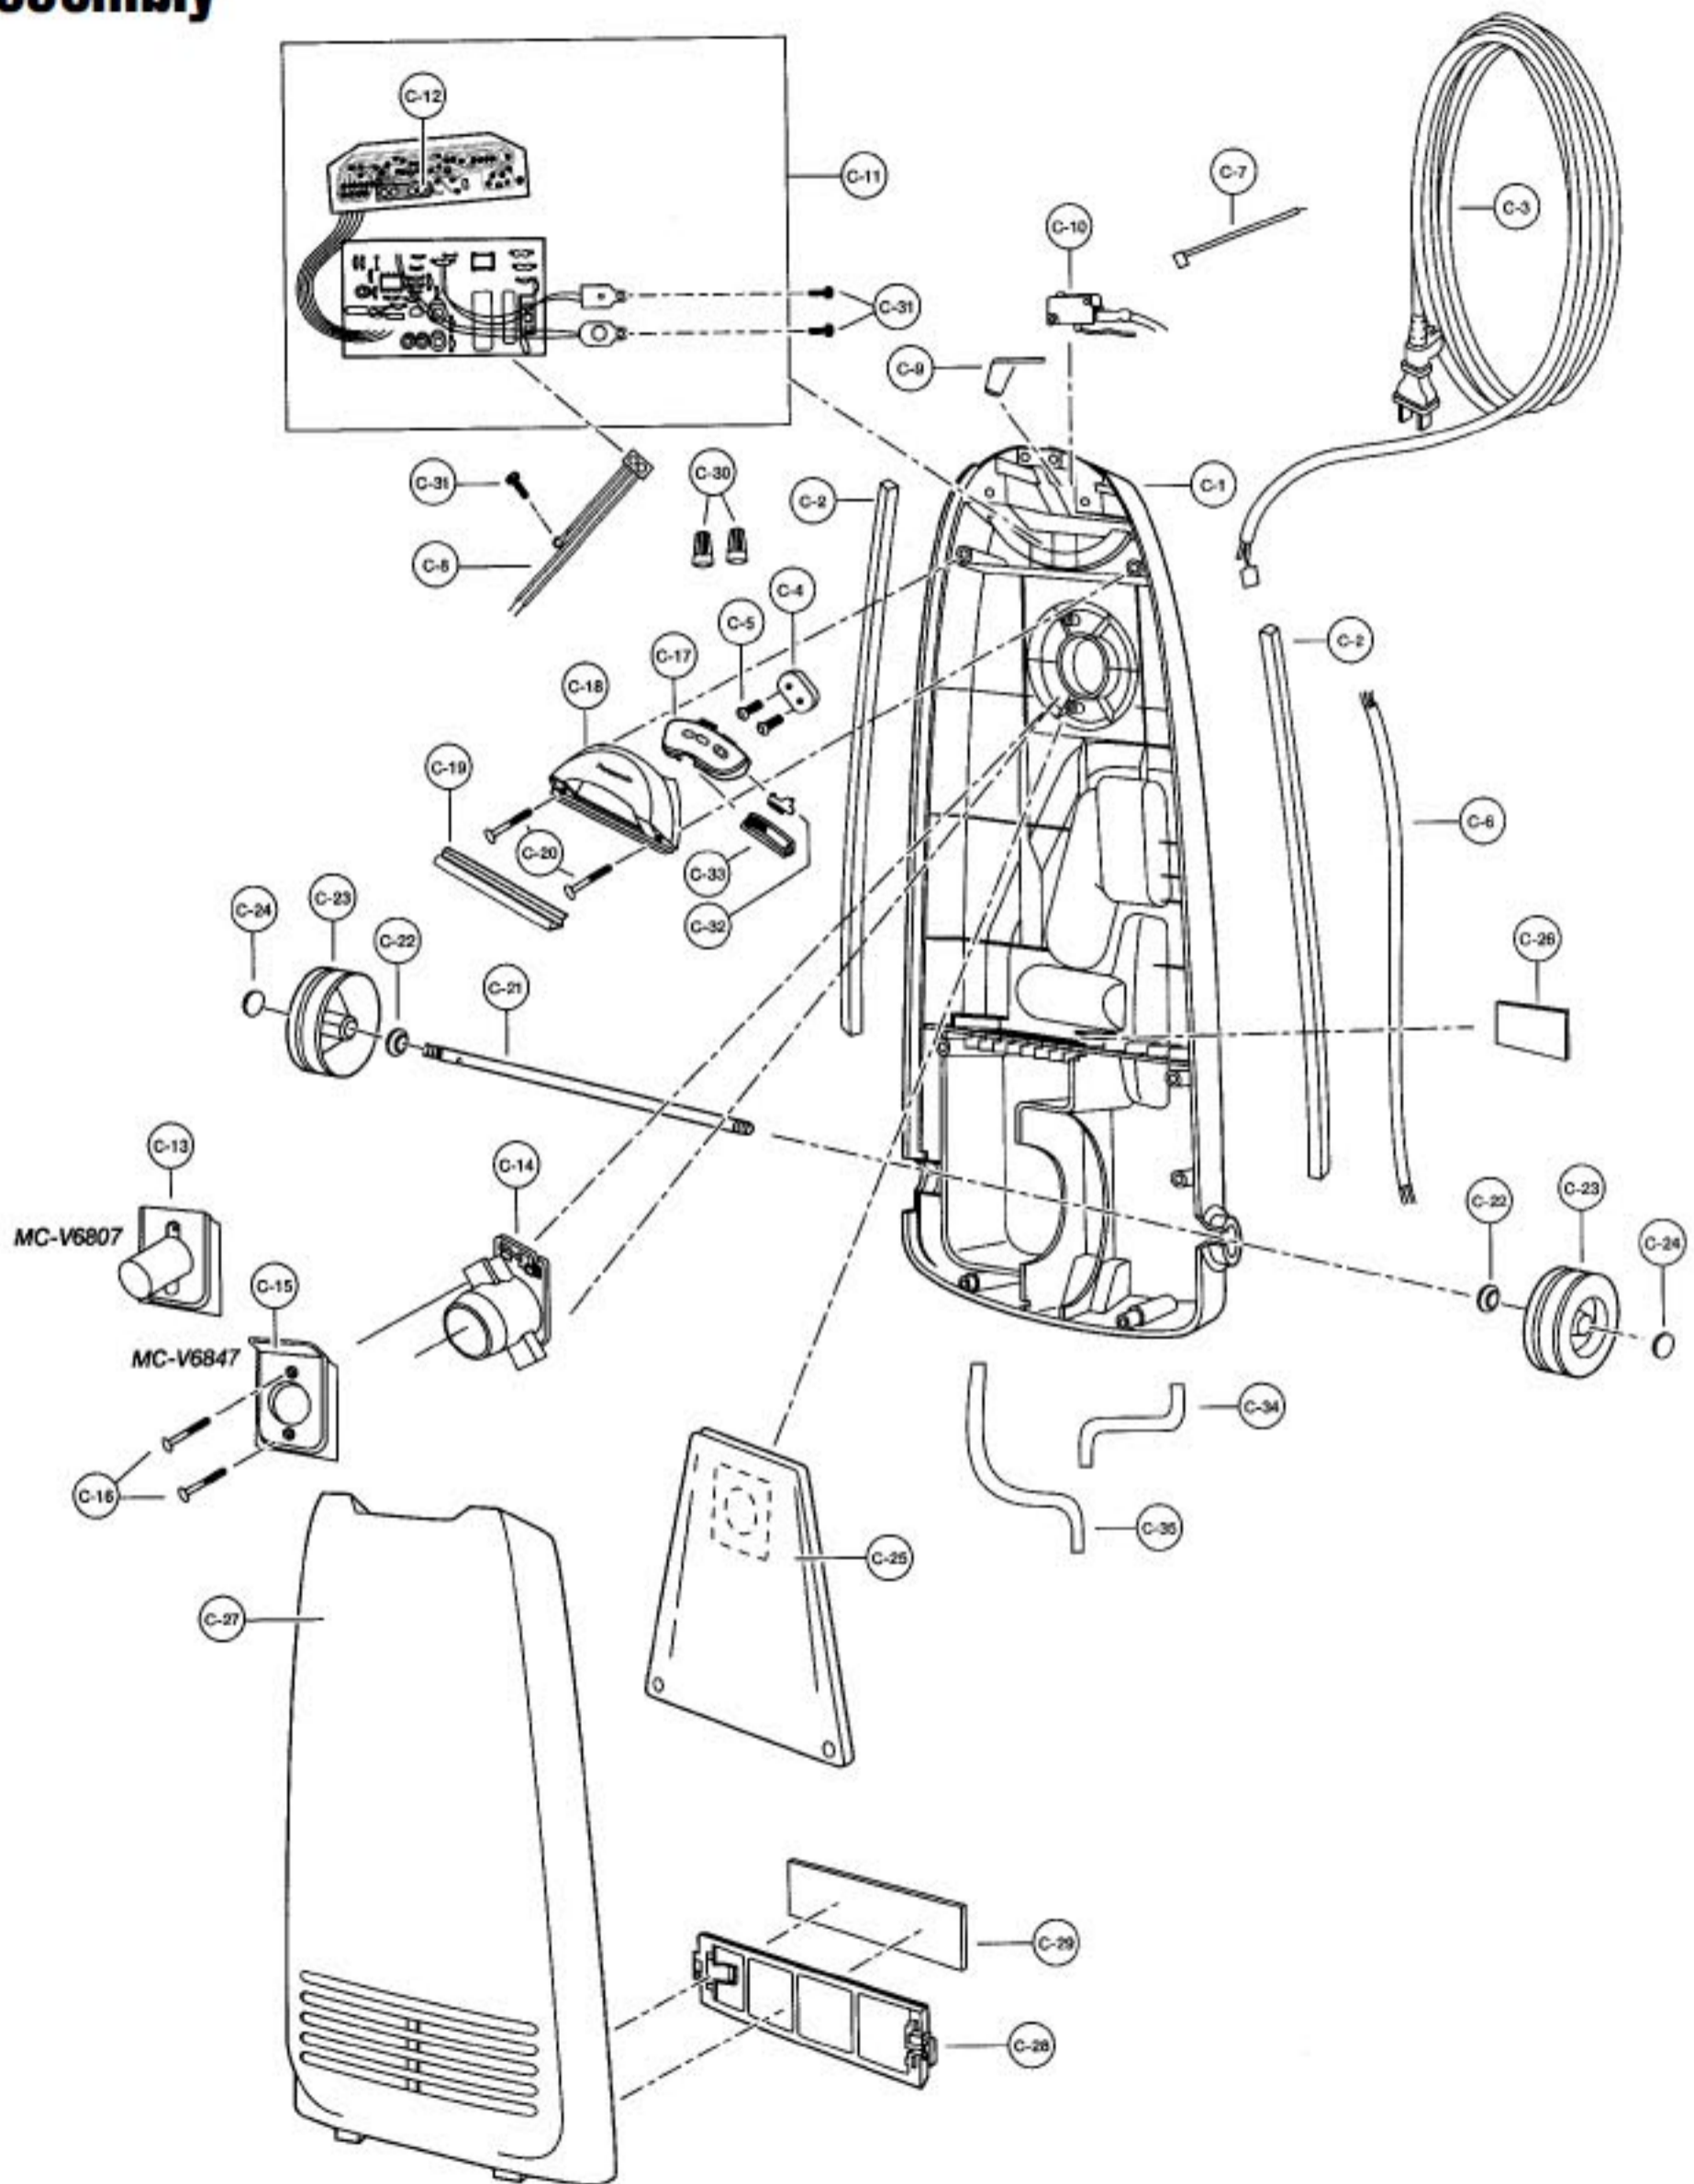

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847

1 P-40007 Dust Container, V6807, V6847	12 .. P-000027 PCB Holder, V6847	27 .. P-6005 Dust Cover, V6807
1 P-40007 Dust Container, V6830, V6840	13 .. P-10358 Bag Supporter, V6830, V6840, V6847	27 .. P-60131 Dust Cover, V6830, V6840
2 P-00109 Packing, dust container	14 .. P-11012 Bag Supporter, V6847	27 .. P-6012 Dust Cover, V6847
3 P-9816 Power Cord, 35 ft, V6807, V6847	15 .. P-7082 Fin Cover, V6847	28 .. P-9893 Filter Supporter
3 P-11018 Power Cord, 25 ft, V6830	16 .. P-6140 Screw, V6847	29 .. P-3099 Filter, electrostatic, V6807, V6840, V6847
3 P-7906 Power Cord, 30 ft, V6840	17 .. P-2161 Ornamental Plate, V6847	29 .. P-000040 Filter, standard, V6830
4 N/A Cord Stopper	18 .. P-3105 Switch Cover, V6807	30 .. P-000623 Wire Nut
5 P-6140 Screw, cord stopper	18 .. P-3113 Switch Cover, V6830	31 .. P-00086 Screw, V6847
6 P-3820 Wire Cord	18 .. P-3103 Switch Cover, V6840	32 .. P-000043 Sensor Knob, V6847
7 P-000022 Lead Wire	18 .. P-18317 Switch Cover, V6847	33 .. P-000044 LED Lens, V6847
7 P-4402 Lead Wire, V6830	19 .. P-6037 Packing, switch cover	34 .. P-3905 Packing, right
8 P-000023 Lead Wire AU, V6847	20 .. P-6140 Screw, switch cover	35 .. P-4160 Packing, left
9 P-000024 Switch Lever	21 .. P-16005 Roller Shaft	P-000041 1/8 Spring, round, V6830
10 .. P-0696 Switch, on/off	22 .. P-6115 Washer, roller shaft	
10 .. P-10602 Switch, on/off, V6830	23 .. P-0114 Wheel, black	
11 .. P-000115 PC Assembly, V6847	24 .. P-74009 Stopper, wheel	
	25 .. P-115P Paper Bag, type U3, 3 pack	
	26 .. P-7023 Secondary Filter, foam	


Handle Assembly & Rear Dust Compartment

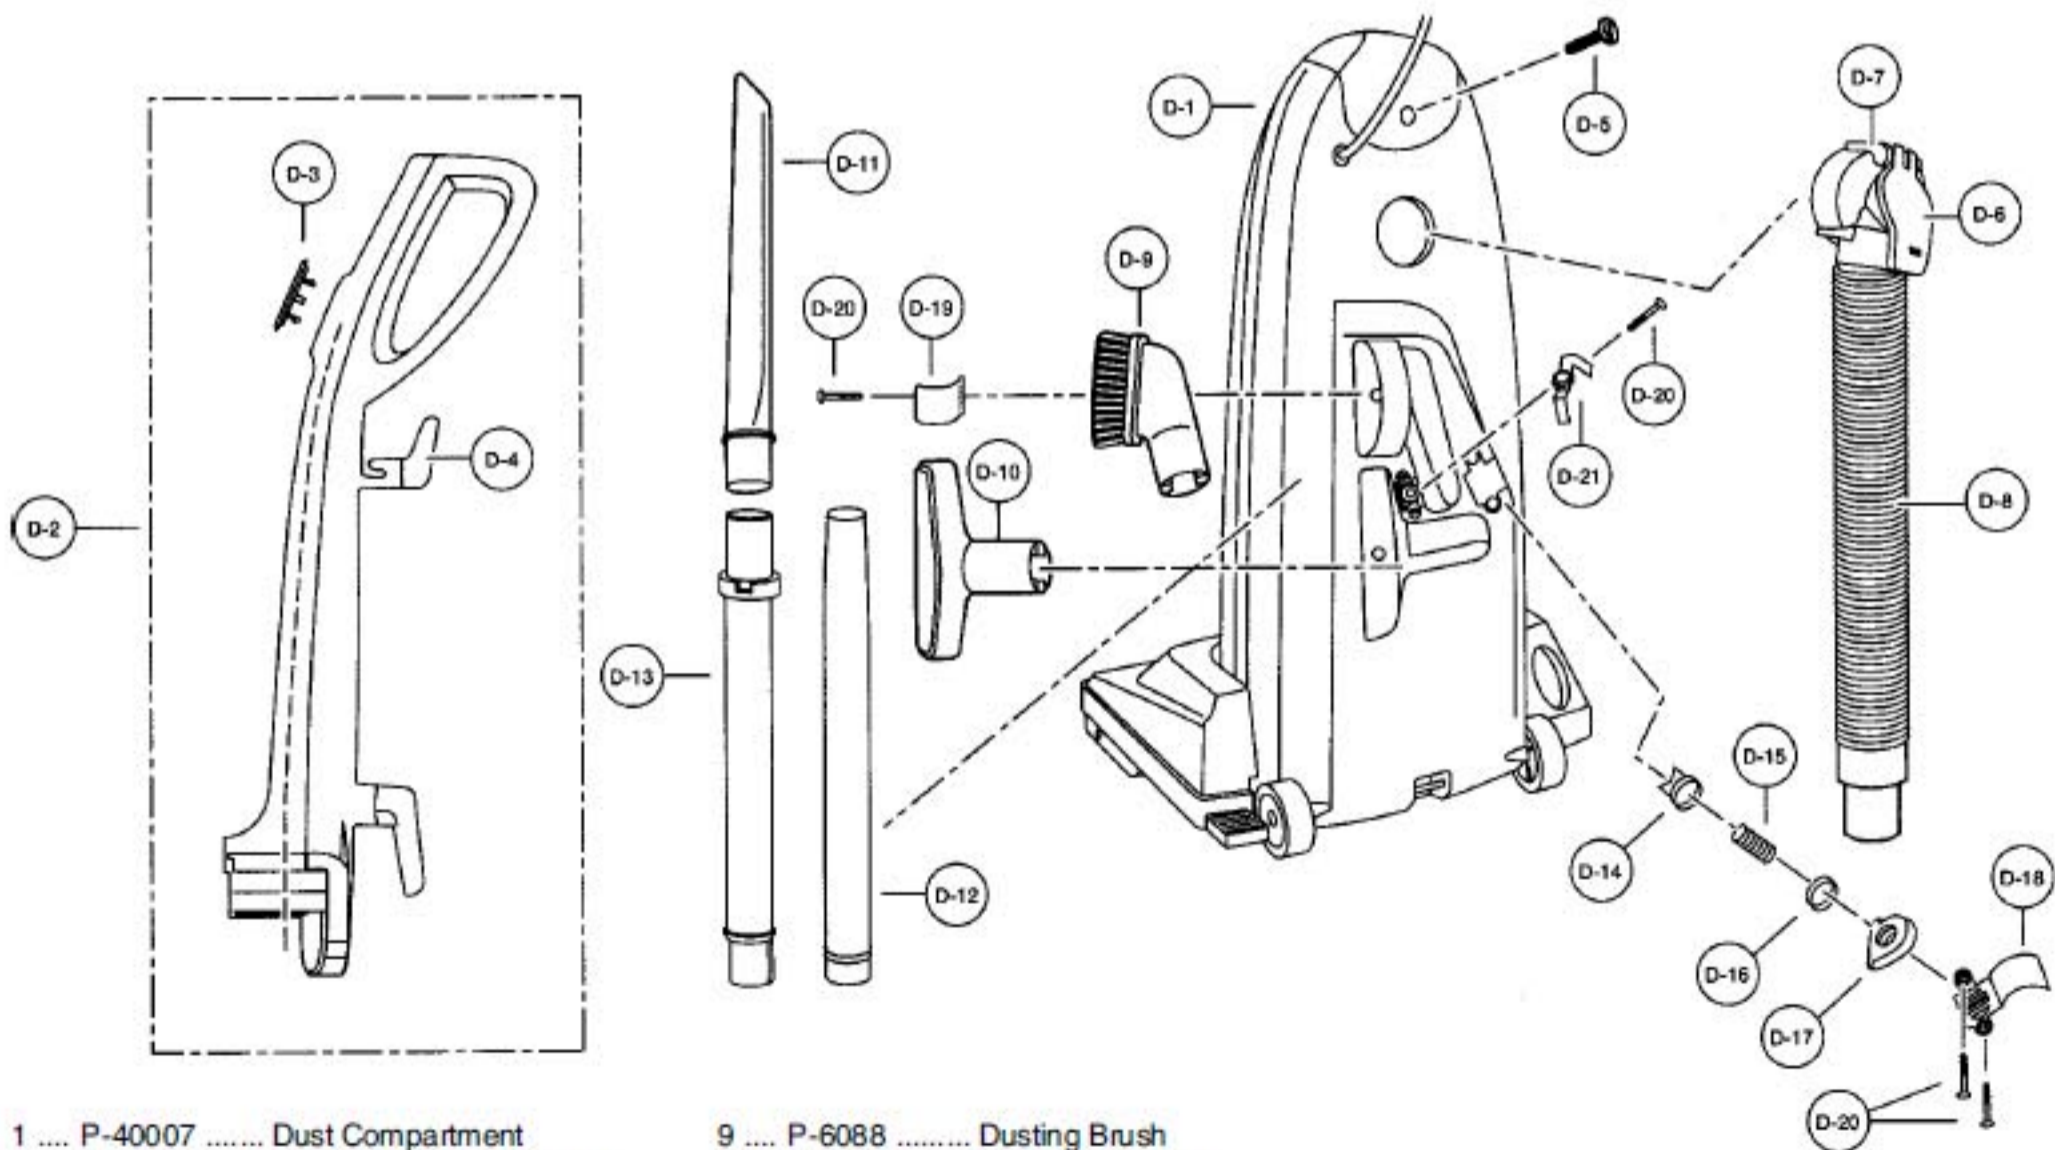

1 P-40007 Dust Compartment	9 P-6088 Dusting Brush	19 .. P-7070 Wand Holder, V6830
2 P-000018 Handle Assembly, V6807, V6847	10 .. P-6620 Upholstery Nozzle	19 .. P-9896 Wand Holder, V6807, V6840, V6847
2 P-9507 Handle Assy, V6830	11 .. P-6069 Crevice Tool	20 .. P-8172 Screw
2 P-000286 Handle Assy, V6840	12 .. P-60104 Wand, standard, V6830	20 .. P-6140 Screw, V6807, V6847
3 P-7507 Switch Cover, V6830	13 .. P-9895 Wand, extension, V6807, V6840, V6847	21 .. P-000261 Holder
4 P-7035 Cord Hook, upper	14 .. P-68006 Protector Case	21 .. P-000061 Holder, V6807, V6847
5 P-000048 Screw, handle	15 .. P-9832 Protector Spring	
6 P-8972 Cover, suction inlet	16 .. P-6906 Protector	
7 P-9894 Packing, suction inlet	17 .. P-18006 Protector Supporter	
8 P-0648 Hose Assembly	18 .. P-000059 Hose Hook	

Models: MC-V6807, MC-V6830, MC-V6840, MC-V6847

Motor Case & Motor


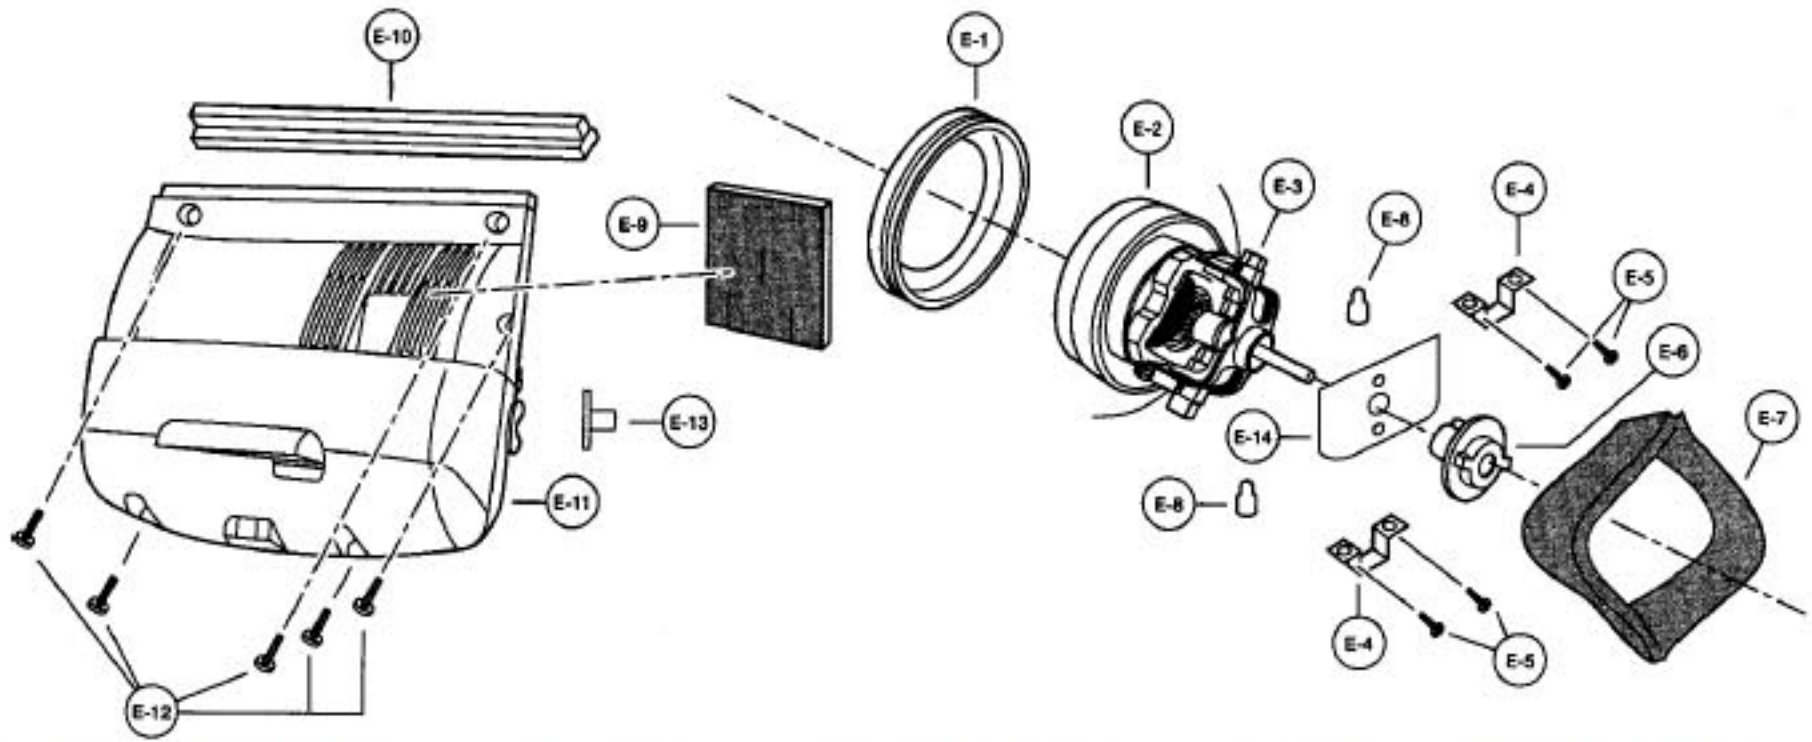


- | | | | | | |
|---------------|------------------------------|----------------|-----------------------------|-----------------|-------------------|
| 1 ... P-0293 | Motor Support, rubber, front | 6 ... P-9911 | Motor Support, rubber, rear | 11 ... P-000287 | Motor Case, V6830 |
| 2 ... P-9905 | Motor Assembly, V6807, V6847 | 7 ... P-99300 | Noise Suppressor | 11 ... P-09103 | Motor Case, V6840 |
| 3 ... P-2908 | Motor Assembly, V6830, V6840 | 8 ... P-000623 | Wire Nut | 12 ... P-6140 | Screw, motor case |
| 3 ... P-27009 | Carbon Brush Assy | 9 ... P-000064 | Packing, rear cover | 13 ... P-7805 | Plastic Holder |
| 4 ... P-0036 | Retainer Bracket | 10 ... P-00117 | Packing, motor case | 14 ... P-0410 | Cooling Guide |
| 5 ... P-0037 | Screw, retainer bracket | 11 ... P-09101 | Motor Case | | |

Agitator Assembly

MODELS: MC-V6807, MC-V6847

- | | |
|---------------|-------------------------|
| P-921 | Agitator Assy, complete |
| 2 ... P-85 | Brush Strip (4pc) |
| 3 ... P-078 | Agitator Pulley |
| 4 ... P-881 | Agitator Holder |
| 5 ... P-304 | Filter |
| 6 ... N/A | End Cap, right |
| 7 ... P-00125 | End Cap, left |
| 8 ... P-57 | Agitator Shaft |
| 9 ... N/A | E-Clip |
| 10 ... P-74 | Spacer |

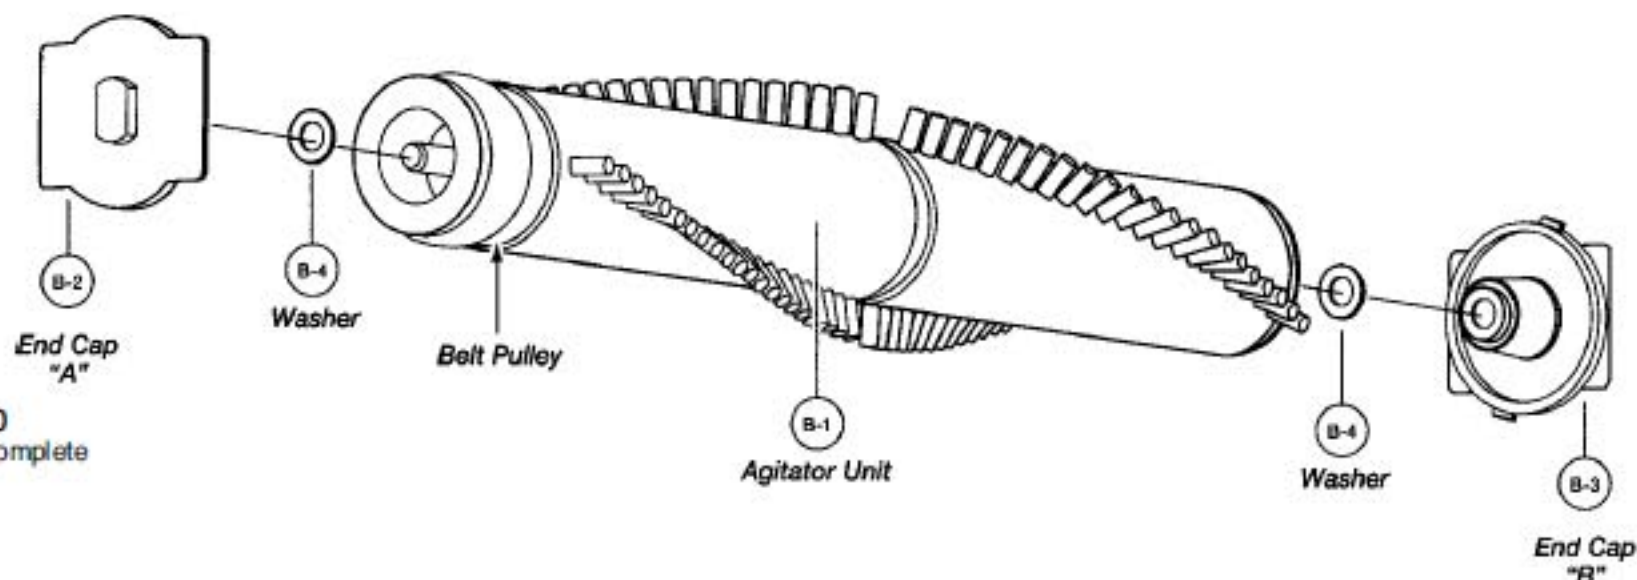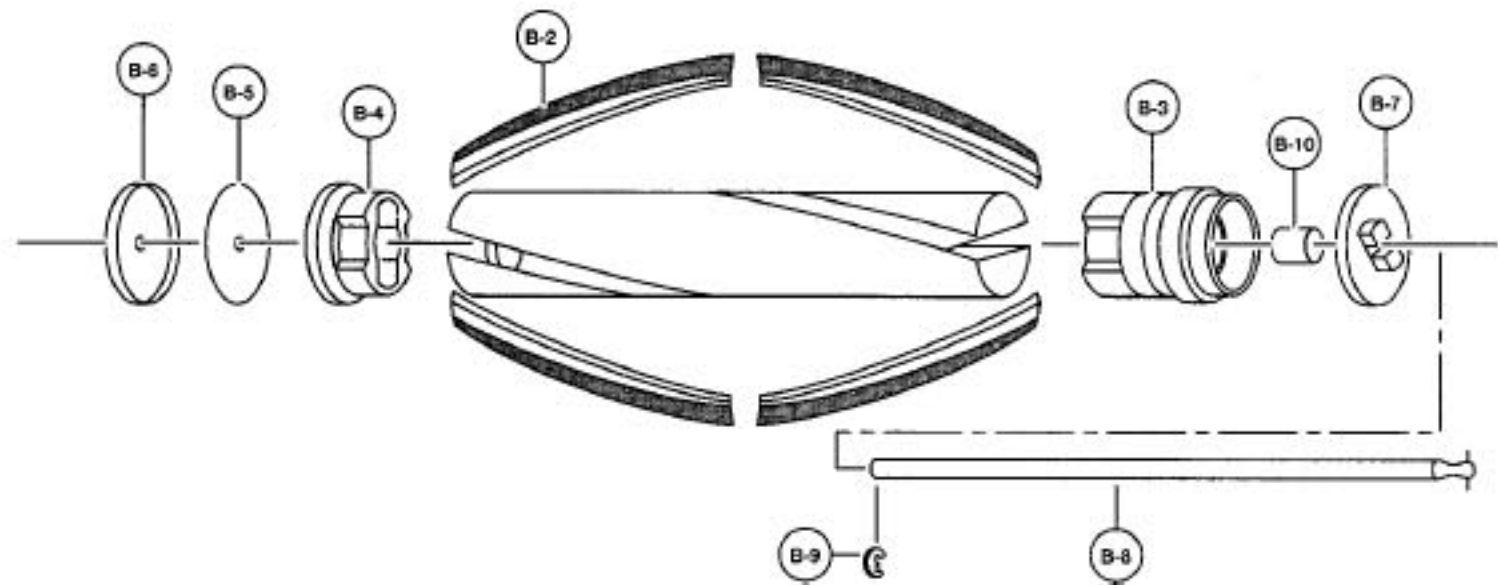

MODELS: MC-V6830, MC-V6840

- | | |
|--------------|-------------------------|
| P-00108 | Agitator Assy, complete |
| 1 ... P-9212 | Agitator Unit |
| 2 ... P-0693 | End Cap "A" |
| 3 ... P-0694 | End Cap "B" |
| 4 ... P-0030 | Washer |