


This Owner's Manual is provided and hosted by Appliance Factory Parts.



PANASONIC V6965 Owner's Manual

[Shop genuine replacement parts for PANASONIC
V6965](#)

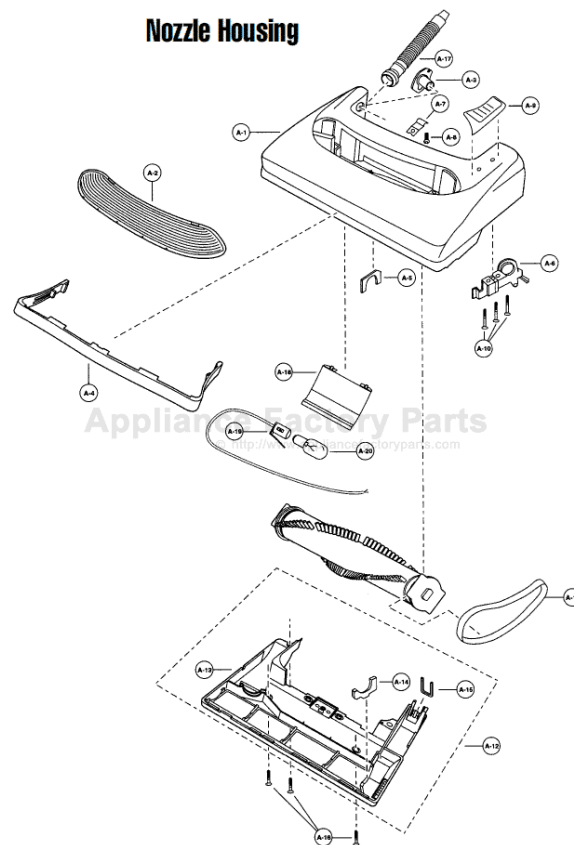

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----


Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V

Nozzle Housing

- 1 P-00119 Nozzle Housing, V6915
- 1 P-5466 Nozzle Housing, V6945
- 1 P-5458 Nozzle Housing, V6950
- 1 P-00120 Nozzle Housing, V6965
- 1 P-10104 Nozzle Housing, V6970
- 1 P-5467 Nozzle Housing, V6975
- 1 P-11011 Nozzle Housing, V6980
- 1 P-11013 Nozzle Housing, V6985
- 2 P-10105 Window
- 2 P-10105 Window, V6970, V6980, V6985
- 3 P-2500 Shaft, plastic
- 4 P-10107 Furniture Guard
- 4 P-10107 Furniture Guard, V6970
- 4 P-11014 Furniture Guard, V6980, V6985
- 5 P-81 Packing, tight
- 6 P-000095 Frame
- 7 P-58 Spring, pedal
- 8 P-6140 Screw, spring
- 9 P-5459 Pedal
- 9 P-4720 Pedal, V6915, V6965
- 9 P-11015 Pedal, V6980


- 9 P-11016 Pedal, V6985
- 10 P-6140 Screw, frame
- 11 P-2287 Belt, type UB, 2 pack
- 11 P-V270B Belt, type UB, 2 pack, V6980, V6985
- 12 P-9197 Bottom Plate Assy
- 12 P-000107 Bottom Plate Assy, V6915, V6965
- 13 P-2707 Bottom Plate
- 13 P-000113 Bottom Plate, V6915, V6965
- 14 P-7500 Packing, bottom plate
- 15 P-43 Belt Cover
- 16 P-6800 Screw, bottom plate
- 16 P-000015 Screw, bottom plate, V6915, V6965
- 17 P-9682 Nozzle Hose, short
- 17 P-10108 Nozzle Pipe
- 18 P-10106 Reflector
- 19 P-0039 Socket, bulb
- 19 N/A Socket, bulb, V6915, V6965
- 19 P-9367 Socket, bulb, V6980, V6985
- 20 P-2810 Bulb

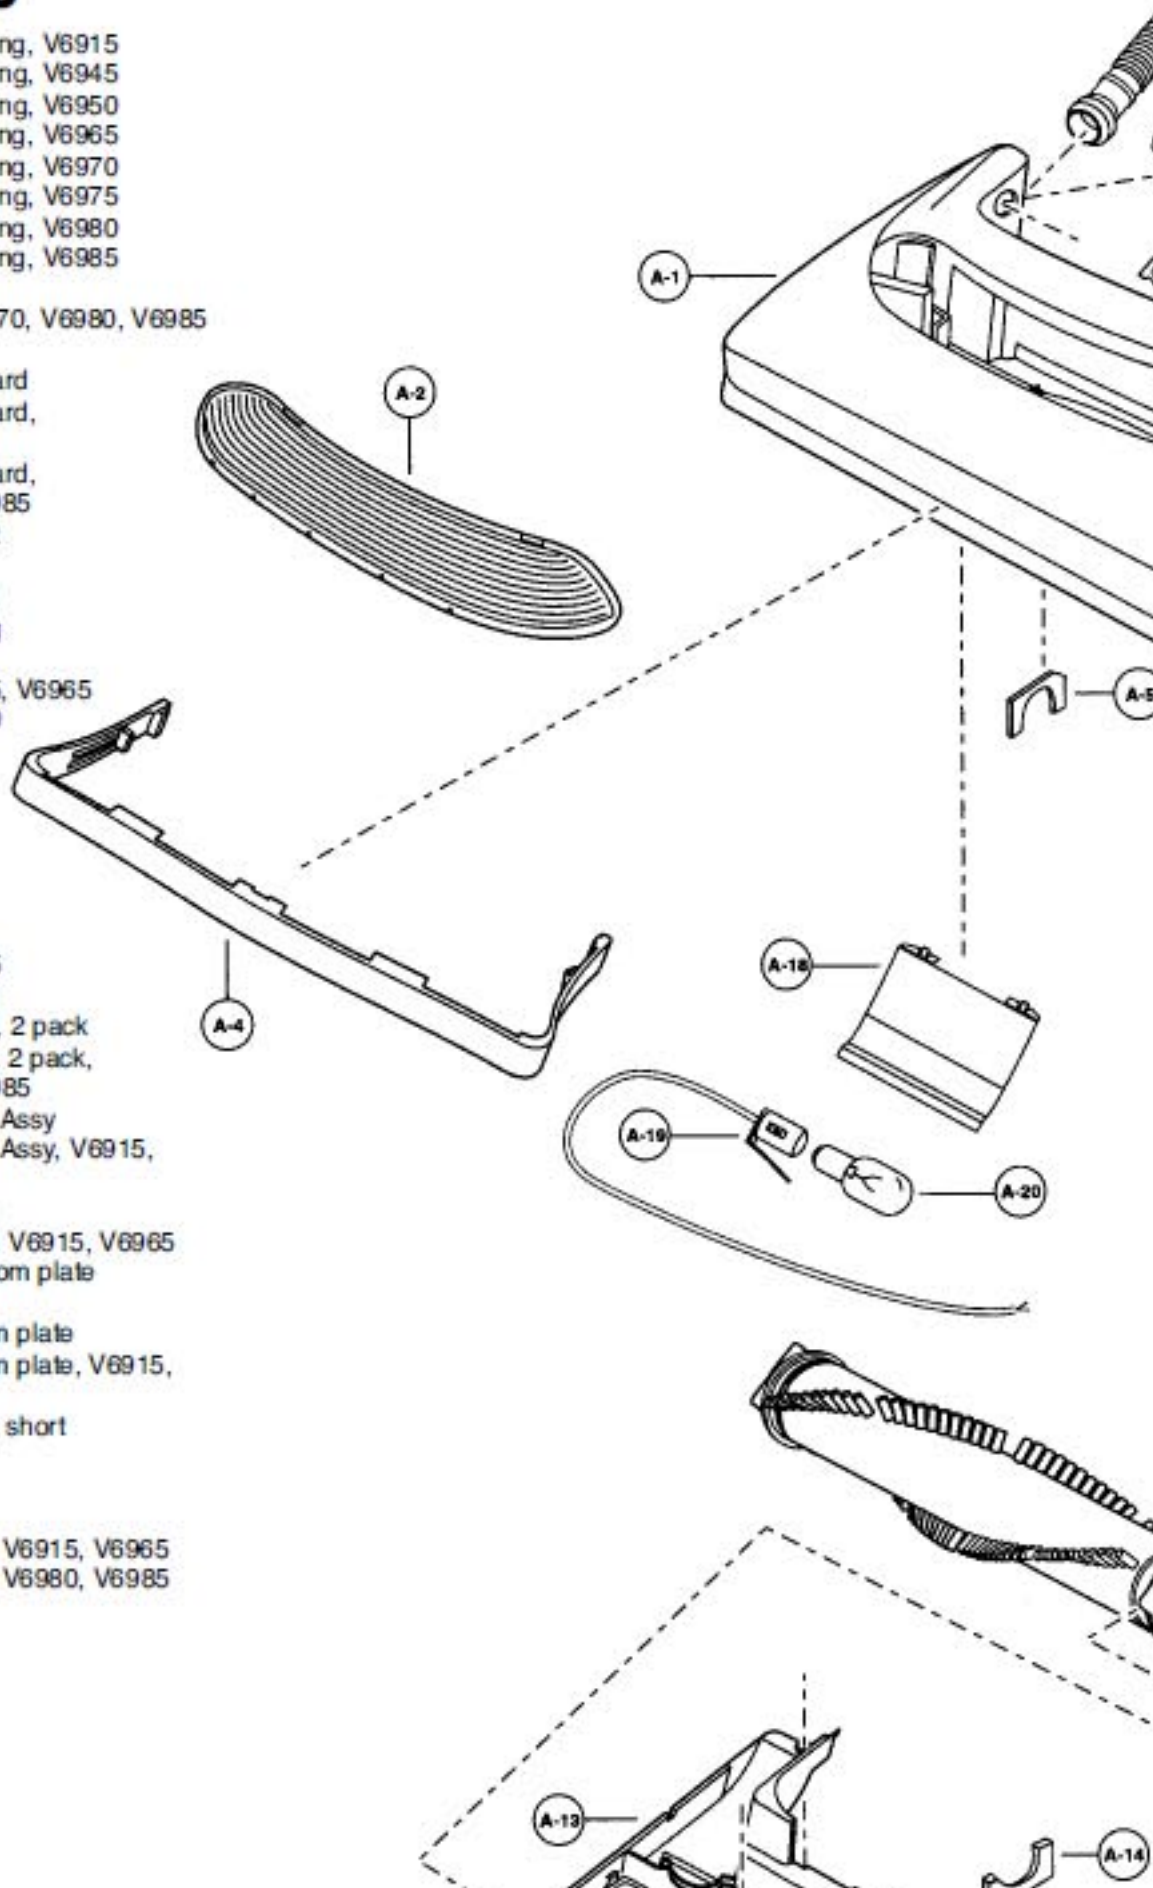

Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V

Body Housing

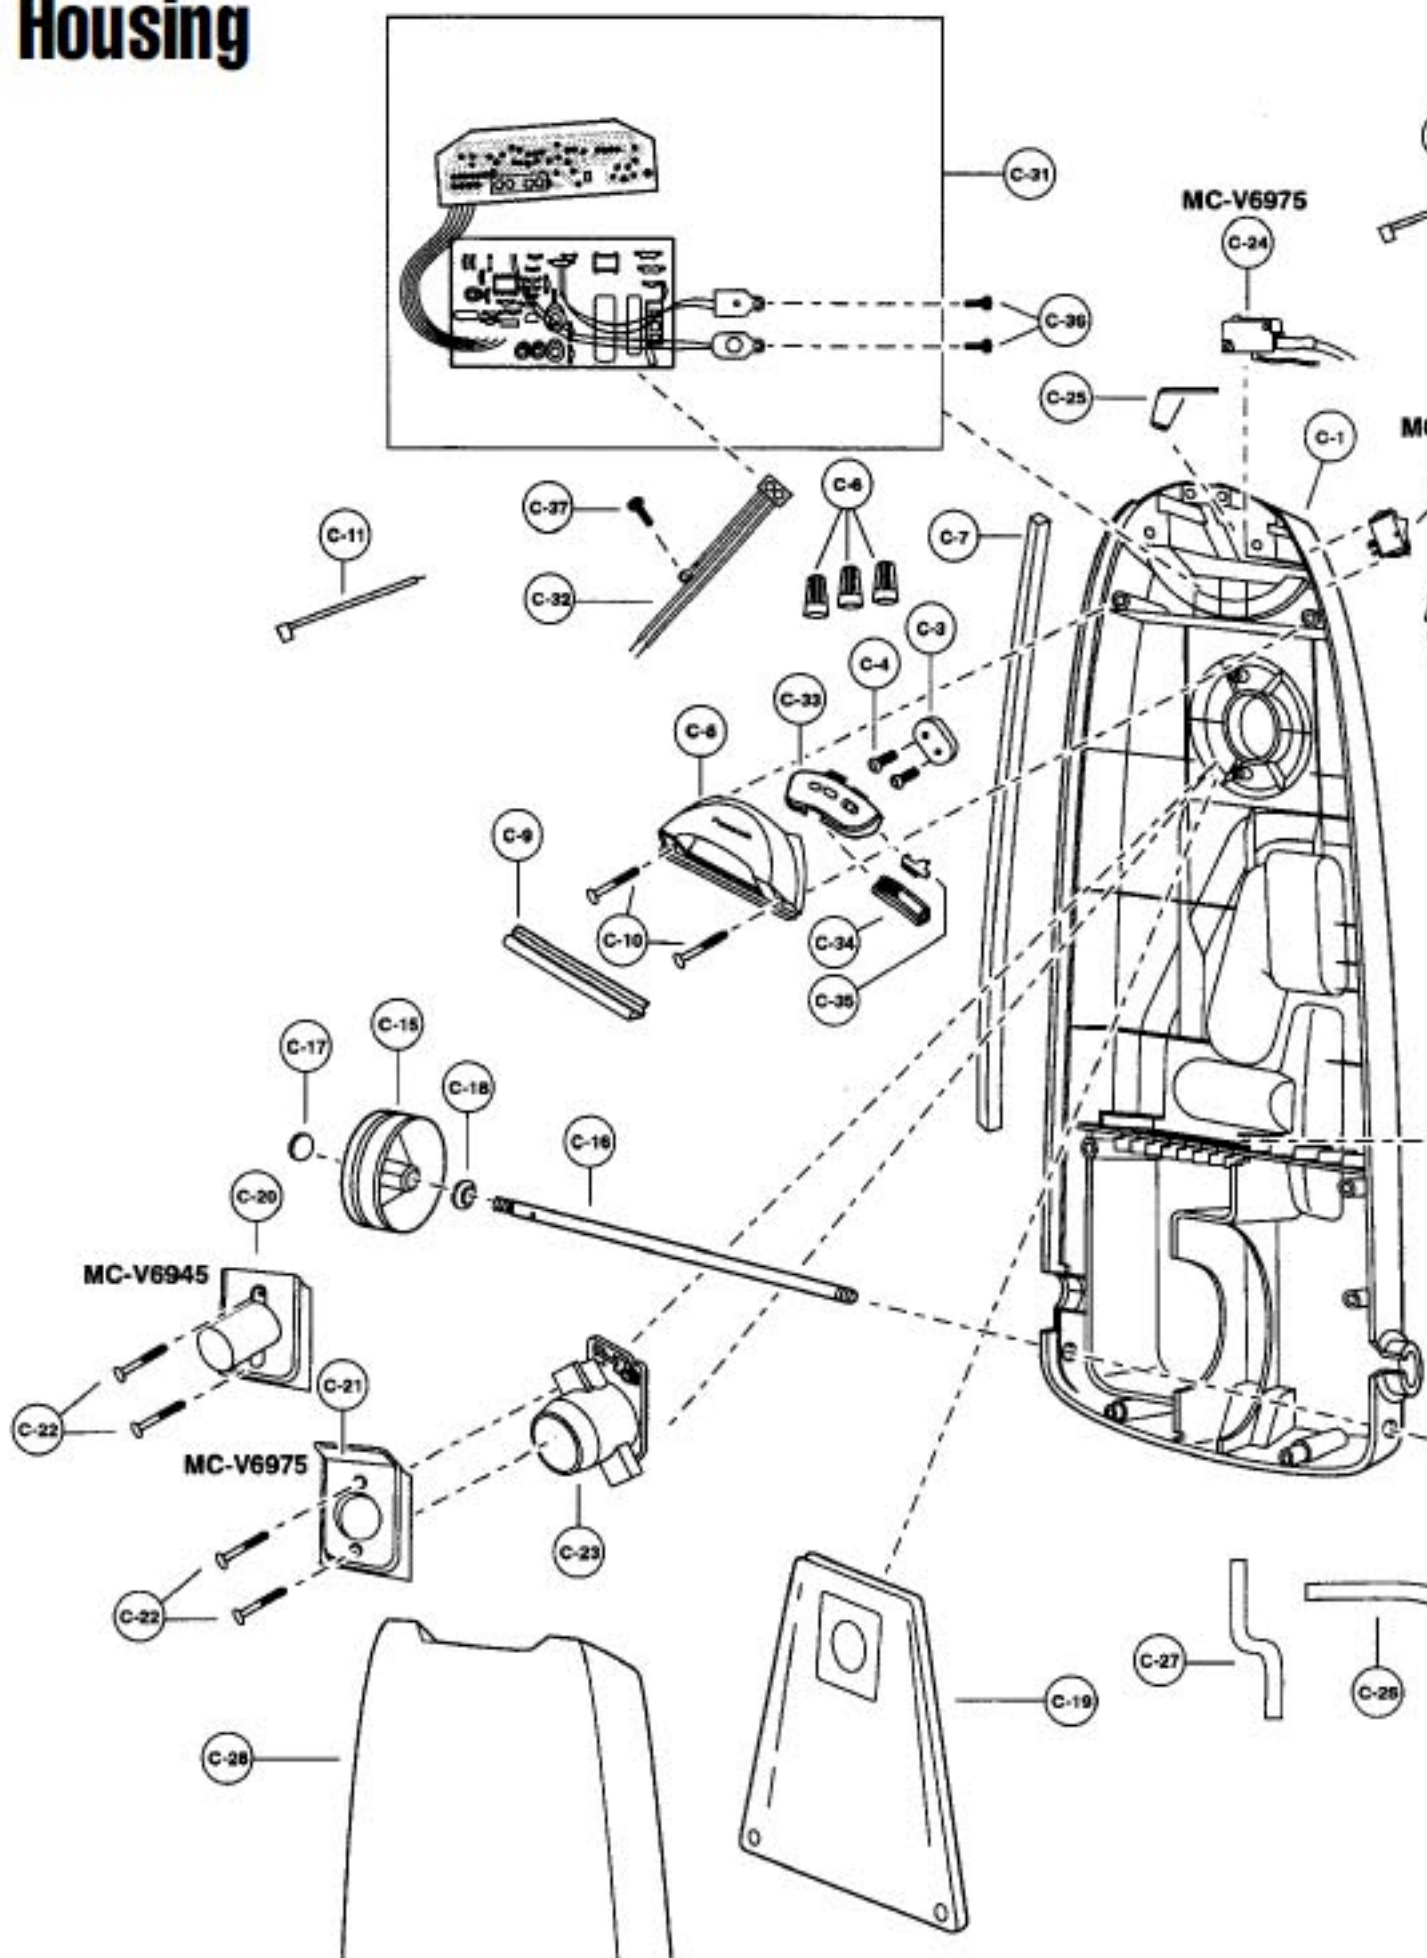


Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V6980, MC-V6985

1	P-00021	Dust Compartment, V6915, V6965	8	P-11019	Switch Cover, V6980	24	P-0012	
1	P-5460	Dust Compartment, V6945, V6950	8	P-11020	Switch Cover, V6985	25	P-0000	
1	P-0695	Dust Compartment, V6970	9	P-00116	Packing, switch cover	25	P-0701	
1	P-0707	Dust Compartment, V6975	9	P-9869	Packing, switch cover, V6980, V6985	26	P-3990	
1	P-11017	Dust Compartment, V6980, V6985	10	P-6140	Screw, switch cover	27	P-4160	
2	P-0696	On/Off Switch, V6915, V6965	11	P-4410	Lead Wire, black, V6945, V6950, V6980, V6985	28	P-0001	
2	P-10602	On/Off Switch, V6945, V6950	11	P-9892	Lead Wire, V6970	28	P-5471	
2	P-0696	On/Off Switch, V6970	12	P-00022	Lead Wire, V6915, V6965, V6975	28	P-5462	
2	P-10602	On/Off Switch, V6980, V6985	13	P-9893	Filter Supporter	28	P-0061	
3	N/A	Cord Stopper	14	P-7023	Secondary Filter, foam	28	P-0703	
3	P-0698	Cord Stopper, V6970, V6980, V6985	14	P-3099	Secondary Filter, electrostatic, V6915, V6965, V6980, V6985	28	P-0001	
4	P-6140	Screw, cord stopper	15	P-0114	Wheel	28	P-7092	
5	P-7906	Power Cord, 30 ft, V6915	16	P-16005	Shaft, wheel	28	P-1102	
5	P-110118	Power Cord, 25 ft, V6945, V6950	17	P-74009	Stopper, wheel, V6915, V6965, V6980, V6985	29	P-3702	
5	P-9816	Power Cord, 35 ft, V6965	17	P-74004	Stopper, wheel, V6945, V6975	30	P-3099	
5	P-7906	Power Cord, 30 ft, V6970, V6975	18	P-6115	Washer	31	P-0001	
5	P-11018	Power Cord, 25 ft, V6980, V6985	19	P-141M	Paper Bag, type U6, micron, 3 pk	31	P-5472	
6	P-000623	Wire Connector	19	P-115P	Paper Bag, type U3, 3 pack	32	P-0000	
7	P-66306	Packing, dust container	19	P-7553	Electrostatic Dust Bag, V6980, V6985	32	P-5473	
7	P-0699	Packing, dust cover, V6970, V6980, V6985	20	P-10358	Bag Supporter, V6915, V6945, V6950, V6980, V6985	33	P-0011	
8	P-00114	Switch Cover, V6915	21	P-7082	Cover, bag supporter	33	P-0704	
8	P-5468	Switch Cover, V6945	22	P-6140	Screw, bag supporter	33	P-0000	
8	P-5461	Switch Cover, V6950	23	P-11012	Bag Supporter Assy, V6965	34	P-0000	
8	P-00115	Switch Cover, V6965	23	P-5470	Bag Supporter Assy, V6970, V6975	35	P-0000	
8	P-0700	Switch Cover, V6970						
8	P-5469	Switch Cover, V6975						


Motor & Motor Case Assembly

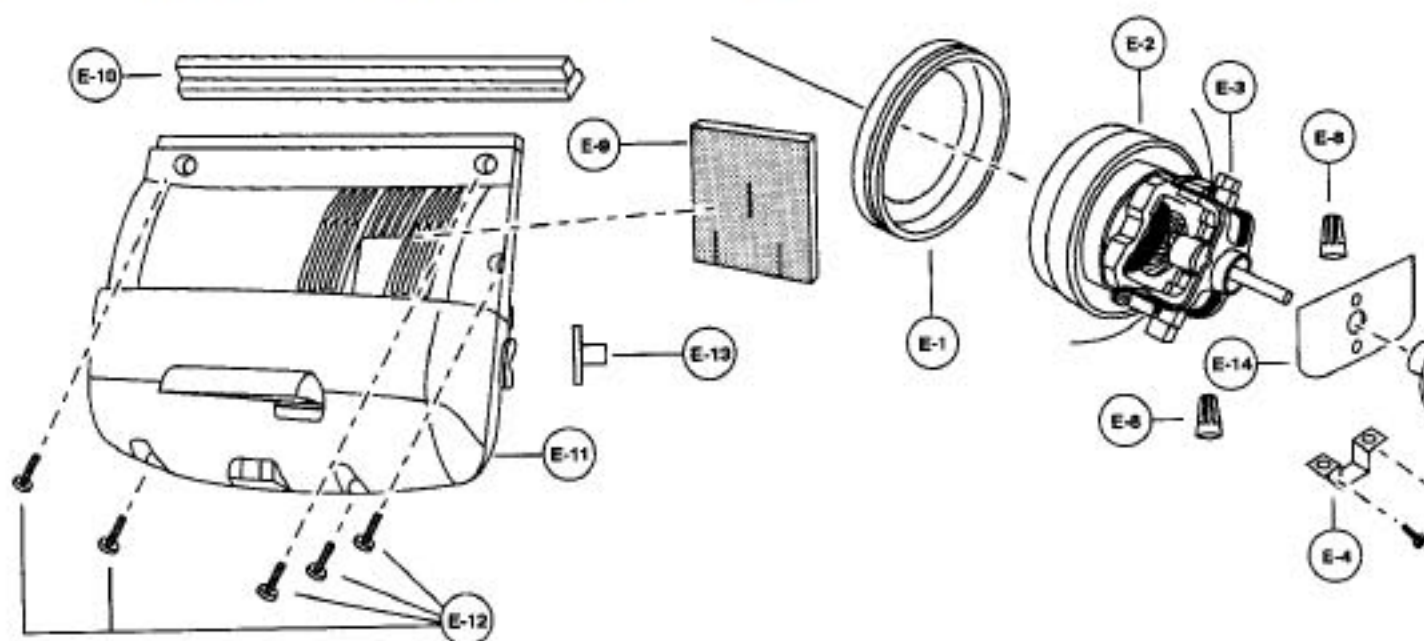

Models:

MC-V6915, MC-V6945, MC-V6950, MC-V6965, MC-V6970, MC-V6975, MC-V

Handle Assembly & Rear Dust Compartment

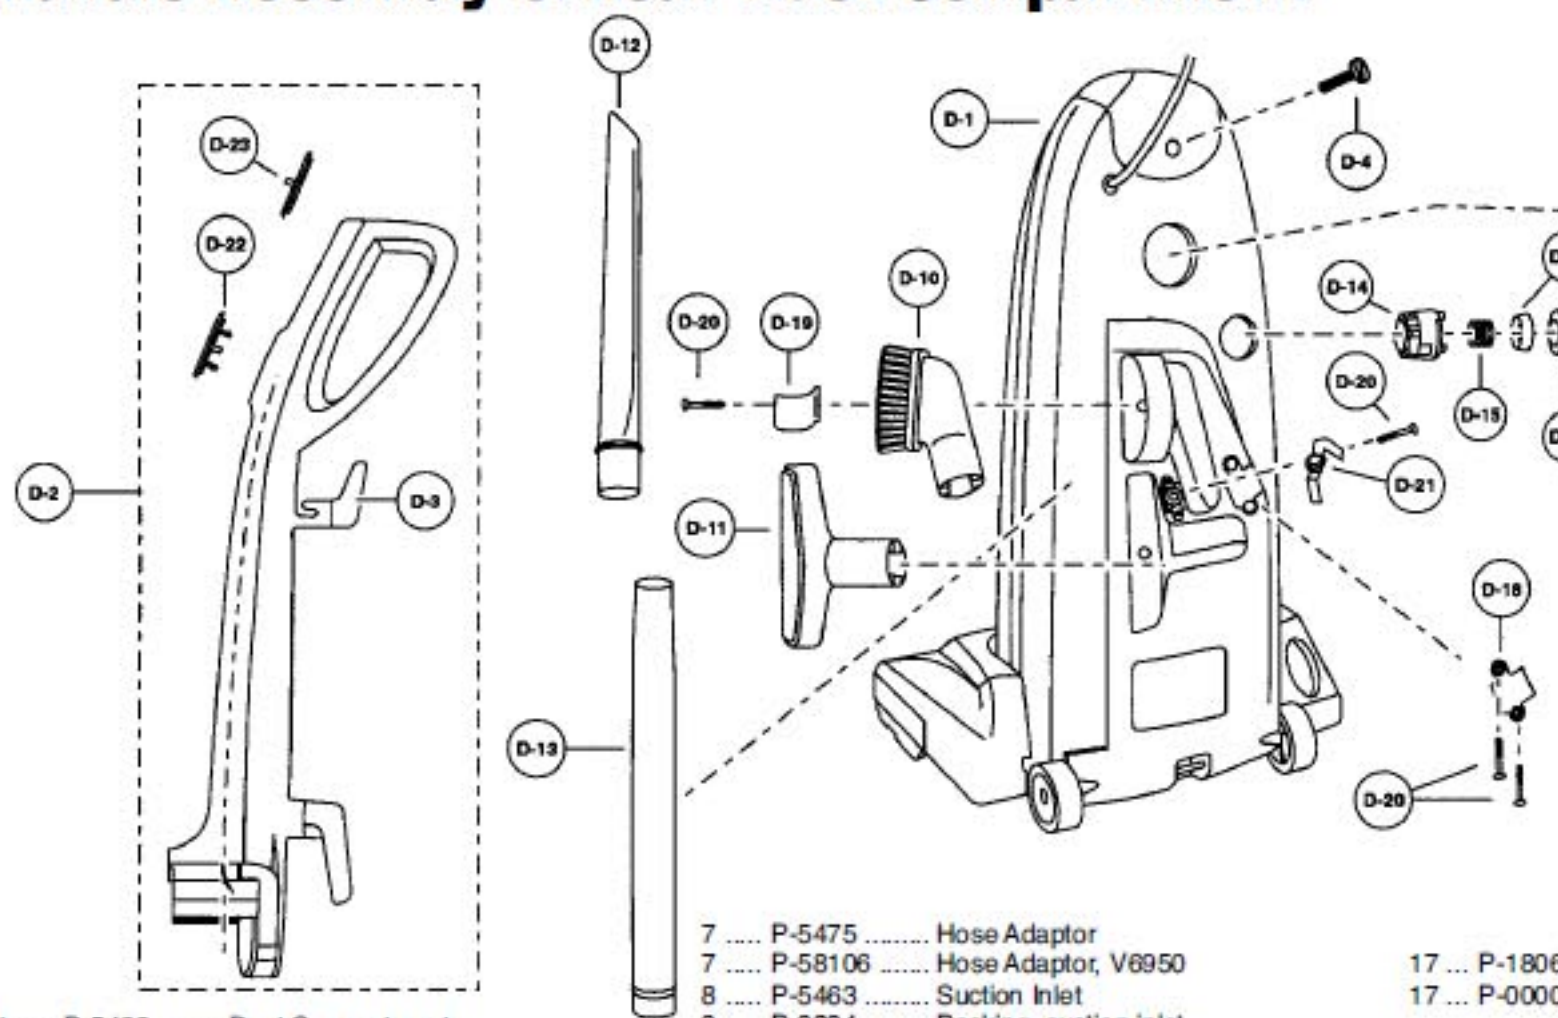

- 1 P-5460 Dust Compartment
- 1 P-000021 Dust Compartment, V6915, V6965
- 1 P-5460 Dust Compartment, V6945, V6975
- 1 P-0707 Dust Compartment, V6970
- 1 P-11022 Dust Compartment, V6980, V6985
- 2 P-000018 Handle Assy
- 2 P-5474 Handle Assy, V6945, V6980, V6985
- 2 P-9507 Handle Assy, V6950
- 2 P-000286 Handle Assy, V6970
- 3 P-7035 Cord Hook, upper
- 4 P-000048 Screw, handle
- 4 P-9907 Screw, handle, V6970, V6980, V6985
- 5 P-8972 Cover, suction inlet
- 5 P-000049 Cover, suction inlet, V6915, V6965
- 5 P-8972 Cover, suction inlet, V6970, V6980, V6985
- 6 P-1061 Hose
- 6 P-0648 Hose, V6915, V6965, V6980, V6985, V6970

- 7 P-5475 Hose Adaptor
- 7 P-58106 Hose Adaptor, V6950
- 8 P-5463 Suction Inlet
- 9 P-9894 Packing, suction inlet
- 9 P-0709 Packing, suction inlet, V6970
- 9 P-9894 Packing, suction inlet, V6980, V6985
- 10 P-00088 Dusting Brush, V6915, V6965
- 10 P-6088 Dusting Brush
- 11 P-6620 Upholstery Tool
- 12 P-6069 Crevice Tool
- 13 P-60104 Wand, extension
- 13 P-000055 Wand, extension, V6915, V6965
- 13 P-9895 Wand, telescoping, V6970
- 13 P-8180 Wand, V6980, V6985
- 14 P-6806 Protector Case
- 14 P-000056 Protector Case, V6915, V6965
- 15 P-7079 Protector Spring
- 15 P-000057 Protector Spring, V6915, V6965
- 15 P-7089 Protector Spring, V6970, V6980, V6985
- 16 P-6096 Protector
- 16 P-692 Protector, V6915, V6965

- 17 ... P-1806
- 17 ... P-0000
- 18 ... P-5464
- 19 ... P-5465
- 19 ... P-0000
- 19 ... P-9896
- 20 ... P-6140
- 21 ... P-9897
- 22 ... P-7507
- 23 ... P-6907
- P-9873
- P-9811

Agitator Assembly

