 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC 7210 Owner's Manual

[Shop genuine replacement parts for PANASONIC 7210](#)

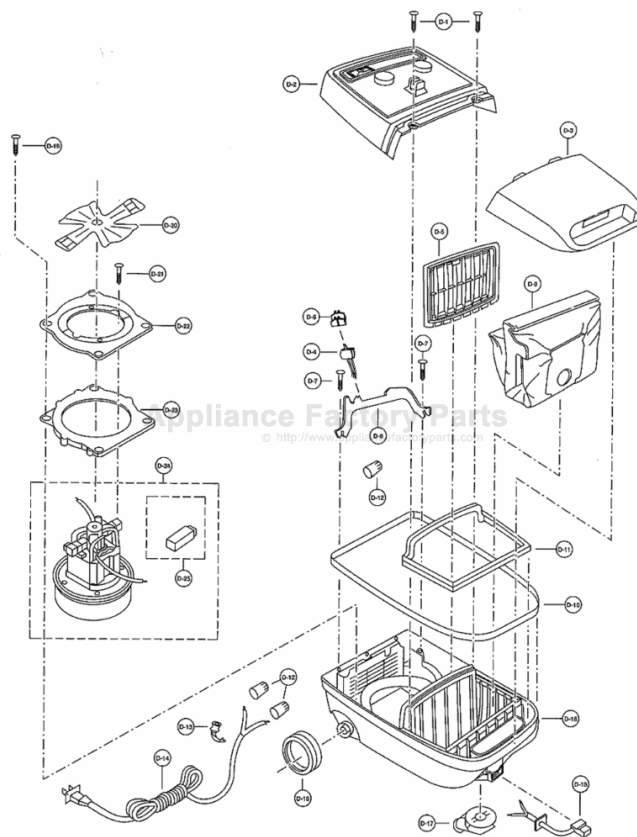 


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

Models: MC-7210, MC-7220

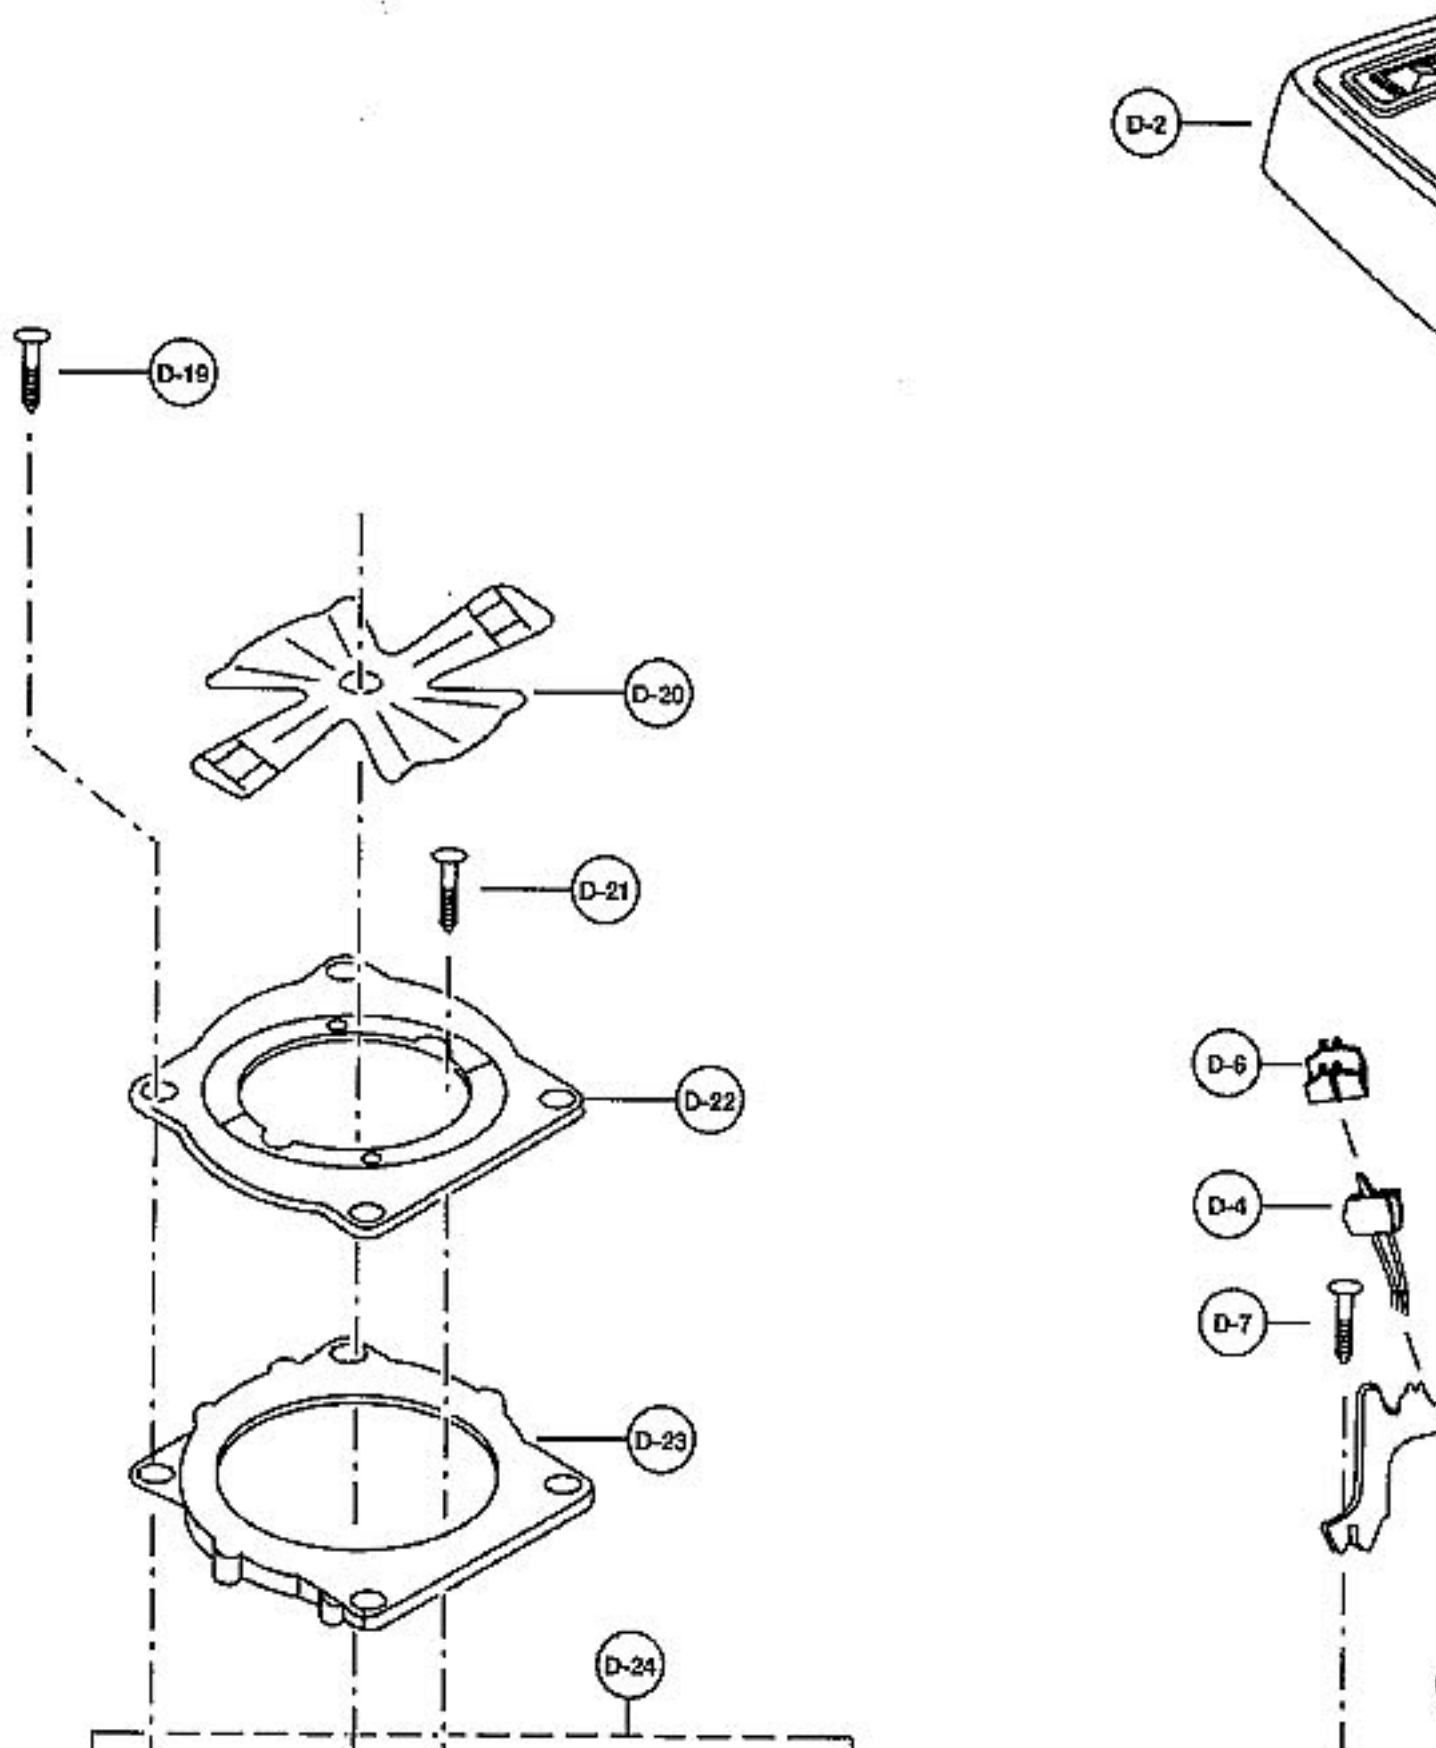

PANASONIC

Models: MC-7210, MC-7220

1	P-000387	Screw, upper body	11	...	P-000390	Hood Seal
2	P-000381	Cover	12	...	P-000355	Connector V
3	P-000382	Dust Cover, 7210	13	...	P-000391	Strain Relie
3	P-000383	Dust Cover, 7220	14	...	P-000392	Power Cord
4	P-000384	Toggle Switch	15	...	P-000393	Rear Wheel
5	P-000385	Motor Filter	16	...	P-000394	Lower Body
6	P-000386	Button, rocker switch					Compartm
7	P-000387	Screw, mount switch	16	...	P-000395	Lower Body
8	P-	Mount Switch					Compartm
9	P-150PF	Paper Bag, type C4, 5 pack	17	...	P-000396	Wheel Cast
10	...	P-000389	Bumper, extended					

Hose and Attachments

P-000363	Hose Assembly, 7210
P-000364	Hose Assembly, 7220
P-000365	Handle Assy, 7210
P-000366	Handle Assy, 7220
P-000367	Spring, wand lock, 7220
P-000368	Terminal Hose, (machine end coupling)
P-000369	Hose Only, plastic
P-000370	Lower Wand Assembly, plastic, 7210
P-000371	Lower Wand Assembly, metal, 7220
P-000372	Spring, wand lock, 7220
P-000373	Dusting Brush, round
P-000374	Upholstery Nozzle
P-000375	Crevice Tool
P-000376	Rug Nozzle, 7210

PANASONIC

Models: MC-7220

Power Nozzle

