


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



PANASONIC 9440 Owner's Manual

[Shop genuine replacement parts for PANASONIC 9440](#)

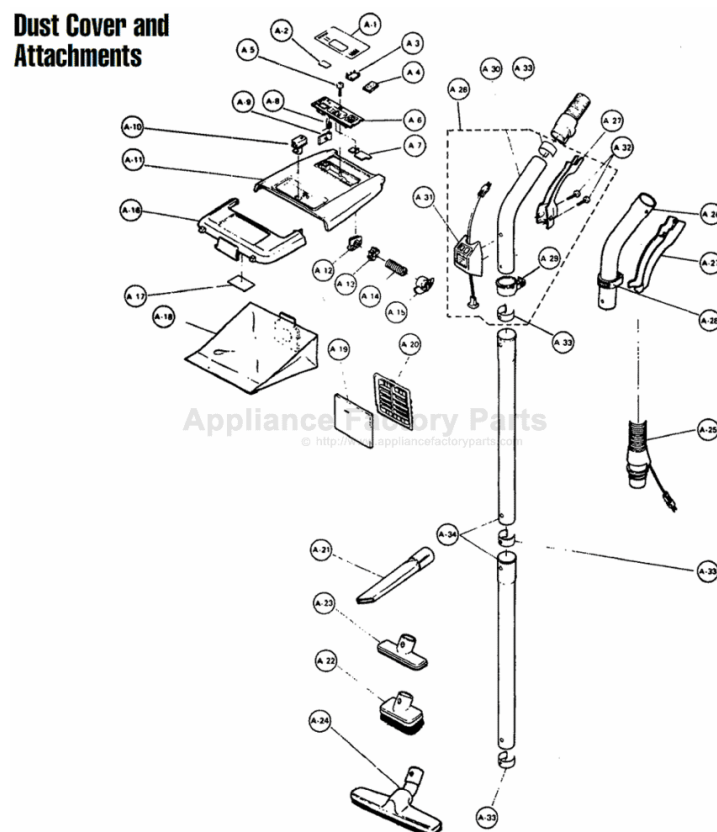


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

Models: MC-9410, MC-9420, MC-9430, MC-9440

Dust Cover and Attachments

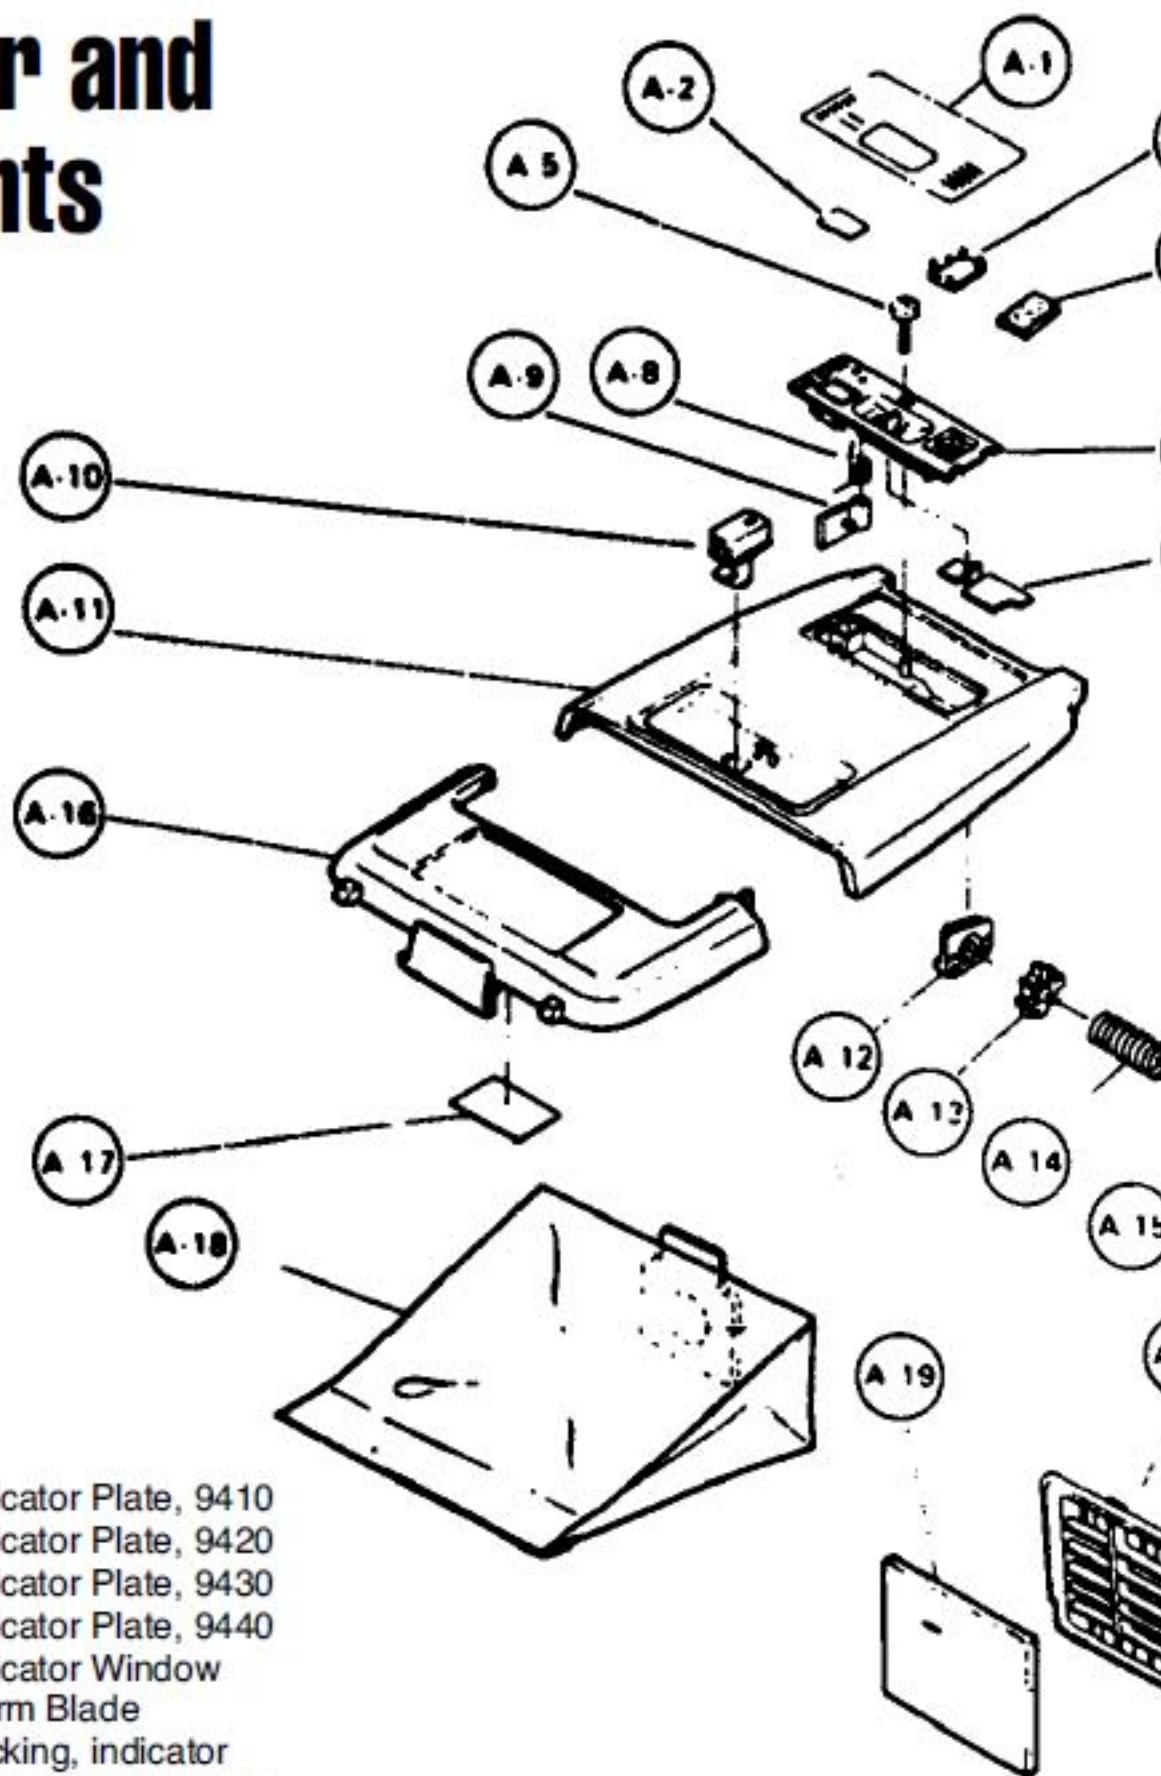

- A1 P-12429 Indicator Plate, 9410
- A1 P-12430 Indicator Plate, 9420
- A1 P-12431 Indicator Plate, 9430
- A1 P-12432 Indicator Plate, 9440
- A2 P-12433 Indicator Window
- A3 P-4340 Alarm Blade
- A4 P-12434 Packing, indicator
- A5 P-13143 Screw, indicator box
- A6 P-12436 Indicator Box
- A7 P-12437 Indicator Stopper
- A8 P-12438 Spring, indicator


PANASONIC

Models: MC-9410, MC-9420, MC-9430, MC-9440

Body Unit

B1	P-12456	Furniture Guard
B2	P-12457	Ornamental Plate, 9410
B2	P-12458	Ornamental Plate, 9420
B2	P-12459	Ornamental Plate, 9430
B2	P-12460	Ornamental Plate, 9440
B3	P-12461	Window, power indicator
B4	P-12462	Power Indicator P.C.B.
B5	N/A	Button, on/off
B6	P-082	Spring, switch
B7	P-152	Activating Spring, switch
B8	P-12464	Button, cord rewind
B9	P-872	Spring, cord rewind button
B11	N/A	Screw, upper body
B12	P-416	Screw, power indicator, 10 pk
B13	P-9822	Switch, on/off
B14	P-3874	Screw


B15	P-9320	Indicator, switch
B17	P-12467	Main P.C.B.
B18	P-416	Screw, main P.C.B., 10 pk
B19	P-282	Blower Cover
B20	P-12468	Spring, blower cover
B21	P-12469	Shaft, blower cover
B22	P-632	Power Head Outlet, 9410, 9420,9430

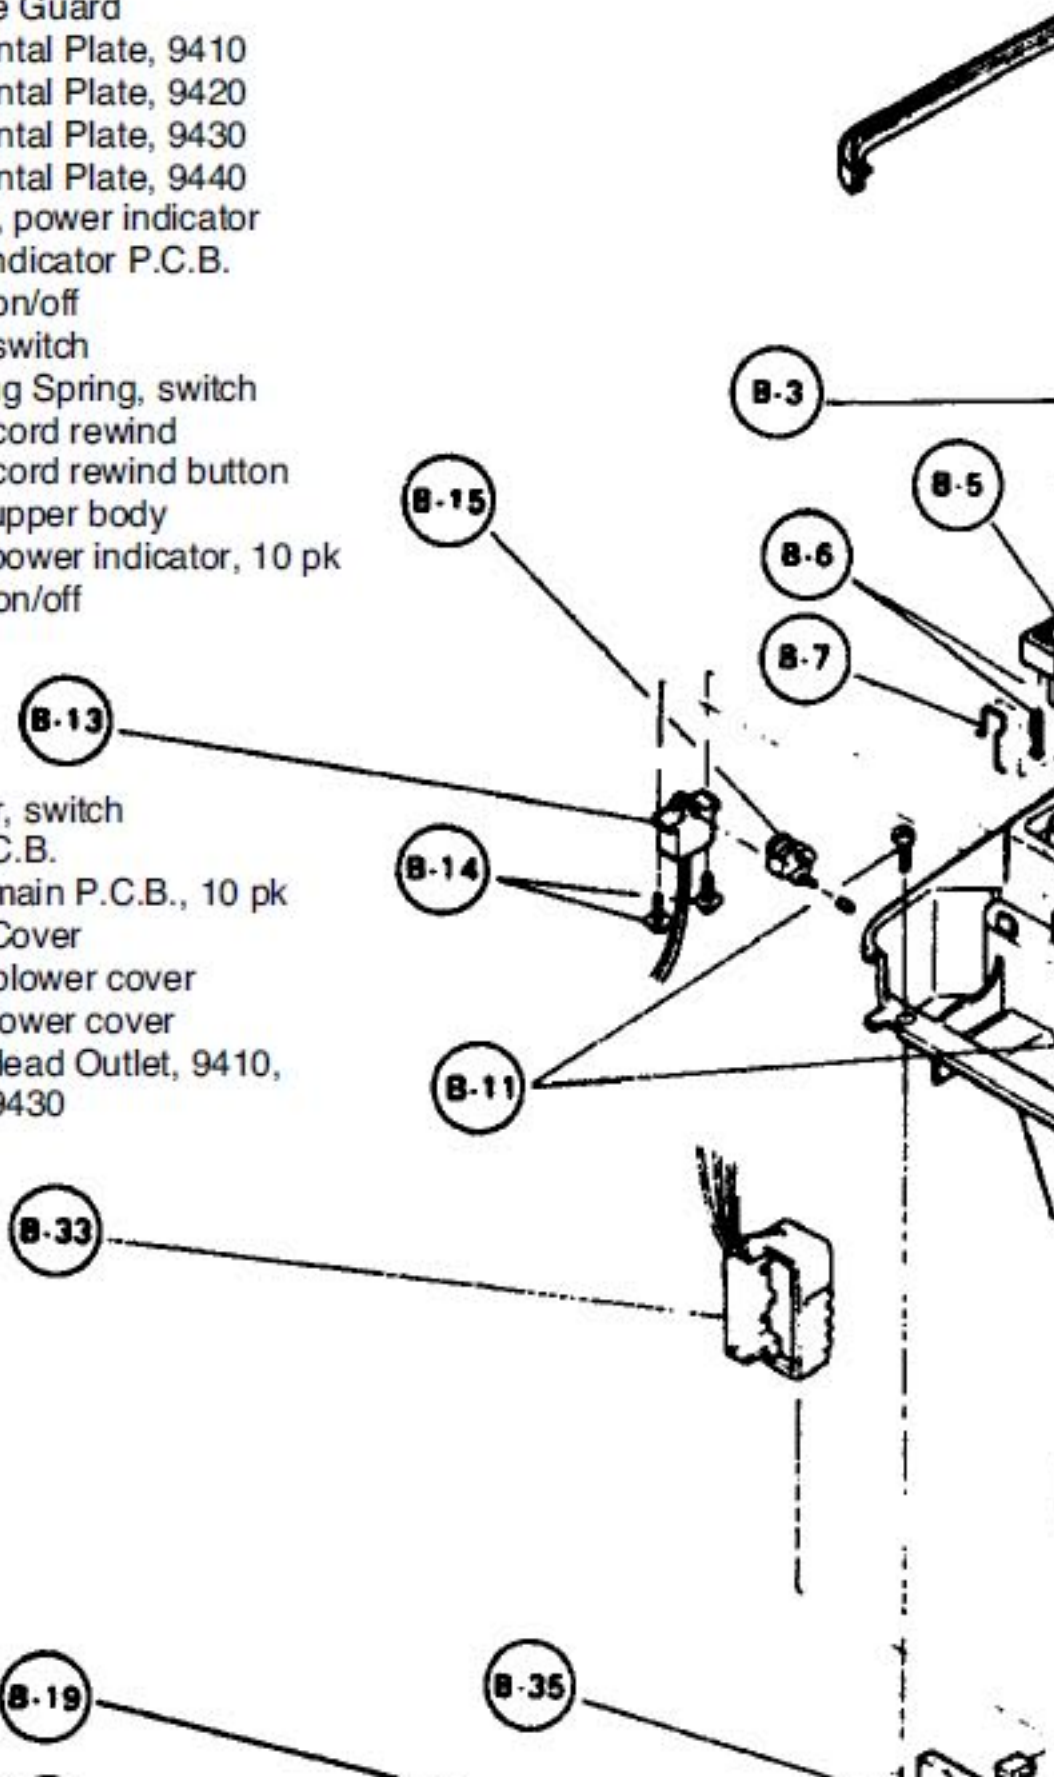

PANASONIC

Models: MC-9410, MC-9420, MC-9430, MC-9440

Cord Reel Unit

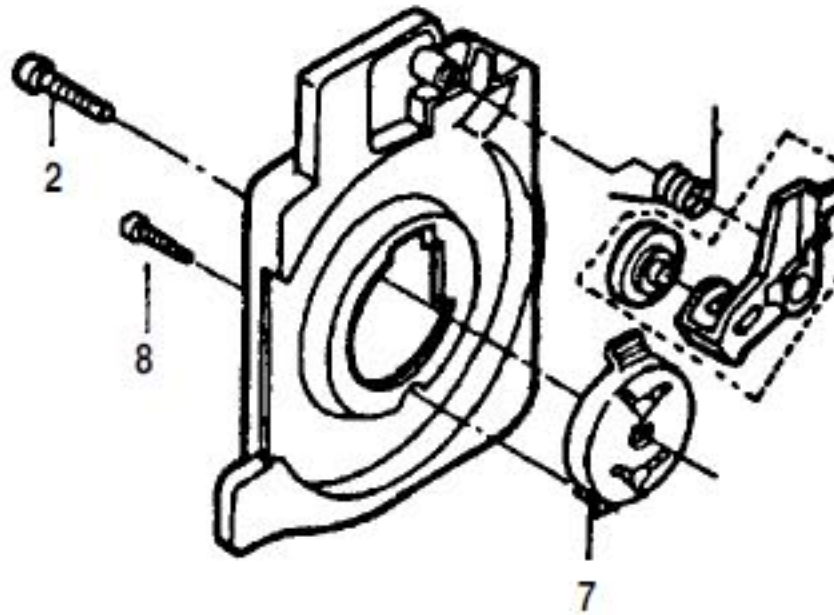

- C1 N/A Cord Reel Assembly
- C2 P-416 Screw, cord reel shaft, 10 pk
- C3 P-12399 Rail Base Unit / Power Cord
- C7 P-12398 Contact Base
- C8 P-416 Screw, contact base, 10 pack

Motor Assembly




PANASONIC

Models: MC-9410, MC-9420, MC-9430, MC-9440

Power Nozzle

E1	P-12499	Front Mark, 9410
E1	N/A	Front Mark, 9420
E1	P-12501	Front Mark, 9430
E1	P-12502	Front Mark, 9440
E2	P-12503	Supporter, window
E3	P-12504	Window
E4	P-221	Reflector, window
E5	MP-25K	Bulb, 25 watt (R)
E6	N/A	Lamp Holder
E7	P-12505	Packing, window
E8	P-12506	Partition Board
E9	P-12507	Screw, partition board
E10	P-12508	Body, 9410,9420
E10	P-12509	Body, 9430,9440
E11	P-12510	Furniture Guard
E12	P-394	Power Cord, 9410,9420,9430
E12	P-12512	Power Cord, 9440
E13	SS-34	Bushing, sold each (R)
E14	P-12514	Pedal
E15	N/A	Switch Pedal
E16	P-082	Spring, switch pedal
E17	N/A	Switch, on/off
E18	P-9320	Indicator, switch
E19	P-04	Push Nut
E20	P-152	Activating Spring, switch
E21	P-12414	Filter
E22	N/A	Switch Cover
E23	P-416	Screw, 10 pack
E25	P-12520	Window, indicator
E26	P-813	Tight Packing
E27	P-3401	Connection Hose
E28	P-780	Pipe Connection
E29	P-12428	Screw, bottom cover
E30	P-520	Holding Spring, pipe
E31	N/A	Screw, pipe holding spring
E32	P-160	Shaft, roller
E33	P-08	Stopper, roller shaft
E34	P-430	Screw, roller shaft stopper
E35	P-1001	Roller
E36	P-12415	Motor Assembly
E37	P-03	Motor Support, rubber, rear
E38	P-12525	Motor Support, rubber, upper

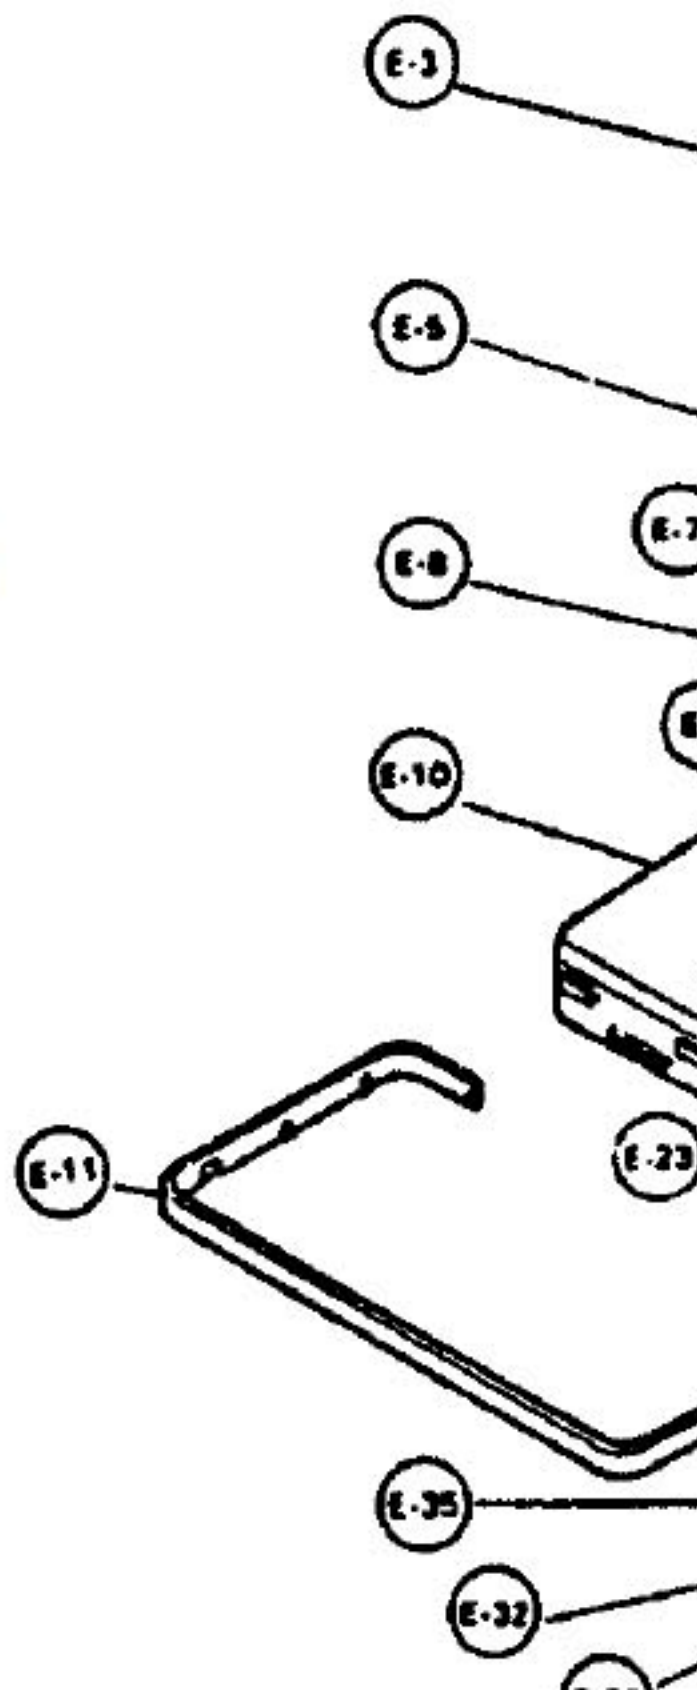

PANASONIC

Models: MC-9410, MC-9420, MC-9430, MC-9440

Agitator Assembly

