

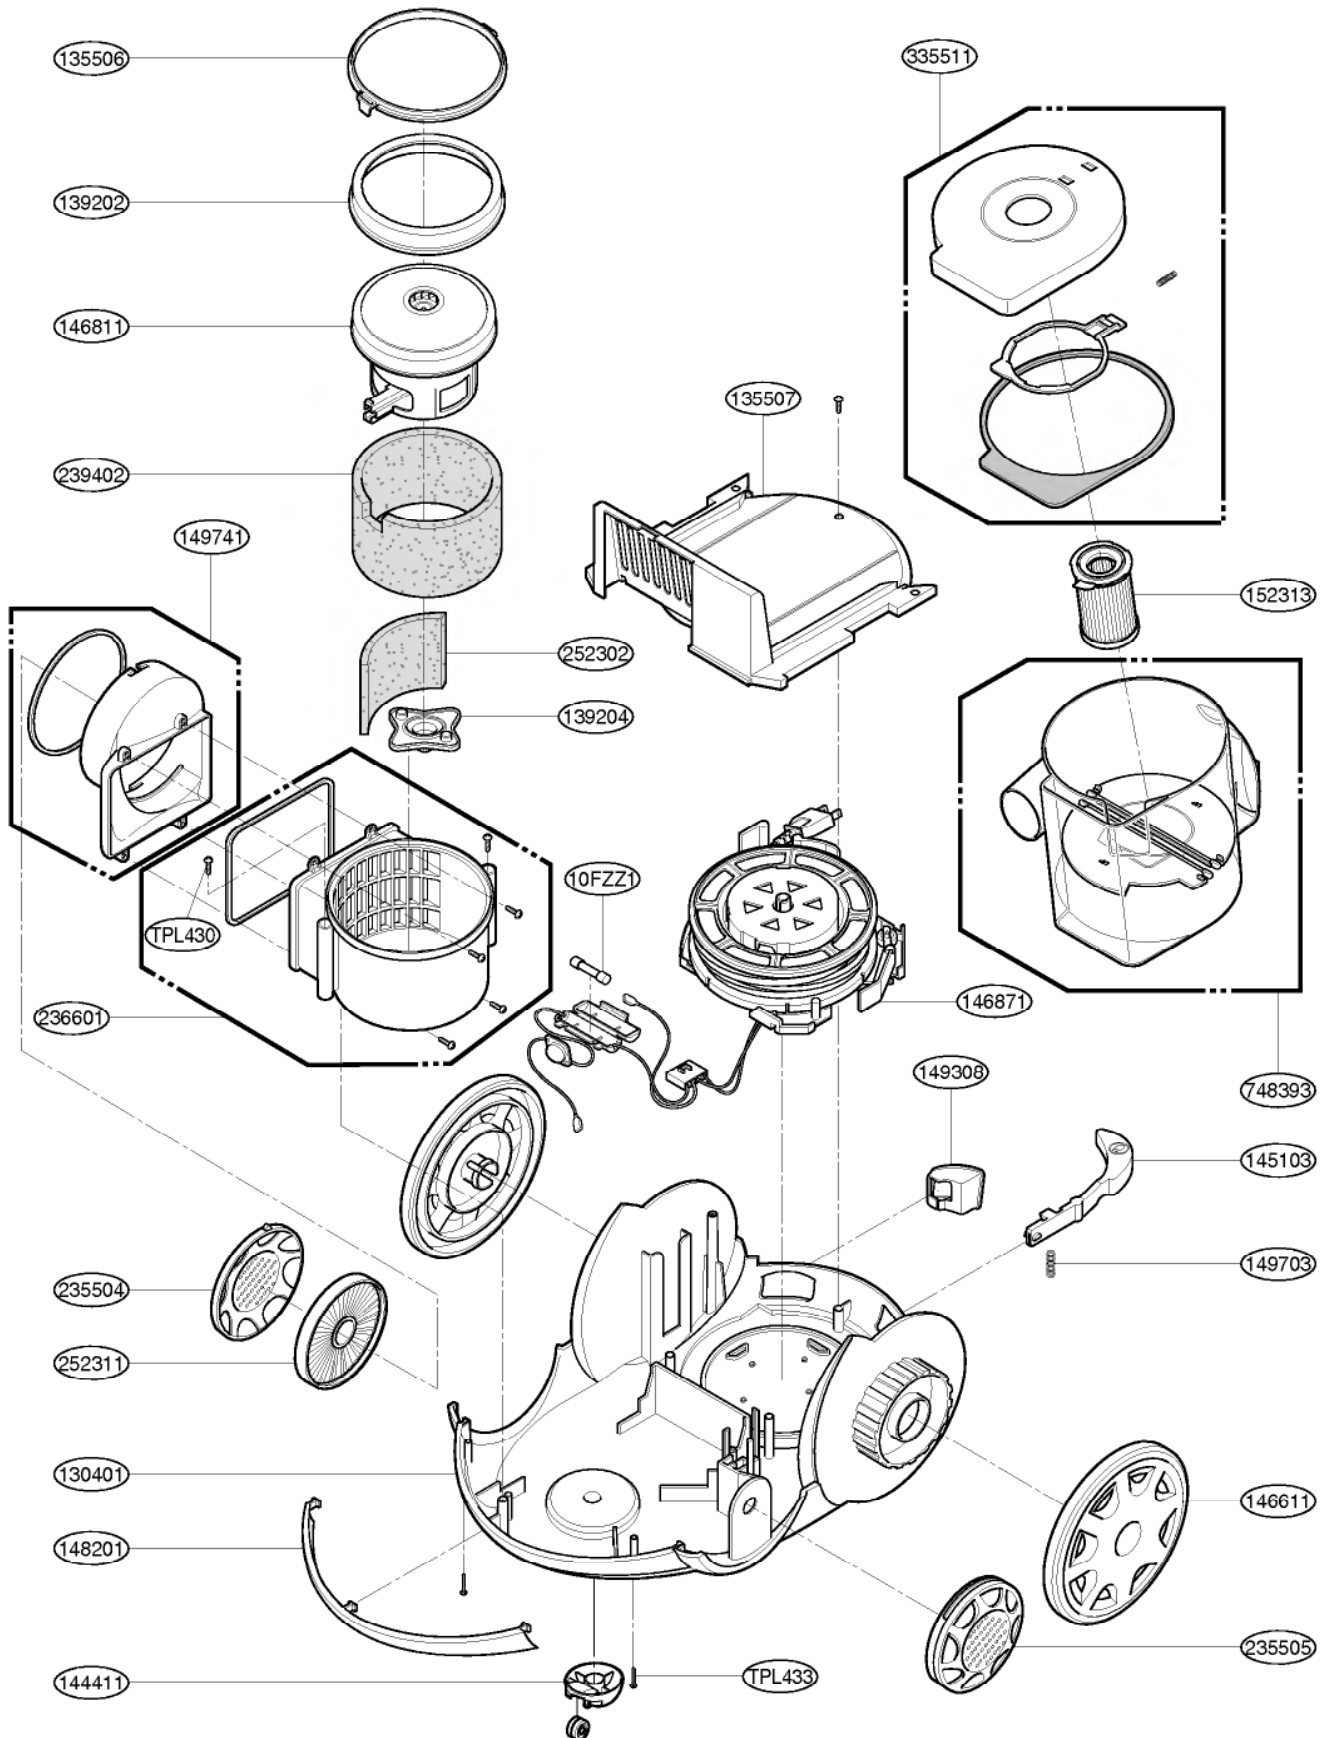
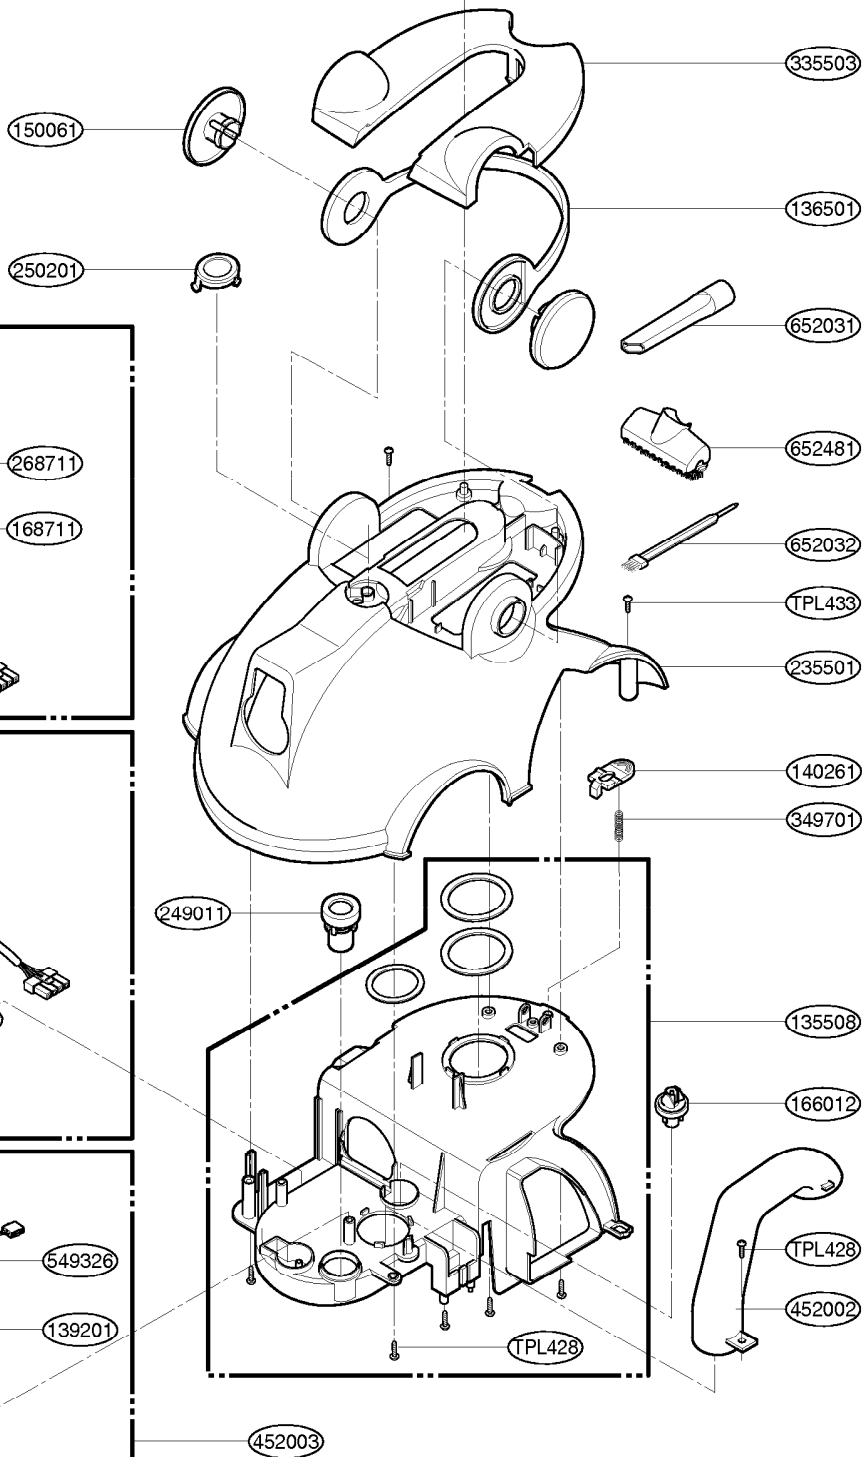
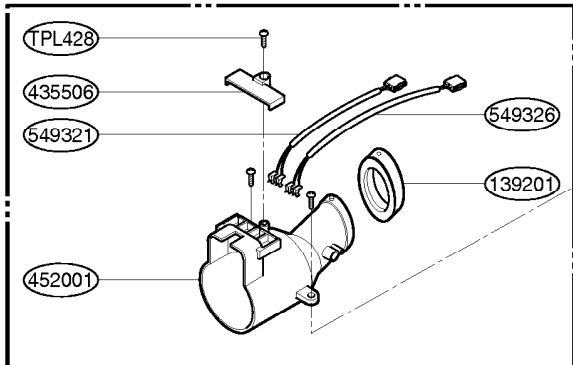
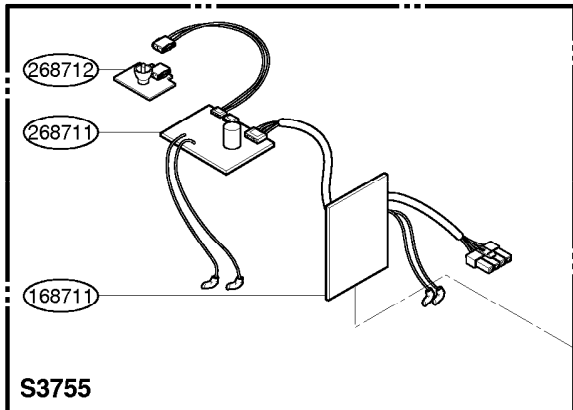
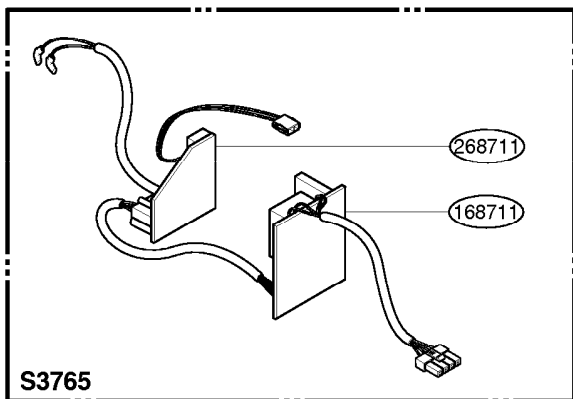


# EXPLODED VIEW

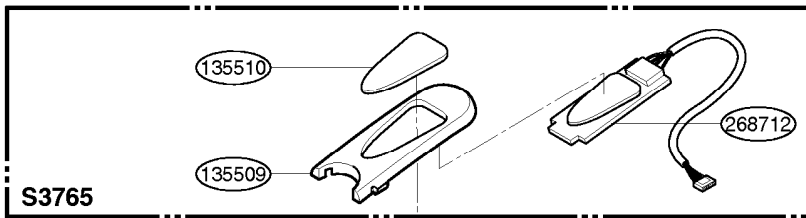



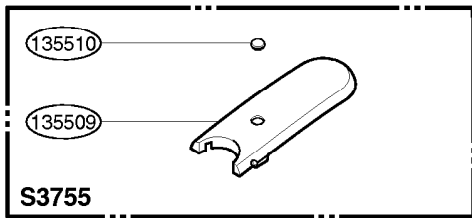


# REPLACEMENT PARTS LIST


LOCATION NO.	PART NO.	DESCRIPTION	APPLICATION	REMARK
130401	3040FI1487E	BASE, BODY		
135506	3550FI3800A	COVER, MOTOR HOUSING		
135507	3550FI1588E	COVER, CORD REEL		
135508	3550FI1689A	COVER, BODY SUB		S3755
	3550FI1689B			S3765
135509	3500FI2240B	BOARD, DISPLAY		S3755
	3500FI2243M			S3765
135510	3550FI3805A	COVER, SENSOR		S3755
	3550FI2513A			S3765
136501	3651FI1309C	HANDLE, CARRIER		
139202	3920FI3770A	PACKING, MOTOR MOUNTING		
139204	3920FI3769A	PACKING, SEAL		
140261	4026FI3669E	LATCH, COVER		
144411	4441FI3608D	CASTER, ASS'Y		
145103	4510FI3598T	LEVER, CORD WINDING		S3755
	4510FI3598P			S3765
146611	4661FI3614A	WHEEL, ASS'Y		S3755
	4661FI3614B			S3765
146811	4681FI2451G	MOTOR ASS'Y, VC		
146871	4687FI1468D	CORD REEL ASS'Y		
148201	4820FI2391E	BUMPER, BODY		
149308	4930FI2448E	HOLDER, PLUG		
149741	4974FI2400A	GUIDE, EXHAUST		
150061	5006FI3691B	CAP, HANDLE		S3755
	5006FI3691C			S3765
152313	5231FI3768A	FILTER ASS'Y, CLEAN		
166012	6601FI3488B	SWITCH ASS'Y, PRESSURE		
168711	6871FX2169A	PWB(PCB) ASS'Y, MAIN		S3755
	6871FX2146D			S3765
268711	6871FX2149C	PWB(PCB) ASS'Y, SUB		S3755
	6871FX2147B			S3765
235501	3550FI1560B	COVER, BODY		S3755
	3550FI1560P			S3765
235504	3550FI2504B	COVER, EXHAUST FILTER-R		S3755
	3550FI2504C			S3765

LOCATION NO.	PART NO.	DESCRIPTION	APPLICATION	REMARK
235505	3550FI2503B	COVER, EXHAUST FILTER-L		S3755
	3550FI2503C			S3765
236601	3660FI2286A	HOUSING(MECH), MOTOR		
239402	3940FI3646A	SPONGE, ABSORBING		
249011	4901FI3435C	DAMPER, ASS'Y		
250201	3550FI3846A	CAP, CIRCULAR HOLE		S3755
	3550FI3846B			S3765
252311	5231FI3767C	FILTER ASS'Y, EXHAUST		
268712	6871FX3078A	PWB(PCB) ASS'Y, DISPLAY		S3755
	6871XF3080A			S3765
335503	3550FI1559J	COVER ACCESSARY		
349701	4970FI4260D	SPRING, LATCH		
452002	5200FI2480A	PIPE, CONNECTOR		
452003	5200FI1227B	PIPE, CONNECTOR-H		S3755
	5200FI1227A			S3765
652481	5203FI2071A	DUSTIING BRUSH ASSEMBLY		
652032	5203FI3744B	BRUSH ASS'Y, FILTER-CLEANER		
652031	5058FI3462A	CREVICE, TOOL		
252302	5231FI3758E	PRE-EXHAVSTER, FILTER		
748393	4839FI2423A	DUST TANK ASS'Y		
335511	5006FI2006A	LID DUST ASS'Y		
149703	4970FI4694F	SPRING, LEVER CORD WINDING		
10FZZ1	4I60037W	FUSE		
452001	5200FI1215P	PIPE, CONNECTOR-SUB		
139201	4036FI3603A	SEAL, PACKING-H		
435506	3550FI3802B	COVER, TERMINAL		
549326	6801FI3464L	TERMINA ASSY, PLATE-L		S3765
	6801FI3464D			S3755
549321	6801FI3464K	TERMINA ASSY, PLATE-S		S3765
	6801FI3464M			S3755
TPL428	1TPL0402818	SCREW		
TPL430	1TPL0403018	SCREW		
TPL433	1TPL0403318	SCREW		

# HOSE ASS'Y FLEXIBLE & PIPE ASS'Y TELESCOPIC

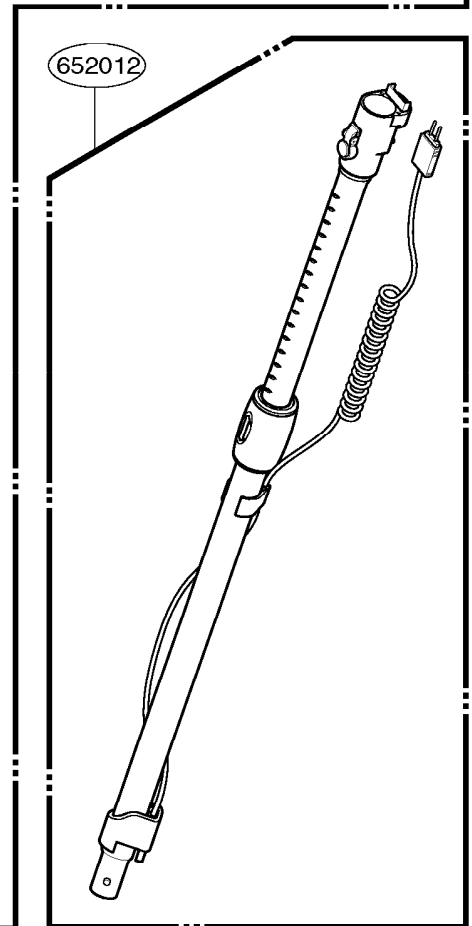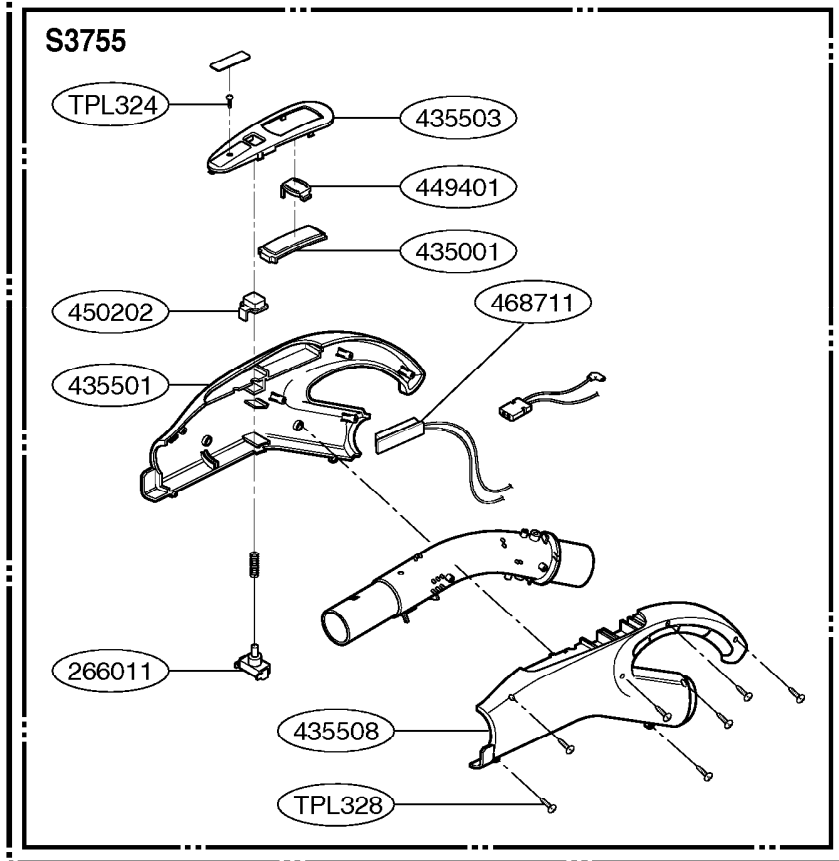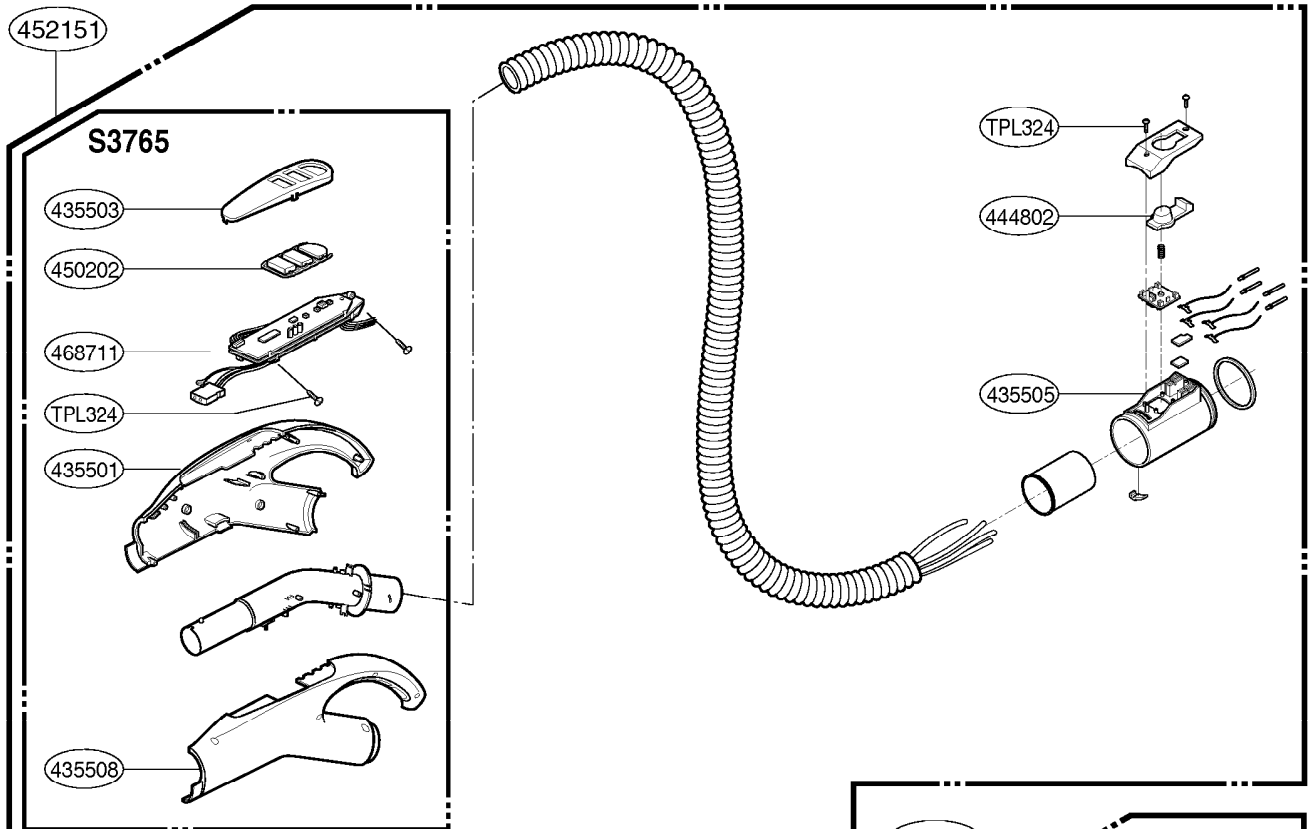

# QUICK DISSCONNECTOR ASS'Y

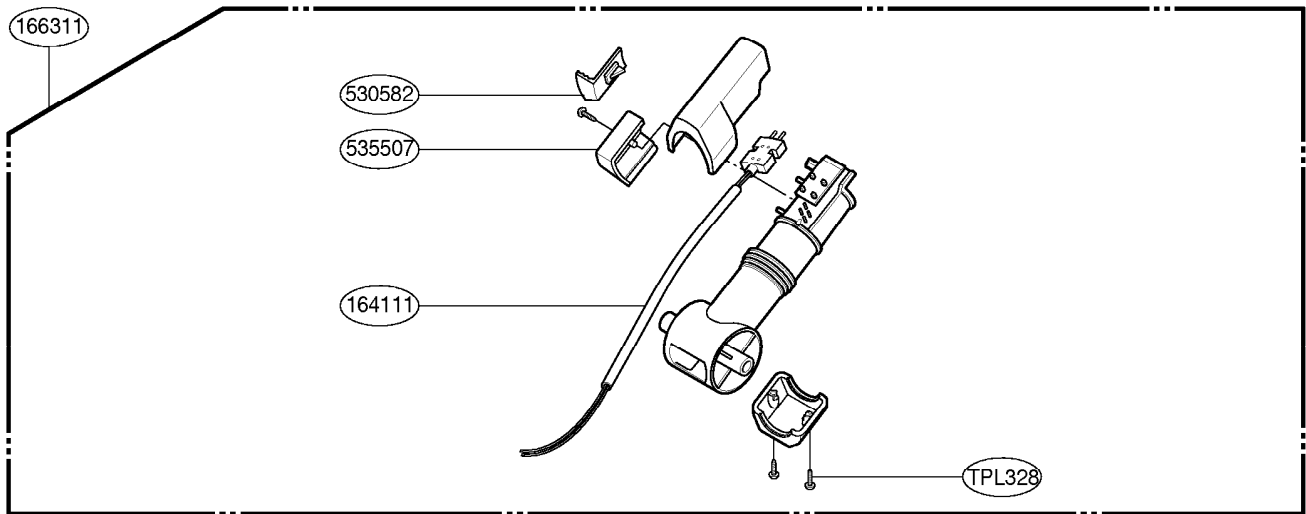

## REPLACEMENT PARTS LIST

LOCATION NO.	DESCRIPTION	PART NO.	APPLICATION	REMARK
<b>HOSE ASS'Y</b>				
435001	BOARD, SWITCH	3500FI3619B		S3755
266011	SWITCH ON/OFF P/NOZZLE	6601FI3472A		
435503	COVER CONTROL	3550FI2496B		S3755
		3550FI2516E		S3765
435508	COVER, GRIP HANDLE-L	3650FI1483B		S3755
		3550FI1496B		S3765
435501	COVER, GRIP HANDLE-R	3650FI1484B		S3755
		3550FI1495B		S3765
444802	FITTING HOOK	4480FI3735F		
450202	BUTTON, POWER SWITCH	5020FI3765B		S3755
		5020FI2325B		S3765
435505	PIPE FITTING	5200FI2486C		
452151	HOSE ASS'Y FLEXIBLE	5215FI1308D		S3765
		5215FI1316B		S3755
449401	SWITCH, ROARD SLIDE CONTROL	4940FI3727A		
468711	HOSE P.C.B ASS'Y	6601FI3486M		S3755
		6871FX3081B		S3765
652012	PIPE ASS'Y TELESCOPIC	5201FI1001B		
TPL324	SCREW	1TPL0302416		
TPL328	SCREW	1TPL0302818		
<b>QUICK DISSCONNECTOR ASS'Y</b>				
166311	QUICK, DISCONNECTOR ASS'Y	5200FI1223A		
164111	PIGTAIL, CONNECTOR	6411FI2434F		
535507	COVER, DISCONNECTOR	3550FI3766B		
530582	PEDAL, DISCONNECTOR	3058FI3004B		
TPL328	SCREW	1TPL0302818		

