 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




LG V-3900T Owner's Manual


[Shop genuine replacement parts for LG V-3900T](#)


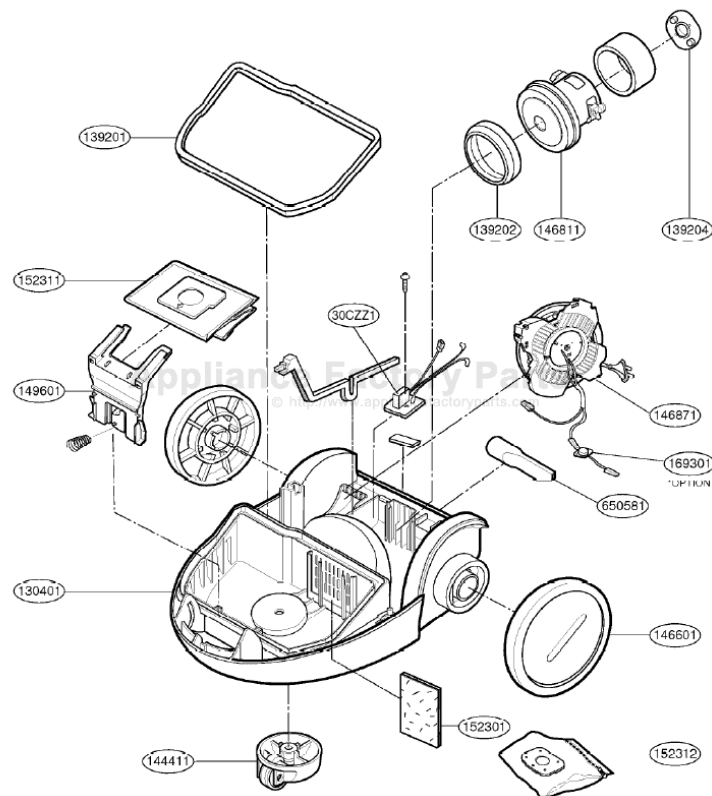


[Find Your LG Vacuum Cleaner Parts - Select From 37 Models](#)

    ----- Manual continues below -----

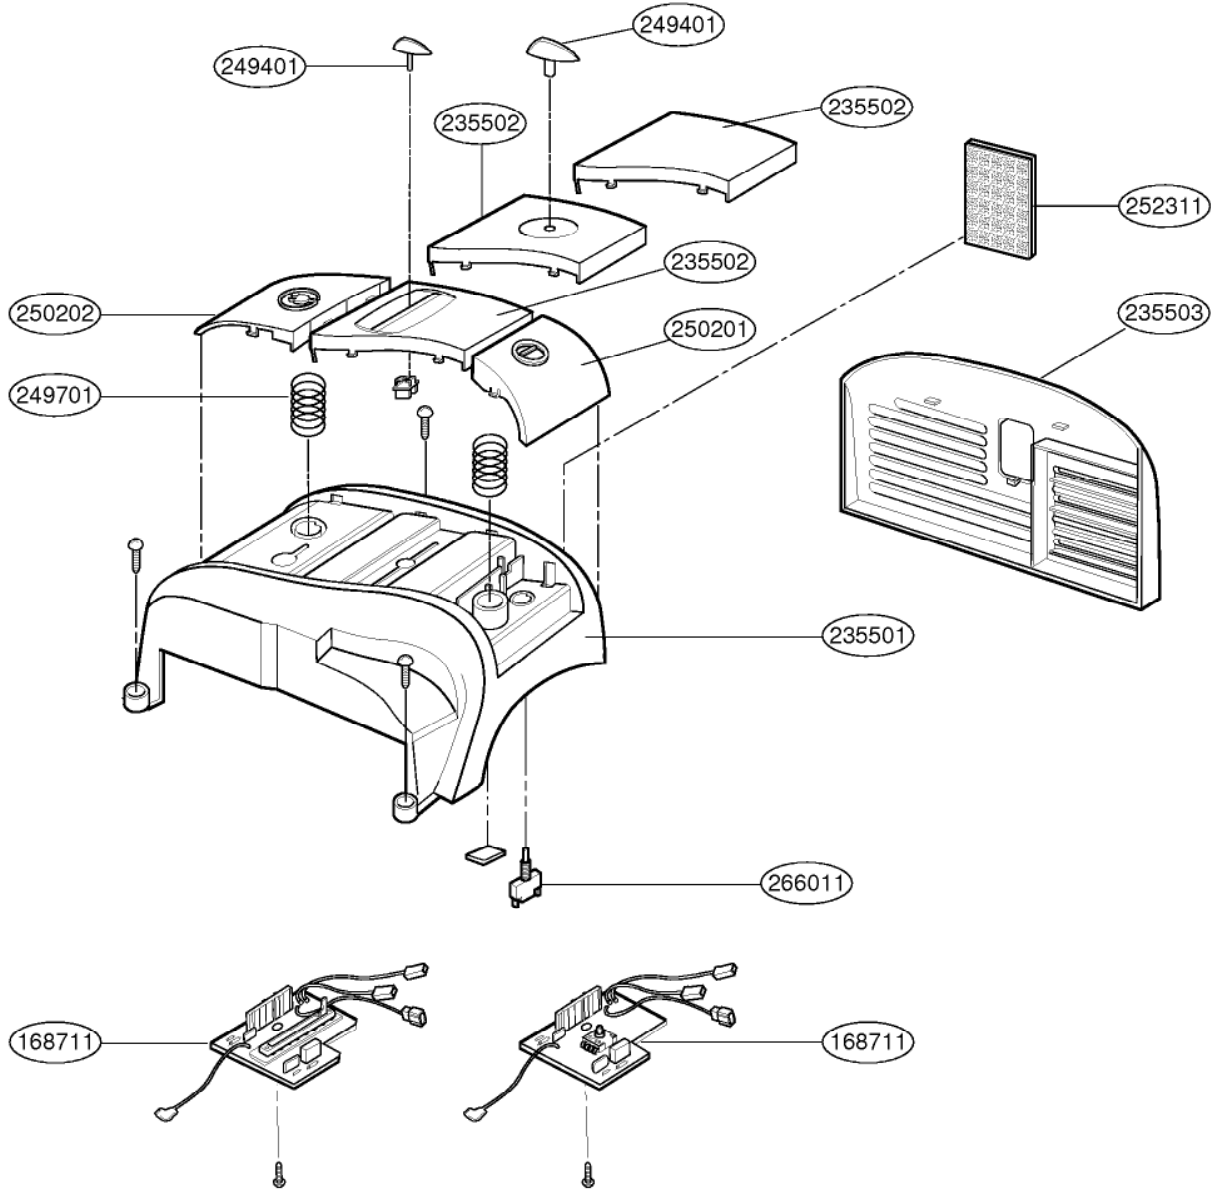

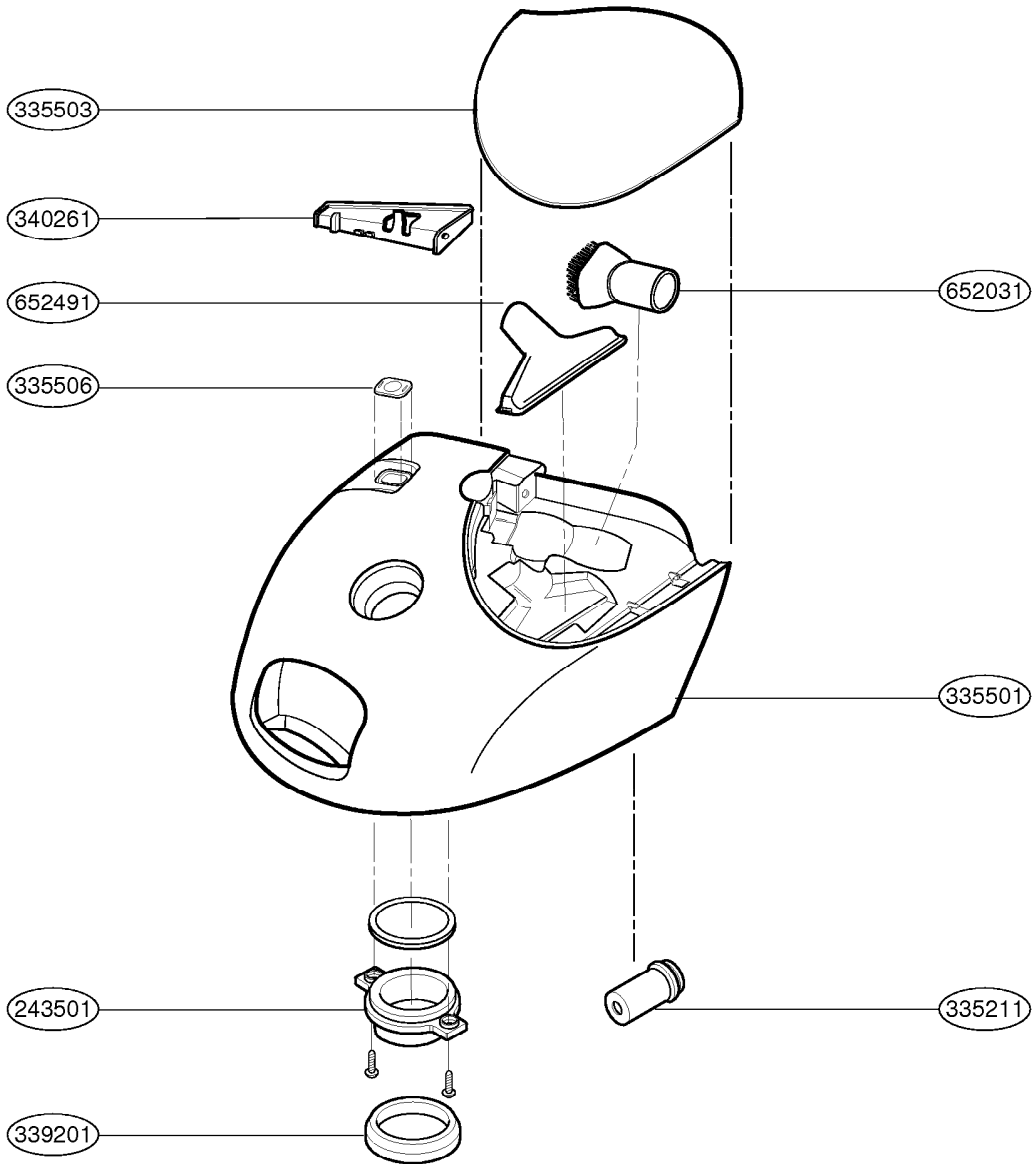

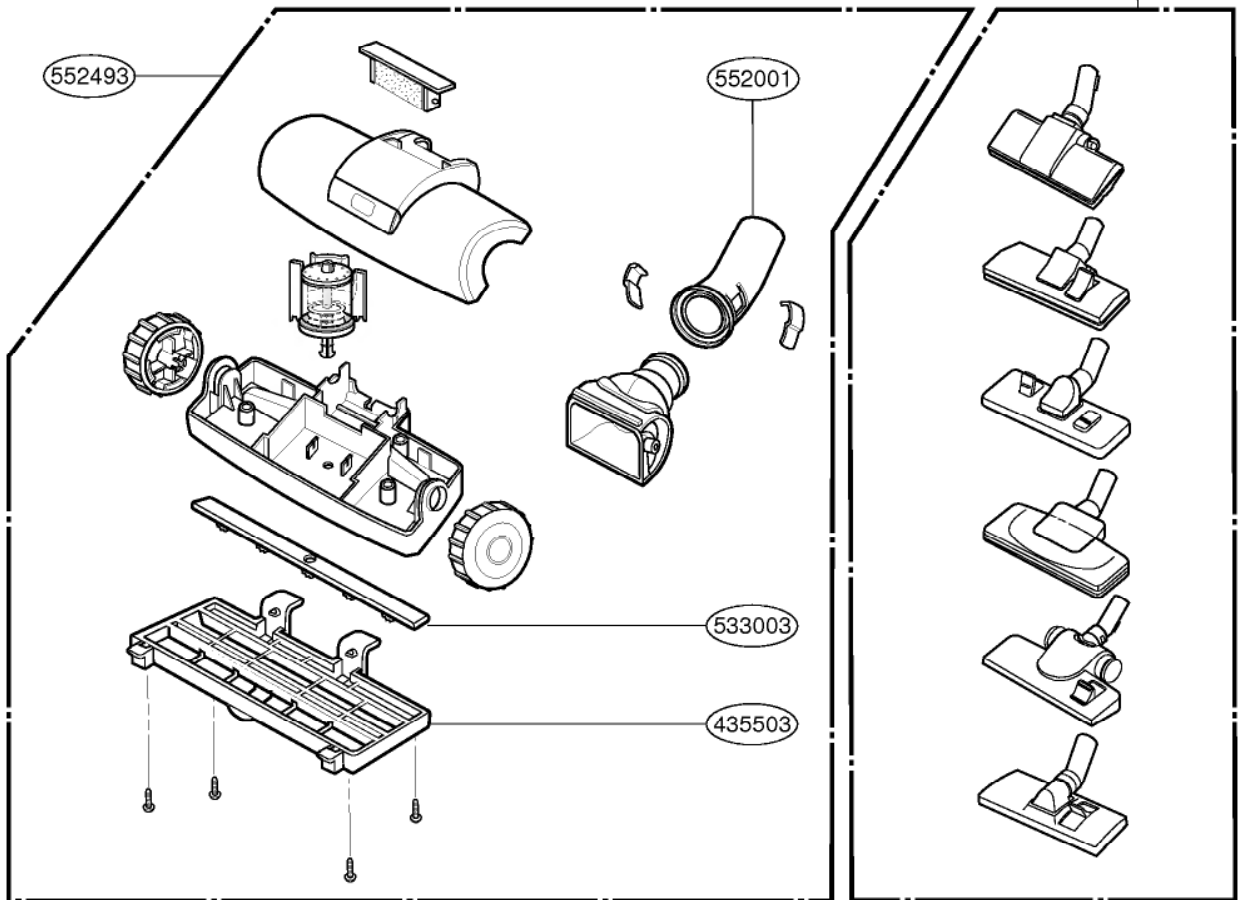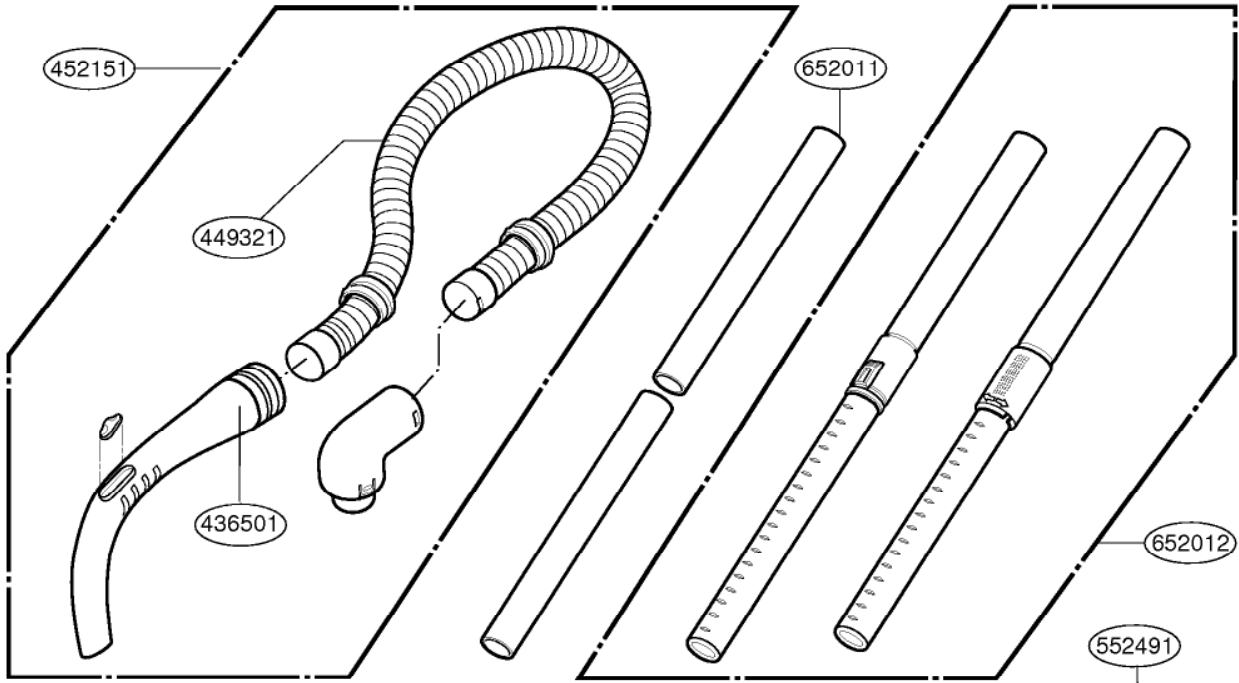

REPLACEMENT PARTS LIST






LOCATION NO.	PART NO.	DESCRIPTION	APPLICATION	REMARKS
130401	3040Fi1459A	BASE, BODY		
139201	3920Fi4718C	PACKING, DUST SEAL		
139202	3920Fi3675B	PACKING, MOTOR MOUNTING		
139204	3920Fi4653A	PACKING, SEAL		
144411	4441Fi3605F	CASTER ASSY		
146601	4660Fi2402A	WHEEL		
146811		MOTOR ASSY, VC		REFER TO APPENDIX
146871		CORD REEL ASSY		REFER TO APPENDIX
149601	4960Fi2319A	MOUNT, BAG		
152301	4i70098F	FILTER(MECH), MOTOR SAFETY		
152311	5231Fi3512B	FILTER ASSY, PAPER		
152312	5231Fi2308B	FILTER ASSY, CLOTH		CLIP
152312	5231Fi2443A	FILTER ASSY, CLOTH		ZIPPER
168711		PWB(PCB) ASSY, MAIN		REFER TO APPENDIX
169301	6931Fi3523A	THERMOSTAT ASSY		90° C
235501	3550Fi1473A	COVER, BODY		
235502	3550Fi2455A	COVER, CONTROL	V-3900D/T/DV/TV, V-3943T V-3947TV,V-3900TB V-3900TS, V-3900TR	SLIDE
235502	3550Fi2458A	COVER, CONTROL	V-3900RD/RT/RDV/RTV	ROTARY
235502	3550Fi2459A	COVER, CONTROL	V-3910D/T/DV/TV, EV 3900	ON/OFF
235503	3550Fi1476A	COVER, EXHAUST FILTER		
243501		RING, CONNECTOR		REFER TO APPENDIX
249401	4940Fi3720A	KNOB, CONTROL	V-3900RD/RT/RDV/RTV	ROTARY
249401	4940Fi3721A	KNOB, CONTROL	V-3900D/T/DV/TV, V-3943T V-3947TV,V-3900TB V-3900TS, V-3900TR	SLIDE
249701	4i70024A	SPRING, BUTTON		
250201	5020Fi2321A	BUTTON, POWER SWITCH		
250202	5020Fi2322A	BUTTON, CORD REEL		

REPLACEMENT PARTS LIST

LOCATION NO.	PART NO.	DESCRIPTION	APPLICATION	REMARKS
252311	5231Fi4504F	FILTER ASSY, EXHAUST		
266011	6601Fi3149B	SWITCH ASSY, PUSH		
335211	3520Fi3277E	INDICATOR ASSY		
335501		COVER, FILTER		REFER TO APPENDIX
335503		COVER, ACCESSORY		REFER TO APPENDIX
335506	3550Fi3761A	COVER, INDICATOR		
339201	3920Fi3734A	PACKING, FILTER		
340261		LATCH		REFER TO APPENDIX
435503	3550Fi2462A	COVER, BUTTON		
436501	3650Fi1471A	HANDLE, GRIP		
449321	4932Fi2268A	CONNECTOR(MECH), HOSE ASM		
452151	5215Fi1306A	HOSE ASSY, FLEXIBLE		
533003	3300Fi4238A	PLATE, BEATER		
552001	5200Fi3743A	PIPE, SUCTION		
552491	5249Fi1387A	NOZZLE ASSY, FLOOR		NZ-15
	5249Fi1388A		NZ-16	
	5249Fi1389A		NZ-17	
	5249Fi2182A		NZ-5	
552493	5249Fi1390C	NOZZLE ASSY, QUILT		BLACK
	5249Fi1390E		BLUE+BLACK	
	5249Fi1390F		BLUE+GRAY	
	5249Fi1390Z		RED+BLACK	
	5249Fi1395A		BLUE+BLACK (ULTRA PUNCH)	
	5249Fi1395E		ORANGE+BLACK	
650581	3i21007N	TOOL, CREVICE		
652011	5201Fi2324A	PIPE ASSY, STEEL		
652012	5201Fi2181U	PIPE ASSY, TELESCOPIC		
652012	5201Fi2182B	PIPE ASSY, TELESCOPIC		
652031	3i20011E	BRUSH ASSY, DUST		
652491	5249Fi3691A	NOZZLE ASSY, UPHOLSTERY		
30CZZ1	6121Fi4311D	CAPACITOR		

APPENDIX

     1. THE TYPE OF POWER CORD & PARTS NUMBER

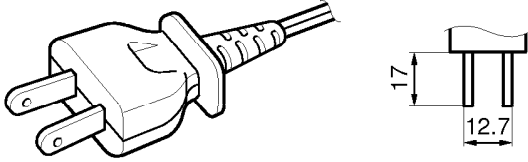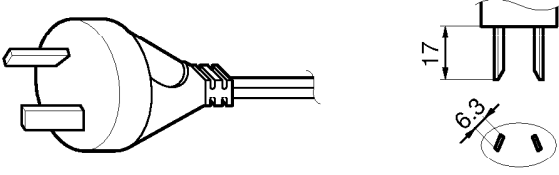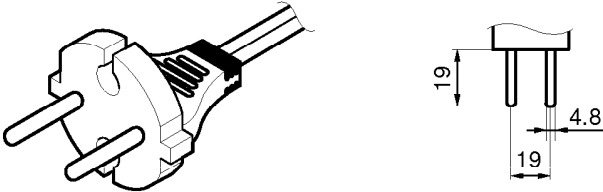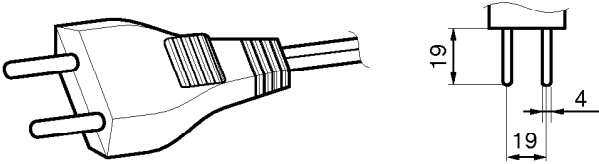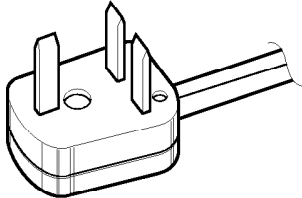TYPE	TYPE OF PLUG	CORD REEL ASSY P/NO.(L/NO.146871)									
		V-3900 Ser., V-3943 T, V-3947 TV	V-3910 Ser., V-3912D, V-3913DV, EV 3900								
A-1		4687Fi1420k	4687Fi1420L								
S-1		4687Fi1420M	4687Fi1420N								
C-2		4687Fi1420A	4687Fi1420B								
C-1		4687Fi1420P 4687Fi1420T (CHILE)	4687Fi1420Q								
B-3	 <table border="1" data-bbox="652 1536 912 1713"> <thead> <tr> <th colspan="2">Color identification of fuse</th> </tr> </thead> <tbody> <tr> <td>Brown</td> <td>13A</td> </tr> <tr> <td>Yellow</td> <td>5A</td> </tr> <tr> <td>Blue</td> <td>3A</td> </tr> </tbody> </table>	Color identification of fuse		Brown	13A	Yellow	5A	Blue	3A	4687Fi1420V	4687Fi1420W 4687Fi1420S (Singapore)
Color identification of fuse											
Brown	13A										
Yellow	5A										
Blue	3A										

2. COLOR & PARTS NUMBER

LOCATION NO.	COLOR		ATAG RED	ORANGE	LEMON YELLOW	GRASS GREEN
	DESCRIPTION					
243501	RING, CONNECTOR		4350Fi3757A	4350Fi3757B	4350Fi3757C	4350Fi3757D
335501	COVER, FILTER		3550Fi1474A	3550Fi1474B	3550Fi1474C	3550Fi1474D
335503	COVER, ACCESSORY		3550Fi1475A	3550Fi1475B	3550Fi1475C	3550Fi1475D
340261	LATCH		4026Fi2407A	4026Fi2407B	4026Fi2407C	4026Fi2407D

LOCATION NO.	COLOR		METAL RED	SILVER GREEN	COBALT BLUE	CHAMPANGE GOLD
	DESCRIPTION					
243501	RING, CONNECTOR		4350Fi3757E	4350Fi3757F	4350Fi3757G	4350Fi3757H
335501	COVER, FILTER		3550Fi1474E	3550Fi1474F	3550Fi1474G	3550Fi1474H
335503	COVER, ACCESSORY		3550Fi1475E	3550Fi1475F	3550Fi1475G	3550Fi1475H
340261	LATCH		4026Fi2407E	4026Fi2407F	4026Fi2407G	4026Fi2407H

LOCATION NO.	COLOR		RUSSIAN BLUE	LIGHT SILVER	SEA BLUE	
	DESCRIPTION					
243501	RING, CONNECTOR		4350Fi3757J	4350Fi3757K	4350Fi3757L	
335501	COVER, FILTER		3550Fi1474J	3550Fi1474K	3550Fi1474L	
335503	COVER, ACCESSORY		3550Fi1475J	3550Fi1475K	3550Fi1475L	
340261	LATCH		4026Fi2407J	4026Fi2407K	4026Fi2407L	

3. MOTOR ASSY & PWB ASSY PARTS NUMBER

LOCATION NO.	DESCRIPTION	PART NO.	REMARKS
146811	MOTOR ASSY, VC	4681Fi2373A	VMC 500E2, 230V/50Hz
		4681Fi2373B	VMC 500E1, 220V/50Hz
		4681Fi2373C	VMC 500E3, 240V/50Hz
		4681Fi2373D	VMC 500E5, 230V/50Hz
		4681Fi2373F	VMC 500L1, 110V/60Hz
		4681Fi2373G	VMC 500L2, 120V/60Hz

LOCATION NO.	DESCRIPTION	PART NO.	REMARKS
168711	PWB(PCB) ASSY, MAIN	6871FX2100A	SLIDE 230V/50Hz
		6871FX2100D	ROTARY 230V/50Hz
		6871FX2100B	SLIDE 220V/50Hz
		6871FX2100E	ROTARY 220V/50Hz
		6871FX2100G	SLIDE 240V/50Hz
		6871FX2100H	ROTARY 240V/50Hz
		6871FX2100N	ROTARY 220V/60Hz
		6871FX2100J	SLIDE 110V/60Hz
		6871FX2100K	ROTARY 110V/60Hz
		6871FX2100C	SLIDE 120V/60Hz
6871FX2100F	ROTARY 120V/60Hz		