



Internal Use Only

<http://biz.lgservice.com>


Replacement Part List

SVC MANUAL(Exploded View)


CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

Exploded View(10SEER)

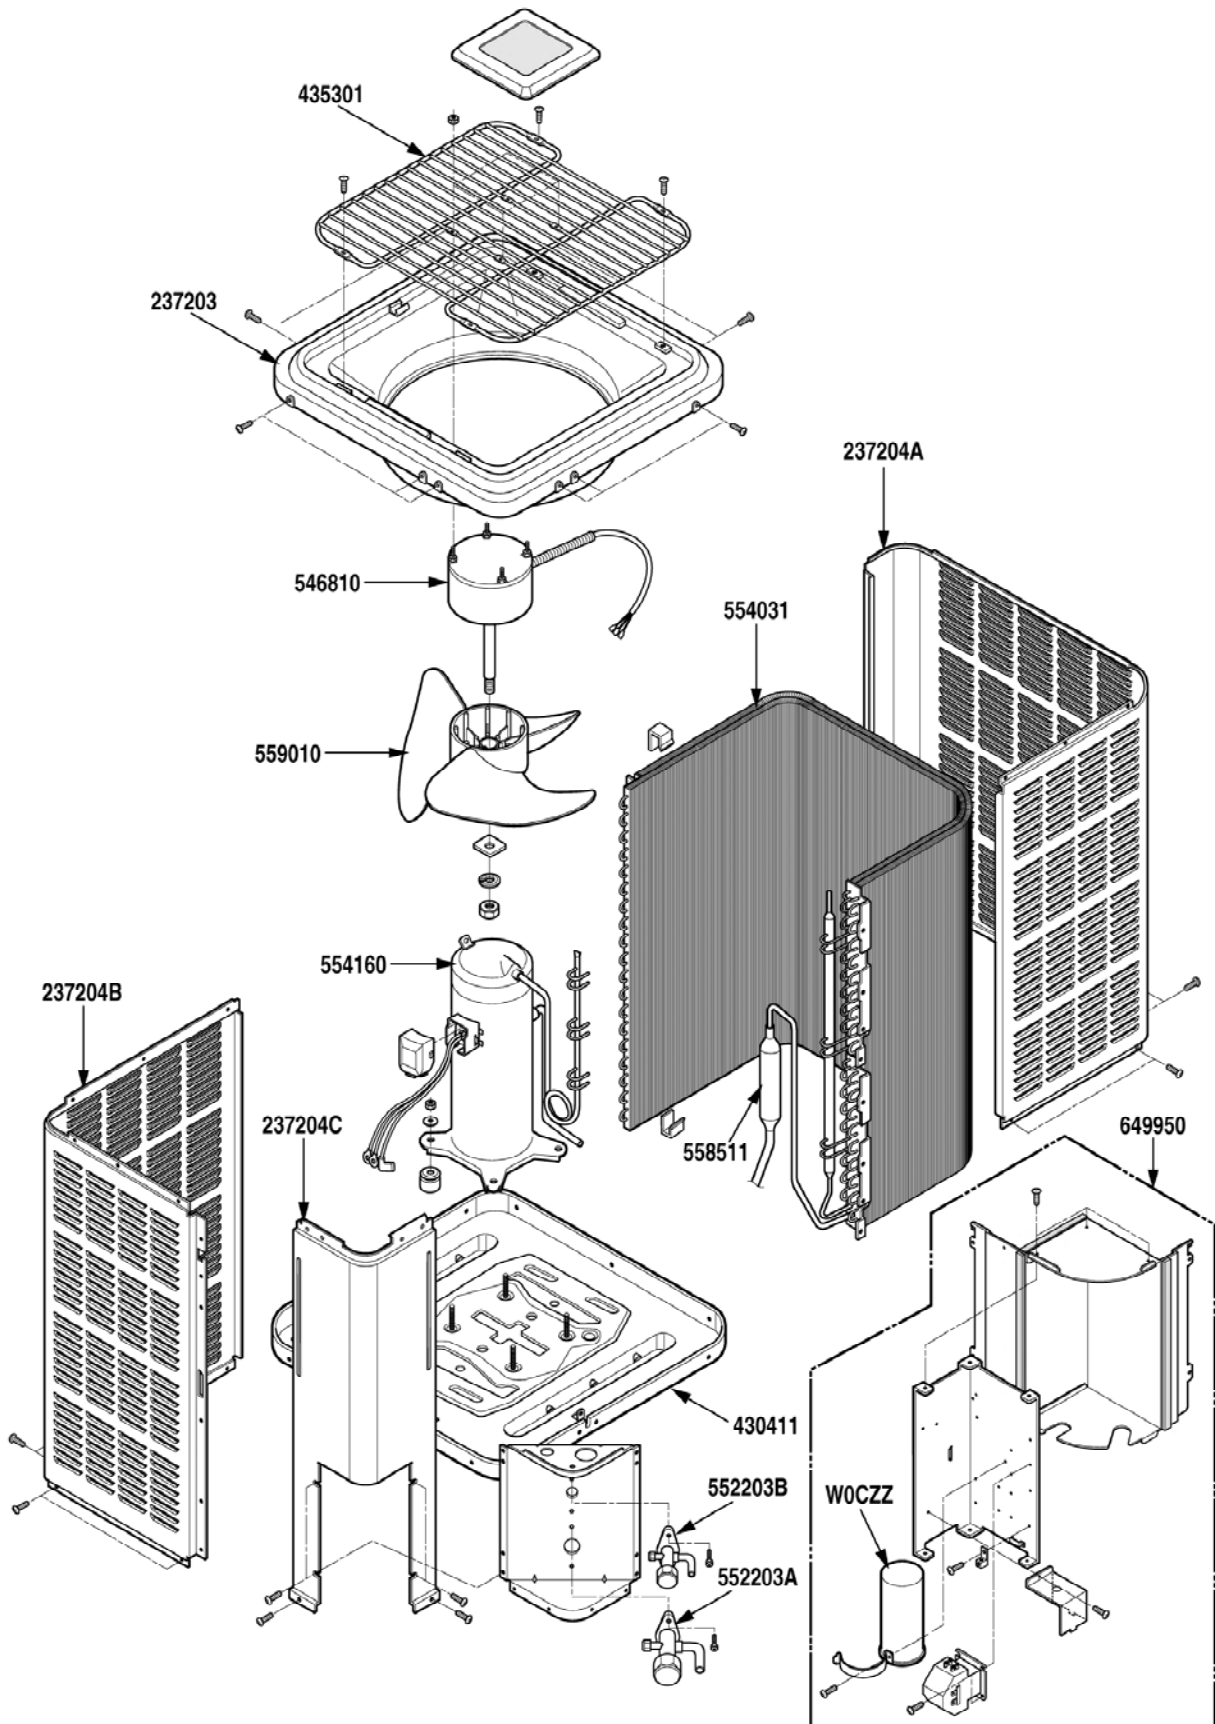

Exploded View(12SEER)

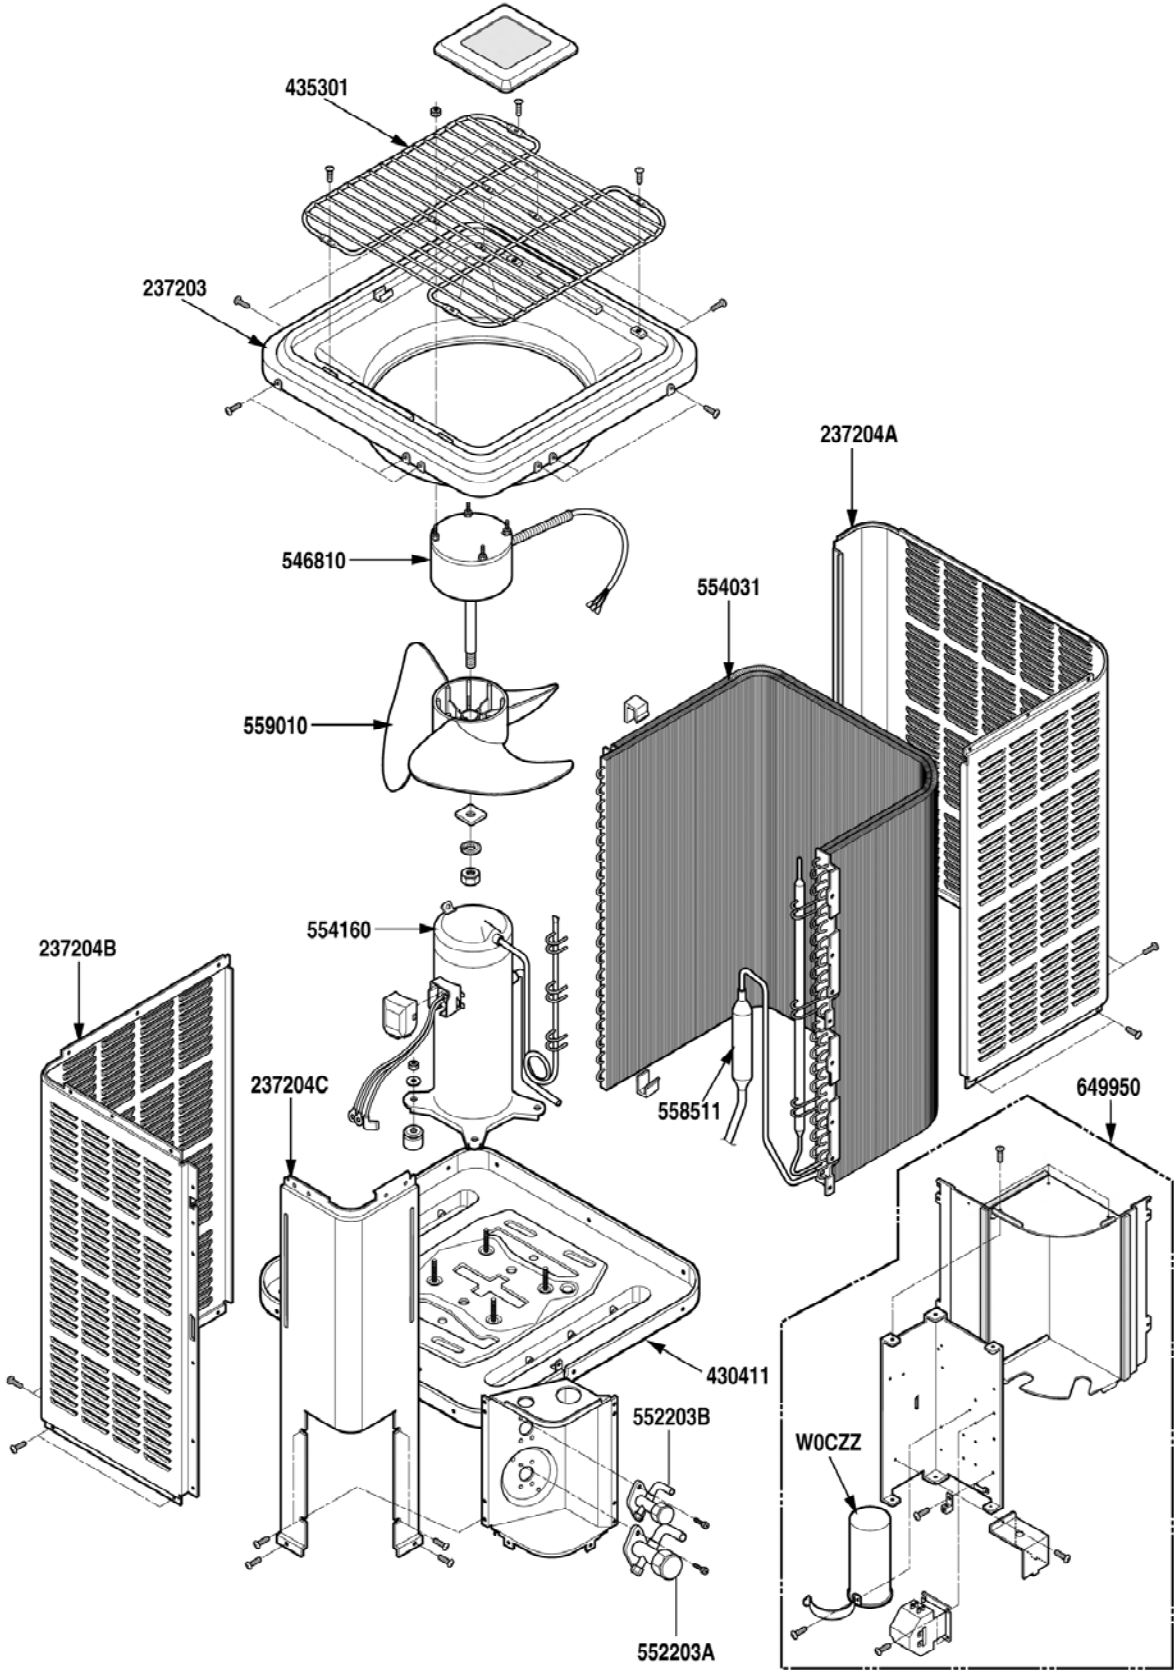



P/NO : 3828A30115E

APRIL, 2008