

Sears

**REPAIR
PARTS
LIST**

Model No.

721.35078

721.35079


To Call
Toll Free

For Service:

1-800-4-MY-HOME
(1-800-469-4663)

Galaxy™

Vacuum Cleaner

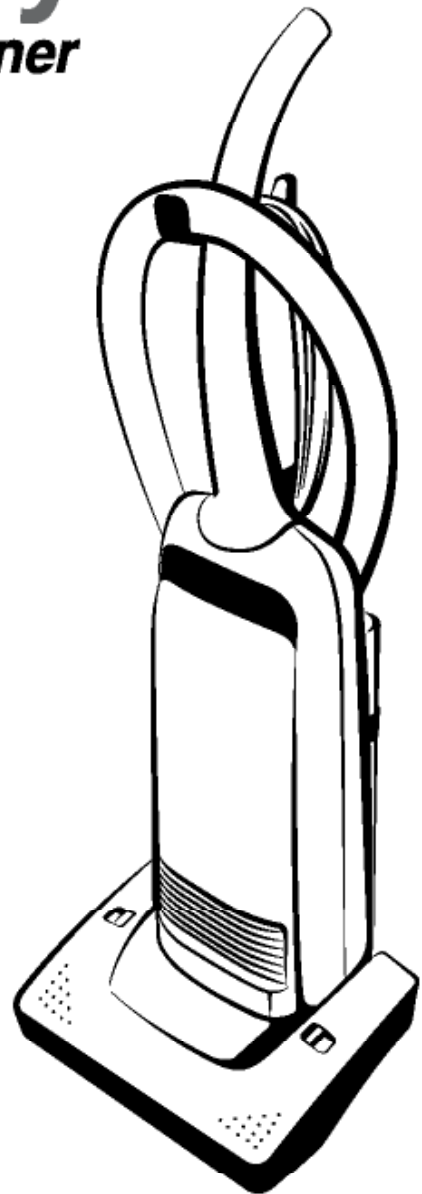


All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Service Center, or the Service Department at most Sears stores. To order parts by phone, call the toll free parts number listed to the left.

When requesting service or ordering parts, always provide the following information:

- ◆ Product Type
- ◆ Part Number
- ◆ Model Number
- ◆ Part Description

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.


CAUTION: Use the Galaxy part number in all orders, **not** the Location No.

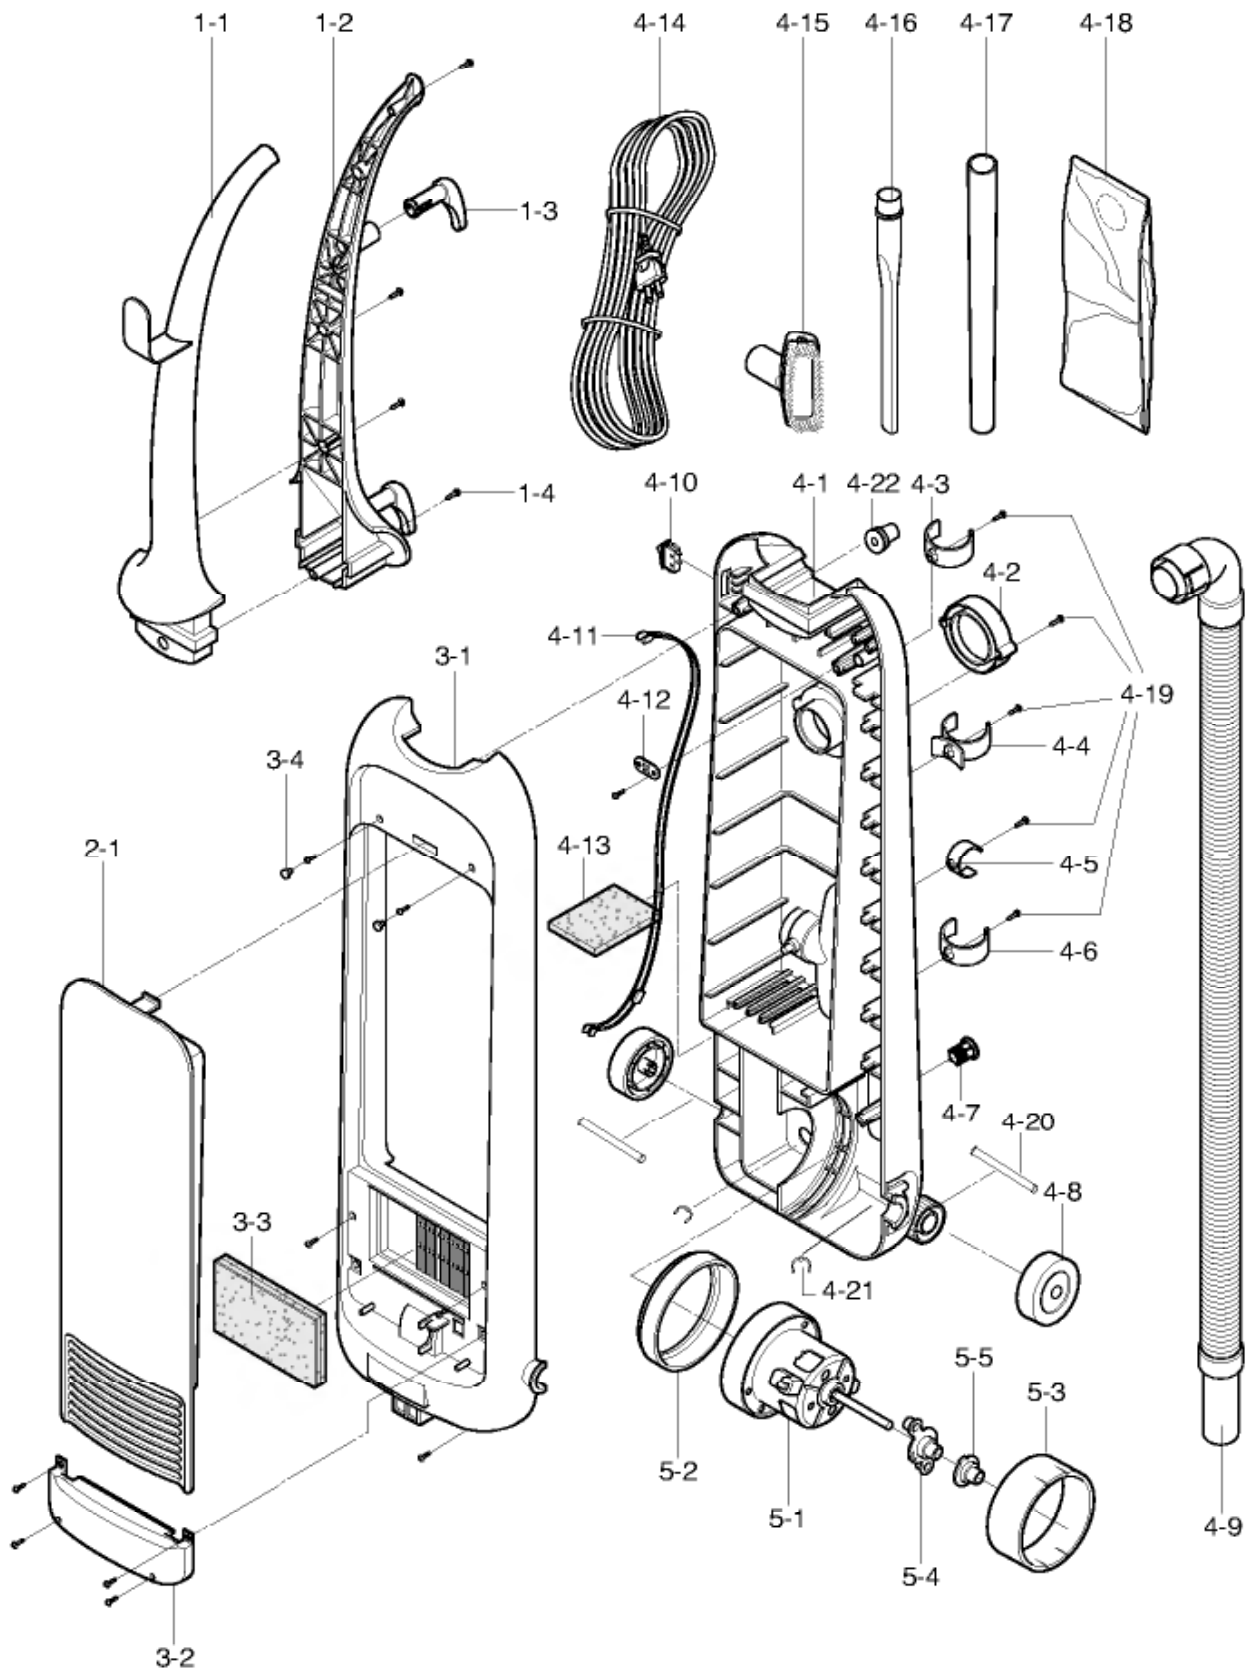

CAUTION: Use the Galaxy part number in all orders, **not** the Location No.

LOCATION NO.	PART NO.	DESCRIPTION	SEARS NO.
1-1	3650FI1503A	HANDLE, UPPER	
1-2	3650FI1504A	HANDLE, LOWER	
1-3	4990FI3033A	HANGER, CORD	
1-4	1TPL0403116	SCREW TAPPING, PAN HEAD	
2-1	3550FI1675A	COVER, DUST	
3-1	3550FI1674A	COVER, BODY	
3-2	3550FI2565B	COVER, TOP	
3-3	5231FI3757B	FILTER ASS'Y EXHAUST(MICRON FILTER)	86878
3-4	3920FI3837A	PACKING, CAP	
4-1	3040FI1510B	BASE, BODY	
4-2	5200FI3791A	PIPE, CONNECTOR	
4-3	4930FI3804A	HOLDER, PIPE	
4-4	4930FI3803A	HOLDER, HOSE	
4-5	4930FI3772C	HOLDER, HOSE	
4-6	4930FI3804A	HOLDER, PIPE	
4-7	4970FI3001F	DAMPER ASS'Y	
4-8	4660FI3752A	WHEEL	
4-9	5215FI1338A	HOSE ASSEMBLY, FLEXIBLE	
4-10	6601FI3487A	SWITCH ASSEMBLY, POWER	
4-11	6631FI2003B	CONNECTOR ASSEMBLY	
4-12	4930FI4669A	HOLDER, CORD	
4-13	5230FI3749B	FILTER, MOTOR SAFETY	
4-14	6411FI2422U	POWER CORD ASSEMBLY	
	6411FI2422V	POWER CORD ASSEMBLY	
4-15	5203FI3739A	BRUSH ASS'Y DUST	
4-16	5058FI2214A	TOOL, CREVICE	
4-17	5062FI2058A	WAND	
4-18	5231FI2453F	BAG, DUST	50688
4-19	1TPL0402818	SCREW TAPPING, PAN HEAD	
4-20	3470FI3691A	SHAFT	
4-21	4080070A	E-RING	
4-22	4830FI3001A	BUSHING, CORD	
5-1	4681FI2460F	MOTOR ASS'Y VC	
5-2	3920FI3832A	PACKING, MOTOR MOUNTING	
5-3	4I23008B	PACKING, ABSORBING	
5-4	4980FI3736A	SUPPORTER, MOTOR	
5-5	3920FI3818A	PACKING, SEAL	

CAUTION: Use the Galaxy part number in all orders, not the Location No.

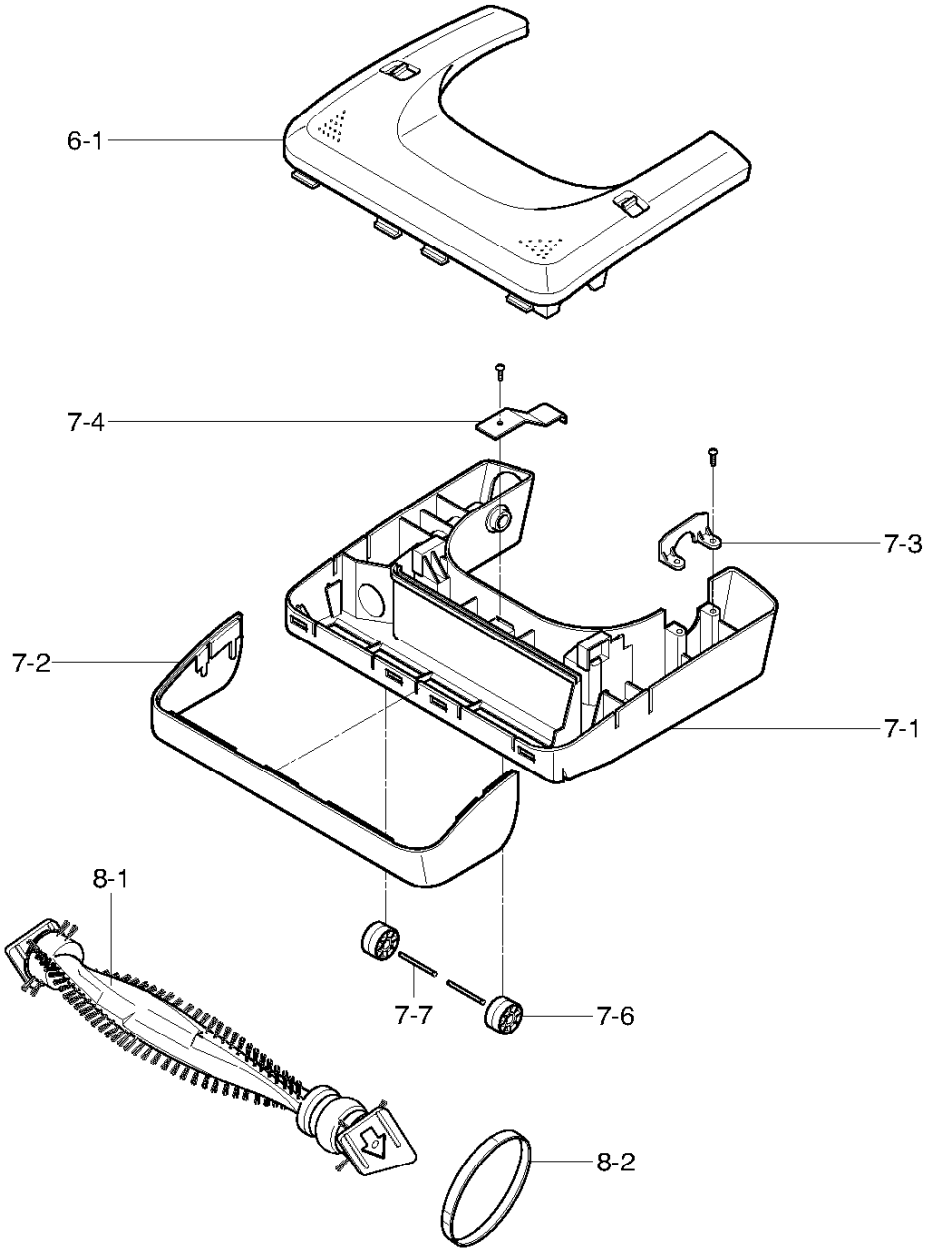

CAUTION: Use the Galaxy part number in all orders, **not** the Location No.

LOCATION NO.	PART NO.	DESCRIPTION	SEARS NO.
6-1	3550FI1677B	COVER, NOZZLE	
7-1	3040FI1512A	BASE, HEAD	
7-2	4820FI2402A	BUMPER, HEAD	
7-3	4640FI2004A	STRAP, HEAD	
7-4	4620FI3402A	STOPPER	
7-6	4660FI4566A	WHEEL	
7-7	4I22094C	SHAFT	
8-1	5973FI1008A	AGITATOR ASSEMBLY	
8-2	4400FI3348A	BELT	5275

Get it fixed, at your home or ours!

Your Home

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME[®] Anytime, day or night
(1-800-469-4663) (U.S.A. and Canada)
www.sears.com www.sears.ca

Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts and Repair Center.**

1-800-488-1222 Anytime, day or night (U.S.A. only)
www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGARSM
(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER^{MC}
(1-800-533-6937)
www.sears.ca



P/No.:3840FI2441C

© Sears, Roebuck and Co.

® Registered Trademark / ™ Trademark / SM Service Mark of Sears, Roebuck and Co.

® Marca Registrada / ™ Marca da Fábrica / SM Marca da Serviço de Sears, Roebuck and Co.

^{MC} Marque de commerce / ^{MD} Marqua déposée da Saars, Roabuck and Co.