 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



KITCHENAID KHM3WH Owner's Manual

[Shop genuine replacement parts for KITCHENAID
KHM3WH](#)

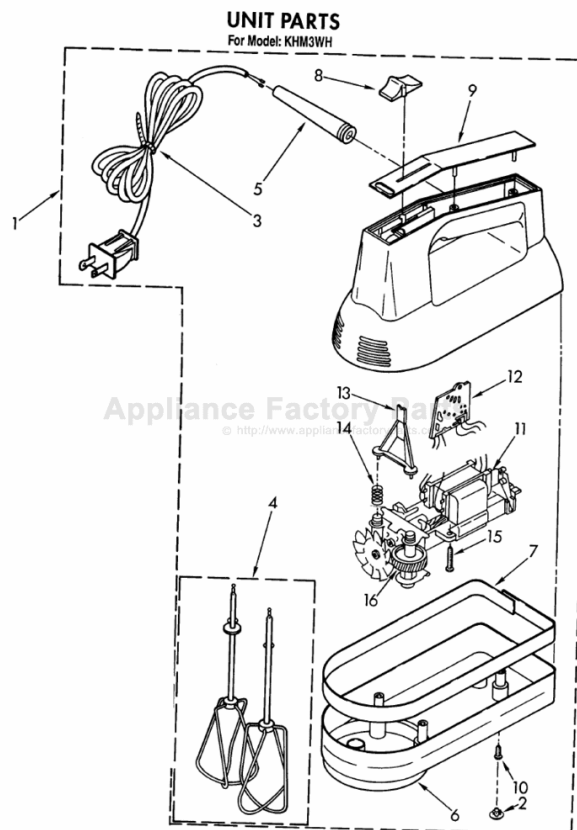

[Find Your KITCHENAID Mixer Parts - Select From 532 Models](#)

----- Manual continues below -----

PARTS LIST

for

KitchenAid®

PORTABLE HAND MIXER

3 SPEED

MODEL

KHM3WH



▲WH-White



FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



KITCHENAID

ST. JOSEPH MICHIGAN 49085

8-92 Litho in U.S.A.

 
© 1990,1991, 1992 KITCHENAID

Part No. 4176917 Rev C

8/92

UNIT PARTS

For Model: KHM3WH

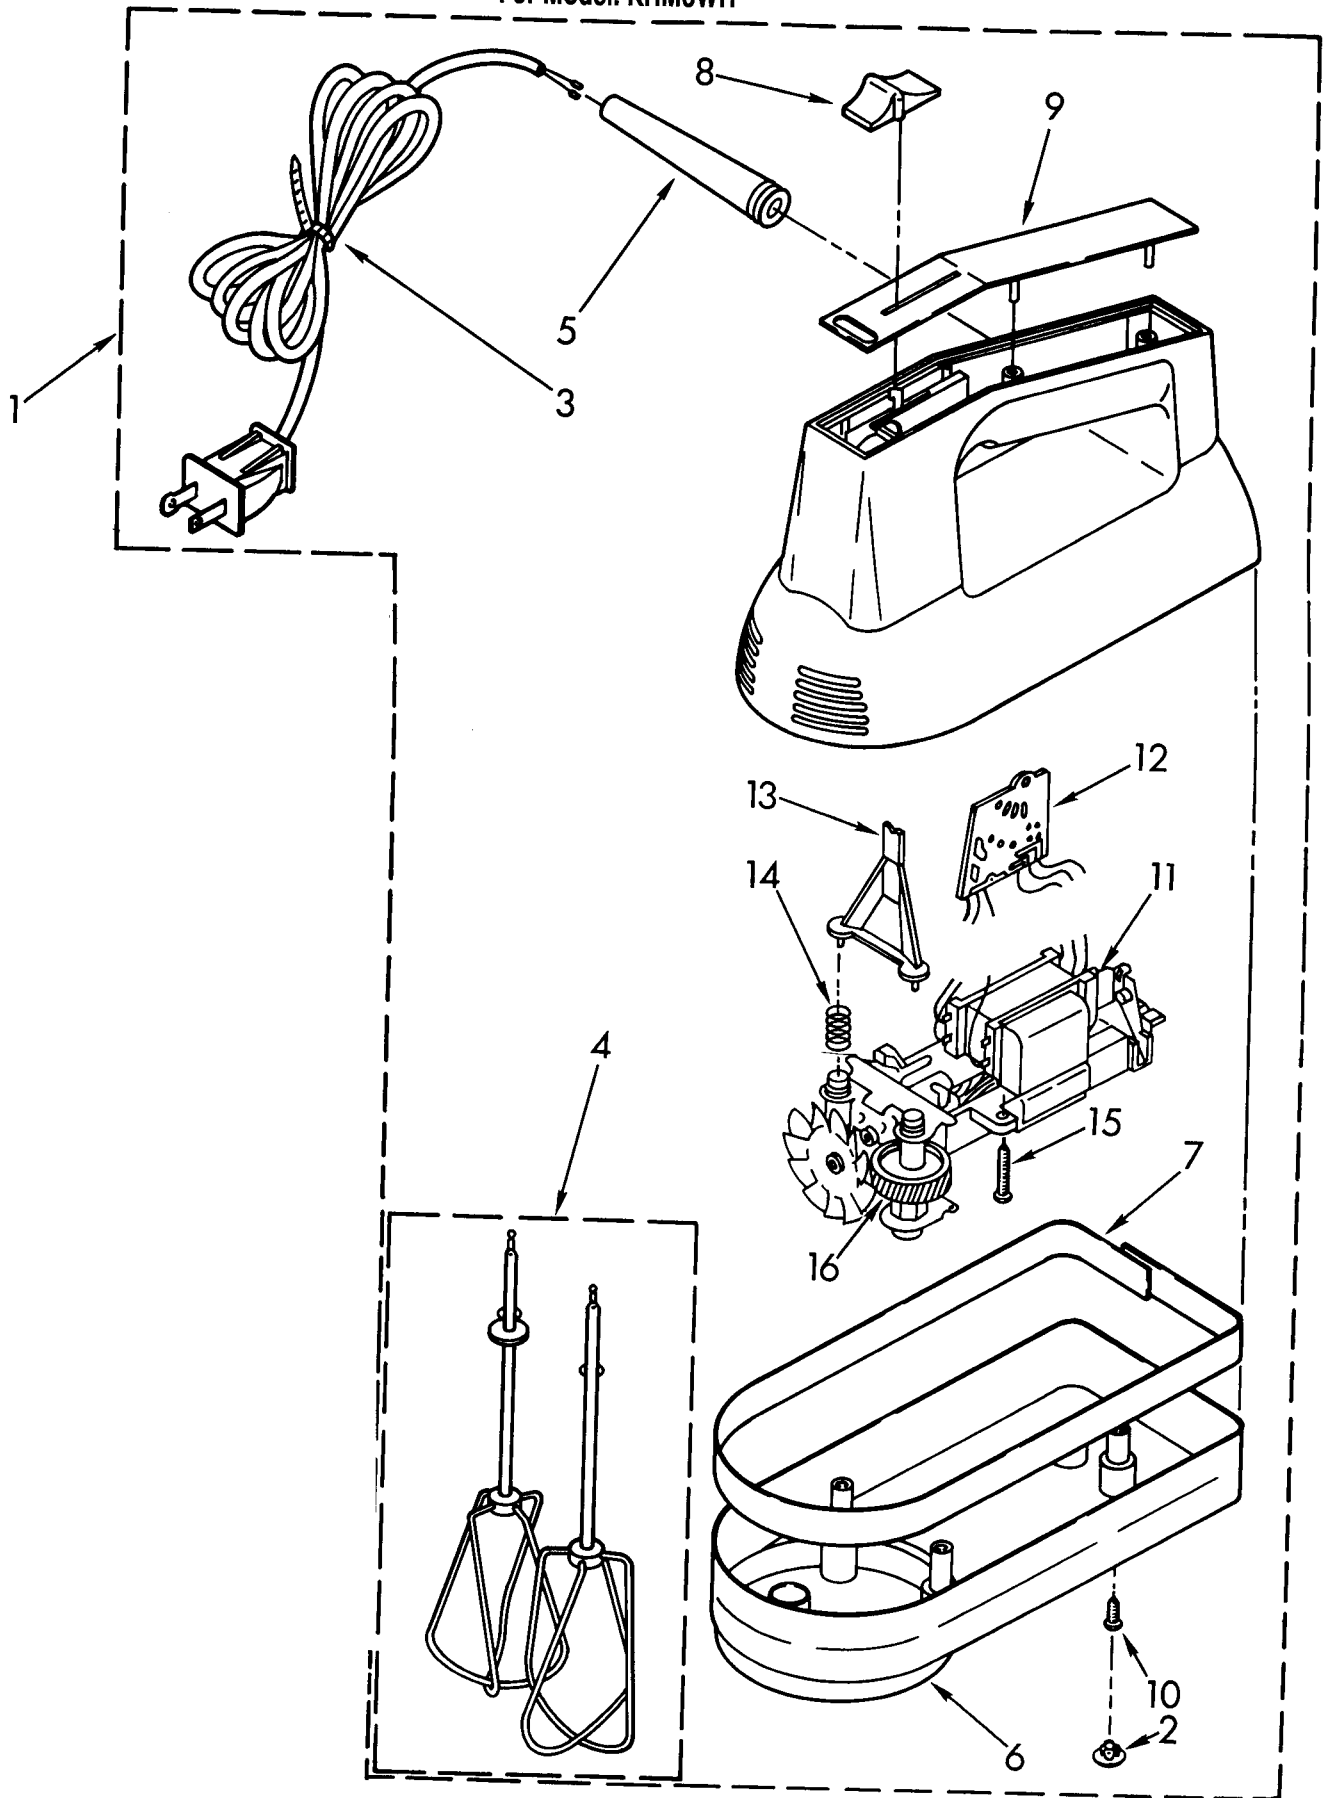

1	4176930	Unit, Complete
2	3181104	Cover, Screw (4)
3	3181105	Cord and Plug Assembly
4	3181106	Turbo-Beater Pak Inc's Rt & Lt
5	3181107	Sleeve, Power Cord
6	3181108	Cover, Lower Housing (Includes No. 2)
7	3181109	Trim Band (Silver)
8	3181112	Knob, Speed Control
9	3181113	Insert, Handle (3-Speed)
10	3181125	Screw (4) #6-19 x 1 1/4
11	3181129	Motor Asm. W/Wire Leads - 3 Speed
12	3181131	Circuit Board W/Leads - 3 Speed
13	3181133	Ejector
14	3181134	Spring, Ejector
15	3181126	Screw, Motor Mounting
16	4176219	Gear Set

Following Parts Not Illustrated
4176919 Carton, 4-Pack

LITERATURE PARTS

LIT3181123 Use and Care Guide
LIT4176917 Repair Parts List