

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# DE'LONGHI DCH1030 Owner's Manual

[Shop genuine replacement parts for DE'LONGHI  
DCH1030](#)



[Find Your DE'LONGHI HVAC Parts - Select From 166 Models](#)

----- Manual continues below -----




**CERAMIC FAN HEATER**  
INSTRUCTIONS FOR USE  
SAVE THESE INSTRUCTIONS

**RADIATEUR SOUFFLANT CÉRAMIQUE**  
MODE D'EMPLOI  
CONSERVEZ CE MODE D'EMPLOI

**TERMOVENTILADOR CERÁMICO**  
INSTRUCCIONES PARA EL USO  
REPASE Y GUARDE ESTAS INSTRUCCIONES

**TERMOVENTILATORE CERAMICO**  
ISTRUZIONI PER L'USO  
CONSERVARE LE PRESENTI ISTRUZIONI

TYPE/MODELE/MODELO/MODELLO:  
DCH1030

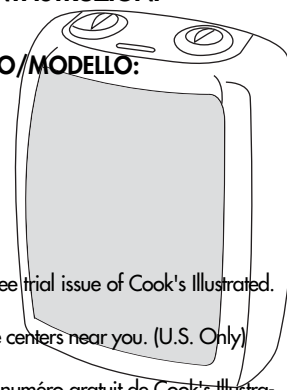

Register this product on-line and receive a free trial issue of Cook's Illustrated.  
Visit [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi).  
Visit [www.delonghi.com](http://www.delonghi.com) for a list of service centers near you. (U.S. Only)


Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated.  
Visitez [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi).  
Visitez [www.delonghi.com](http://www.delonghi.com) pour y voir une liste des centres de réparation  
proches de chez vous. (É.-U. uniquement)

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated.  
Visite [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi).  
Visite [www.delonghi.com](http://www.delonghi.com) para ver la lista de centros de servicios cercanos a  
usted. (Solamente en los Estados Unidos)

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista.  
Visita [www.prodregister.com/delonghi](http://www.prodregister.com/delonghi).  
Visita per una lista dei centri di servizio a te più vicini. (Solo negli Stati Uniti)

**CARACTERISTICAS ELECTRICAS**

120V ~ 60Hz 1500W

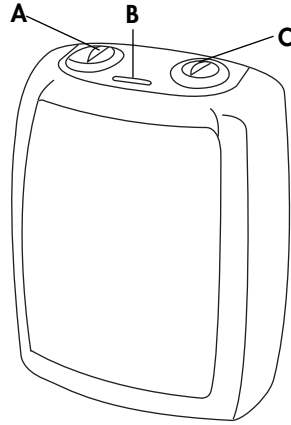

**A** Mode selector  
**B** Pilot lamp  
**C** Thermostat



**A** Sélecteur de fonctions  
**B** Lampe témoin  
**C** Thermostat



**A** Selector de funciones  
**B** Lámpara piloto  
**C** Termostato



**A** Selettore funzioni  
**B** Lampada spia  
**C** Termostato

Voltage Wattage	See rating label
Tension puissance	voir plaque données
Tension Potencia	véase placa de características
Tensione potenza	vedi targa caratteristiche



## IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. If your appliance is equipped with a polythene tape used as carry handle, remove it before connecting appliance to the outlet.
3. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0,9 m) from the front and top of the heater and keep them away from the sides and rear.
4. Extreme caution is necessary when any heater is used by or near children and whenever the heater is left operating and unattended.
5. Always unplug heater when not in use.
6. **Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. If heater has leaked any oil, discontinue using the heater and contact the service center as indicated in the instruction leaflet. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.**
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
9. **Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.**
10. To disconnect heater, turn controls to off, then remove plug from outlet.
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
14. **A heater has hot or arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.**
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
17. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet /receptacle/ may result in overheating of the power cord or fire.
18. **Do not use an extension cord because it may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this heater.**
19. Be sure that the plug is fully inserted into an appropriate outlet. Please remember that outlets also deteriorate due to aging and continuous use: check periodically if signs overheating or deformations are evidenced by the plug. Do not use the outlet and CALL your electrician.
20. Check that neither the appliance nor the power cable have been damaged in any way during transportation.
21. Make sure that no pieces of polystyrene or other packaging material have been left between one element of the appliance and another. It may be necessary to pass over the appliance with a vacuum cleaner.
22. **When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time.**
23. **CAUTION:** to prevent electric shock match wide blade of plug to wide slot, fully insert.
24. Do not cover the appliance while it is functioning in order to avoid overheating with the attendant risk of fire.

## SAVE THESE INSTRUCTIONS

## ELECTRICAL CONNECTION

Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit.

## INSTALLATION

The appliance can be used on any horizontal surface.

Do not overload the electrical circuit. Avoid using the same socket for other appliances.

## OPERATION AND USE

1. Make sure the appliance is off before plugging into the mains.
2. Plug the appliance, the pilot lamp will light on.
3. Turn the appliance on by placing the thermostat (C) in the Max position and the mode selector (A) in one of the following positions: ✖ 1/2.
  - **Summer operation (fan only):** turn the mode selector to the ✖ position.
  - **Minimum power setting:** turn the mode selector (A) to the "1" position.
  - **Maximum power setting:** turn the mode selector (A) to the "2" position.

## HOW TO TURN THE APPLIANCE OFF

To turn the appliance off turn the mode selector (A) to the "●" position.

### Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat slowly the anti-clockwise direction until you hear a click.

The thermostat will then keep room temperature at the selected level automatically.

### Frost prevention mode

With the thermostat dial at minimum ✖ and the mode selector on "2", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

## MAINTENANCE

- Always unplug from the mains socket before cleaning.
- **During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.**
- Never use abrasive powders or solvents.

## CAUTION

- Do not use this heater in the immediate proximity of showers, bathrubs, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outtake grilles (danger of overheating).
- Do not use the appliance close to walls, furniture, curtains etc.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorized service center or a qualified electrician in order to eliminate all risk.
- Do not cover the appliance when in operation as this could cause a fire risk.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> (43 square feet).

The heater is fitted with a **safety thermal cut-off** which will switch off the heater in case of **accidental overheating** (eg. obstruction of air intake and outtake grilles, motor turning slowly or not at all). To reset, turn the heater off, disconnect the plug from the outlet for a few minutes, remove the cause of overheating then plug the appliance in again.

**Warning:** in order to avoid overheating, do not cover the heater.



#### LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

#### What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current ( AC ) circuit.

#### How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

#### What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

#### How do you get service?

If repairs become necessary, see contact information below:

#### U.S. Residents:

Please contact our toll free hotline at 1-800-322-3848 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

**Residents of Canada:** Please contact our toll free hotline at 1-888-335-6644 or log onto our website at [www.delonghi.com](http://www.delonghi.com).

**Residents of Mexico:** Please refer to the Limited Warranty statement for Mexico.

#### Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

#### How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.