

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



DE'LONGHI TRD0715T Owner's Manual

[Shop genuine replacement parts for DE'LONGHI
TRD0715T](#)



[Find Your DE'LONGHI HVAC Parts - Select From 166 Models](#)

----- Manual continues below -----

DeLonghi

**IMPORTANT INSTRUCTIONS
ELECTRIC OIL FILLED RADIATOR
SAVE THESE INSTRUCTIONS**

**INSTRUCCIONES IMPORTANTES
LOS RADIADORES ELÉCTRICOS
REPASE Y GUARDE ESTAS INSTRUCCIONES**

**MODE D'EMPLOI IMPORTANT
LES RADIATEURS À BAIGNOIRE
CONSERVEZ CE MODE D'EMPLOI**

**ISTRUZIONI PER L'USO
RADIATORI AD OIL
CONSERVARE LE PRESENTI ISTRUZIONI**

Type/Modèle/Modelo/Typ

TRD0715T



IMPORTANT SA

When using electrical appliances, basic precautions should be taken to avoid electrical shock and personal injury, including the following:

1. Read these instructions thoroughly before using this heater.
2. If your heater is equipped with a polythene tape, which is used for connecting the appliance to an outlet.
3. This heater becomes very hot when operating. To avoid burns, keep it away from bare skin. Use the heater's handle when moving it. Keep the heater away from flammables, bedding, papers, clothes and curtains at least 3 feet from the top, and also well away from its sides and rear.
4. Extreme caution should be taken when leaving an open flame unattended. Do not allow uncapped persons.
5. If the supply cord is damaged, it must be replaced by a qualified person or similarly qualified persons in order to avoid a hazard.
6. Always unplug the heater when it is not in use.
7. **Do not operate your heater when its cord or plug has been damaged in any manner. If you suspect damage, stop use immediately and contact a service center as indicated in the instructions. Do not use a non-authorized service facility for inspection, electrical or mechanical repairs.**
8. Your heater should not be operated outdoors.
9. Your heater is not intended for use in bathrooms, laundry rooms, etc. Do not locate the heater where it might fall into a bathtub or other water-filled area.
10. **Do not run the electric cord under carpeting. Do not use the heater where the cord will be run over by a vehicle. Run the cord away from traffic areas and where it will not be damaged.**
11. To disconnect the heater, switch it OFF, then unplug its cord.
12. Connect to properly polarized outlets only.

Adjusting the thermostat

When the room has reached the desired temperature, turn the thermostat dial in the clockwise direction until you get to the setting – and the thermostat will maintain the set temperature automatically and keep it constant. If your unit is a three-output version, in intermediate temperatures, if the room is not particularly cold, select minimum output to optimize energy consumption.

Antifreeze function

Turn the thermostat dial to the * position and the thermostat will maintain a minimum room temperature of approximately 5°C while conserving energy. In models that come with a remote control, press the * button.

REMINDER

To completely shut the appliance off, turn the power switch to the off position and disconnect the appliance from the main.

5. UNITS WITH TIMER

Clock setting

The program/timer, as with all clocks, must be set to 9.30 a.m. (day zone), rotate the dial clockwise (following the arrow) until the triangular pointer is aligned with the triangular pointer.

IMPORTANT:

DO NOT ROTATE CLOCK DIAL COUNTER-CLOCKWISE



LIMITED

This warranty applies to all products with

What does the warranty cover?

We warrant each appliance to be free from defects in materials and workmanship. The coverage under this warranty is limited to repair or replacement of any defective parts or part thereof, other than consumable parts. In the event of a product replacement or return, the unit replaced or new model will be returned at the discretion of De'Longhi. This warranty shall apply only if the appliance is used in accordance with the instructions, which accompany it, and on an Altitude of 6000 feet or less.

How long does the coverage last?

This warranty runs for one year (1) from the date of purchase. It applies only to the original purchaser for personal or household use.

What is not covered by the warranty?

The warranty does not cover defects or damage caused by misuse, accidents, or alterations to the appliance outside our control. It does not apply to any appliance, which has been repaired or replaced under this warranty. Also, consequential and incidental damages are not covered.