

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HONEYWELL EWM350 Owner's Manual

[Shop genuine replacement parts for HONEYWELL
EWM350](#)



[Find Your HONEYWELL Humidifier Parts - Select From 153 Models](#)

----- Manual continues below -----

Slant/Fin[®]

Portable Electric Warm M
Germ-Free™ Model GF-3



GF-350 Shown

- Instructions for Operation
- Limited Warranty

READ AND SAVE THE

Slant/Fin[®]

Slant/Fin Corp., 40 Garvies Point Road, Glen Cove, NY 11542

Printed in CHINA 8/99
Imprimé à CHINA 8/99
Impreso en CHINA 8/99

READ ALL OF THE FOLLOWING INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE YOUR HUMIDIFIER. FOLLOWING THESE SIMPLE GUIDELINES FOR USE AND CARE WILL HELP ENSURE YEARS OF DEPENDABLE AND EFFICIENT SERVICE.

IMPORTANT SAFEGUARDS


CAUTION: BECAUSE HIGH TEMPERATURE IS GENERATED IN THIS HUMIDIFIER, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED ESPECIALLY WHEN CHILDREN ARE PRESENT.

WHEN USING ELECTRICAL APPLIANCES, THESE BASIC SAFETY PRECAUTIONS MUST BE FOLLOWED:

1. **DO NOT** operate the humidifier without the water tanks.
2. **ALWAYS** use clean, cool tap water to fill the water tanks.
3. To avoid risk of fire or shock, **DO NOT** use an extension cord.
4. **DO NOT** handle the unit with wet hands.
5. **NEVER** tilt, move, or attempt to empty the unit while it is operating or plugged in. Shut off, unplug and remove water tanks before moving unit.
6. **DO NOT** place the unit close to heated areas, such as near stoves, heaters or in direct sunlight.
7. **DO NOT** operate OUTDOORS. This humidifier is intended for indoor use only.
8. **DO NOT** let water get into the air inlets on the bottom of the enclosure or on the cord or plug.
9. **DO NOT** store or use gasoline or other flammable vapors and liquids near the humidifier.
10. **ALWAYS** make sure the water tank caps and gaskets are firmly in place.
11. **DO NOT** touch hot surfaces.
12. **ALWAYS** turn the humidifier off when the water tanks are empty or when the unit is not in use. If you turn your unit off for extended periods, **ALWAYS** disconnect the power cord and empty the water tanks and base.
13. **ALWAYS** place the unit on a firm flat, level, water resistant surface and arrange the power cord so that the product is unlikely to be upset.
14. **DO NOT** clean the product or service the UV germicidal bulb without disconnecting the power cord.
15. Before connecting to electric power outlet, check your electrical power supply. It must be 120 volts A.C. (alternating current). The outlet may be 15 amp or 20 amp. The circuit must be of adequate size and must be protected by fuse or circuit breaker.

16. This item has a polarized plug. If the polarized plug does not fit fully in the outlet, do not force it. If it does not fit, contact a qualified electrician.
17. **DO NOT** attempt to remove STEAM DIFFUSER OR MINERAL ABSORPTION PAD until 15 to 20 minutes after the humidifier is turned off and unplugged. Serious injury may result. The STEAM PAD, STEAM DIFFUSER AND STEAM DOME should be removed for cleaning and maintenance. **DO NOT** place hands or face directly in front of the unit while unit is in operation.
18. Place unit in an area where it is well ventilated.
19. Before using the unit, check the power supply.
20. This humidifier requires daily maintenance.
21. Refer to CLEANING AND MAINTENANCE for details. **NEVER** clean humidifier in any way other than that specified by this manual.

SAVE THESE INSTRUCTIONS

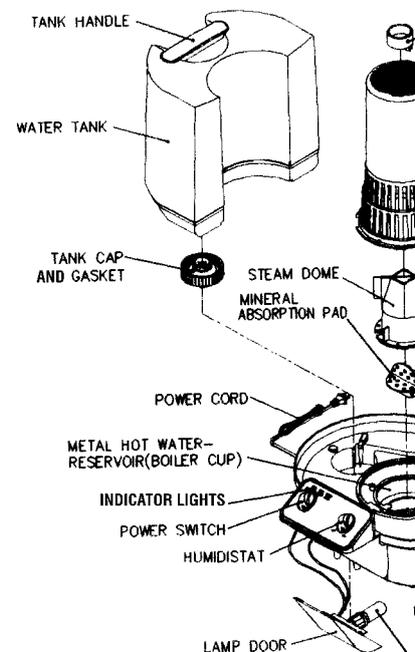

GF-350 Shown

WEEKLY CLEANING AND MAINTENANCE ADVISORY

At least weekly cleaning is recommended, when the unit has been in use. Regular cleaning prevents mineral scale buildup in the hot water reservoir. It also helps prevent buildup of bacteria, molds or other microorganisms in the tank or system. This ensures that your humidifier will operate at maximum efficiency. (See page 6 for full cleaning instructions.)

HOW YOUR SLANT/FIN WARM MIST HUMIDIFIER WORKS

The model GF-300 and GF-350 humidifier uses a two-step approach to eliminate potentially harmful microorganisms from the water before they are spread with the mist into the air. The first step uses a UV germicidal bulb, located inside the base of the humidifier, that shines on the water through a special glass tube as it passes from the cold water reservoirs to the hot water reservoir. The second step is the boiling action that takes place in the hot water reservoir just before the mist is distributed to the air in the room. These two methods limit the likelihood of harmful microorganisms getting into the atmosphere and being breathed by you, your family and pets.

CONTROL PANEL POWER SWITCH — LO AND HI POSITIONS

When the switch is turned to the "LO" or "HI" setting and the unit is plugged in, the power is on. With the unit running in the LO setting, it will be producing vapor at a lower rate than when running in the HI setting.

OFF POSITION - This cuts power to unit and should be used (in addition to unplugging unit) before moving, performing maintenance, etc.

REPLACE UV BULB

If the "REPLACE UV BULB" signal light is illuminated during normal use, the bulb must be replaced with the same special 3.5W bulb. See the enclosed order

GF-350 Shown



GF-350 Shown

form. The UV germicidal bulb will operate a 2,000 hours (typically 1 to 2 years of normal use). The humidifier may operate longer than 2,000 hours but a humidifier operating at maximum efficiency. The germicidal bulb be replaced after 2,000 hours.

REFILL/CLEAN INDICATOR - When the indicator light is lit, the humidifier is empty. See the section "Filling the Water Tank" for instructions. After full tank is placed on base, reposition the water tank. (Only one water tank.) Each time you fill tank with hot and cold water reservoirs, clean them according to instructions if minerals or film are present.

RELATIVE HUMIDITY CONTROL - To maintain a desired humidity level, the control should be set to "LO"; and if higher humidity is desired, close the control to "HI".

NOTE: When you unpack your humidifier, you may notice some condensation on some surfaces. This is normal as every humidifier has moisture inside. Carefully unpack humidifier and remove all plastic.

OPERATING INSTRUCTIONS

1. Fill the water tanks according to the instructions on the humidifier base.
2. Plug the power cord firmly and completely into a standard wall outlet.
3. Turn the switch to either the LO or HI position. Allow the humidifier to take a few minutes to warm up before use.
4. When the water tanks are empty, (after the "REFILL/CLEAN WHEN LIT" indicator light is lit), the "FILLING THE WATER TANKS" section of the manual.
5. Whenever the water falls below the level of the heating element will shut off and stop heating. The "REFILL/CLEAN WHEN LIT" indicator will light.
6. The unit will operate as long as there is water in the tanks. It will operate with either one or both tanks.

FILLING THE WATER TANKS

1. Before filling the water tanks, turn the power off and unplug unit. Refer to CLEANING INSTRUCTIONS for more information.
2. Remove water tanks from base, turn each tank cap by turning counterclockwise. Replace the tank cap by turning clockwise.
3. Carefully pick up tank, since it will be hot.
4. Place water tanks on base. Make sure the tanks are seated correctly. If the humidifier will not work correctly.

USING THE MEDICATION CUP

In order to add a medicated vapor to the "REFILL/CLEAN WHEN LIT" indicator light is lit.

1. Turn the POWER switch to the "OFF" position.
2. Carefully add liquid medication to medication cup. Do not fill more than half full.

3. Carefully place medicine cup on top of steam diffuser
4. Turn the POWER switch to either the LO or HI position.
5. After use, remove the cup from the unit and clean any residue from the cup with warm water.

WARNING:

DO NOT use any liquid medication other than those specifically recommended for use with a steam vaporizer or warm mist humidifier.
DO NOT pour medication directly into the steam diffuser openings nor add it to the water in the tank or tray.

MINERAL ABSORPTION PAD INSTRUCTIONS

Warm mist humidifiers do not spread fine mineral dust into the air that you breathe nor on your furniture, the way that other type humidifiers do. The mineral dust remains trapped in the humidifier hot water reservoir. Use of mineral absorption pads will play a major role in capturing and removing minerals from hot water reservoir, and preventing a stubborn mineral buildup.

1. Before starting humidifier, place mineral absorption pad in the hot water reservoir. After the humidifier has been operating, the water will become HOT, and CAUTION should be exercised when handling mineral absorption pad. It is best to allow humidifier water to cool down, and to use tongs or long tweezers when handling pad.
2. The useful life of the mineral absorption pad will vary, depending on the mineral content of the water used. In areas of moderate mineral content water supply, the mineral absorption pad should be changed after approximately (3) weeks of continuous use. If the water is "Hard Water", the pad should be changed more frequently. The best way to tell when the pad should be changed is to examine it AFTER the water has cooled down, to see if it is still soft and pliable. When the pad is near the end of its life, it becomes stiff and hard and should be replaced with a new pad. Another sign to change pad is when scale begins to buildup on interior of hot water reservoir.

CLEANING AND MAINTENANCE

Water contains minerals and other particles. During operation most of these minerals will remain in the water reservoir. Gradual buildup of deposits will coat the hot water reservoir and reduce its efficiency. The importance of routine cleaning and care cannot be over-emphasized. Hard water contains more minerals and other particles.

CLEANING INSTRUCTIONS

Failure to perform the necessary cleaning steps will damage unit.

1. Before cleaning, set CONTROLS to "OFF" position and unplug unit.
2. Remove water tanks from humidifier base, and drain water from tanks.
3. Allow at least 15 minutes after shutting unit "OFF" before moving base.

Rotate steam diffuser counterclockwise to lift tabs in base, and lift up. Rotate steam diffuser with tabs in base and lift out. Remove steam diffuser reservoir using tweezers or tongs to complete the cleaning procedure is completed. Drain water from humidifier base, gradually draining water into the sink. BE CAREFUL! DO NOT LET WATER FALL INTO CONTROLS OR OTHER OPENINGS IN ANY MANNER OTHER THAN INDICATED. **W**ater is running faucet. Turn the base upside down by turning it counterclockwise. Clean the steam diffuser grommets inside the fitting from which the steam diffuser cap is replaced. Replace this cap tightly by hand. Pour water into the water reservoir and check for leaks from the water reservoir. **4.** Pour about 1 cup of white vinegar into the water reservoir for only 20 to 30 minutes. **5.** Hold the base of the humidifier over the sink and pour the vinegar. Fill the cold and hot water reservoirs and remove all traces of the vinegar. Remove the water reservoir and from the two metal wires (using a small brush) to remove any buildup (due to water hardness). This maintenance will be needed. Empty the water reservoir on its side. If minerals remain in the metal mesh, use a stainless steel blade in the steam diffuser cap and used to scrape off the mineral deposits from the blade on any plastic parts. **DO NOT ALLOW WATER TO ENTER THE BASE OR ANY OTHER OPENINGS.** **6.** Disinfect the water tanks using a solution of chlorine bleach in 1 gallon of water. Swish the tanks every few minutes to wet all surfaces. Rinse thoroughly until all of the bleach is gone. Add fresh, cool water and replace them on the humidifier. **7.** NEVER use any metal or hard object to clean any part of the hot water reservoir. A metal object can scratch the metal part only. Stainless steel metal scrap metal boiler cup only. NEVER use furniture polish, paint thinner or any other cleaning agent on any part of the humidifier. **8.** Each day the reservoirs and tanks should be filled with fresh tap water. **9.** To clean exterior surfaces, use a soft cloth wrung-out damp cloth. Rinse and wipe the exterior surfaces again. Finally, wipe with a dry cloth before plugging the electrical cord into the wall outlet.

- After base is totally cleaned and dried, replace mineral absorption pad. Place steam dome on base by aligning its slots with tabs in base. (You may have to reposition steam dome to other set of tabs, because it will only fit one way.) Rotate steam dome clockwise until it locks. You may want to place scraper in slot in top of steam dome to store scraper when not in use. Place steam diffuser on base so that the slots in steam diffuser line up with tabs on the base. Rotate steam diffuser clockwise until it locks in place.
- Plug in the unit and resume normal use.

CHANGING THE UV GERMICIDAL BULB

- If the "REPLACE UV BULB" indicator illuminates during normal use, it is time to change the UV germicidal bulb, which is a special 3.5W bulb.
- Turn the POWER switch to the "OFF" position, unplug it and allow it to cool.
- Remove the water tanks from the base of the humidifier. Remove steam diffuser and steam dome by rotating them counterclockwise and lift up.
- Place the base of the humidifier over the sink and tilt the unit to remove any remaining water.
- Carefully turn the base of the humidifier over and place it upside down on a flat level surface. You will see a door at front of unit that is closed with two Phillips head screws.
- Using a Phillips head screwdriver, carefully turn the screws counterclockwise until the screws separate from the door.
- Open the door, by pulling forward. The UV germicidal light bulb will be visible. Pull the door out the minimum amount to have access to unscrew bulb from socket.
- Take a replacement 3.5W UV germicidal bulb that you purchased from Slant/Fin Corporation or another supplier and change the bulb. To prolong the life of the bulb, limit your direct contact with the glass of the bulb by using a cloth or tissue to screw it into place.
- When the new bulb is in place, close the door and replace the screws by using your Phillips head screwdriver and rotating them clockwise until they are just tight. **DO NOT OVER TIGHTEN.**
- Turn the unit upright, place the water tanks on top of the base of the humidifier, plug the unit in, and turn the POWER switch to either the LO or HI position. The "REPLACE UV BULB" indicator should no longer be lit.



IMPORTANT NOTE: Even though you will not receive maximum germicidal effects, you can still use your GF-300 and GF-350 humidifier until the replacement bulb arrives.

STORAGE TIPS

If you do not plan to use your humidifier during the summer months, it is important to help prevent problems from developing.

- Clean your humidifier as instructed in "Maintenance".
- Make sure all water is emptied from reservoirs.
- Dry your unit thoroughly.
- Leave the tank caps off to expose the tanks to air.
- Pack your humidifier in its original container.

SERVICE

DO NOT attempt to repair this humidifier. If you are outside the warranty, contact Slant/Fin by telephone at 1-800-368-7263. Have other repairs professionally done.

GLOW

It is normal to see the humidifier glow when it is on. The glow results from the internal illumination of the ultraviolet light, even at this harmless level, into the room.

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE
Unit does not mist	Unit is not plugged in Power failure Water tanks empty Power switch not turned on Unit not reset after power failure Water tank not properly located on base unit Humidity level set is too low Using distilled or treated water which does not contain minerals
Water leaks from unit	Drain cap, drain cap gasket or tank cap gasket is missing or not properly positioned
Moist air output low	Mineral buildup in humidifier reservoir
Refill/Clean indicator light on	Water level is below minimum level probes Water level probes are covered with film Mineral buildup in humidifier reservoir

LIMITED WARRANTY

IMPORTANT NOTICE

PLEASE CLEAN THIS GERM-FREE HUMIDIFIER AT LEAST ONCE A WEEK BY FOLLOWING THE CLEANING INSTRUCTIONS IN THE OWNER'S MANUAL. FAILURE TO REGULARLY CLEAN THIS GERM-FREE HUMIDIFIER WILL RESULT IN A BUILDUP OF MINERAL DEPOSITS WHICH WILL CAUSE THE UNIT TO CEASE TO OPERATE. IF THE UNIT FAILS TO FUNCTION BECAUSE IT HAS NOT BEEN CLEANED, THIS WILL VOID THE WARRANTY.

To the original purchaser or gift recipient of this humidifier.

1. If your Slant/Fin humidifier fails in normal use because of a manufacturing defect within 90 days from the date of original purchase, Slant/Fin will repair the humidifier at no charge for parts, labor or shipment back to you (see instructions for returning unit below).
2. After the first 90 days, if a component part fails because of a manufacturing defect, Slant/Fin will repair or replace that component part up to 3 years from purchase date. There will be no charge for the component part or shipment back to you, but Slant/Fin reserves the right to charge for installation labor.
3. This warranty does not cover any product which in Slant/Fin's judgment has been (1) damaged as a result of accident, misuse or abuse (2) used for a purpose for which it was not designed, or (3) repaired or altered in any way that adversely affected its performance or reliability. This warranty does not cover scratches and wear of surfaces.
4. UV bulb replacement is a normal maintenance procedure and is therefore not covered under this warranty unless the bulb is found to be defective.
5. For repairs, return humidifier to address shown below with dated sales receipt. The cost of shipment to Slant/Fin must be paid by the consumer. Return to: Consumer Service Dept., Slant/Fin Corporation, 40 Garvies Point Road, Glen Cove, NY 11542. In Canada: Slant/Fin LTD/LTEE, 6450 Northam Drive, Mississauga, Ontario L4V 1H9.
6. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.
7. Slant/Fin makes no express warranties other than the warranties contained herein. Slant/Fin's sole obligation in the event of a breach of any implied warranty (including, but not limited to, implied warranties of merchantability and fitness for a particular purpose) is limited to repair or replacement, and all such warranties are limited in duration to the time periods after the date of original purchase as stated above. The warranty does not cover claims for incidental or consequential damages resulting from a breach of any express or implied warranty or any other reason including damages due to accident, abuse, lack of responsible care, the affixing of any unauthorized attachment, loss of parts, or use at a voltage other than specified.

CUSTOMER SERVICE #: 1-800-775-4552

Slant/Fin®

Humidificateur électrique pour
brumes tièdes Germ-Free™



GF-350

- Instructions sur le fonctionnement et le nettoyage
- Garantie limitée

LIRE ET CONSERVER