

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



DE'LONGHI DTT900 Owner's Manual

**[Shop genuine replacement parts for DE'LONGHI
DTT900](#)**



[Find Your DE'LONGHI Small Appliance Parts - Select From 131 Models](#)

----- Manual continues below -----



Instruction Manual
Toasters

Mode D'emploi
Grille-pain

Manual de instrucciones
Tostadores

Manuale di istruzioni
Tostapane



DTT900-980 Series / Série

Register this product on-line and receive a free trial issue of Cook's Illustrated. Visit www.prodregister.com/delonghi.

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez www.prodregister.com/delonghi.

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite www.prodregister.com/delonghi.

Registra questo prodotto "on-line" per ricevere una copia omaggio della rivista. Visita www.prodregister.com/delonghi.

Visit www.delonghi.com for a list of service centers near you. (U.S. Only)

Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement)

Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

Visita www.delonghi.com per una lista dei centri di servizio a te più vicini. (Solo negli Stati Uniti)

Read and Save These Instructions - Lisez et conservez ces instructions
Guardar estas instrucciones después de haberlas leído - Leggete e conservate queste istruzioni

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and/or personal injury.

1. Read all instructions carefully.
2. Do not touch hot surfaces.
3. To protect against electrical shock, do not place cord, plug or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to authorized service facility for examination, repair or adjustment.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near hot gas or electric burner, or in heated oven.
10. Always plug cord into the wall outlet before turning on any controls. To disconnect turn power OFF, then remove plug from wall outlet.
11. Do not place toaster oven near combustible materials.
12. The area around the toasting slots will become hot during use. Do not touch these surfaces during operation.
13. Do not allow the toasting slots to become covered during operation.
14. Do not toast items with butter or jam or make toasted sandwiches, as this could cause a fire hazard.
15. Do not operate the toaster unless the crumb tray is properly positioned underneath the toaster.
16. Discard the crumbs from your crumb tray frequently. This will avoid a build-up of crumbs that could cause a fire hazard.
- 17. CAUTION:** The metal body of the toaster and the warming rack will get hot during operation.
18. Always unplug the toaster when not in use, before cleaning and when attempting to clear a jam.
19. Burned food can catch fire, so never leave your toaster on unattended.
20. Set the browning control lower for thin or dry bread.

IMPORTANT SAFEGUARDS (continued)

21. Never place food on the warming rack with a topping or filling. If it drips down into the toaster it could catch fire.
22. Don't put your hand or anything metal into the toaster (Ex. knife, foil, etc.)
23. When using the warming rack, never wrap the food up. Plastic wrapping will melt and could catch fire. Foil will reflect heat which will damage the toaster.
24. This toaster is for Household Use Only.

SAVE THESE INSTRUCTIONS

SHORT CORD INSTRUCTIONS

A short power cord is provided to reduce the risk resulting from entanglement or tripping over a longer cord. Longer detachable power supply cords are available and may be used if care is exercised in their use. If a longer detachable power cord or extension cord is used (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally. The electrical rating of the appliance is listed on the bottom of the unit. If the appliance is of the grounded type, the extension cord should be a grounded type 3 wire cord. This appliance has a polarized plug. One blade is wider than the other. To reduce the risk of electrical shock this plug will fit in a polarized plug only one way. If the plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

BEFORE FIRST USE


Place the box on a large, sturdy flat surface. Carefully unpack your appliance and remove all packaging material and literature. Remove any labels or stickers from the appliance. To remove any dust that may have accumulated during packaging, you may wipe the unit with a clean, damp cloth. Dry thoroughly. Do not immerse the appliance in water or other liquid. Do not use harsh or abrasive cleaners. (See "Cleaning Your Toaster" section of this manual for detailed instructions.) Keep all plastic bags away from children. **NOTE** It is recommended that you operate the toaster on a medium setting without bread before first use. **NOTE:** As with all new heating elements, your toaster may emit a slight odor when it is first switched on. This is normal and not cause for concern.

KNOW YOUR TOASTER

FIGURE 1

- A. REMOVABLE WARMING RACK
- B. WARMING RACK BUTTON
- C. CANCEL BUTTON
- D. BROWNING CONTROL
- E. REMOVABLE CRUMB TRAY
- F. CORD STORAGE

NOTE: Parts are the same for both 2 and 4 slice models.

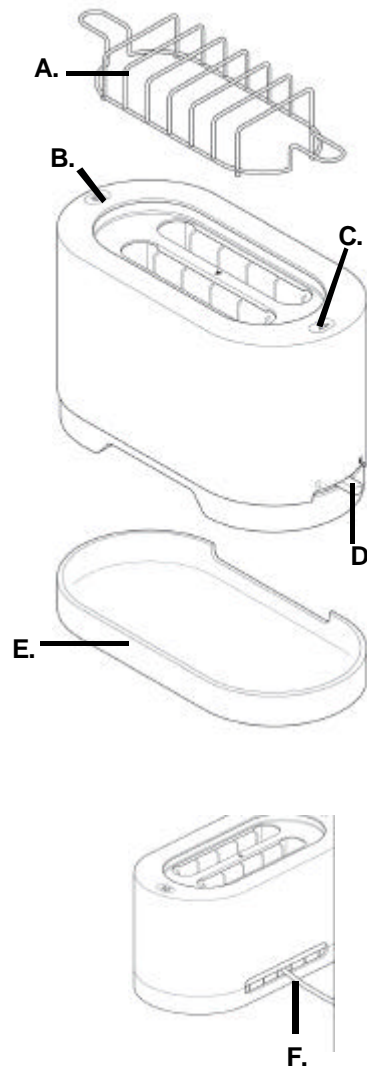

KNOW YOUR TOASTER (continued)

FEATURES:

1. **ILLUMINATED CANCEL AND WARMING RACK FUNCTIONS** - The Warming Rack function lets you warm croissants, bagels and other already toasted items.

2. **TWO EXTRA-WIDE SLOTS (DTT900) / TWO EXTRA-LONG SLOTS (DTT980)** - Work in concert with self-adjusting grips to center food for precise, double-sided toasting.

3. **ELECTRONIC BROWNING CONTROL**- Lets you adjust toast color to your exact preference.

4. **REMOVABLE CRUMB TRAY** - Makes cleanup quick and effortless.

5. **DETACHABLE PARTS** - The removable warming rack and crumb tray allow for easy and convenient cleaning.

6. **LIFT AND LOWER CARRIAGE**- The carriage will automatically lift or lower your food.

7. **WARMING RACK** - Removable warming rack heats croissants, muffins, bagels or keeps already toasted items (like toast) warm.

8. **SEAMLESS BRUSHED ALUMINUM BODY** - Durable and stylish, it beautifully complements any kitchen decor.

9. **CORD STORAGE** - Keeps power cord out of harm's way when toaster is not in use.

OPERATING YOUR TOASTER



PREPARING YOUR TOASTER:

1. Place the toaster on a flat, level surface away from any edge.
2. Plug the unit into a 120V / 60Hz only outlet.

SUGGESTIONS:

1. Never use the toaster when it is empty (when there is no food inside).
2. Do not use very thin or broken slices of bread.
3. Do not insert other foods that may drip during the cooking process.
4. Frequently discard the crumbs from the removable crumb tray.
5. Do not insert foods that are too large for the toasting slots.
6. Do not insert forks or other utensils inside the toaster in order to remove bread.
7. Select a lower setting for light browning, for toasting one slice only or for dry bread.
8. When toasting a single slice of bread, you may notice a variation in toast color from one side to the other. This is normal. **NOTE:** If you are only toasting one item of food, place it in the toasting slot closest to the embossed arrow on the top of the toaster (this is where the toast sensor is).
9. Dry/stale bread toasts more quickly than fresh bread. And thinly sliced bread toasts more quickly than thickly sliced bread. Therefore, the browning control should be set at a lower setting than usual.
10. For best results, ensure that the bread slices are of an even thickness, freshness and size.
11. In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting cycle so that the browning control automatically resets itself.

OPERATING YOUR TOASTER:

1. Move the browning control to the desired setting. Use a low setting  for light toasting and for thin or dry bread. To increase the browning, gradually move the browning control towards the darkest setting. 
2. Insert the food item you would like to toast (bread, muffin, bagel, frozen waffle, etc.) **NOTE:** Make sure large items (like bagels or muffins) are cut first to fit the width of the toast slots.
3. The toaster is equipped with a sensor that detects when food is placed inside the toaster. **NOTE:** When the unit is plugged in, it is ready to toast. There is no need to turn it on. The carriage will automatically lower. The cancel button will illuminate indicating that the toasting process has started.

OPERATING YOUR TOASTER (continued)

4. An audible signal will indicate when the toasting process is complete. The carriage will then automatically lift for easy retrieval of toasted food.
5. To stop toasting at any stage, simply press the cancel button and it will automatically lift the carriage up and turn the toaster off.

USING THE WARMING RACK

1. Place the warming rack on top of your toaster.
2. Place your food on top of the rack (slice thick items in half to prevent the outside from burning). Watch to make sure it doesn't burn, and turn it half-way through.
3. Press the Warming Rack button (it will not illuminate). The cancel button will illuminate and the carriage will lower automatically.
NOTE: You can discontinue the warming process by pressing the cancel button.
4. An audible signal indicates the completion of the warming cycle. The toaster will then switch off automatically.
5. To remove the warming rack, allow the toaster to cool and unplug it from the outlet. Lift off the warming rack using oven mitts if the rack is still not cool.



CLEANING YOUR TOASTER

CAUTION: Make sure your appliance is unplugged and cooled down before attempting to clean. To protect against electric shock, do not immerse cord, plug, unit in water or other liquid.

Cleaning the Exterior

1. The outside of your toaster can be cleaned by wiping the surface with a damp, soft cloth, then dry thoroughly. Do not use harsh abrasives to clean the exterior of the toaster, they will scratch the surface. **CAUTION:** Never immerse the toaster in water or other liquid.

Cleaning the Crumb Tray

2. Lift off the toaster and clean the crumb tray. Discard the crumbs from the crumb tray. Wipe the crumb tray with a soft, damp cloth, then dry thoroughly. Do not use harsh abrasives to clean the crumb tray, they will scratch the surface.

Storage

3. Fit the crumb tray to the toaster and place the cord in the storage provided.

**De'Longhi is the distributor of Kenwood home appliances.
This warranty applies to all home appliances with De'Longhi or Kenwood
brand names.**

Limited Warranty

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense. This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at 1-800-322-3848 or log onto our website at **www.delonghi.com**. For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at **www.delonghi.com**.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



DTT900-980 Series / DTT900-980 S ries
Series DTT900-980 / Serie DTT900-980

Made in PRC / Fabriqu  en RPC
Fabricado en la RPC / Fabricato nella RPC

Power Requirement: 120 Volts / 60 Hz
Caract ristiques  lectriques: 120 Volts / 60 Hz
Alimentaci n el ctrica: 120 Voltios / 60 Hz
Per uso con corrente: 120 Volt / 60 Hz

De'Longhi America, Inc.
Park 80 West, Plaza One
Saddle Brook, NJ 07663
1-800-322-3848

De'Longhi Canada, Inc.
6150 McLaughlin Court
Mississauga, Ontario
L5R 4E1 Canada
1-888-335-6644

Centro Nacional de Servicio:
Fiducia Italiana S.A. de C.V.
Hortencia 129 Col. Florida
M xico D.F., C.P. 01030
01-800-711-88-05 (lada sin costo)
56-62-53-68 y 69 (D.F.)

www.delonghi.com

  De'Longhi 2004