

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Coleman 2300-611 Owner's Manual

[Shop genuine replacement parts for Coleman 2300-611](#)



[Find Your Coleman Camping Parts - Select From 855 Models](#)

----- Manual continues below -----

Coleman

HOT WATER


On Demand™

WATER HOSE ADAPTER

Instructions for Use

Model 2300-511

 
The Water Hose Adapter connects a standard water hose to **Hot Water on Demand™**. Once adapter is in place and water is turned on at the source, use **Hot Water on Demand™** to turn water on & off and to select desired water temperature.

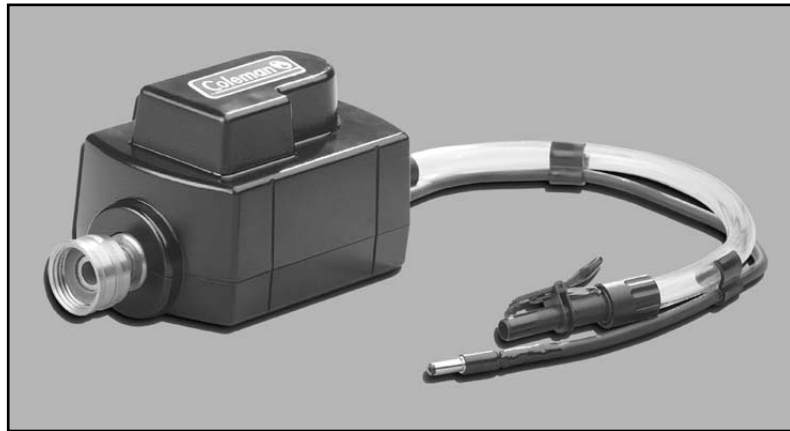

Coleman
HOT WATER
On Demand™

WATER HOSE ADAPTER

 Parts Identifier

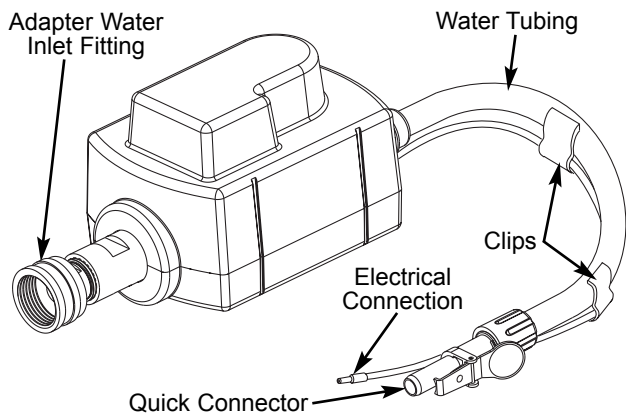

Be sure **Hot Water on Demand™** is turned off and no water is running through unit. Operate unit from a camp table or picnic table. Do not set it on ground to use. (Water will drain when unit is off, preventing damage in freezing temperatures.)

Attach Water Hose Adapter to Hot Water on Demand™:

1. Remove water pump assembly:
 - a. Disconnect water pump electrical connection from **Hot Water on Demand™** (fig. 1).
 - b. Remove water pump by releasing the quick connector (fig. 1).

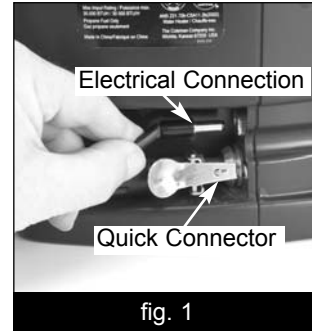 



fig. 1

Attach Water Hose Adapter to Hot Water on Demand™ (continued):

2. Connect Water Hose Adapter to **Hot Water on Demand™**:
 - a. Connect Water Hose Adapter electrical connection to **Hot Water on Demand™**.
 - b. Connect Water Hose Adapter to **Hot Water on Demand™** by inserting Quick Connector.
 - c. Connect and tighten water hose to adapter water inlet fitting.
 - d. Connect water hose to water source.

To Start Hot Water on Demand™:

 1. Turn on water at source (fig. 2).
2. Turn **Hot Water on Demand™** Control Knob to “COOL” until water dispenses (fig. 3).
3. Turn Control Knob to “OFF” (fig. 4).
4. To select desired temperature setting, turn Control Knob, counterclockwise.

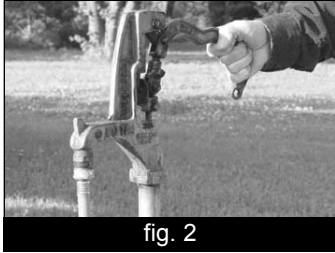

To Start Hot Water on Demand™ (continued):



To Remove from Hot Water on Demand™:

1. Disconnect Water Hose Adapter electrical connection from **Hot Water on Demand™**.
2. Disconnect adapter hose from **Hot Water on Demand™** by releasing the Quick Connector.
3. Reconnect **Water Pump** electrical connection to **Hot Water on Demand™**.
4. Reconnect **Water Pump** hose to **Hot Water on Demand™** by inserting the Quick Connector.

Maintenance:

To Clean:

1. In a clean container mix one-gallon of water with 6 oz. of a calcium, lime, and rust remover solution (available at hardware, general merchandise and food stores).
 2. Disconnect water hose adapter from unit.
 3. Unscrew water tubing from adapter body.
 4. Detach clips from water tubing.
 5. Submerge water tubing in cleaning solution. Allow to set five (5) minutes.
 6. Run clean water through water tubing.
 7. Air dry.
 8. Reattach tubing to Water Hose Adapter and reattach clips to water tubing.
-

For information regarding other
Hot Water on Demand™ accessories:

Visit us at
www.coleman.com



The Coleman Co., Inc. • 3600 N. Hydraulic • Wichita, KS 67219 U.S.A.
1-800-835-3278 • TDD: 316-832-8707

©2003 The Coleman Company, Inc. All Rights reserved.
Coleman® is a registered trademark of The Coleman Company, Inc.

2300-052 (05/03)