## Helpful Hints:

- If using a shower enclosure, please set the **Hot Water on Demand**<sup>™</sup> on a table outside the enclosure before using.
- It is typical to experience a slight change in water flow & temperature when moving spray adapter from high to low heights.



## SPRAY ADAPTER Instructions for Use

## Model 2300-512

For information regarding other Hot Water on Demand<sup>™</sup> accessories:

Visit us at www.coleman.com



The Coleman Co., Inc. • 3600 N. Hydraulic • Wichita, KS 67219 U.S.A. 1-800-835-3278 • TDD: 316-832-8707

©2003 The Coleman Company, Inc. All Rights reserved. Coleman® is a registered trademark of The Coleman Company, Inc.

2300-051 (05/03)

 


Use the Spray Adapter with **Hot Water on Demand**<sup>™</sup> for a refreshing hot shower. Easily attaches to faucet with a quick connector.

## Assembly Steps:

Make sure your **Hot Water on Demand**<sup>™</sup> unit is turned off and that no water is running through the unit. Operate the unit from a camp table or picnic table. Do not set unit on the ground to use.

1. Attach Handled Spray Head to Tubing End. Hand tighten.



 Rotate Faucet of the Hot Water on Demand<sup>™</sup> unit outward to its usage position.



- **3.** Insert end of Spray Head Adapter into faucet.
- **4.** Hold Spray Adapter in your hand.
- 5. Turn the Hot Water on Demand<sup>™</sup> on by turning Control Knob counterclockwise to desired temperature range.

