

 
This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Royal 882 Owner's Manual

[Shop genuine replacement parts for Royal 882](#)


Models: 882

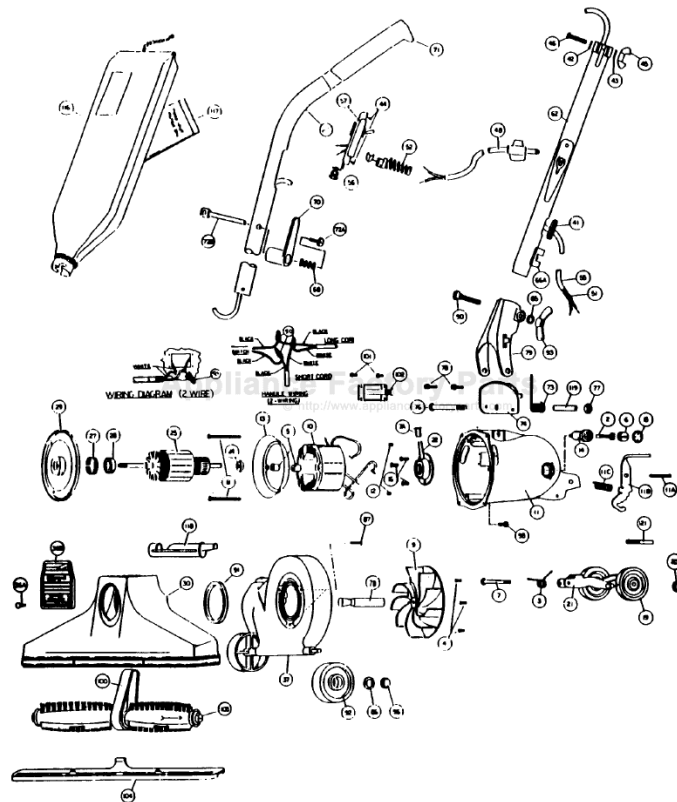

[Find Your Royal Vacuum Cleaner Parts - Select From 772 Models](#)

----- Manual continues below -----

 Models: 882

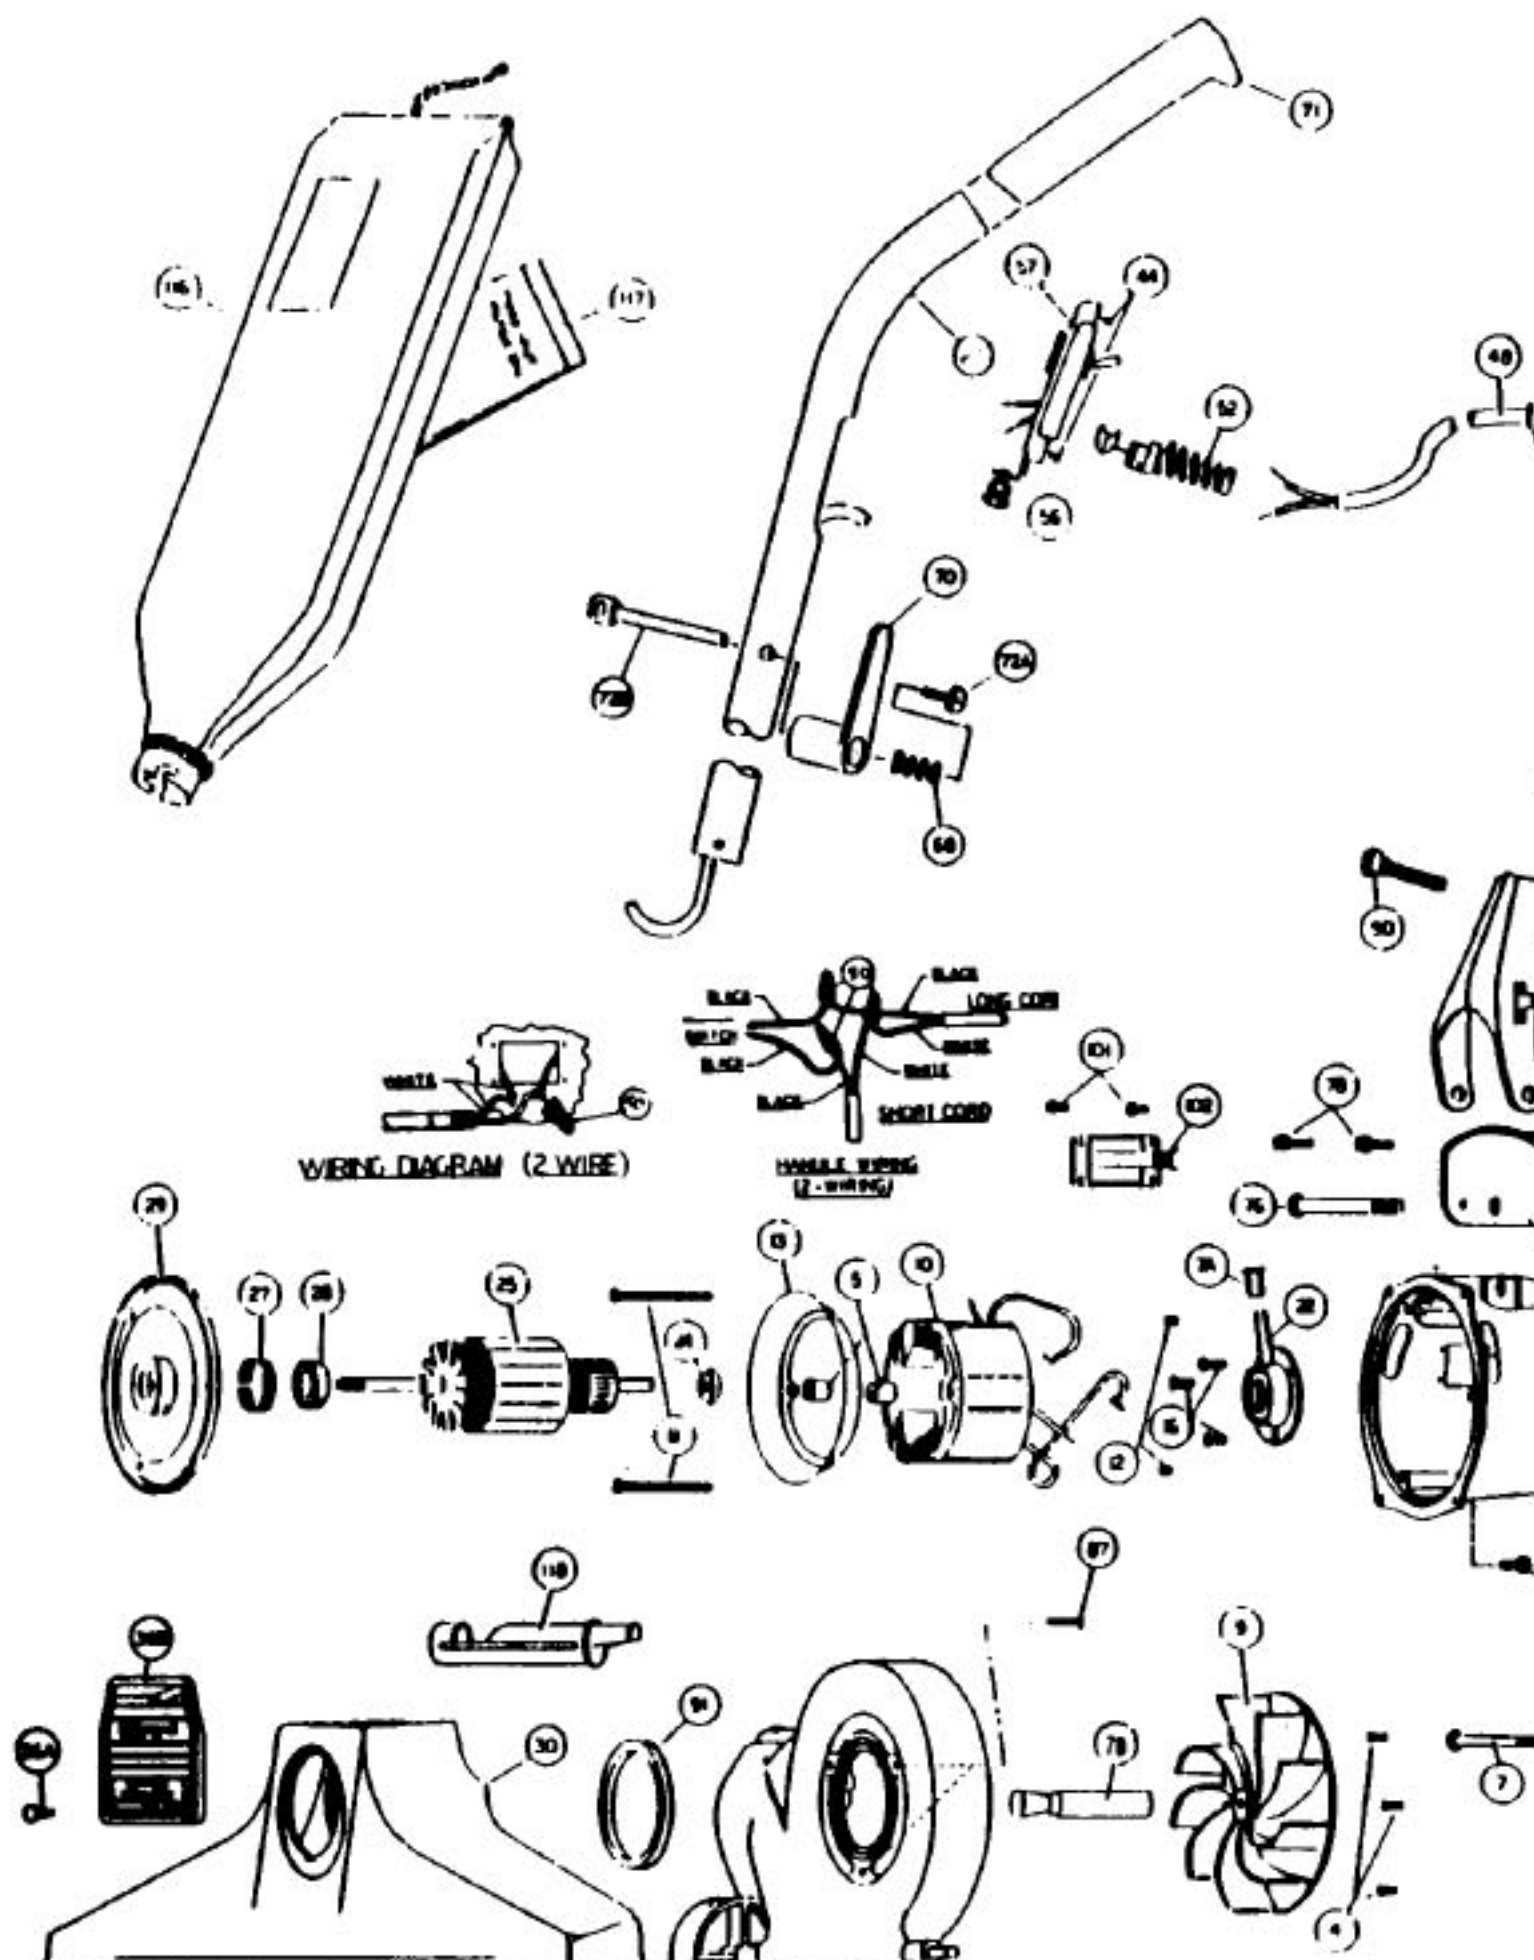

Models: 882

	NLA	Motor Unit Assy	52	R-322305	Strap
2	NLA	Carbon Brush Assy	55	NLA	Sho
3	R-003008	Spring, rear fork	56	R-880305	Strap
4	R-670013	Screw, motor plate ret.	57	R-028537	Swi
5	R-618772	Baffle Spacer	62	R-0655330	Har
6	R-672103	Brush Holder & Screw Assembly	66A	R-670844	Cor
7	R-311031	Screw & Washer Assembly	67	R-0887326	Upp
7A	R-065028	Oiler Cap	68	R-003884	Spr
7B	R-380261	Drive Shaft	70	R-259318	Upp
8	R-618016	Screw, field retainer	71	R-801314	Har
9	R-608005	Fan, heavy duty	72A	R-597743	Scr
10	R-780002	Field, 120v	72B	R-884708	Eye
11	NLA	Motor Housing Assembly	73	R-004723	Spr
11A	R-670705	Spring Pin	74	R-133714	Har
11B	R-690715	Release Pedal	76	R-801708	Bol
11C	R-672009	Spring, release pedal	77	R-801714	Nut
12	R-801014	Set Screw, brush holder	78	R-990104	Scr
13	R-801017	Baffle Plate	79	R-028580	Har
14	R-801019	Brush Holder	85	R-003311	Wa
15	R-801034	Brush Holder Protector Cap	86	R-005138	Wa
16	R-801701	Screw, rear bearing retainer	87	R-023309	Scr
	R-082105	Rear Wheel, Fork & Shaft Assy	90	R-230713	Car
19	R-880705	Wheel, 2 1/2" diam.	91	R-2854270	Gas
20	R-801711A	Wheel Retainer	92	R-880705	Wid
21	R-670007	Rear Fork & Shaft Assembly	93	R-285720	Win
22	R-080126	Rear Bearing Assembly	96	R-801711A	Wh
	R-088407	Motor Plate & Armature Assy	98	R-980743	Scr
24	R-175053	Washer, oil slinger	100	R-672260	Bel
25	R-680001	Armature, 120v	102	R-183749	Sid
	NLA	Motor Plate & Bearing Assy	101	R-360753	Scr
27	R-880046	Tolerance Ring	104	R-672270	Noz
28	R-880026	Ball Bearing	105	R-655225	Bru
29	R-884003	Motor Plate		R-059721	Bru
30	R-671026	Nozzle Assembly	116	R-088242	Bag
35	NLA	Nozzle Casting	117	R-3067247	Pap
36A	NLA	Rivet, nozzle plug	117	R-671075	Pap
36B	R-670744B	Nozzle Plug, grey	117	R-66247	Pap
37	R-101161	Fancase Assembly	117	745	Pap
	NLA	Handle & Cord Assembly	118	R-880262	Bel
41	R-230324	Grommet	119	R-110773	Inse
42	R-003311	Lockwasher	121	R-1300086	Cov
43	R-023311	Lockwasher	121	R-130008B	Cov
44	R-801701	Screw, switchplate			
45	R-801710	Wingnut, small			
46	R-801712	Screw, adaptor clamp			
	NLA	Switch & Cord Assembly			