

 
This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Royal 994 Owner's Manual

[Shop genuine replacement parts for Royal 994](#)


Models: 994

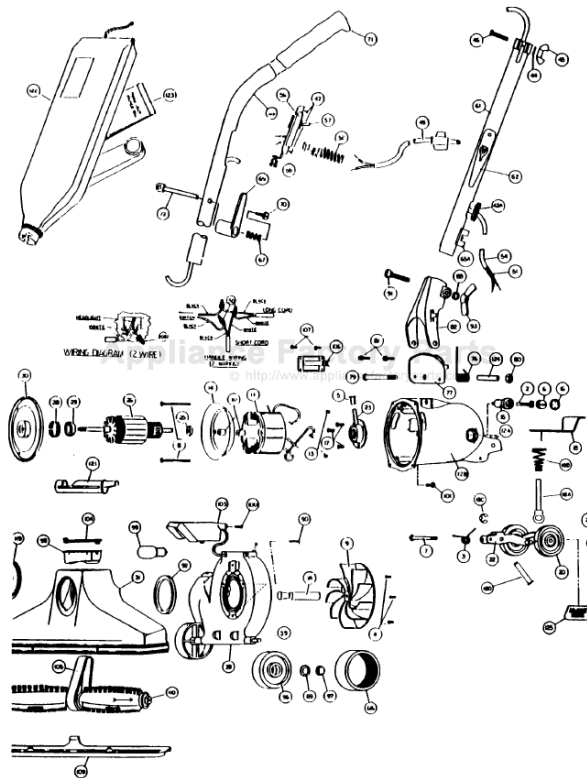

[Find Your Royal Vacuum Cleaner Parts - Select From 772 Models](#)

----- Manual continues below -----

 Models: 994

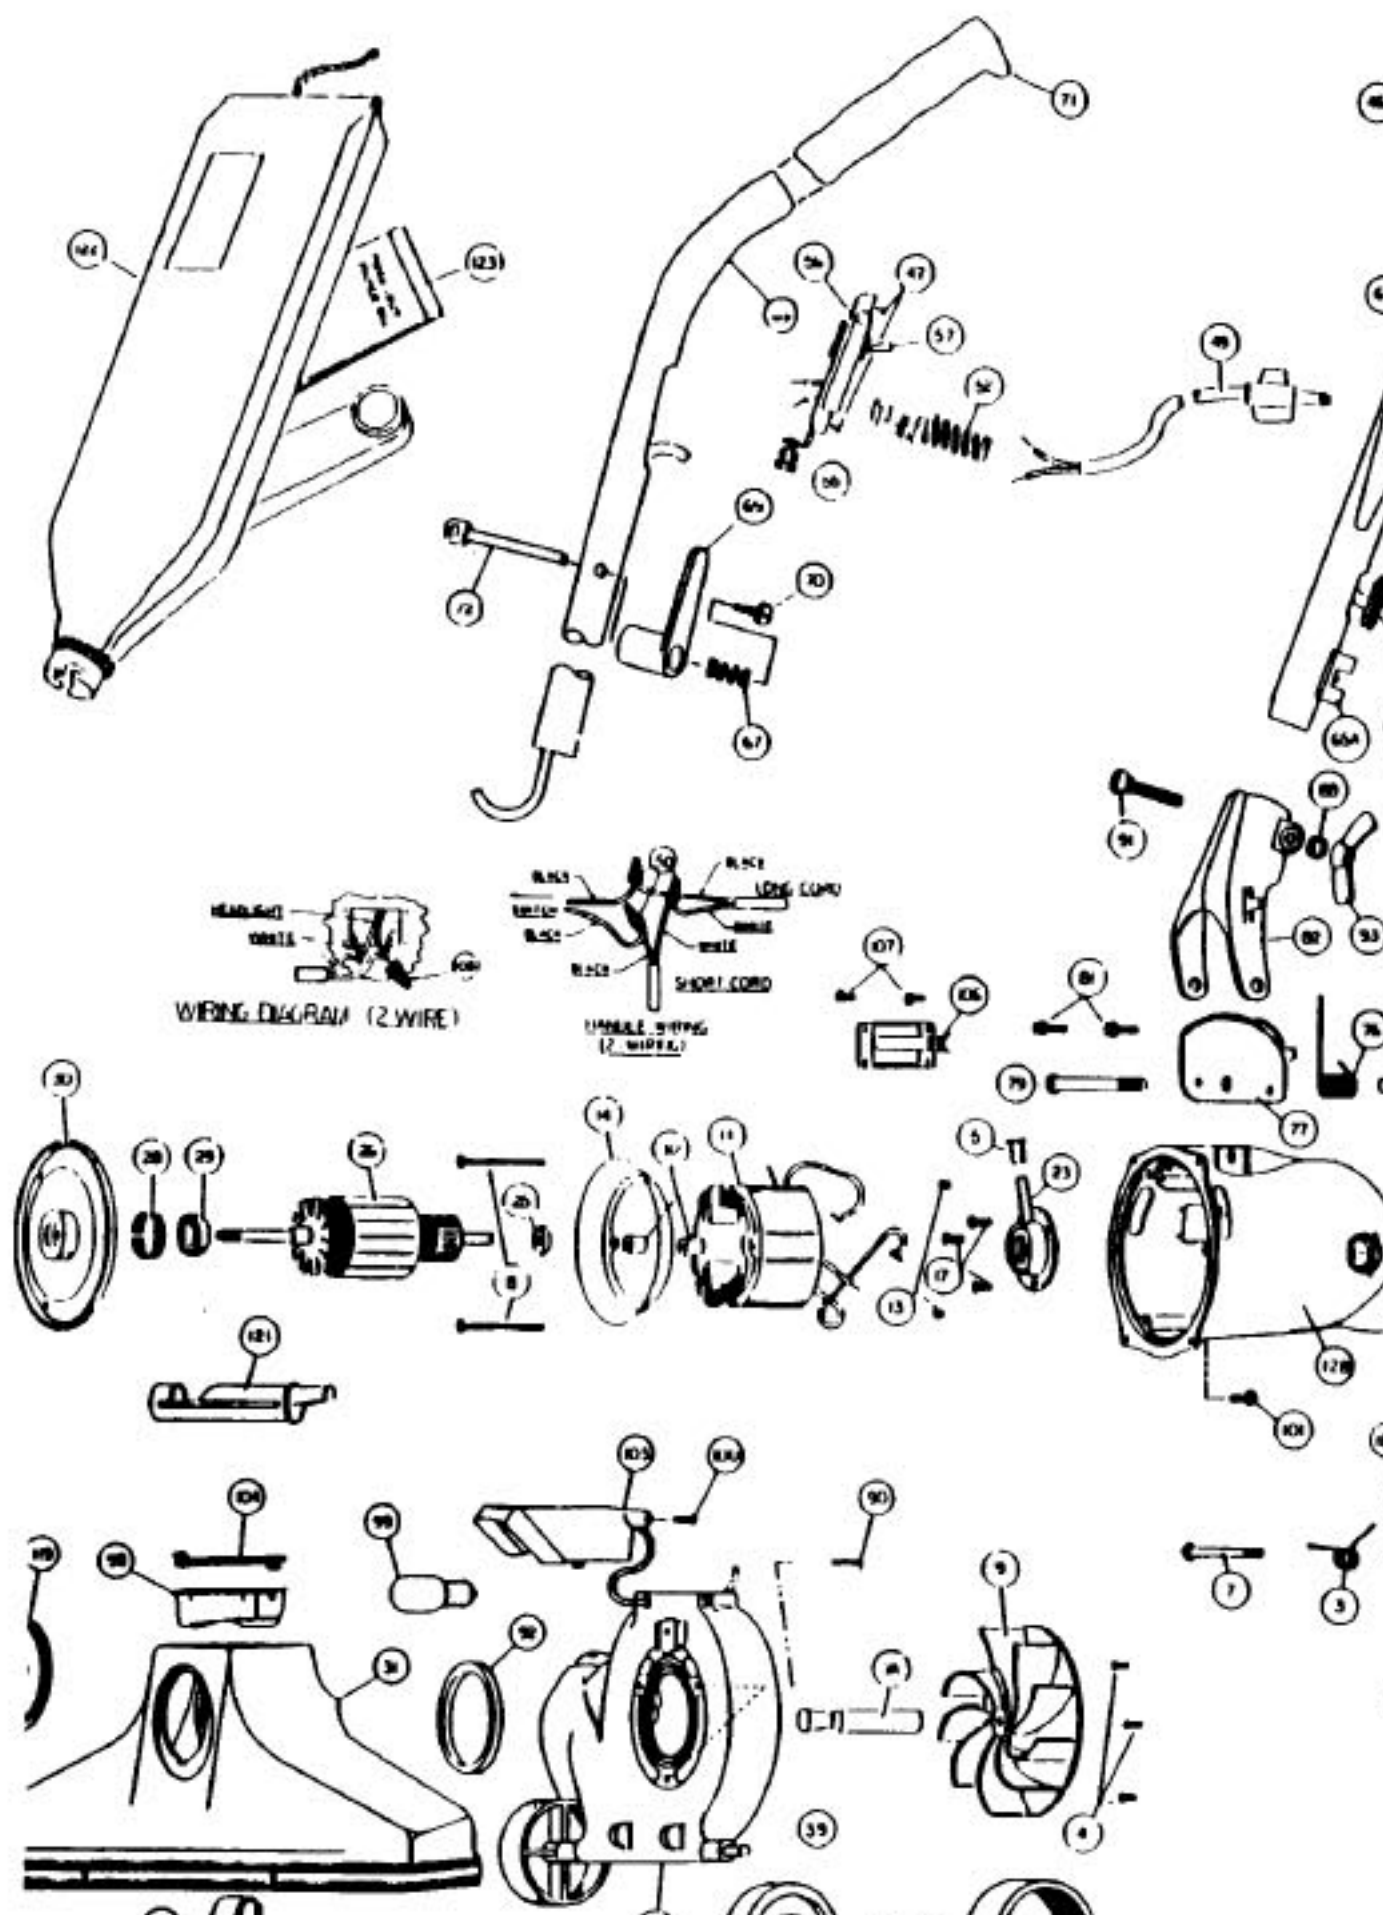

Models: 994

	NLA	Motor Unit Assy	55.....	R-880305	Strain
2.....	NLA	Carbon Brush Assy	56.....	R-028537	Switc
3.....	R-003008	Spring, rear fork	57.....	R-163302	Togg
4.....	R-670013	Screw, motor plate ret.	61.....	R-0655330	Hanc
5.....	R-065028	Oiler Cap	62.....	R-259316	Cord
6.....	R-672103	Brush Holder & Screw Assembly	65A.....	R-670844	Cord
7.....	R-311031	Screw & Washer Assembly	66.....	R-088732B	Upp
7A.....	R-380261	Drive Shaft	67.....	R-003884	Spring
8.....	R-618016	Screw, field retainer	69.....	R-259318	Upp
9.....	R-608005	Fan, heavy duty	70.....	R-597743	Scre
10.....	R-618772	Spacer, baffle	71.....	R-801314	Hanc
11.....	R-780002	Field, 120v	72.....	R-884708	Eye
	NLA	Motor Housing Assembly	76.....	R-004723	Spring
12A.....	R-110775	Sleeve, rod adjuster	77.....	R-133714	Hanc
12B.....	NLA	Motor Housing	79.....	R-801708	Bolt,
13.....	R-801014	Set Screw, brush holder	80.....	R-801714	Nut,
14.....	R-801017	Baffle Plate	81.....	R-990104	Scre
15.....	R-801019	Brush Holder	82.....	R-028580	Hanc
16.....	R-801034	Brush Holder Protector Cap	88.....	R-003311	Wash
17.....	R-801701	Screw, rear bearing retainer	89.....	R-005138	Wash
18.....	R-133715	Adjuster Release	90.....	R-023309	Scre
18A.....	R-996011	Rod Adjuster	91.....	R-230713	Carri
18B.....	R-003009	Spring, rod	92.....	R-2854270	Gask
18C.....	R-996711	E-Ring	93.....	R-285720	Wing
18D.....	R-996101	Pin, retaining	96.....	R-880705	Wide
	R-099206	Rear Wheel, Fork & Shaft Assy	97.....	NLA	Whe
20.....	R-880705	Wheel, 2 1/2" diam.	98.....	R-880118	Cher
21.....	NLA	Wheel Retainer	99.....	R-880629	Head
22.....	R-996575	Rear Fork & Shaft Assembly	100.....	R-880707	Scre
23.....	R-080126	Rear Bearing Assembly	101.....	R-980743	Scre
	R-078007	Motor Plate & Armature Assy	103.....	NLA	Head
25.....	R-175053	Washer, oil slinger	104.....	R-028563	Cove
26.....	R-780001	Armature, 120v	105.....	R-672260	Belt
	NLA	Motor Plate & Bearing Assy	106.....	R-183749	Side
28.....	R-880046	Tolerance Ring	107.....	R-360753	Scre
29.....	R-880026	Ball Bearing	108.....	R-259762	Conr
30.....	R-884003	Motor Plate	109.....	R-672270	Nozz
31.....	NLA	Nozzle Assembly	110.....	R-673273	Brush
38.....	R-060810	Fancase Assembly	119.....	R-080169	Adju
39.....	R-611101	Axle Stud	121.....	R-880262	Belt
	R-099430A	Handle & Cord Assembly	122.....	NLA	Bag
42A.....	R-230324	Grommet	123.....	R-3067247	Pape
44.....	R-023311	Lockwasher	123.....	R-671075	Pape
45.....	R-801710	Wingnut, small	123.....	R-66247	Pape
46.....	R-360713	Screw, adaptor clamp	123.....	745	Pape