

Index	Part No.	Description
1	R-503819	Screw, body
2	R-LC0331	Handle screw package
3	R-LC0333	Handle fastener
4	R-LC0320	Upper handle assembly, 5 wire
	R-LC0322	Upper handle assembly - 3 wire
5	R-LC0040	Dirt cup assembly (087900)
		Dirt cup assembly (087700)
		Dirt cup assembly (087600)
		Dirt cup assembly (087500)
6	R-910080	Latch spring
7	R-2JC0280	HEPA filter assembly
8	R-LC0200	Brush roll assembly
9	R-910380	End cap
10	R-910385	Bearing support
11	R-1LC001	Style 12 belt
12	R-860081	Power switch
13	R-LC0400	DC Motor
14		Hi/low speed switch assembly
15		Screw, gear drive
16	R-LC0430	Gear drive assembly
17	R-LC0455	Gear return spring
18	R-LC0650	PCB self propelled
19	R-LC0035	Roller
20	R-LC0070	Handle release pedal
21	R-JC0070	Handle release pedal spring
22	R-LC0670	Power cord
23	R-JC0290	Motor assembly
24	R-881130	Grommet
25	R-881060	Pivot seal
26	R-920906	Bulb #906
27	R-72038	Belt, guide clip
28	R-JC0245	Extension wand
29	R-JC0255	Dust brush assembly
30	R-JC0250	Crevice tool
31	R-UT000	Turbo tool
32	R-790655	Cord hook
33	R-910298	Height adjustment bushing
34	R-912495	Enable micro switch
35	R-LC0025	Switch pedal
36		Nozzle base assembly
37		Nozzle cover assembly (087900)
		Nozzle cover assembly (087700)
		Nozzle cover assembly (087600)
		Nozzle cover assembly (087500)
38		Nozzle guard assembly
39	R-LC0240	Lower hose
40	R-JC0010	Upper hose assembly
41	R-LC0046	Dirt cup inlet gasket
42	R-LC0048	Dirt cup gasket
43	R-210376	Roller axle pin
44	R-LC0075	Bumper
45	R-LC0450	Gear housing pivot clamp
46	R-LE0332	Handle locking assembly

