

1

Parts to assemble:
 1 Front Panel
 1 Side Support Brace
 4 Carriage Bolt, 2"
 4 Plastic Tie Knob

A. Lay leg assemblies on their sides.
 B. Lay front panel on top of legs.
 C. Brace and tie knob.
 D. Secure with carriage bolts and tie knobs.
NOTE: Leave tie knobs loose on right side.

Front Panel
 Side Support Brace (fits inside legs)
 Leg Assembly
 Leave these loose.

Qty. 4
 Qty. 4

4

Parts to assemble:
 1 Grill Bottom Assembly
 4 Carriage Bolt, 1/2"
 4 Hex Nut
 2 Control Knob

A. Stand cart upright.
 B. Make sure ignitor wire is connected to burner.
 C. Push grill bottom onto supports. Control panel (average front panel).
 D. Secure with carriage bolts and wing nuts.
 E. Press control knobs onto valves.

Grill Bottom
 Control Knobs
 Ignitor Wire
 Control Panel

Qty. 4
 Qty. 4

2

Parts to assemble:
 1 Tank Support Bracket
 2 Wheel
 2 Axle Bolt
 2 Hitch Pin
 2 Leg Extender

A. Turn assembly upside-down.
 B. Push tank support bracket to left to and back brace to right leg with carriage bolts and tie knobs. **NOTE:** Leave tie knobs on right side.
 C. Insert axle bolts through wheels, left legs and front casters. Brace fits inside legs.
 D. Push hitch pins into axle bolts.
 E. Push leg extenders into right legs.

Wheel Assembly
 Tank Support Bracket
 Back Support Brace
 Leg Extender

Qty. 2
 Qty. 4
 Qty. 2

5

Parts to assemble:
 1 TV Bar
 1 Cooking Grate

A. Place V bar onto supports at each end.
 B. Place cooking grate onto grill bottom.

NOTE: Ceramic briquets are not required.

TV Bar
 Cooking Grate
 V Bar

3

Parts to assemble:
 1 Condiment Basket

A. Stand cart upright.
 B. Place condiment basket hooks over front panel bolts on inside of front leg.
 See inset **A**.
 C. Place condiment basket hooks over front panel bolts on outside of front leg. See inset **B**.
 D. Fully tighten tie knobs on both legs.

Condiment Basket

A
 B

6

Parts to assemble:
 2 Side Shelf
 8 Wing Screw

A. Place shelves onto legs.
 B. Secure with four wing screws per shelf.

Side Shelf

Qty. 8

1

Parts to assemble:
 1 Grill Bottom Assembly
 4 Carriage Bolt, 1/2"
 4 Hex Nut
 2 Control Knob

A. Stand cart upright.
 B. Make sure ignitor wire is connected to burner.
 C. Push grill bottom onto supports. Control panel (average front panel).
 D. Secure with carriage bolts and wing nuts.
 E. Press control knobs onto valves.

Grill Bottom
 Control Knobs
 Ignitor Wire
 Control Panel

Qty. 4
 Qty. 4

4

Parts to assemble:
 1 Grill Bottom Assembly
 4 Carriage Bolt, 1/2"
 4 Hex Nut
 2 Control Knob

A. Stand cart upright.
 B. Make sure ignitor wire is connected to burner.
 C. Push grill bottom onto supports. Control panel (average front panel).
 D. Secure with carriage bolts and wing nuts.
 E. Press control knobs onto valves.

Grill Bottom
 Control Knobs
 Ignitor Wire
 Control Panel

Qty. 4
 Qty. 4

2

Parts to assemble:
 1 Tank Support Bracket
 2 Wheel
 2 Axle Bolt
 2 Hitch Pin
 2 Leg Extender

A. Turn assembly upside-down.
 B. Push tank support bracket to left to and back brace to right leg with carriage bolts and tie knobs. **NOTE:** Leave tie knobs on right side.
 C. Insert axle bolts through wheels, left legs and front casters. Brace fits inside legs.
 D. Push hitch pins into axle bolts.
 E. Push leg extenders into right legs.

Wheel Assembly
 Tank Support Bracket
 Back Support Brace
 Leg Extender

Qty. 2
 Qty. 4
 Qty. 2

5

Parts to assemble:
 1 TV Bar
 1 Cooking Grate

A. Place V bar onto supports at each end.
 B. Place cooking grate onto grill bottom.

NOTE: Ceramic briquets are not required.

TV Bar
 Cooking Grate
 V Bar

3

Parts to assemble:
 1 Condiment Basket

A. Stand cart upright.
 B. Place condiment basket hooks over front panel bolts on inside of front leg.
 See inset **A**.
 C. Place condiment basket hooks over front panel bolts on outside of front leg. See inset **B**.
 D. Fully tighten tie knobs on both legs.

Condiment Basket

A
 B

6

Parts to assemble:
 2 Side Shelf
 8 Wing Screw

A. Place shelves onto legs.
 B. Secure with four wing screws per shelf.

Side Shelf

Qty. 8

Parts List - Model 463760506

Part #	Qty.	Description	Part #
A	1	SwingAway	5156507
B	1	Grease Cup	4152124
C	1	Ignitor	4152739
D	1	Ignitor Wire, 11"	4154271
E	1	Control Panel	4154488
F	2	Control Panel	4154542
G	1	Hardware Bag, Cart	4154540
H	2	Hardware Bag, Shelves	4154540
I	1	Back Support Brace	4500251
J	1	V-Bar	4500290
K	1	Tank Support Bracket	4503122
L	1	Leg Assembly	7001273
M	1	Front Panel	4503136
N	4	Side Support Brace	4503120
O	2	#10x1/2" T-20 Self-Tap Screw	4080043
P	1	Valve Clip	4151043
Q	1	Burner/Collector Assembly	4505084
R	2	Valve Hose/Regulator	4524244
S	1	Control Knob	4154470
T	1	Grill Lid	4580184
U	1	Grill Lid	4581974
V	1	Tank Retainer Wire	4151018
W	1	Logo Plate	4157147

Optional Assembly Hardware
 We realize some customers prefer to use tools. Optional hex nuts have been provided for you to use.

NO TOOLS REQUIRED

Register your grill online at
WWW.GRILLREGISTRATION.COM

STOP

If you have any problems with this product,
 call 1-800-241-7548
Monday - Friday
 Open 8:00 A. M. To 6:00 P. M. EST

Before returning this product to the store,
 We can help with damaged or missing parts,
 assembly and operation questions.

463760506 (0 - 708)118 (01-10-06)

Printed in USA

QUICKSET®

463760506 ASSEMBLY MANUAL

THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave instructions with consumer.

CONSUMER: Keep this manual for future reference.

WARNING
 Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

CAUTION
 Some parts may contain sharp edges - especially as noted in the manual! Wear protective gloves if necessary. If you have any questions or need assistance during assembly, please call 1-800-241-7548.

Visit us on the web at:
www.charbroil.com

Char-Broil
 KEEPERS OF THE FLAME
 C O U M B U S O A

© 2006 W. C. Bradley, Co., All Rights Reserved