

Models: 0490

1	R-120005	Upper Blower Housing
2	NLA	Seal, end bracket
3	R-120035	Fan
4	NLA	Spacer
5	R-120045	Washer, anti-gyro
6	NLA	Nut
7	NLA	Upper Handle & Motor Cover
8	R-120060	Exhaust Diffuser
9	NLA	Cord
10	R-120125	Screw, motor mount & ground
11	NLA	Motor Assembly
12	R-503819	Screw, body
13	R-720128	Switch, on/off
14	R-612001	Lower Blower Housing Assy
15	R-250100	Screw, body
	R-120205	Extension Wand
	NLA	Nozzle, blower
	R-259762	Wire Connector

