



1.....NLA.....	Top Housing, M060
1.....R-0601003.....	Top Housing, M070
1.....NLA.....	Top Housing, M065
1.....NLA.....	Top Housing, M061, M071
1.....NLA.....	Top Housing, M085
1.....NLA.....	Top Housing, M080
1.....NLA.....	Top Housing, M081
2.....R-060201.....	Bumper
2.....R-080201.....	Bumper, M080, M081, M085
3.....NLA.....	Foam, top housing
3.....NLA.....	Foam, top housing, M080, M081, M085
4.....R-060217.....	Brush Comb
5.....NLA.....	Plunger
6.....NLA.....	Spring
7.....R-060505.....	Door

8.....R-060530.....	Pivot
9.....NLA.....	Grip
10.....R-060273.....	Brush Roll Assy, nylon, M060, M065, M070, M080, M085
10.....R-071273.....	Brush Roll Assy, horsehair, M061, M071, M081
11.....R-060512.....	Gear Housing Assy
11.....R-080512.....	Gear Housing Assy, M080, M081, M085
12.....R-061520.....	Pan, Wheel & Pin Assy
12.....NLA.....	Pan, Wheel & Pin Assy, M080, M081, M085
12.....NLA.....	Front Pan Assy, horsehair, M061, M071
12.....NLA.....	Front Pan Assy, nylon, M065, M070
17.....R-160560.....	Tube Assembly, complete
21.....NLA.....	Tray, inner, M070, M071, M080, M081, M085