 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC E583 Owner's Manual

[Shop genuine replacement parts for PANASONIC E583](#)

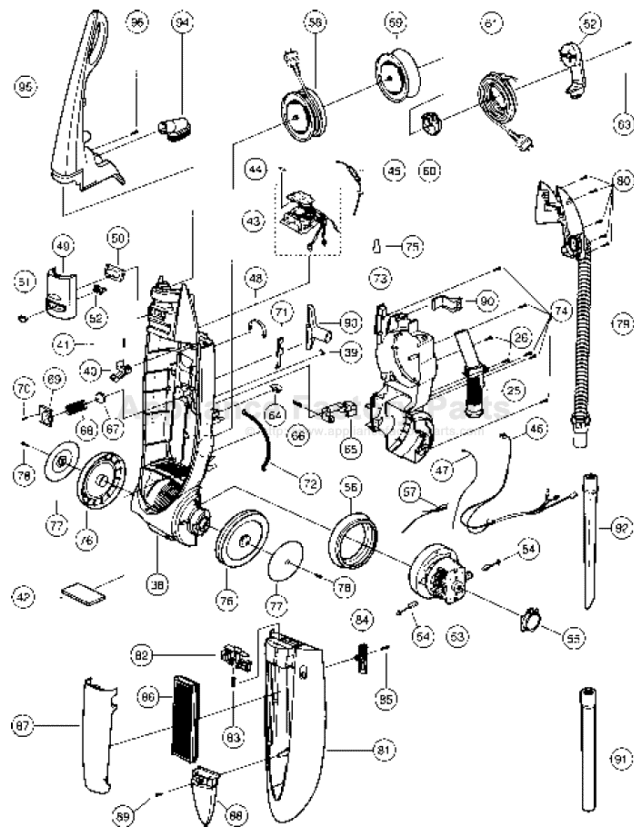 


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----



PANASONIC

Models: MC-E583

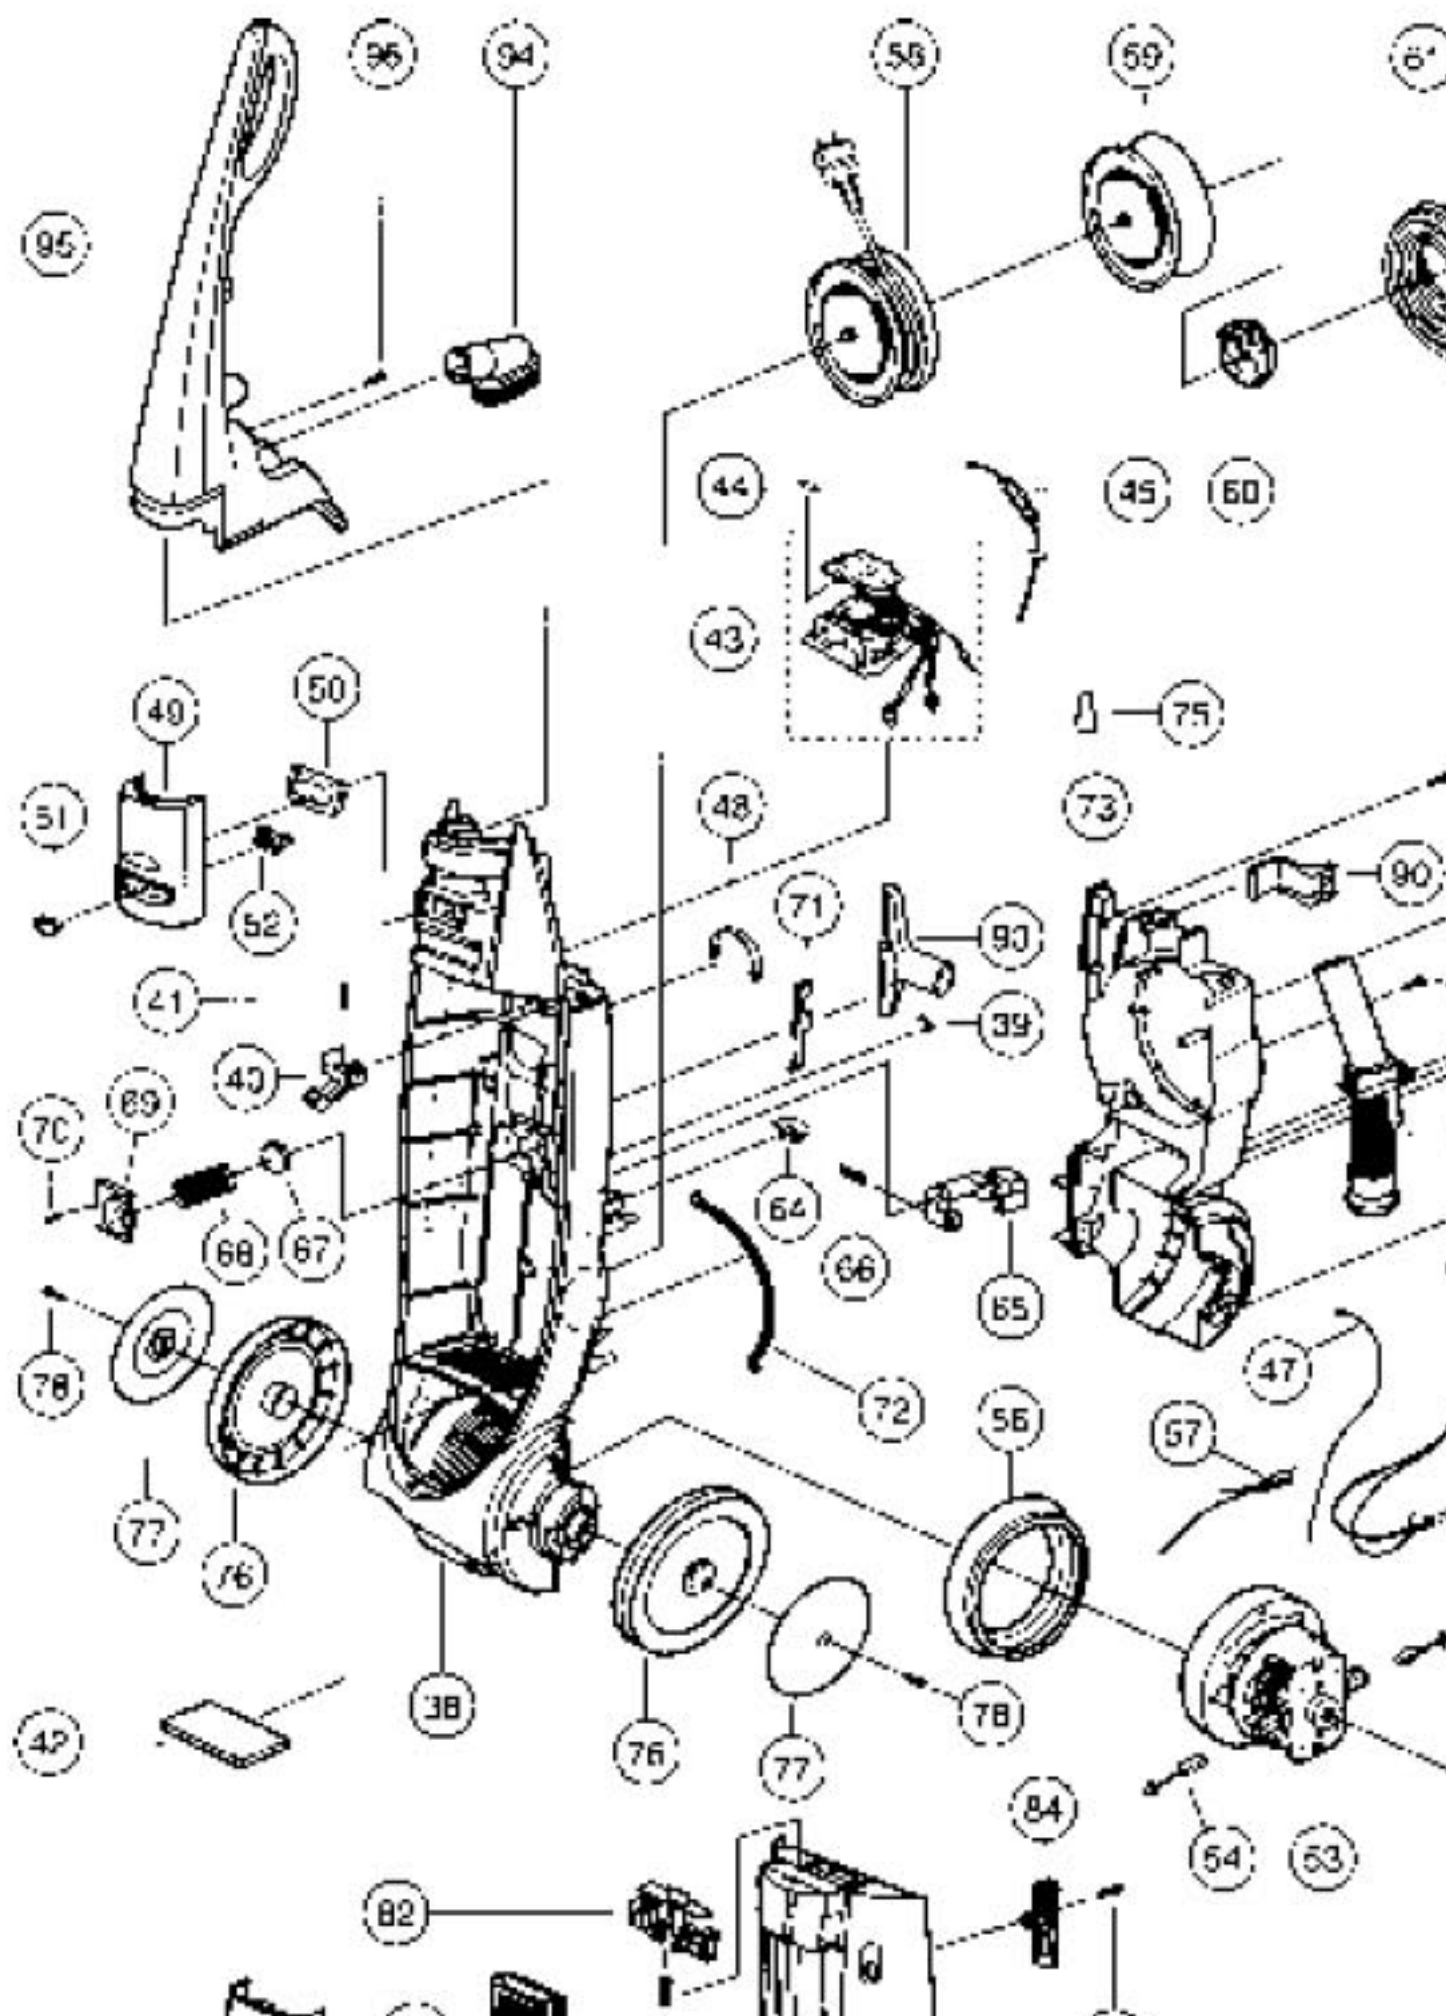

PANASONIC

  Models: MC-E583

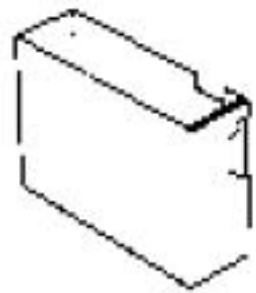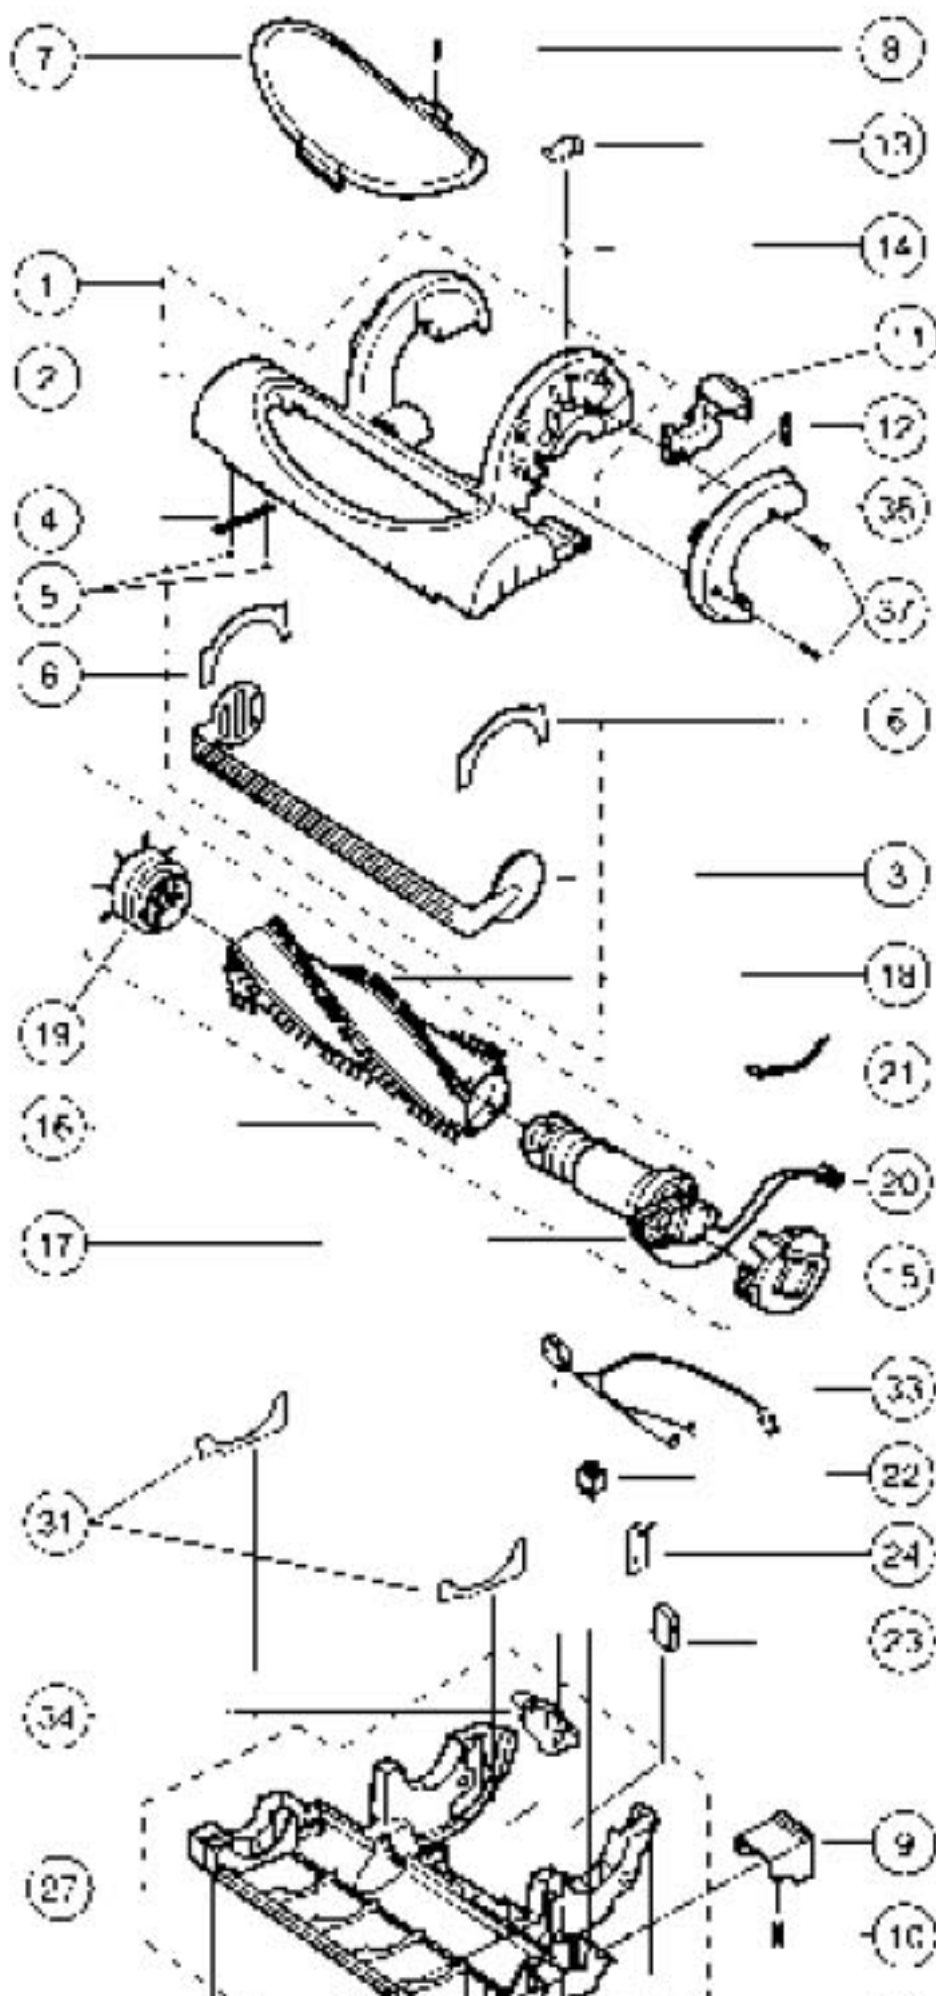

PANASONIC

Models: MC-E583

1	P-10975	Floor nozzle cover assembly	53	P-11047	Motor un
2	P-10976	Floor nozzle cover	54	P-11048	Carbon b
3	P-10977	Floor nozzle bumper	55	P-11049	rear mot
4	P-10978	Filter, nozzle cover	56	P-11050	Front mo
5	P-10979	Fixing washer	57	P-11051	thermal c
6	P-11214	Agitator, felt A	58	P-11052	cord reel
7	P-11215	View, agitator	59	P-11053	Cord reel
8	P-04180	Tapping screw	60	P-111314	Rail base
9	P-10980	Agitator pedal	61	P-11054	Power s
10	P-10981	spring	62	P-11055	Cord reel
11	P-10982	Floor nozzle pedal	63	P-11056	Tapping
12	P-10983	Spring	64	P-11057	Cord cov
13	P-10984	Frame	65	P-11058	Brake le
14	P-10985	Frame spring	66	P-11059	Spring
15	P-10986	Agitator support A	67	P-11060	Valve
16	P-10987	Agitator unit	68	P-11061	Valve sp
17	P-10988	Agitator motor	69	P-11062	Valve ca
18	P-10989	Agitator body	70	P-04180	Tapping
19	P-10990	Agitator side brush	71	P-11063	Cable co
20	P-19991	Lead wire A	72	P-11064	Cable co
21	P-10992	Thermal cut out, agitator	73	P-11065	Upper br
22	P-10993	On/Off switch, agitator	74	P-04180	Tapping
23	P-10994	Overcurrent circuit breaker	75	P-11066	Wire con
24	P-10995	Insulating plate	76	P-11067	Wheel
25	P-10996	Conexion pipe unit	77	P-11068	Wheel c
26	P-04180	Tapping screw	78	P-11069	Fixing sc
27	P-10997	Base plate assembly	79	P-11070	Hose ass
28	P-10998	Fixing wheel unit A	80	P-04180	Tapping
29	P-10999	Fixing wheel unit B	81	P-11071	Dust cov
30	P-11001	Brush unit	82	P-11072	Locking
31	P-11002	Rotary felt B	83	P-11073	Locking
32	P-11003	Foam seal	84	P-11074	Dust ind
33	P-11004	Agitator safety switch	85	P-04180	Tapping
34	P-11005	Safety lever unit	86	P-11075	Exhaust
35	P-04180	Tapping screw	87	P-11076	Exhaust
36	P-11006	Connections cover	88	P-11077	End exh
37	P-4121	Tapping screw	89	P-04180	Tapping
38	P-11008	Lower body assembly	90	P-11078	Extensio
39	P-11009	Upholstery nozzle clip	91	P-11079	Extensio
40	P-11010	Paper bag clamp	92	P-11080	Crevice
41	P-11036	Spring	93	P-11081	Upholste
42	P-11037	Central filter	94	P-11088	Dusting
43	P-11038	Power control circuit	95	P-11083	Handle u
44	P-111249	Fuse T6, time lag	96	P-11084	Handle s
45	P-11039	Fuse unit	97	P-11085	Set cover
46	P-11040	Lead wire D	98	P-11086	Paper ba
47	P-11041	Lead wire B	99	P-11087	Cloth du
48	P-11042	Sensor cover	101	P-11088	Cushion
49	P-11043	Control panel	102	P-11089	Cushion
50	P-11044	LED indicator	103	P-11090	Cushion
51	P-11045	Potentiometer button	104	P-11091	Carton b
52	P-11046	Button supplement			