


PANASONIC

Models: MC-5210, MC-5217, MC-5220, MC-5230, MC-5237,
MC-5240, MC-5250, MC-5255, MC-5267, MC-5277

Nozzle Housing


1.....	NLA.....	Nozzle Housing, 5210
1.....	NLA.....	Nozzle Housing, 5217
1.....	P-0126.....	Nozzle Housing, 5220
1.....	P-0127.....	Nozzle Housing, 5230
1.....	NLA.....	Nozzle Housing, 5237
1.....	P-01220.....	Nozzle Housing, 5240
1.....	P-012206.....	Nozzle Housing, 5250
1.....	P-012209.....	Nozzle Housing, 5255
1.....	NLA.....	Nozzle Housing, 5267
1.....	P-000273.....	Nozzle Housing, 5277
2.....	P-2123.....	Window, 5210
2.....	N/A.....	Window, 5217
2.....	P-2124.....	Window, 5220
3.....	P-2125.....	Window, 5230, 5237, 5240, 5250, 5255, 5267, 5277
3.....	P-2500.....	Plastic Shaft
4.....	P-1020.....	Furniture Guard, 5210
4.....	P-1021.....	Furniture Guard, 5220
4.....	P-1022.....	Furniture Guard, 5217, 5230
4.....	P-10200.....	Furniture Guard, 5237, 5240, 5267
4.....	P-10209.....	Furniture Guard, 5250
4.....	N/A.....	Furniture Guard, 5255
4.....	P-000274.....	Furniture Guard, 5277
5.....	P-683.....	Screw, latch hooks
6.....	P-81.....	Tight Packing
7.....	P-000095.....	Frame
8.....	P-4720.....	Pedal
9.....	P-1124.....	Belt Cover
10.....	P-5120.....	Pedal Shaft
11.....	NLA.....	E-Clip
11.....	NLA.....	E-Clip, 5217, 5237, 5240, 5250, 5255
12.....	P-416.....	Screw, frame, 5210, 5220, 5230
12.....	P-000132.....	Screw, frame, 5217, 5267, 5277
13.....	P-000010.....	Pedal Spring
15.....	P-428.....	Screw, spacer
16.....	P-7411.....	Spacer
17.....	P-000132.....	Screw, pedal shaft
18.....	P-2287.....	Belt, type UB, 2 pack
18.....	P-200.....	Belt, sold each (R)
19.....	P-8220.....	Agitator Holder
20.....	P-8939.....	Bottom Plate Assembly
21.....	P-742.....	Bottom Plate Packing, rear
22.....	P-392.....	Bottom Plate Packing, right
23.....	P-000133.....	Bottom Plate Only, 5217, 5267, 5277
24.....	P-000157.....	Lead Wire, black, 5267
24.....	P-000275.....	Lead Wire, black, 5277
25.....	P-2423.....	Wire Bushing
26.....	P-8521.....	Bulb Supporter
26.....	P-000011.....	Bulb Supporter, 5267, 5277
27.....	P-938.....	Lamp Holder
27.....	P-93001.....	Lamp Holder, 5277
28.....	P-2810.....	Bulb
29.....	P-000132.....	Screw, bulb supporter
30.....	N/A.....	Screw, lamp holder
30.....	P-000276.....	Screw, lamp holder, 5277
31.....	P-704.....	Stop Latch Spring
32.....	P-684.....	Latch, 5210, 5220, 5230
32.....	P-2751.....	Latch, 5217
32.....	P-8030.....	Latch, 5237

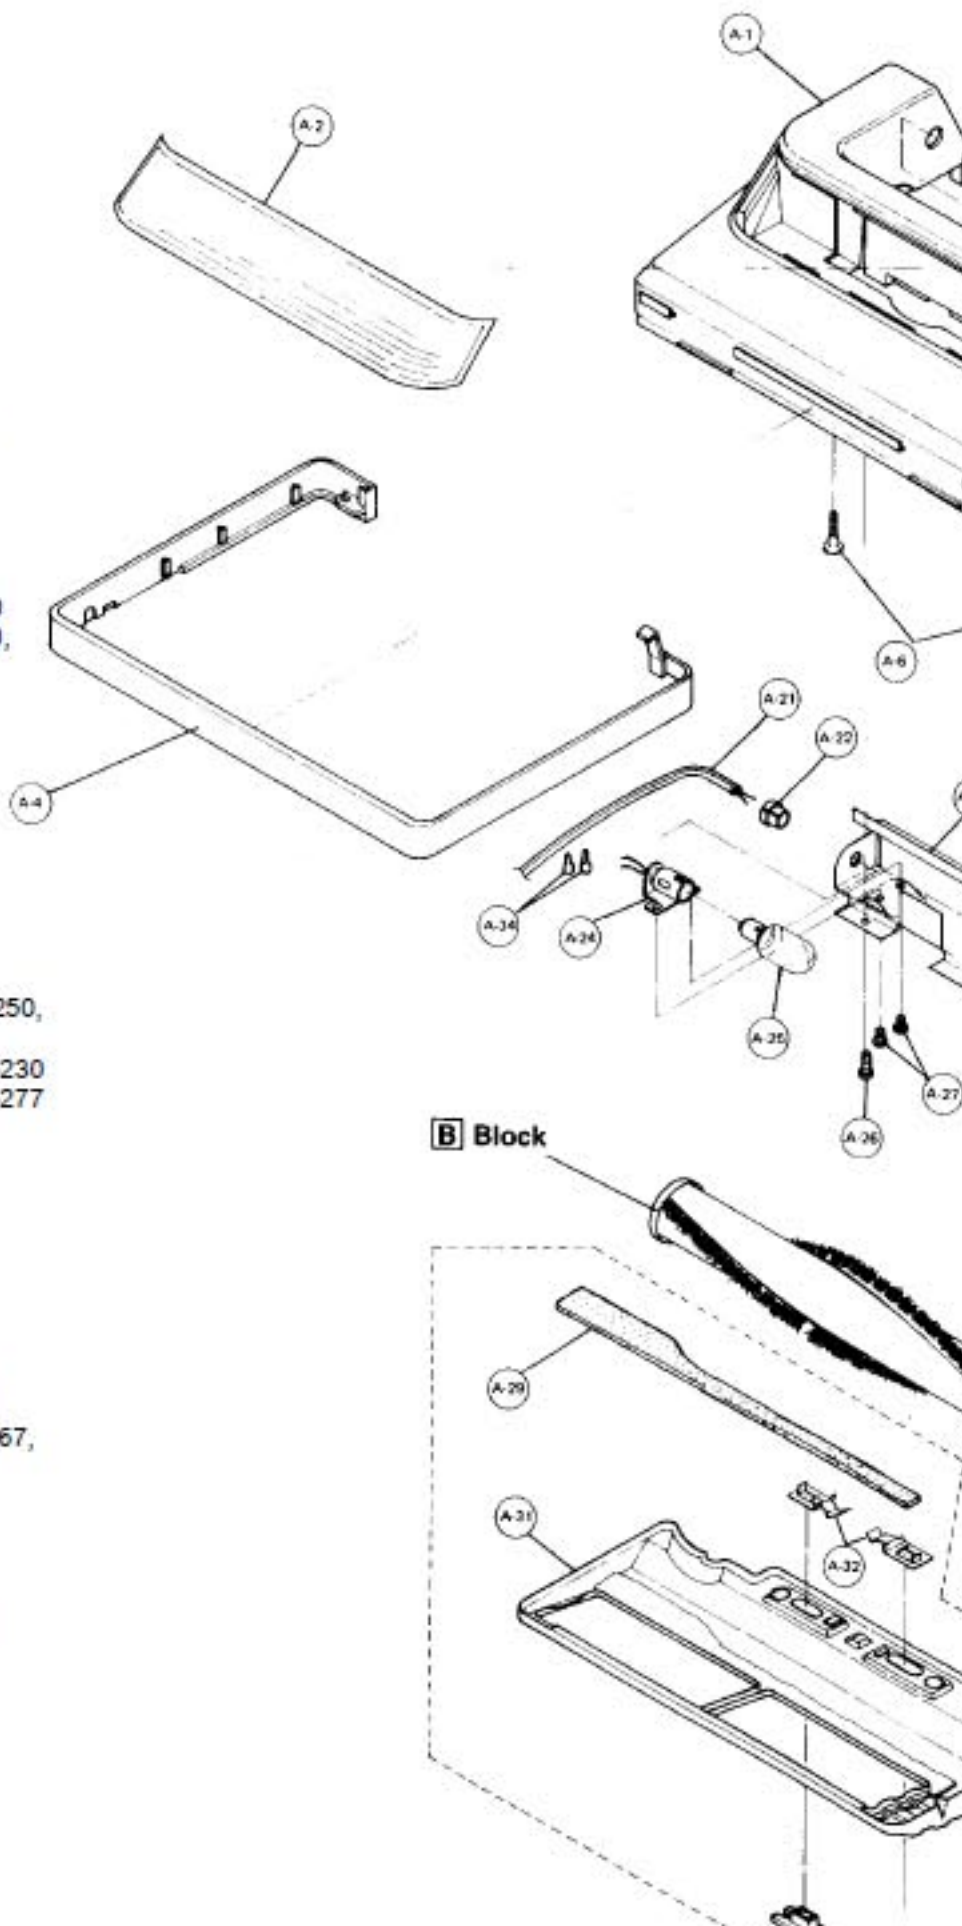

PANASONIC

Models: MC-5210, MC-5217, MC-5220, MC-5230, MC-5237,
MC-5240, MC-5250, MC-5255, MC-5267, MC-5277

Motor Housing

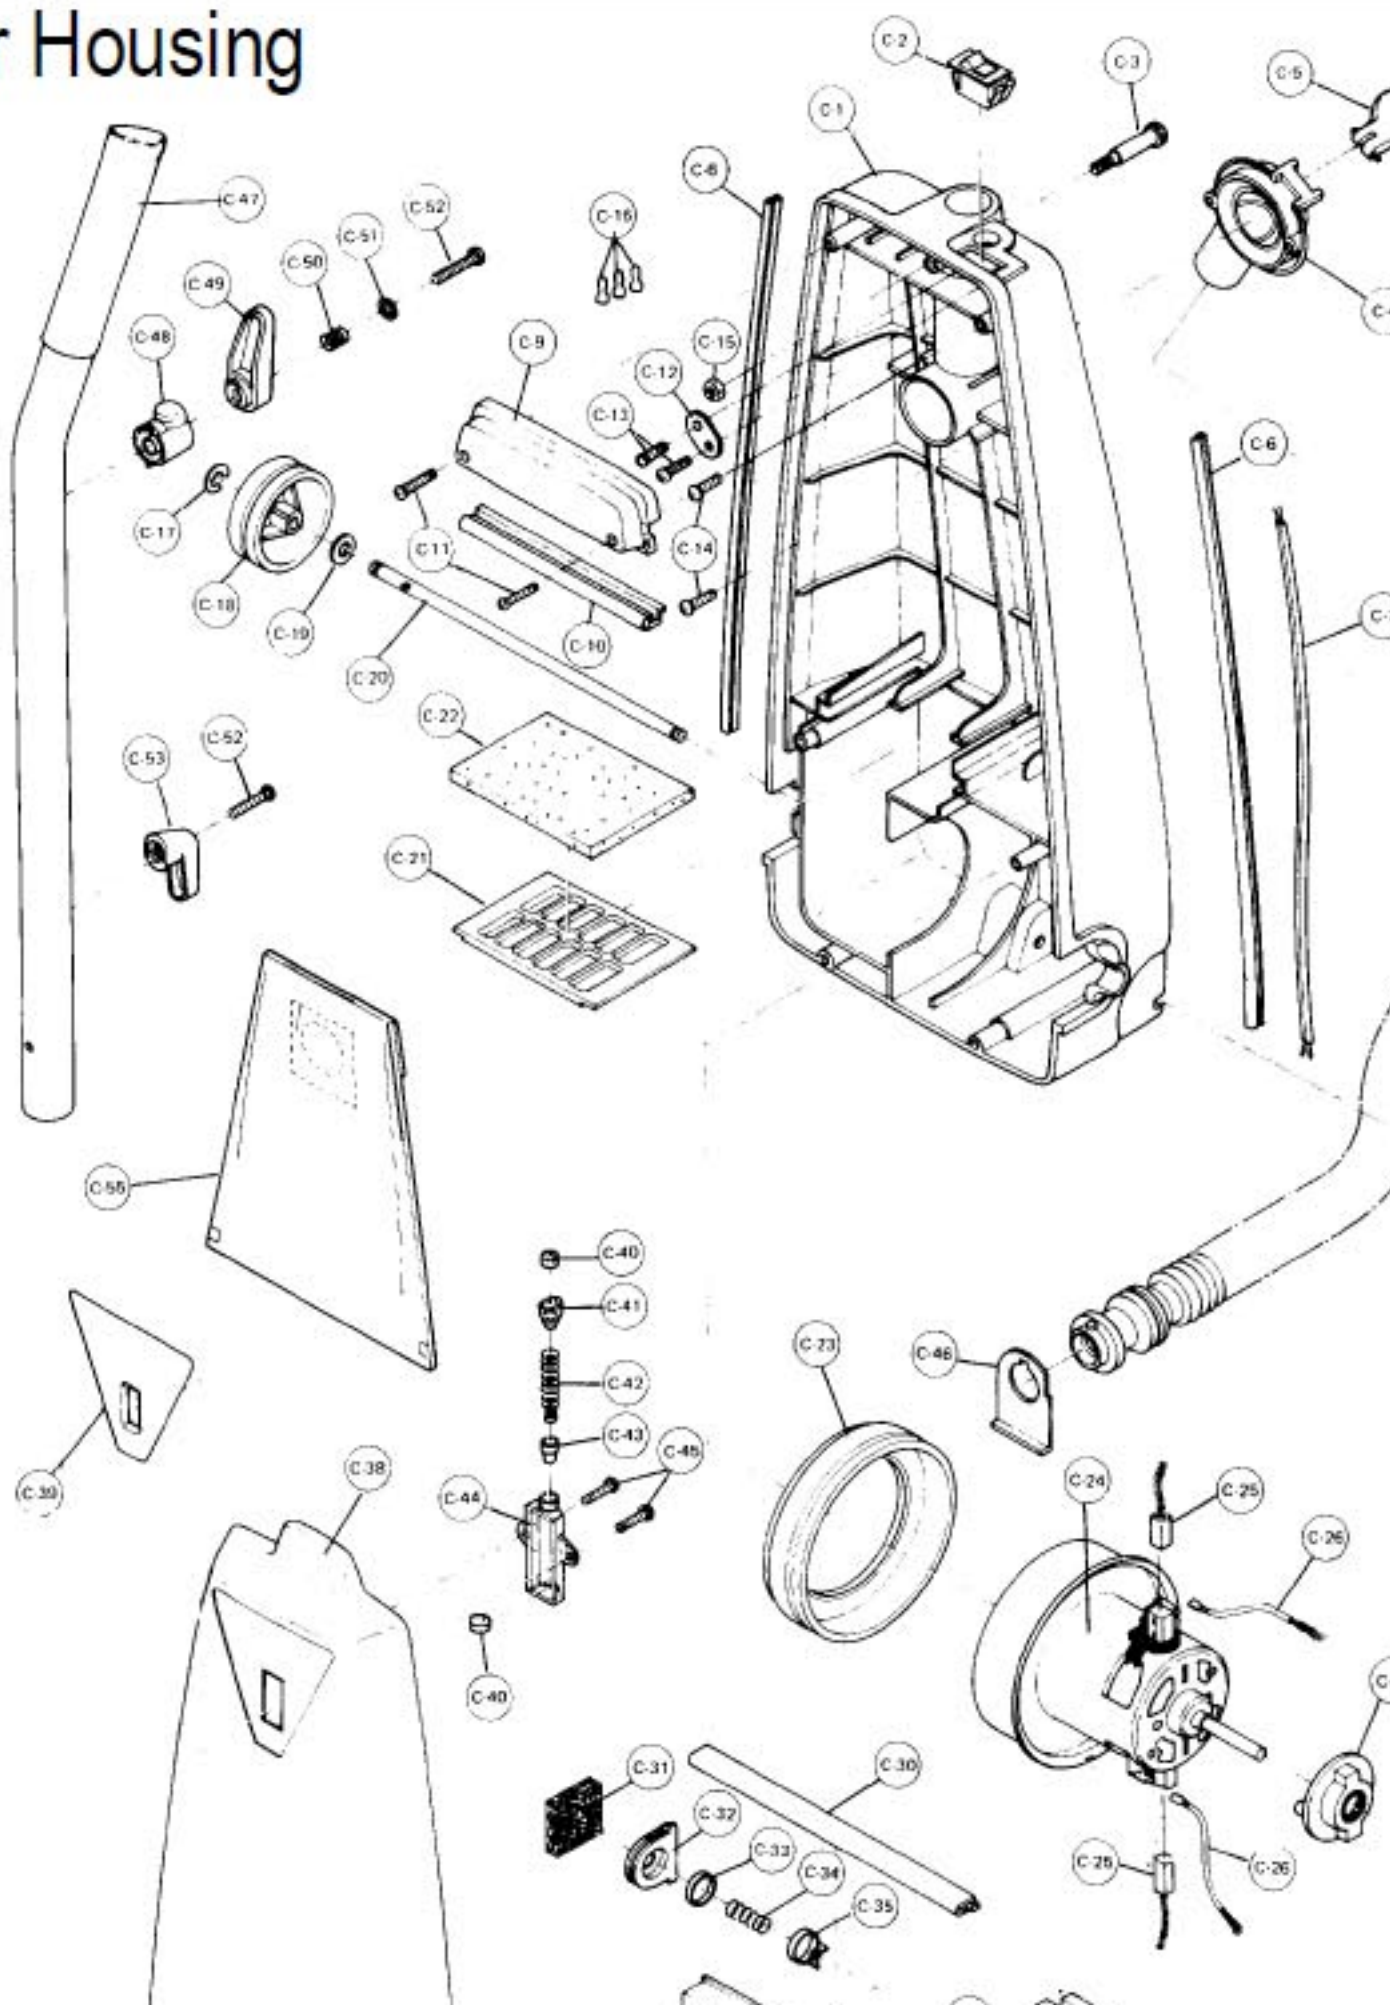

PANASONIC

Models: MC-5210, MC-5217, MC-5220, MC-5230, MC-5237,
MC-5240, MC-5250, MC-5255, MC-5267, MC-5277

1.....	P-4021	Dust Compartment, 5210	19.....	P-000142	Washer	48.....	P-642
1.....	P-4022	Dust Compartment, 5220	20.....	P-161	Roller Shaft	48.....	P-642
1.....	P-000134	Dust Compartment, 5230, 5217	21.....	P-3200	Filter Supporter	48.....	P-642
1.....	P-4004	Dust Compartment, 5237	22.....	P-375	Secondary Filter	49.....	P-550
1.....	P-40020	Dust Compartment, 5240	22.....	P-9829	Secondary Filter, 5277	49.....	P-550
1.....	P-40026	Dust Compartment, 5250	23.....	P-0293	Motor Supporter, rubber, front	49.....	P-550
1.....	P-40029	Dust Compartment, 5255	24.....	P-926	Motor Assembly	49.....	P-550
1.....	P-000097	Dust Compartment, 5267, 5277	24.....	P-000144	Motor Assembly, 5277		
2.....	P-8913	On/Off Switch	25.....	P-272	Carbon Brush	49.....	P-550
3.....	P-7301	Handle Screw	25.....	P-0035	Carbon Brush, 5240, 5250, 5255, 5267	49.....	P-550
4.....	P-6077	Suction Inlet, 5210	25.....	P-10393	Carbon Brush, 5277	49.....	P-550
4.....	P-6078	Suction Inlet, 5220	26.....	P-0036	Brush Retainer Bracket	50.....	P-530
4.....	P-6076	Suction Inlet, 5217, 5230	27.....	P-0037	Screw, brush, not illustrated	50.....	P-530
4.....	P-60704	Suction Inlet, 5237		P-441	Lead Wire, 5237	50.....	P-530
4.....	P-0054	Suction Inlet, 5240	28.....	P-9911	Motor Support, rubber, rear		
4.....	NLA	Suction Inlet, 5250	29.....	P-9920	Noise Suppressor	50.....	P-530
4.....	P-60209	Suction Inlet, 5255	29.....	P-9930	Noise Suppressor, 5217	50.....	P-530
4.....	N/A	Suction Inlet, 5267, 5277	29.....	P-99300	Noise Suppressor, 5217, 5237, 5240, 5250, 5255, 5267, 5277	50.....	N/A
5.....	P-0275	Cover, 5210	30.....	P-0902	Motor Case, 5210	51.....	P-767
5.....	P-0276	Cover, 5220	30.....	P-0903	Motor Case, 5220	52.....	P-587
5.....	P-02704	Cover, 5237	30.....	P-0904	Motor Case, 5217, 5230	53.....	P-430
5.....	NLA	Cover, 5240	30.....	P-09004	Motor Case, 5237	54.....	P-540
5.....	P-2716	Cover, 5250	30.....	N/A	Motor Case, 5240	54.....	P-540
5.....	P-2710	Cover, 5255	30.....	P-09026	Motor Case, 5250	54.....	P-540
5.....	P-0274	Cover, 5217, 5230	30.....	P-090209	Motor Case, 5255	54.....	P-540
5.....	P-000139	Cover, 5267, 5277	30.....	P-000096	Motor Case, 5267, 5277	54.....	P-540
6.....	P-66	Rubber Gasket, 5210, 5217, 5220, 5230, 5237	31.....	P-195	Motor Case Packing	54.....	P-540
6.....	P-6601	Rubber Gasket, 5240, 5267, 5277	31.....	P-1912	Motor Case Packing, 5240, 5267, 5277	54.....	P-540
6.....	P-66011	Rubber Gasket, 5250, 5255	31.....	P-1913	Motor Case Packing, 5255	55.....	MP-2
7.....	P-3820	Wire Cord	32.....	P-333	Protector Filter	55.....	MP-2
8.....	NLA	Nozzle Hose, 5210	33.....	P-000058	Protector Supporter	55.....	P-970
8.....	P-3407	Nozzle Hose, 5220	34.....	P-692	Protector	55.....	P-970
8.....	N/A	Nozzle Hose, 5217, 5230	35.....	P-000057	Protector Spring	55.....	P-970
8.....	NLA	Nozzle Hose, 5237	36.....	P-000056	Protector Case	55.....	P-000
8.....	P-34010	Nozzle Hose, 5240	37.....	P-201	Rear Cover Packing	56.....	P-115
8.....	P-34016	Nozzle Hose, 5250	38.....	P-000132	Screw, motor case	56.....	P-115
8.....	P-34019	Nozzle Hose, 5255	39.....	NLA	Dust Cover, 5210	56.....	253
8.....	P-000140	Nozzle Hose, 5267, 5277	39.....	N/A	Dust Cover, 5217	56.....	253-1
9.....	NLA	Switch Cover, 5210	39.....	NLA	Dust Cover, 5220	56.....	MF-1
9.....	NLA	Switch Cover, 5220	39.....	NLA	Dust Cover, 5230		
9.....	P-0308	Switch Cover, 5217, 5230	39.....	P-60200	Dust Cover, 5237		ATTACHMEN
9.....	P-003	Switch Cover, 5237	39.....	NLA	Dust Cover, 5240		P-942
9.....	P-0302	Switch Cover, 5240	39.....	NLA	Dust Cover, 5250		NLA
9.....	P-03020	Switch Cover, 5250	39.....	P-000478	Dust Cover, 5255		NLA
9.....	P-03029	Switch Cover, 5255	39.....	P-000160	Dust Cover, decorated, 5267		P-009
9.....	P-000158	Switch Cover, 5267	39.....	P-000146	Dust Cover, decorated, 5277		
9.....	P-000141	Switch Cover, 5277		P-2126	Ornamental Plate, 5210		NLA
10.....	P-73012	Switch Cover Packing		P-000137	Ornamental Plate, 5217		
10.....	P-73013	Switch Cover Packing, 5250, 5255	40.....	P-1125	Vac Gauge Plate, 5220		
11.....	P-416	Screw, switch cover, 10 pk, 5210, 5220, 5230, 5237	40.....	P-1126	Vac Gauge Plate, 5230		
11.....	P-000132	Screw, switch cover, 5240, 5250, 5255, 5267, 5277	40.....	P-110000	Vac Gauge Plate, 5255		
12.....	P-0698	Cord Stopper, 5210, 5217, 5220, 5230, 5237	40.....	P-000161	Vac Gauge Plate, 5267		
12.....	N/A	Cord Stopper, 5240, 5250, 5255, 5267, 5277	41.....	P-9300	Indicator Packing		
			42.....	P-1720	Indicator Cap, 5220, 5230, 5237, 5240, 5250, 5255		
			42.....	P-000147	Indicator Cap, 5267, 5277		
			43.....	P-4212	Indicator Spring, 5220, 5230, 5237, 5240, 5250, 5255		
			43.....	P-000148	Indicator Spring, 5267, 5267		



PANASONIC

Models: MC-5210, MC-5217, MC-5220, MC-5230, MC-5237,
MC-5240, MC-5250, MC-5255, MC-5267, MC-5277

Fan Assembly

FAN PARTS

1.....	P-5371	Fan Case, 5240, 5250, 5255
2.....	NLA	Nut, 5240, 5250, 5255
3.....	NLA	Washer, 5240, 5250, 5255
4.....	NLA	Fan, 5240, 5250, 5255
5.....	N/A	Spacer, 5240, 5250, 5255
6.....	P-0035	Brush Assy, 5240, 5250, 5255
7.....	P-0044	Bracket, 5240, 5250, 5255
8.....	P-0037	Screw, 5240, 52550, 5255

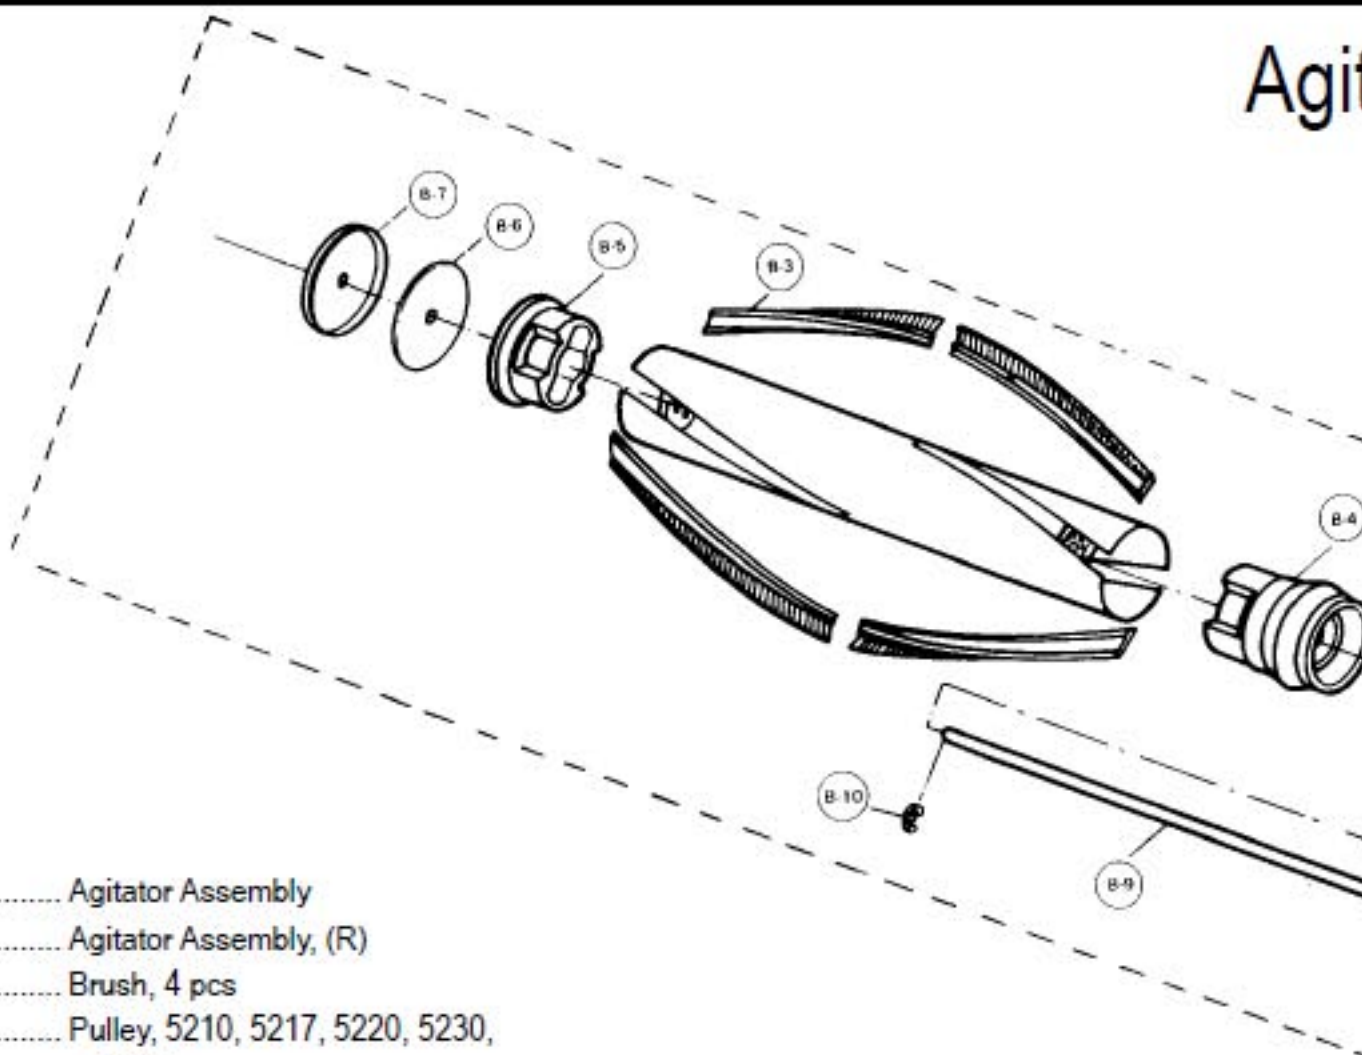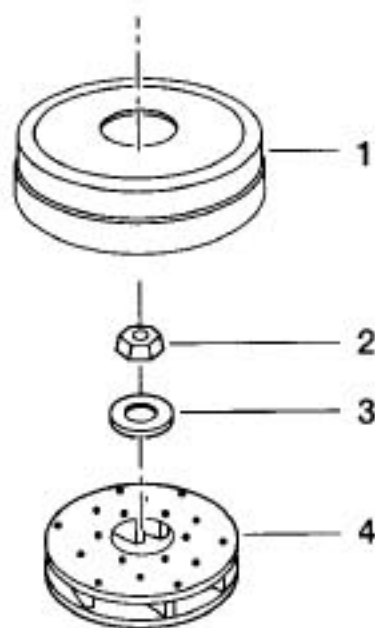

Agitator

1.....	NLA	Agitator Assembly
1.....	P-510	Agitator Assembly, (R)
2.....	P-85	Brush, 4 pcs
3.....	N/A	Pulley, 5210, 5217, 5220, 5230, 5237
3.....	NLA	Pulley, 5267, 5277
4.....	P-4101	Pulley, 5210, 5220, 5230, 5237
4.....	NLA	Holder, 5217, 5267, 5277
5.....	P-321	Filter, 5210, 5220, 5230, 5237

8.....	NLA	Shaft
9.....	NLA	E-Clip, 5210, 5217
9.....	NLA	E-Clip, 5267, 5277
10.....	NLA	Spacer