



PANASONIC

Models: MC-UG471

BODY

Index	Part No.	Description
1	P-11384	Dust Compartment
2	P-11385	Dust Cover
3	P-111647	Wand Holder
4	P-10451	On/Off Switch
5	P-11386	Lead Wire (white)
6	P-11387	Lead Wire (black)
7	P-10776	Protector
8	P-11388	Protector Spring
9	P-10661	Protector Cover
10	P-11389	Body Packing Right
11	P-11390	Body Packing Left
12	P-11391	Motor
13	P-11392	Motor Support
14	P-111569	Lead Wire
15	N/A	Crimp Connector
16	N/A	Cord Reel Spring
17	P-11393	Brake Lever Assembly
18	P-11381	Lead Wire Assembly
19	P-11394	Motor Support
20	P-10670	Noise Suppressor
21	P-11395	Bulb Socket
22	P-111574	Bulb
23	P-11396	Window
24	P-111588	Wheel Shaft
25	P-6115	Washer
26	P-11318	Wheel

Index	Part No.	Description
27	P-74009	Wheel Stopper
28	P-6140	Screw
29	P-111556	Connector Pipe
30	P-11397	Plastic Holder
31	P-11398	Secondary Filter
32	N/A	Dust Compartment Packing
33	P-00104	Wire Tie
34	P-11399	Handle Assembly
35	P-11400	Body Packing Right
36	P-11411	Tool Caddy
37	P-11412	Cord Reel Cover
38	P-11413	Cord Guide
39	P-11414	Cord Reel Assembly
40	P-11415	Contact Disc Assembly
41	P-11416	Handle Screw
42	P-111372	Exhaust Filter
43	P-11417	Dust Bag
	P-115P	Paper Bag (3 pack)
	P-145M	Paper Bag (micron, 6 pack)
44	P-11418	Cover
45	P-11419	Hose Assembly
46	P-10512	Packing
47	P-6069	Crevice Tool
48	P-111394	Extension Wand
49	P-111300	Extension Wand w/tabs
50	P-11640	Air Turbine
51	P-6088	Dusting Brush

NOZZLE HOUSING

Index	Part No.	Description
1	P-11420	Nozzle Housing
2	P-683	Screw
3	P-11421	Furniture Guard
4	P-11371	Agitator
5	P-11422	Lower Plate (10 pack)
6	P-11423	Latch
7	P-111641	Belt Guard
8	P-11369	Belt
9	P-4104	Screw
10	P-000095	Frame
11	P-6140	Screw
12	P-513	Pedal Shift
13	P-9857	Pedal Spring
14	P-11424	Pedal
15	P-11425	Nozzle Hose
16	P-11426	Upper Body
17	P-11427	Upper Body Cap
18	P-6140	Screw (10 pack)
19	P-11428	Nozzle Roller Cam
20	P-10357	Roller Shaft
21	P-9888	Wheel
22	P-11429	Floor Nozzle Spring

