 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC V5004 Owner's Manual

[Shop genuine replacement parts for PANASONIC
V5004](#)

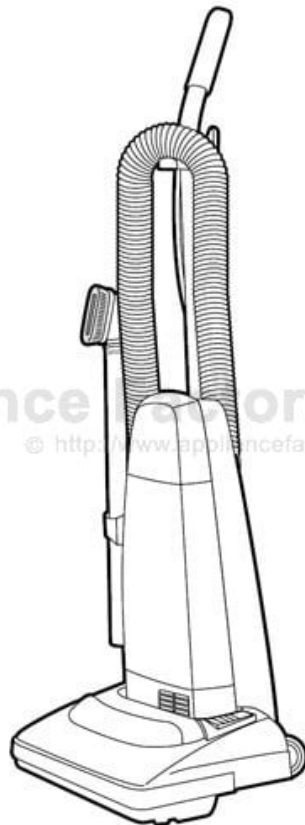 


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

Models: MC-V5004


Nozzle Housing

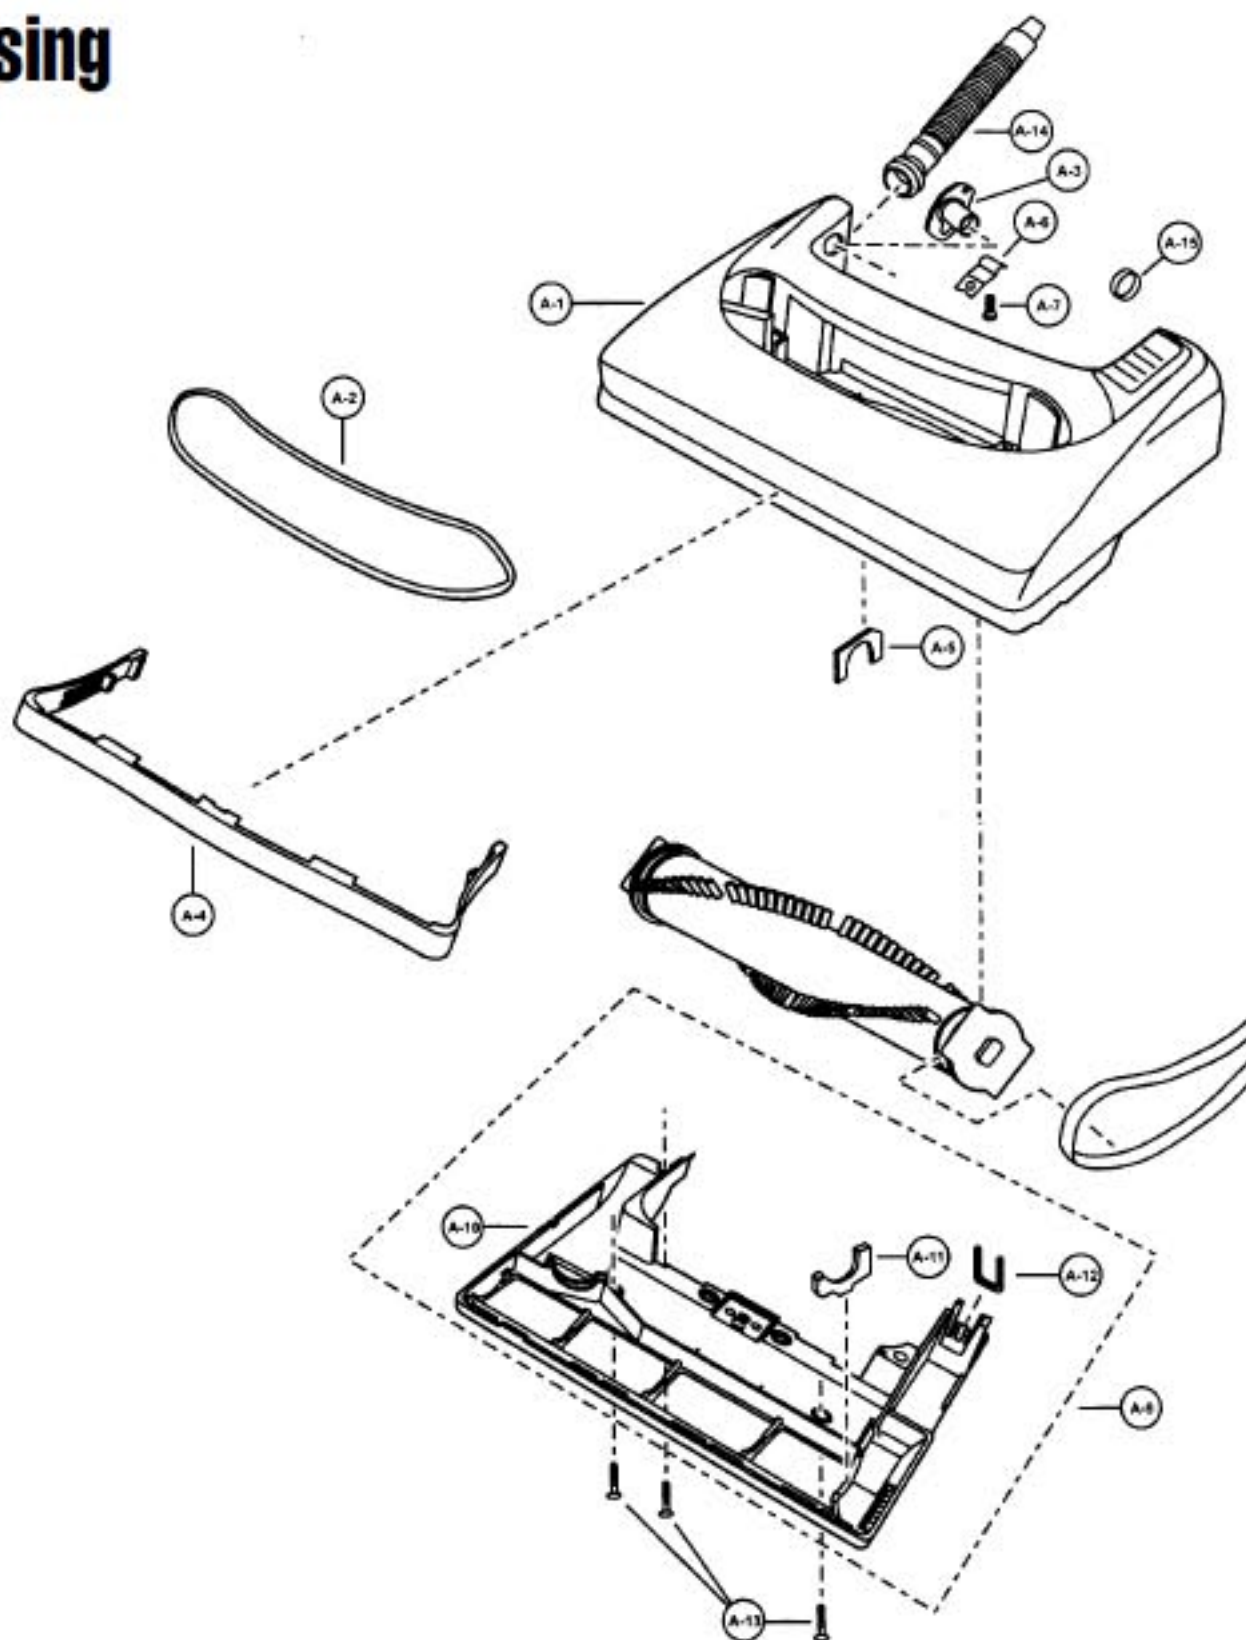

Index	Part No.	Description
1	P-111490	Nozzle housing
2	P-111491	Window
3	P-10819	Shaft (plastic)
4	P-10107	Furniture guard
5	P-81	Packing (nozzle)

Models: MC-V5004

 Agitator Assembly

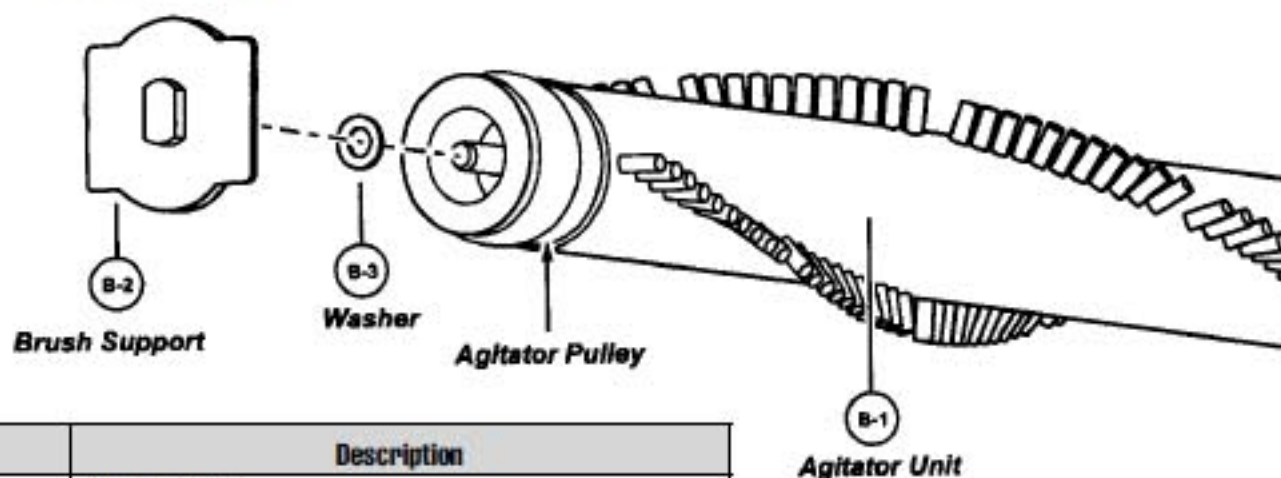

Index	Part No.	Description
1	P-9212	Agitator unit
2	P-0693	Brush support
3	P-0030	Washer

Motor Housing, Motor, Handle, and Body

Index	Part No.	Description
1	P-111437	Dust compartment unit
2	P-8913	On/off switch
3	P-0698	Cord stopper
4	P-6140	Screw (cord stopper)
5	P-11018	Power cord
6	P-000623	Wire connector
7	P-660106	Packing (dust cover)
8	P-111492	Switch cover
9	P-73006	Packing (switch cover)
10	P-6140	Screw (switch cover)
11	P-7301	Handle screw
12	P-2117	Nut (handle screw)
13	P-3200	Filter supporter
14	P-375	Secondary filter (foam)
15	P-0114	Wheel
16	P-10968	Shaft (wheel)
17	P-74009	Stopper (wheel)
18	P-6115	Washer
19	P-111477	Dust bag (paper)
20	P-6606	Suction Inlet
21	P-111450	Cover (suction Inlet)
22	P-6140	Screw (suction Inlet)
23	P-111493	Motor case

Index	Part No.	Description
32	P-8180	Carbon brush
33	P-9823	Screw (carbon brush)
34	P-10670	Noise suppressor
35	P-0293	Motor supporter
36	P-8183	Motor supporter
37	P-37020	Wire cord
38	P-000623	Wire connector
39	P-111487	Handle assembly
40	P-000243	Upper cord
41	P-111469	Hose holder
42	P-7670	Spring (cord holder)
43	P-587	Washer (cord holder)
44	P-111432	Lower cord
45	P-43096	Screw (cord holder)
46	P-111494	Dust cover
47	P-111723	Hose
48	P-6088	Dusting brush
49	P-6069	Crevice tool
50	P-60104	Wand (with crevice tool)
51	P-5475	Hose adapter
52	P-10779	Wire tie
53	P-6106	Packing (Inlet)
54	P-3990	Packing (Inlet)

PANASONIC

Models: MC-V5004

Motor Housing, Motor, Handle, and Body

