

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC V5258 Owner's Manual

[Shop genuine replacement parts for PANASONIC
V5258](#)




[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

Models: MC-V5258

Nozzle Housing

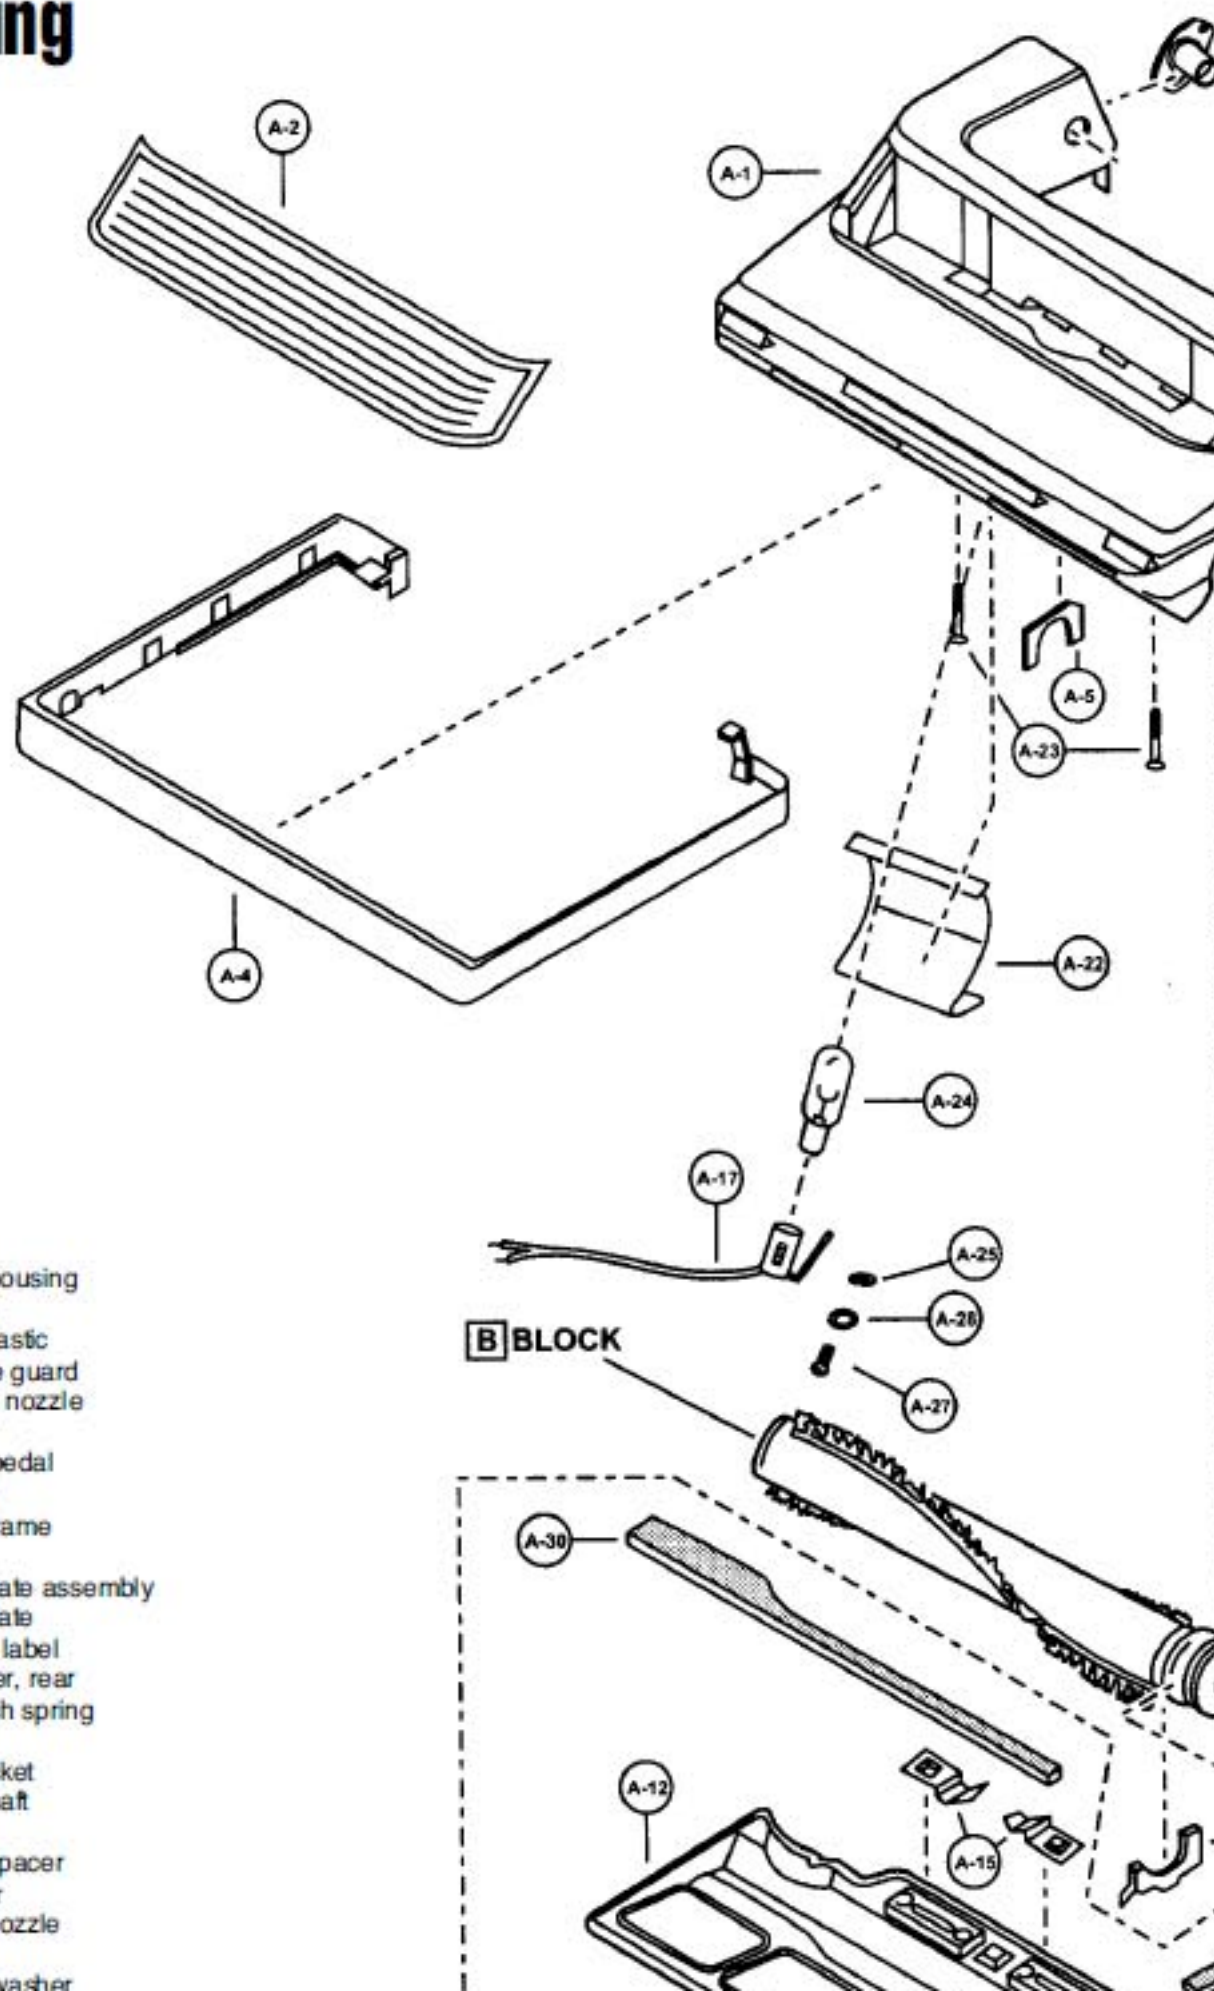


- | | | | | |
|----|-------|----------|-------|----------------------|
| 1 | | P-111440 | | Nozzle housing |
| 2 | | P-2125 | | Window |
| 3 | | P-10819 | | Shaft, plastic |
| 4 | | P-000274 | | Furniture guard |
| 5 | | P-81 | | Packing, nozzle |
| 6 | | P-000095 | | Frame |
| 7 | | P-111427 | | Spring, pedal |
| 8 | | P-4720 | | Pedal |
| 9 | | P-000132 | | Screw, frame |
| 10 | | P-00181 | | Belt |
| 11 | | P-8939 | | Lower plate assembly |
| 12 | | P-8942 | | Lower plate |
| 13 | | P-9826 | | Warning label |
| 14 | | P-1124 | | Belt cover, rear |
| 15 | | P-9846 | | Stop latch spring |
| 16 | | P-2751 | | Latch |
| 17 | | P-9367 | | Bulb socket |
| 18 | | P-00051 | | Pedal shaft |
| 19 | | P-7411 | | Spacer |
| 21 | | P-10812 | | Screw, spacer |
| 22 | | P-10109 | | Reflector |
| 23 | | P-683 | | Screw, nozzle |
| 24 | | P-7550 | | Bulb |
| 25 | | P-5045 | | Spring washer |

PANASONIC

V

Models: MC-V5258

Motor Housing, Motor, Handle, and Body

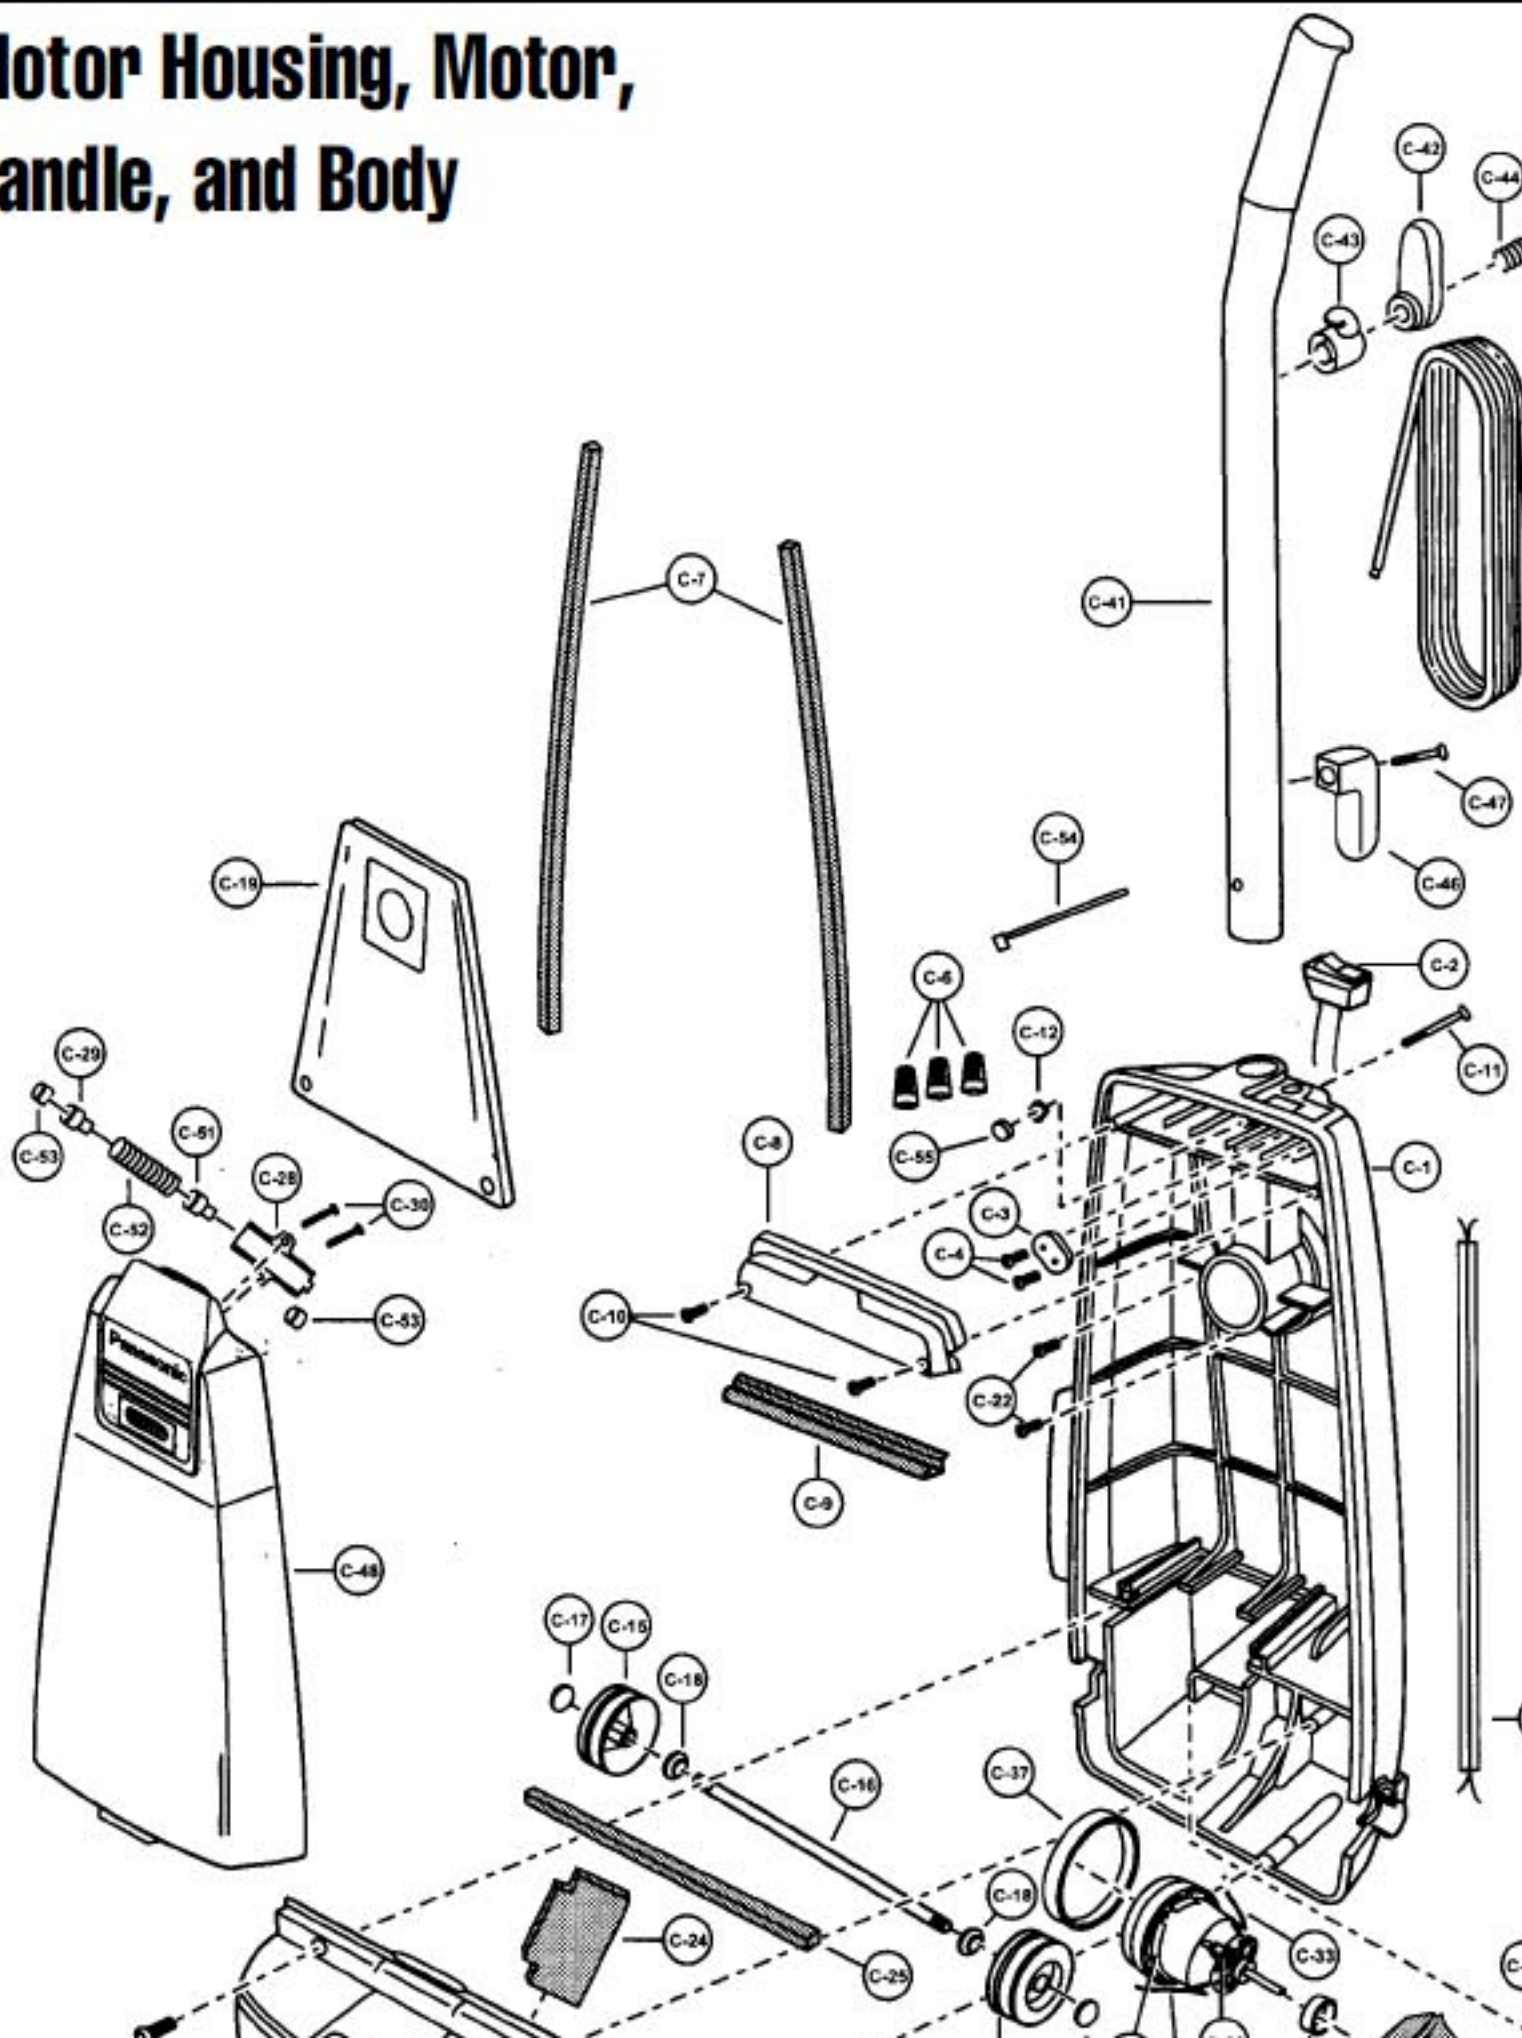


Models: MC-V5258

Motor Housing, Motor, Handle, and Body

1 ... P-111520	Dust compartment	20 ... P-000625	Suction inlet	39 ... P-3820
2 ... P-8913	On/Off switch	21 ... P-111502	Cover, suction inlet	40 ... P-00062
3 ... P-0698	Cord stopper	22 ... P-6140	Screw, suction inlet	41 ... P-11152
4 ... P-6140	Screw, cord stopper	23 ... P-111521	Motor case	42 ... P-0002
5 ... P-10802	Power cord	24 ... P-201	Packing, rear cover	43 ... P-11130
6 ... P-000623	Wire connector	25 ... P-1906	Packing, motor case	44 ... P-7670
7 ... P-660106	Packing, dust container	26 ... P-8172	Screw, motor case	45 ... P-587
8 ... P-301606	Switch cover	27 ... P-10688	Lead wire, motor thermal protector	46 ... P-11143
9 ... P-10428	Packing, switch cover	28 ... P-98109	Body, indicator	47 ... P-4309
10 ... P-6140	Screw, switch cover	29 ... P-000147	Cap, indicator	48 ... P-11161
11 ... P-7301	Handle screw	30 ... P-4104	Screw, indicator	49 ... P-8917
12 ... P-2117	Nut, handle screw	31 ... P-10343	Fan motor unit	50 ... P-2420
13 ... P-3200	Filter supporter	32 ... P-8182	Carbon brush	51 ... P-0001
14 ... P-9994	Secondary filter, HEPA	33 ... P-10712	Lead wire, motor	52 ... P-1040
15 ... P-0114	Wheel	34 ... P-9823	Screw, brush (not illustrated)	53 ... P-9300
16 ... P-10968	Shaft, wheel	35 ... P-8184	Ring spacer	54 ... P-0010
17 ... P-74009	Stopper, wheel	36 ... P-10670	Noise suppressor	55 ... P-6106
18 ... P-6115	Washer	37 ... P-0293	Motor support, front	56 ... P-1069
19 ... P-111387	Dust bag, type U6	38 ... P-10338	Motor support rubber, rear	57 ... P-1069

Agitator Assembly

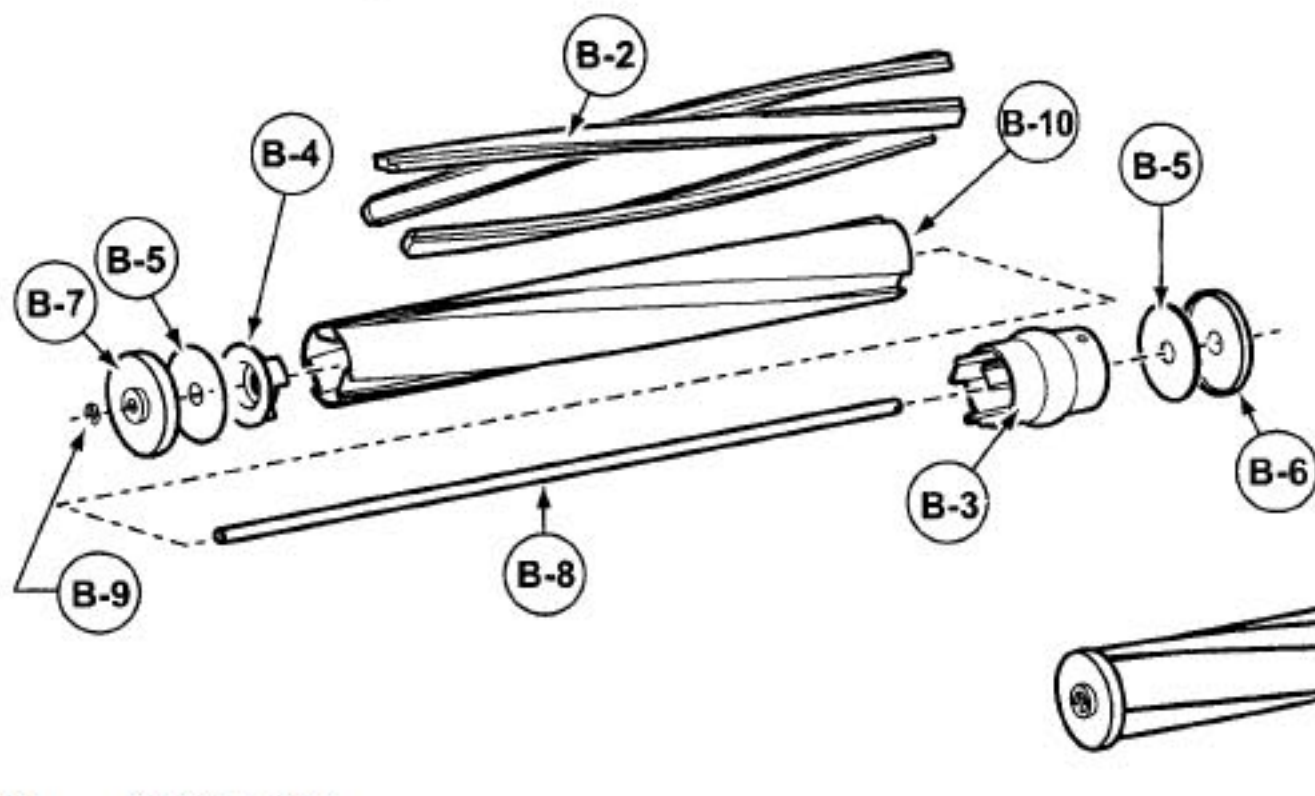

1 ... P-111511	Agitator assembly
2 ... P-111512	Brush, 3 pcs.
3 ... P-111614	Agitator pulley
4 ... P-111513	Agitator holder