 


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://Appliance Factory Parts).



# PANASONIC V5278 Owner's Manual

[Shop genuine replacement parts for PANASONIC  
V5278](#)

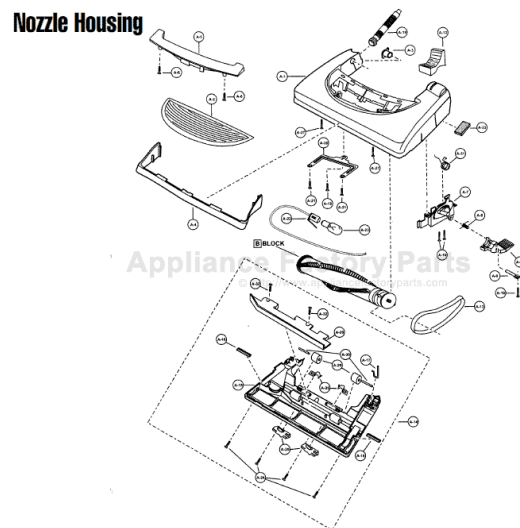 


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

Models: MC-V5278

## Nozzle Housing

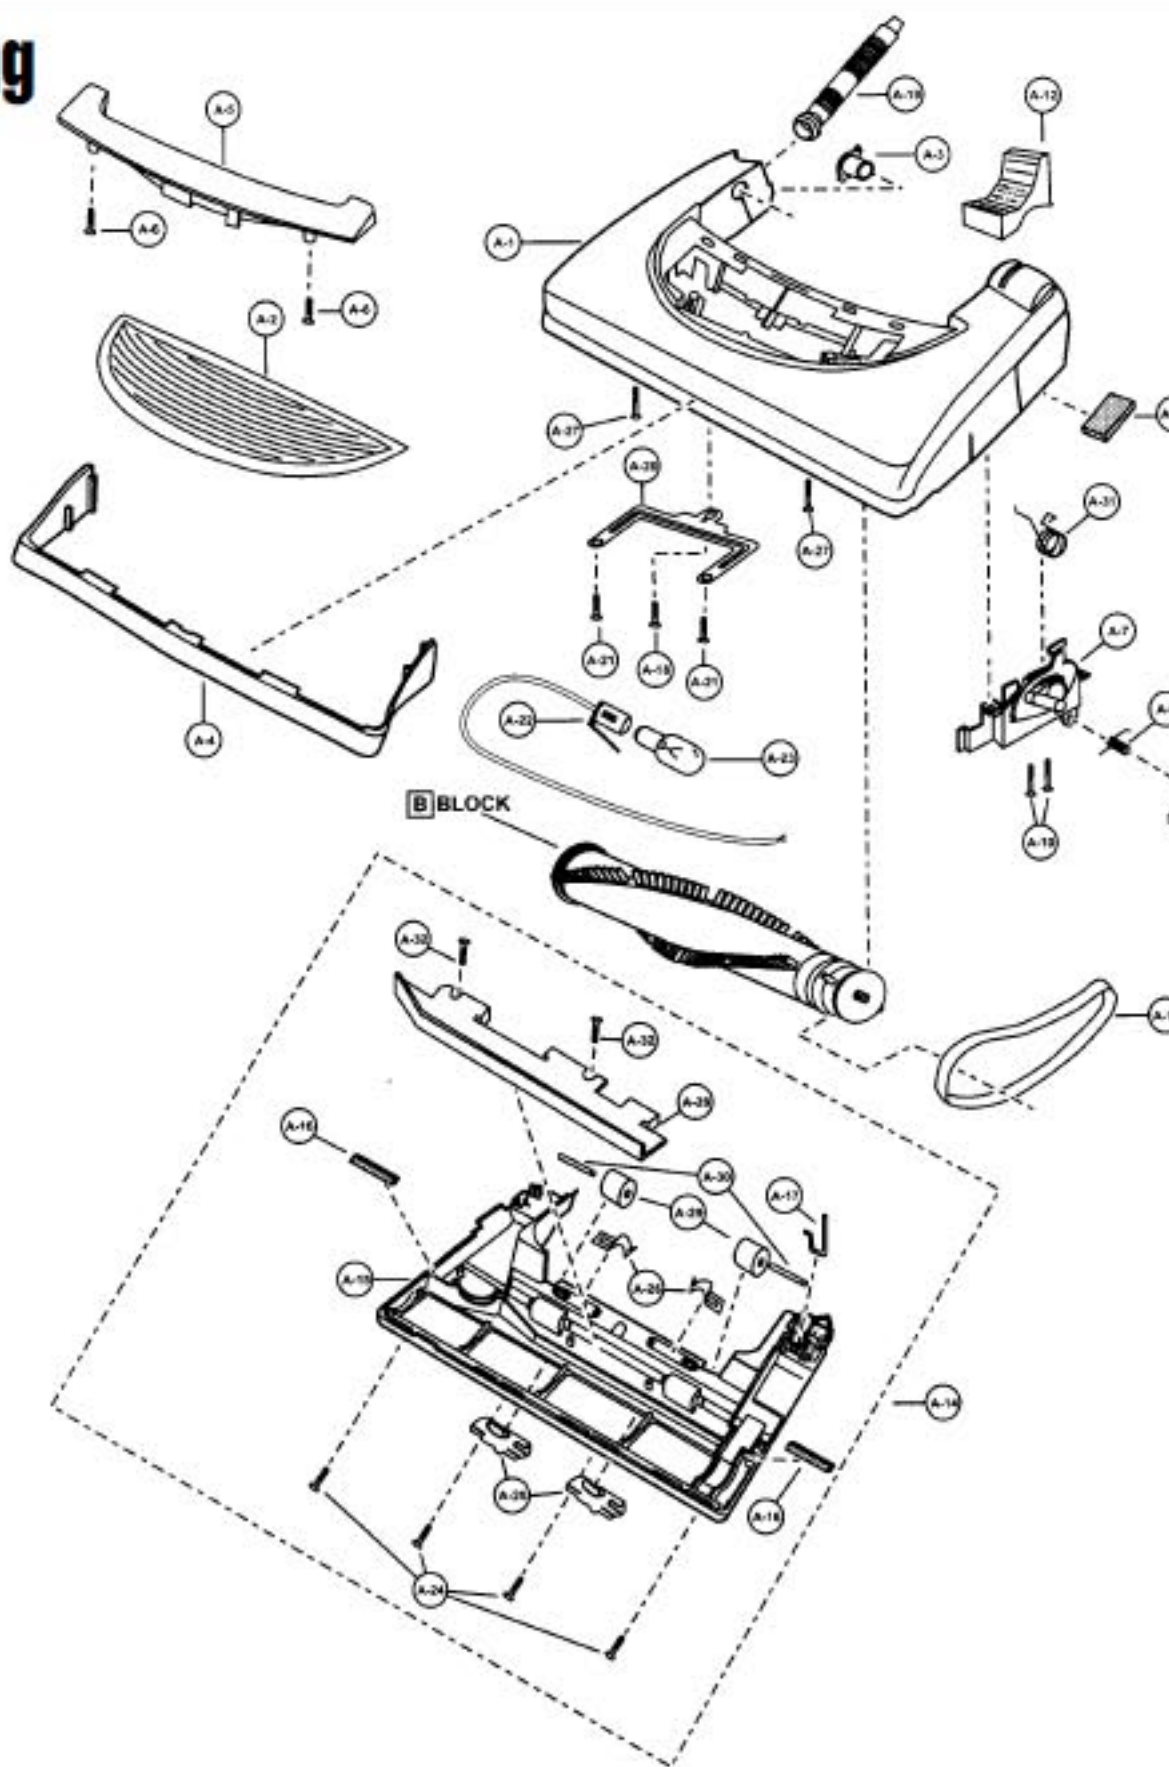

Index	Part No.	Description
1	P-111440	Nozzle housing
2	P-9854	Window
3	P-2500	Shaft, plastic
4	P-10351	Furniture guard
5	P-10920	Light cover
6	P-6170	Cover (light cover)


Index	Part No.	Description
18	P-6800	Screw (slide)
19	P-10304	Nozzle hos
20	P-10353	Slider supp
21	P-6140	Screw (slide)
22	P-9367	Socket (bul
23	P-7550	Butt

# PANASONIC
 
# V-

Models: MC-V5278

## Motor Housing, Motor, Handle, and Body

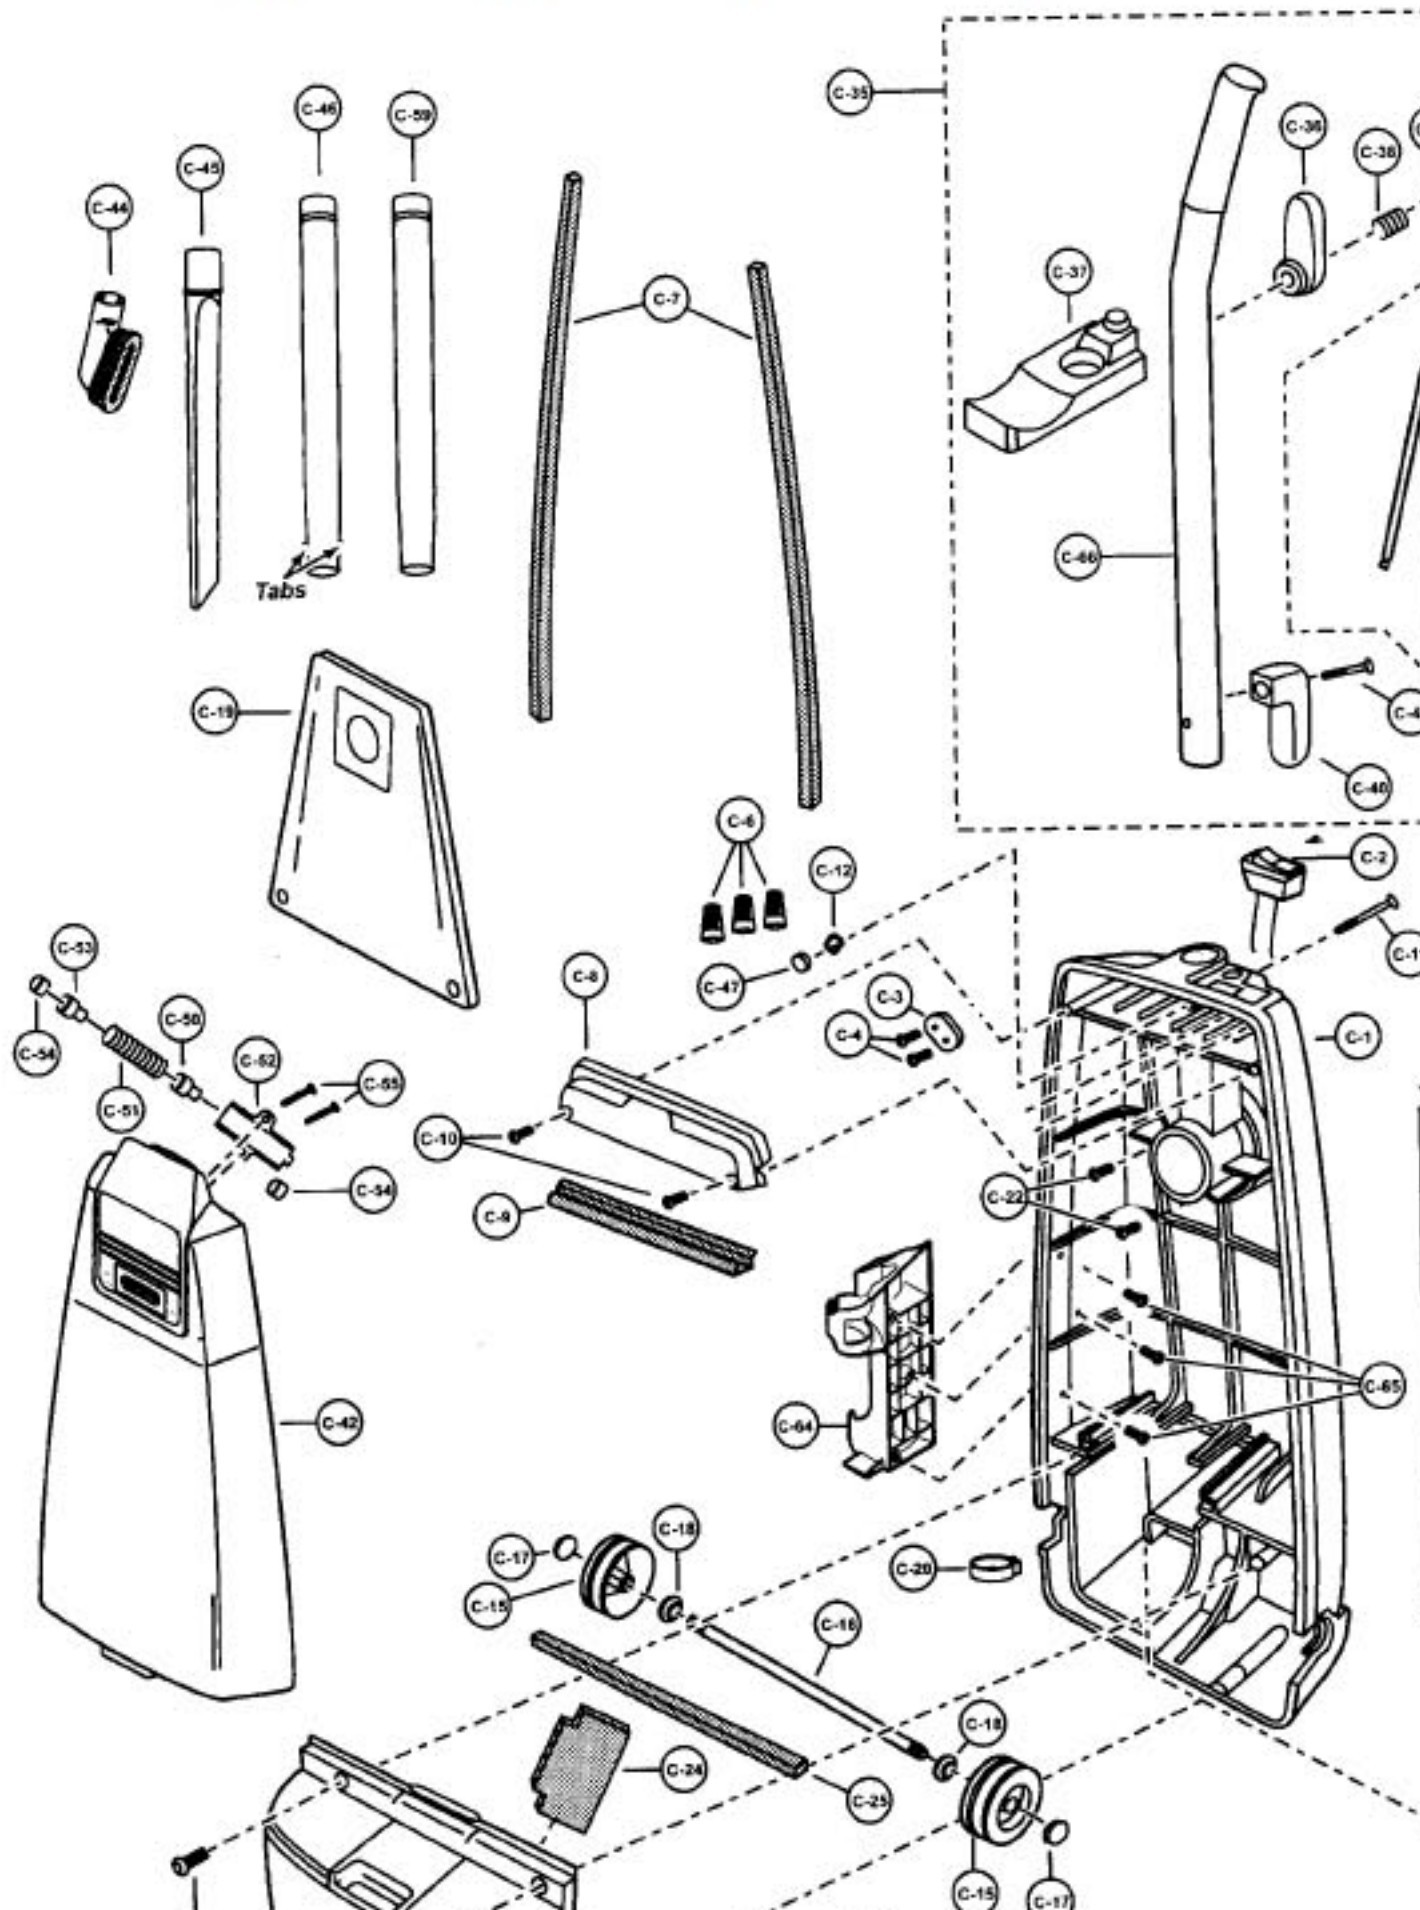

Models: MC-V5278

## Motor Housing, Motor, Handle, and Body

Index	Part No.	Description
1	P-111689	Dirt compartment unit
2	P-983	On/off switch
3	P-0698	Cord stopper
4	P-6140	Screw (cord stopper)
5	P-10802	Power cord
6	P-000623	Wire connector
7	P-660106	Packing (dust container)
8	P-30606	Switch cover
9	P-73006	Packing (switch cover)
10	P-6140	Screw (switch cover)
11	P-7301	Handle screw
12	P-2117	Nut (handle screw)
13	P-3200	Filter supporter
14	P-9994	Secondary filter (HEPA)
15	P-111690	Wheel
16	P-10968	Shaft (wheel)
17	P-74009	Stopper (wheel)
18	P-6115	Washer
19	P-145M	Dust bag (type U6)
20	P-111458	Hose hook
21	P-111450	Cover (suction inlet)
22	P-6140	Screw (suction inlet)
23	P-111691	Motor case
24	P-200	Packing (rear cover)
25	P-1906	Packing (motor case)
26	P-8172	Screw (motor case)
27	P-10933	Fan motor unit
28	P-8182	Carbon brush
	P-9823	Screw (brush) - not illustrated
30	P-10670	Noise suppressor
31	P-0293	Motor support (front)
32	P-9911	Motor support rubber (rear)
33	P-3820	Wire cord

Index	Part No.	Description
34	P-000623	Wire connector
35	P-111227	Handle ass
36	000243	Upper cord
37	P-10403	Hose holde
38	P-7670	Spring (cor
39	P-587	Washer (co
40	P-111432	Lower cord
41	P-43096	Screw (con
42	P-111692	Dust cover
43	P-8946	Hose
44	P-111726	Dusting bru
45	P-6069	Crevice too
46	P-8180	Wand (with
47	P-6106	packing (in
48	P-10697	Packing (ri
49	P-10698	Packing (le
50	P-10674	Lead (Indic
51	P-10400	Spring (Ind
52	P-98109	Body (Indic
53	P-000147	Cap (Indica
54	P-9300	Packing (in
55	P-4104	Screw (Ind
56	P-8184	Ring space
57	P-10712	Lead wire (
58	P-10688	Thermal pr
59	P-60104	Extension v
60	P-00104	Wire tie
61	P-10649	Cooling gu
62	P-111433	Screw (flan
63	P-111436	Flange
64	P-111461	Wand hold
65	P-6140	Screw (war
66	P-111489	Handle

## Agitator Assembly

