


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



# PANASONIC V7375 Owner's Manual

[Shop genuine replacement parts for PANASONIC V7375](#)

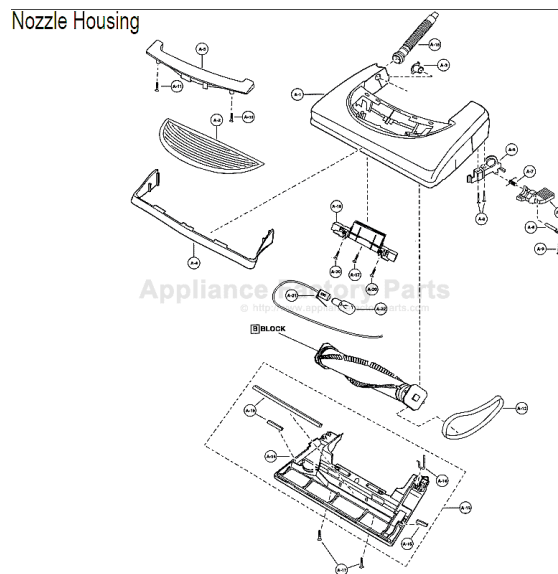


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

# PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V7375

## Nozzle Housing

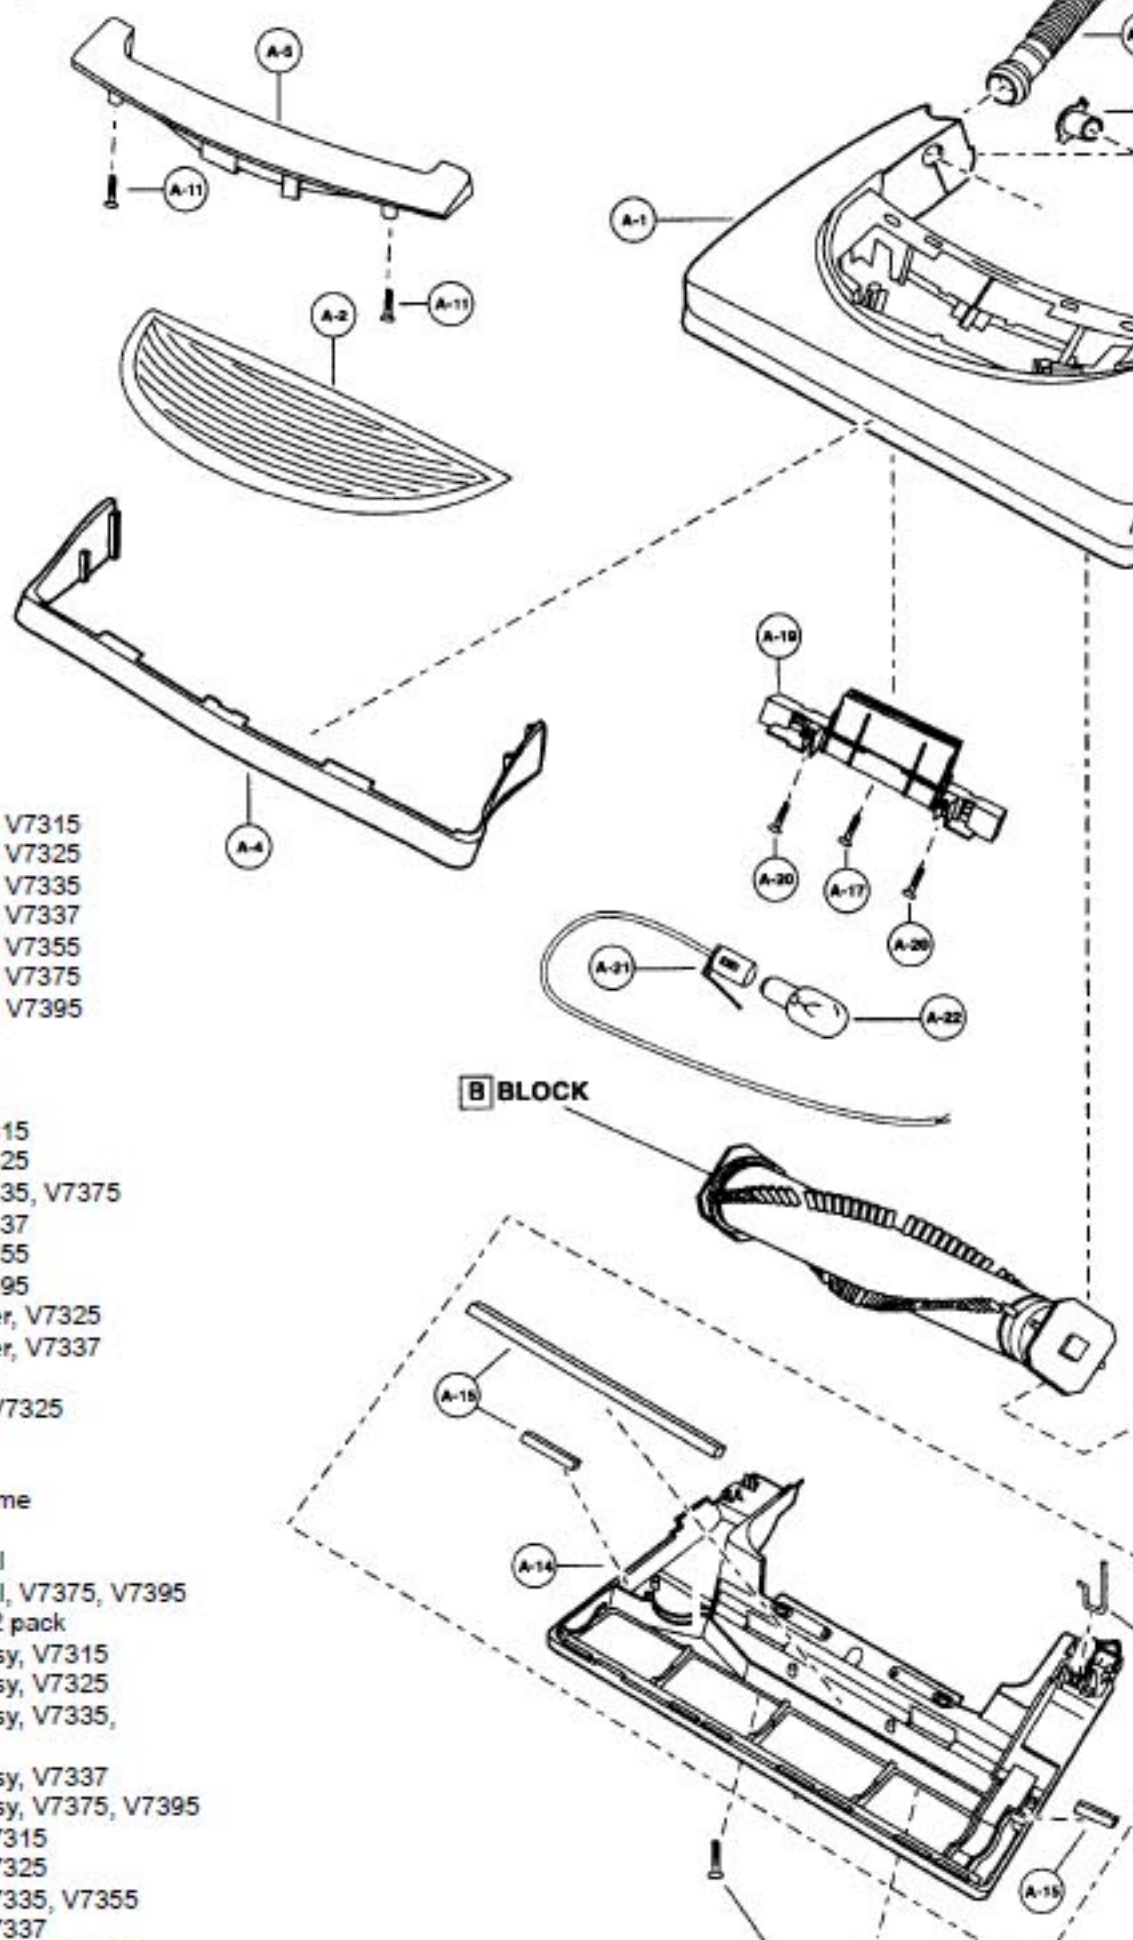


- 1..... P-5966..... Nozzle Housing, V7315
- 1..... P-8170..... Nozzle Housing, V7325
- 1..... P-9916..... Nozzle Housing, V7335
- 1..... P-9898..... Nozzle Housing, V7337
- 1..... P-9917..... Nozzle Housing, V7355
- 1..... P-11025..... Nozzle Housing, V7375
- 1..... P-11026..... Nozzle Housing, V7395
- 2..... P-9854..... Window
- 3..... P-2500..... Shaft, plastic
- 4..... P-9855..... Furniture Guard
- 5..... P-9856..... Light Cover, V7315
- 5..... P-8171..... Light Cover, V7325
- 5..... P-9918..... Light Cover, V7335, V7375
- 5..... P-98100..... Light Cover, V7337
- 5..... P-9879..... Light Cover, V7355
- 5..... P-11035..... Light Cover, V7395
- 6..... P-8172..... Screw, light cover, V7325
- 6..... P-42092..... Screw, light cover, V7337
- 7..... P-9878..... Frame
- 7..... P-000095..... Frame, V7315, V7325
- 8..... P-9857..... Spring, pedal
- 9..... P-513..... Shaft, pedal
- 10..... P-4106..... Screw, pedal/frame
- 11..... P-4720..... Pedal, black
- 12..... P-9880..... Cover, foot pedal
- 12..... P-10207..... Cover, foot pedal, V7375, V7395
- 13..... P-V270B..... Belt, type UB8, 2 pack
- 14..... P-9858..... Bottom Plate Assy, V7315
- 14..... P-8947..... Bottom Plate Assy, V7325
- 14..... P-9881..... Bottom Plate Assy, V7335, V7355
- 14..... P-98101..... Bottom Plate Assy, V7337
- 14..... P-9764..... Bottom Plate Assy, V7375, V7395
- 15..... P-2859..... Bottom Plate, V7315
- 15..... P-5893..... Bottom Plate, V7325
- 15..... P-5964..... Bottom Plate, V7335, V7355
- 15..... P-98102..... Bottom Plate, V7337

# PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

## Body Assembly

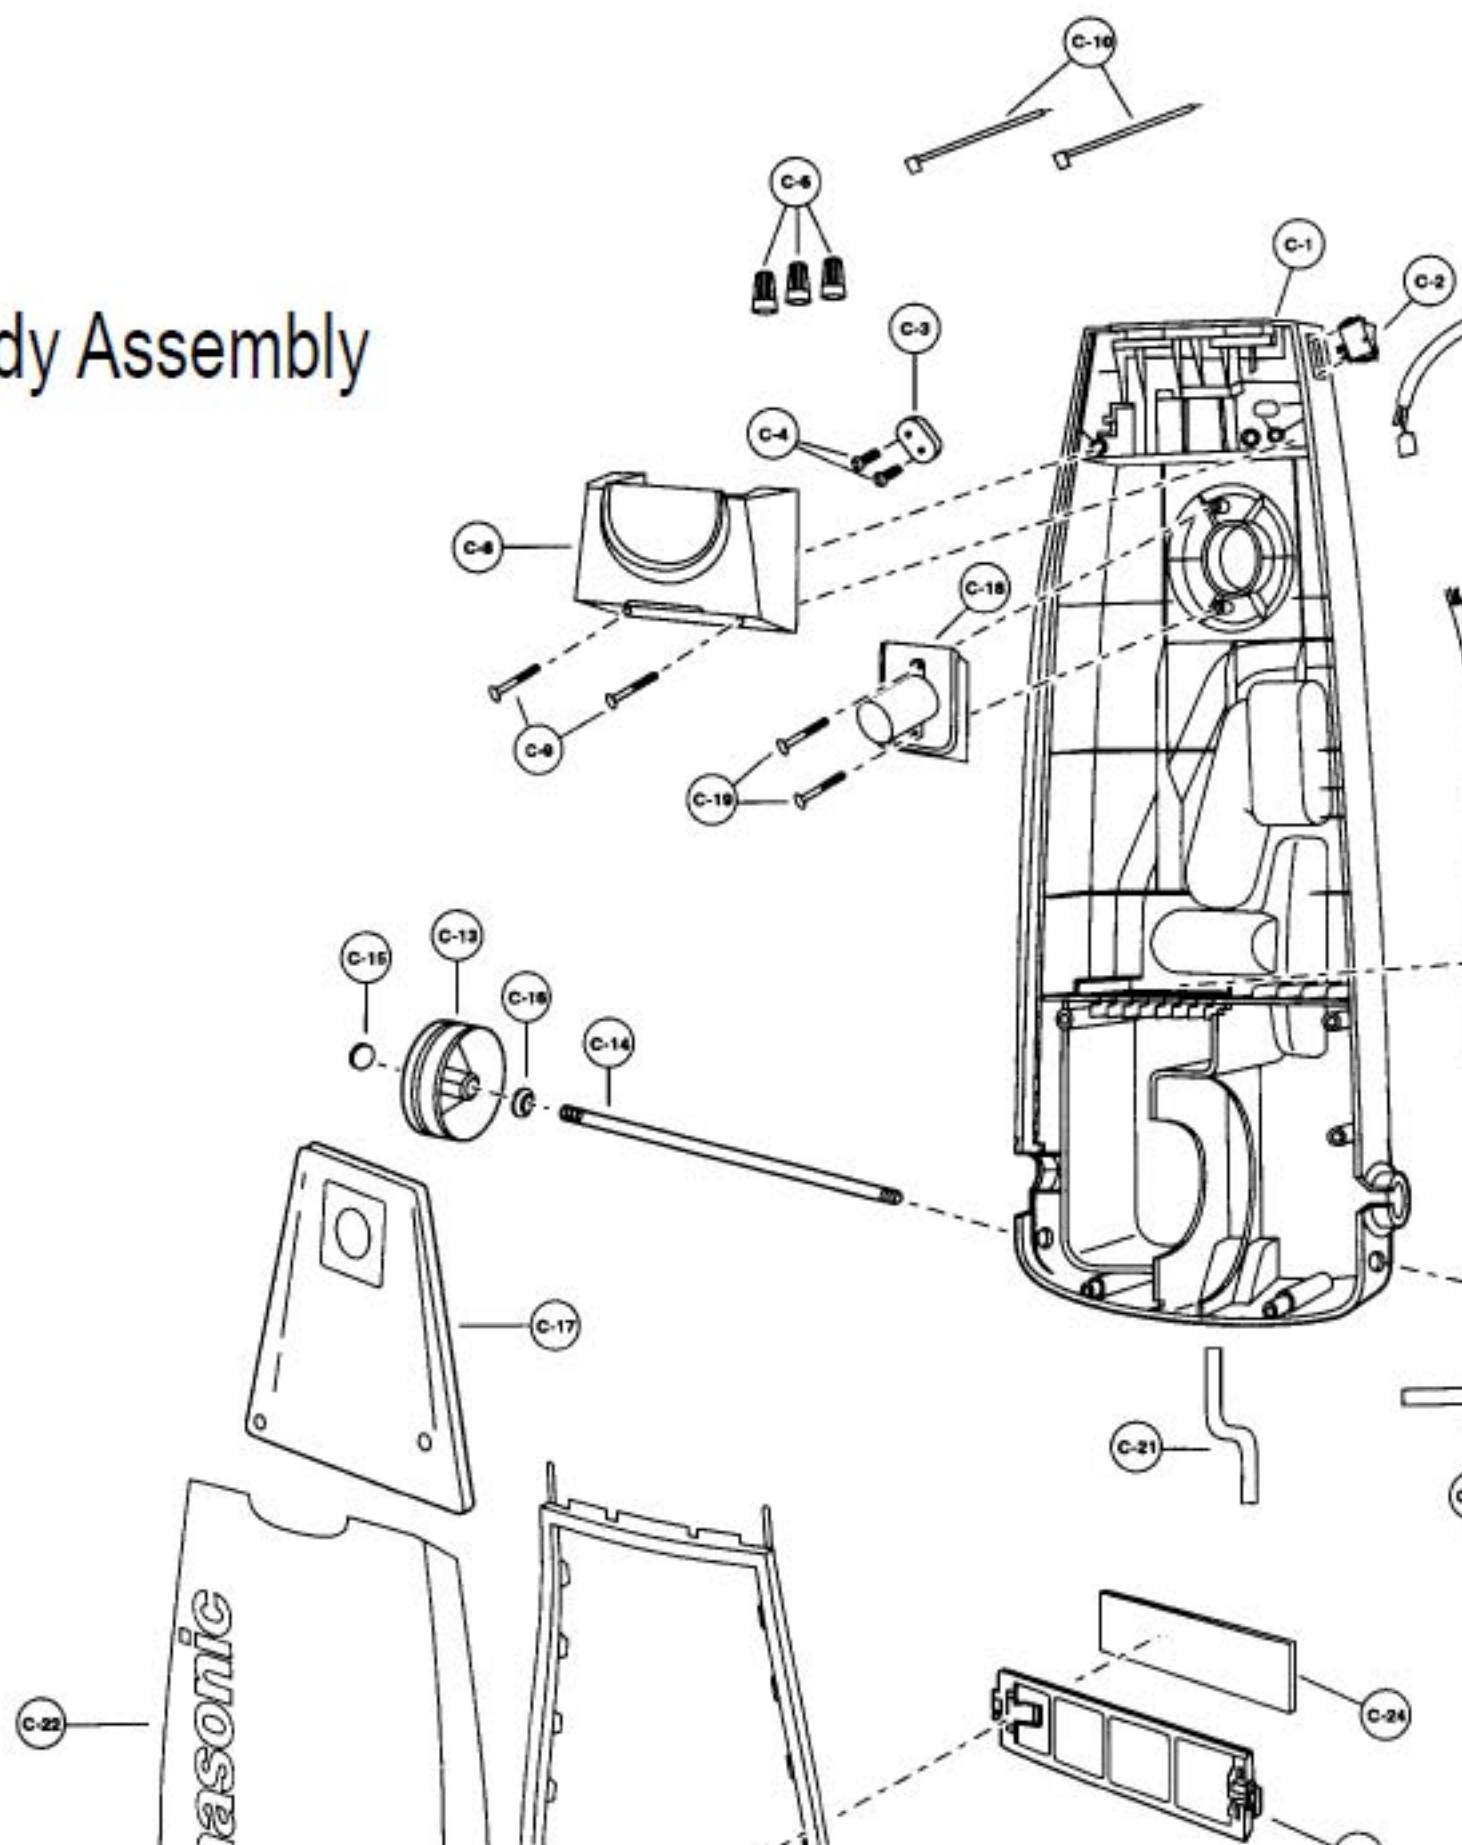


# PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

|  |   |            |
|--|---|------------|
| 1.....P-9865.....Dust Compartment, V7315           | 13....P-9893.....Filter Supporter                   | 28....P-99 |
| 1.....P-8173.....Dust Compartment, V7325           | 14....P-7023.....Secondary Filter, foam             | 28....P-11 |
| 1.....P-9924.....Dust Compartment, V7335, V7355    | 15....P-0114.....Wheel                              | 28....P-11 |
| 1.....P-98107.....Dust Compartment, V7337          | 16....P-16005.....Shaft, wheel                      | 29....P-38 |
| 1.....P-11027.....Dust Compartment, V7375, V7395   | 17....P-74009.....Stopper, wheel                    | 30....P-30 |
| 2.....P-9869.....Packing, dust cover               | 18....P-6115.....Washer                             | 30....P-81 |
| 3.....N/A.....Cord Stopper                         | 19....P-115P.....Paper Bag, type U3, 3 pack         | 31....P-54 |
| 3.....P-0698.....Cord Stopper, V7325, V7375, V7395 | 20....P-9928.....Sensor Sensitivity Knob            | 32....P-99 |
| 4.....P-6140.....Screw, cord stopper               | 21....P-7082.....Cover, bag supporter               | 33....P-99 |
| 5.....P-7906.....Power Cord                        | 22....P-6140.....Screw, bag supporter               | 34....P-68 |
| 6.....P-000623.....Wire Connector                  | 23....P-5470.....Bag Supporter Assembly             | 35....P-00 |
| 7.....P-9866.....Packing, dust container           | 23....P-10358.....Bag Supporter, V7315, V7337       | P-98       |
| 7.....P-9869.....Packing, dust container, V7315    | 23....P-8175.....Bag Supporter, V7325               | P-93       |
| 8.....P-9867.....Switch Cover, V7315, V7337        | 24....P-10602.....On/Off Switch, V7315, V7325       | P-00       |
| 8.....P-8174.....Switch Cover, V7325               | 24....P-0696.....On/Off Switch, V7335, V7337        | P-00       |
| 8.....P-9925.....Switch Cover, V7335, V7375        | 24....P-9929.....On/Off Switch, V7355, V7395        | P-00       |
| 8.....P-9920.....Switch Cover, V7355               | 24....P-0696.....On/Off Switch, V7375               | P-00       |
| 8.....P-11029.....Switch Cover, V7395              | 25....P-000024.....Switch Lever                     | P-41       |
| 9.....P-9927.....Partition Board                   | 25....P-0701.....Switch Lever, V7325, V7375, V7395  |            |
| 10....P-6140.....Screw, switch cover               | 26....P-3990.....Packing, right                     |            |
| 11....P-3879.....Screw, optic cells                | 27....P-4160.....Packing, left                      |            |
| 12....P-9892.....Lead Wire                         | 27....P-5860.....Packing, left, V7325, V7375, V7395 |            |
| 12....P-4410.....Lead Wire, V7315, V7355           | 28....P-9868.....Dust Cover, V7315                  |            |
| 12....N/A.....Lead Wire, V7395                     | 28....P-8948.....Dust Cover, V7325                  |            |
|  | 28....P-9932.....Dust Cover, V7335                  |            |
|  | 28....P-98108.....Dust Cover, V7337                 |            |

## Motor & Motor Case Assembly

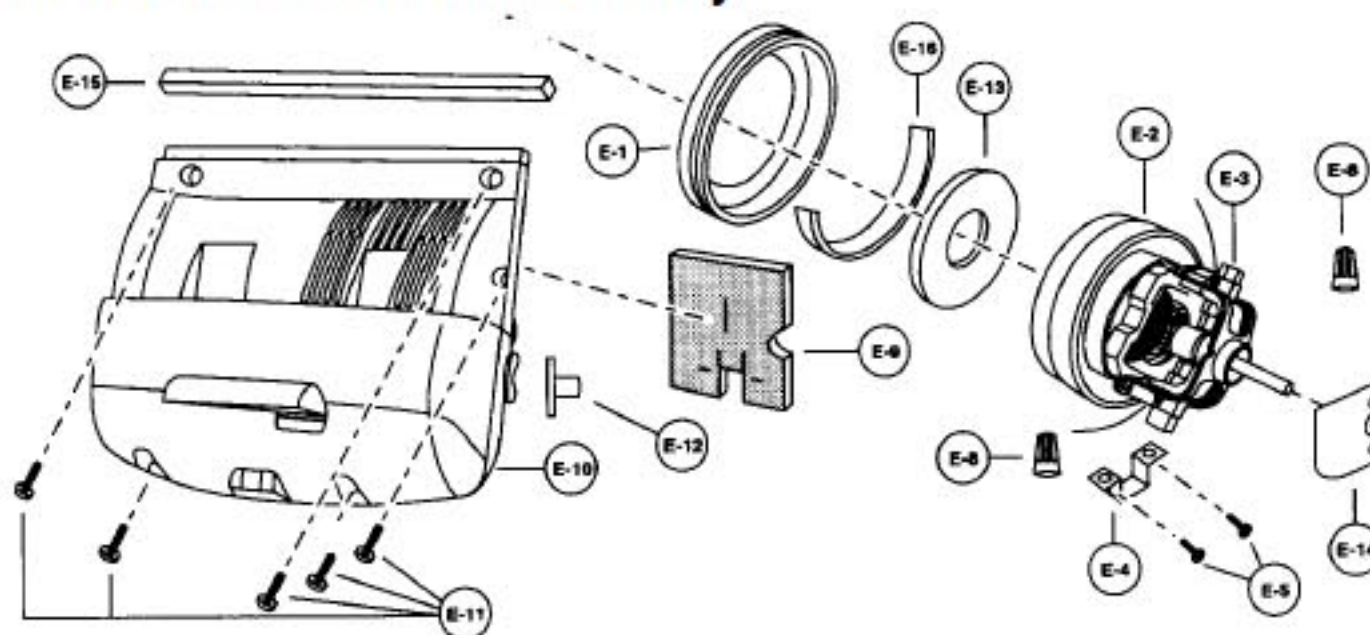


|  |  |            |
|--|--|------------|
| 1.....P-0293.....Motor Support Rubber, front | 6.....P-8183.....Motor Support Rubber, rear, V7325 | 13....P-98 |
| 2.....P-2908.....Motor Assy, V7315           | 7.....P-9931.....Noise Suppressor                  | 14....P-04 |
| 2.....P-8181.....Motor Assy, V7325           | 8.....P-000023.....Noise Suppressor                | 15....P-41 |
| 2.....P-00005.....Motor Assy, V7325, V7355   |  | 16....P-00 |

# PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

## Handle Assembly & Rear Dust Compartment

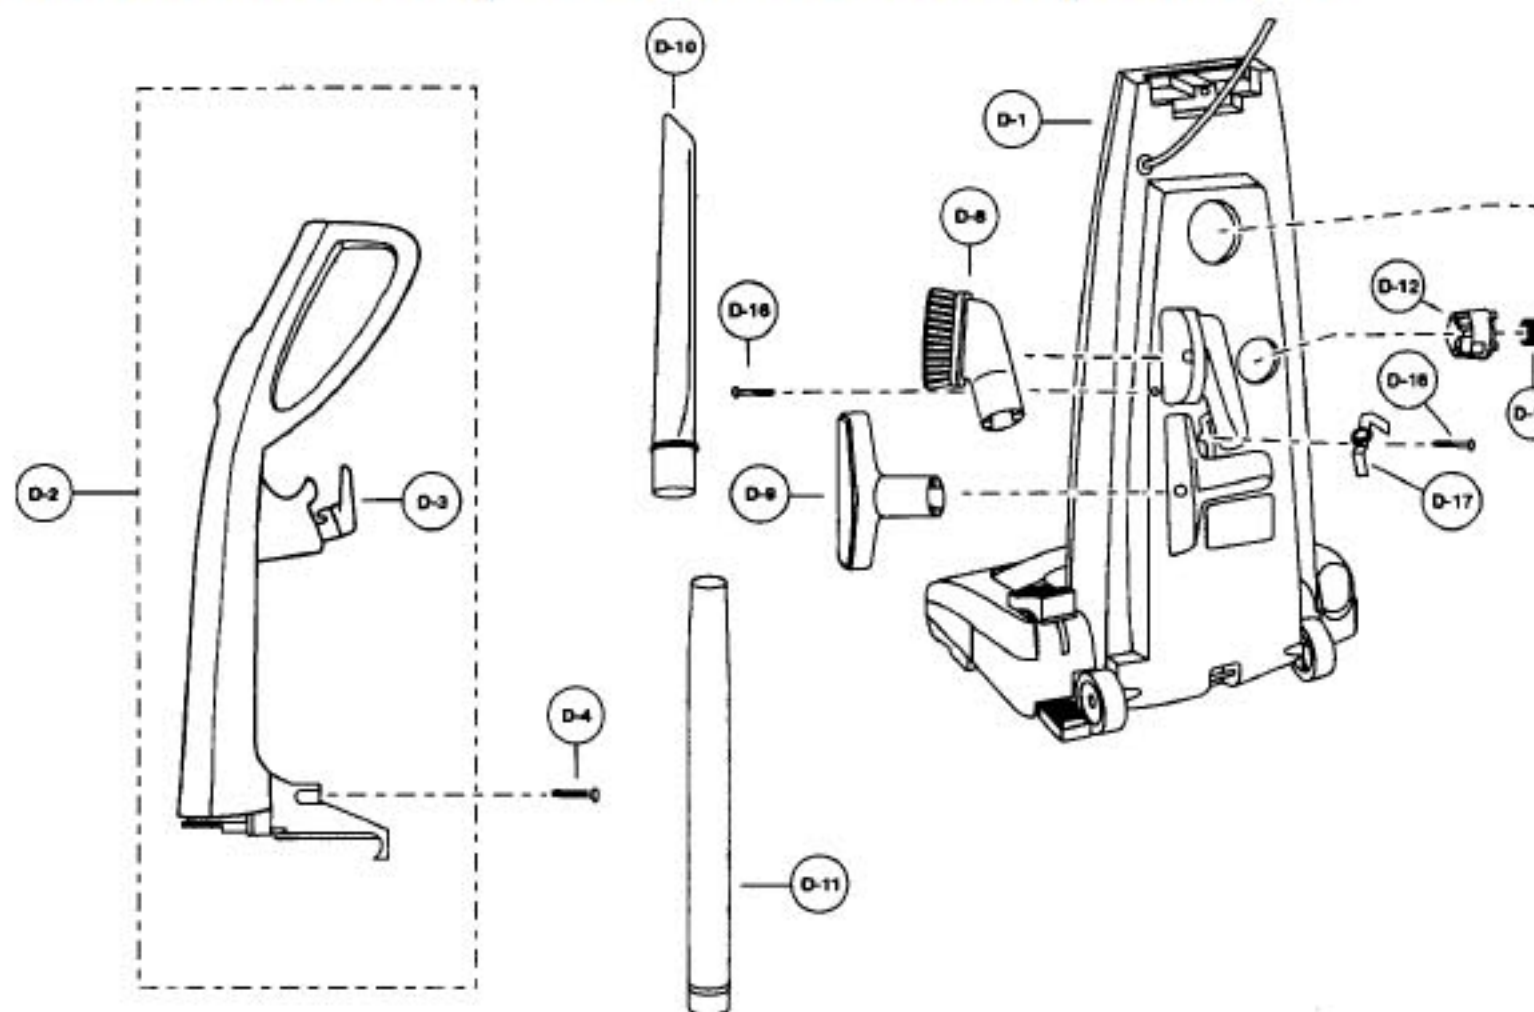

- 1..... P-9865 ..... Dust Compartment, V7315
- 1..... N/A..... Dust Compartment, V7325
- 1..... P-9924 ..... Dust Compartment, V7335, V7355
- 1..... N/A..... Dust Compartment, V7337
- 1..... P-11027 ..... Dust Compartment, V7375, V7395
- 2..... P-9872 ..... Handle Assy, V7315
- 2..... P-8178 ..... Handle Assy, V7325
- 2..... P-9936 ..... Handle Assy, V7335
- 2..... P-98111 ..... Handle Assy, V7337
- 2..... P-9937 ..... Handle Assy, V7355
- 2..... P-9768 ..... Handle Assy, V7375
- 2..... P-11032 ..... Handle Assy, V7395
- 3..... P-7035 ..... Cord Hook, upper
- 4..... P-9907 ..... Screw, handle

- 4..... P-000048 ..... Screw, handle, V7315
- 5..... P-8972 ..... Cover, suction inlet
- 6..... P-0648 ..... Hose
- 6..... P-8179 ..... Hose, V7325
- 6..... P-0648 ..... Hose, V7375, V7395
- 7..... P-9908 ..... Switch Knob
- 7..... P-9938 ..... Switch Knob, V7355, V7395
- 8..... P-9894 ..... Packing, suction inlet
- 9..... P-6088 ..... Dusting Brush
- 10..... P-6620 ..... Upholstery Tool
- 11..... P-6069 ..... Crevice Tool
- 12..... P-9895 ..... Telescoping Wand, V7337
- 12..... P-8180 ..... Extension Wand, w/ tabs, V7325, V7375, V7395

- 13..... P-6806
- 14..... P-7089
- 15..... P-6096
- 16..... P-1806
- 17..... P-9896
- 17..... P-7070
- 18..... P-6140
- 19..... P-9897
- 20..... P-9873
- 20..... P-0000
- 21..... P-9811
- 21..... P-6010

## Agitator Assembly

