


This Owner's Manual is provided and hosted by Appliance Factory Parts.



PANASONIC V7395 Owner's Manual

[Shop genuine replacement parts for PANASONIC V7395](#)

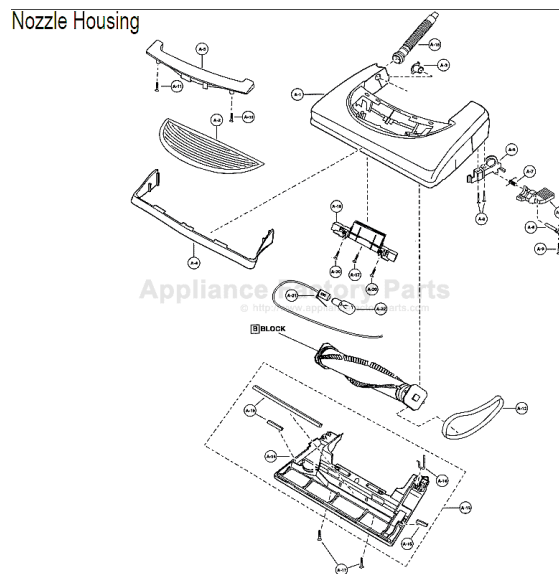


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V7375

Nozzle Housing

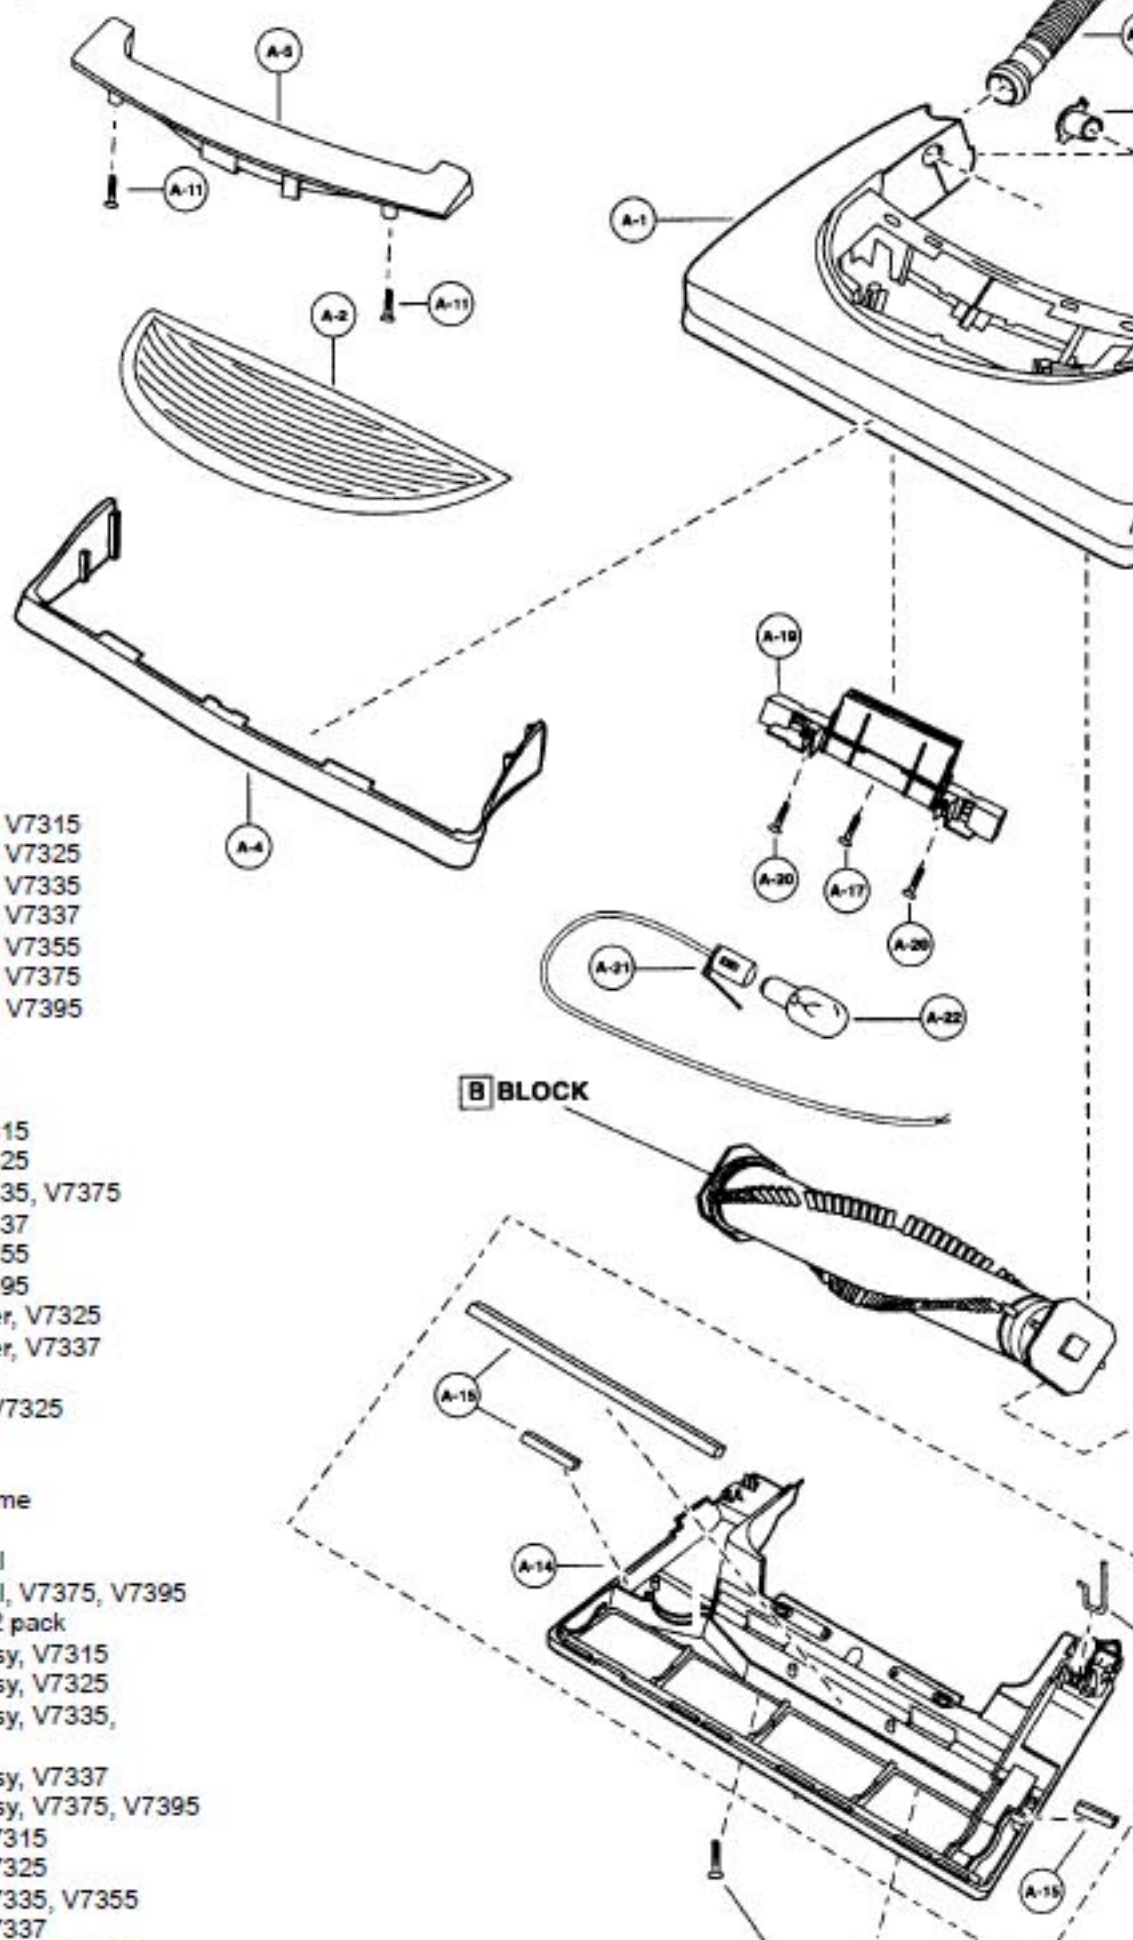


- | | | |
|---------|---------------|---------------------------------|
| 1..... | P-5966..... | Nozzle Housing, V7315 |
| 1..... | P-8170..... | Nozzle Housing, V7325 |
| 1..... | P-9916..... | Nozzle Housing, V7335 |
| 1..... | P-9898..... | Nozzle Housing, V7337 |
| 1..... | P-9917..... | Nozzle Housing, V7355 |
| 1..... | P-11025..... | Nozzle Housing, V7375 |
| 1..... | P-11026..... | Nozzle Housing, V7395 |
| 2..... | P-9854..... | Window |
| 3..... | P-2500..... | Shaft, plastic |
| 4..... | P-9855..... | Furniture Guard |
| 5..... | P-9856..... | Light Cover, V7315 |
| 5..... | P-8171..... | Light Cover, V7325 |
| 5..... | P-9918..... | Light Cover, V7335, V7375 |
| 5..... | P-98100..... | Light Cover, V7337 |
| 5..... | P-9879..... | Light Cover, V7355 |
| 5..... | P-11035..... | Light Cover, V7395 |
| 6..... | P-8172..... | Screw, light cover, V7325 |
| 6..... | P-42092..... | Screw, light cover, V7337 |
| 7..... | P-9878..... | Frame |
| 7..... | P-000095..... | Frame, V7315, V7325 |
| 8..... | P-9857..... | Spring, pedal |
| 9..... | P-513..... | Shaft, pedal |
| 10..... | P-4106..... | Screw, pedal/frame |
| 11..... | P-4720..... | Pedal, black |
| 12..... | P-9880..... | Cover, foot pedal |
| 12..... | P-10207..... | Cover, foot pedal, V7375, V7395 |
| 13..... | P-V270B..... | Belt, type UB8, 2 pack |
| 14..... | P-9858..... | Bottom Plate Assy, V7315 |
| 14..... | P-8947..... | Bottom Plate Assy, V7325 |
| 14..... | P-9881..... | Bottom Plate Assy, V7335, V7355 |
| 14..... | P-98101..... | Bottom Plate Assy, V7337 |
| 14..... | P-9764..... | Bottom Plate Assy, V7375, V7395 |
| 15..... | P-2859..... | Bottom Plate, V7315 |
| 15..... | P-5893..... | Bottom Plate, V7325 |
| 15..... | P-5964..... | Bottom Plate, V7335, V7355 |
| 15..... | P-98102..... | Bottom Plate, V7337 |

PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

Body Assembly

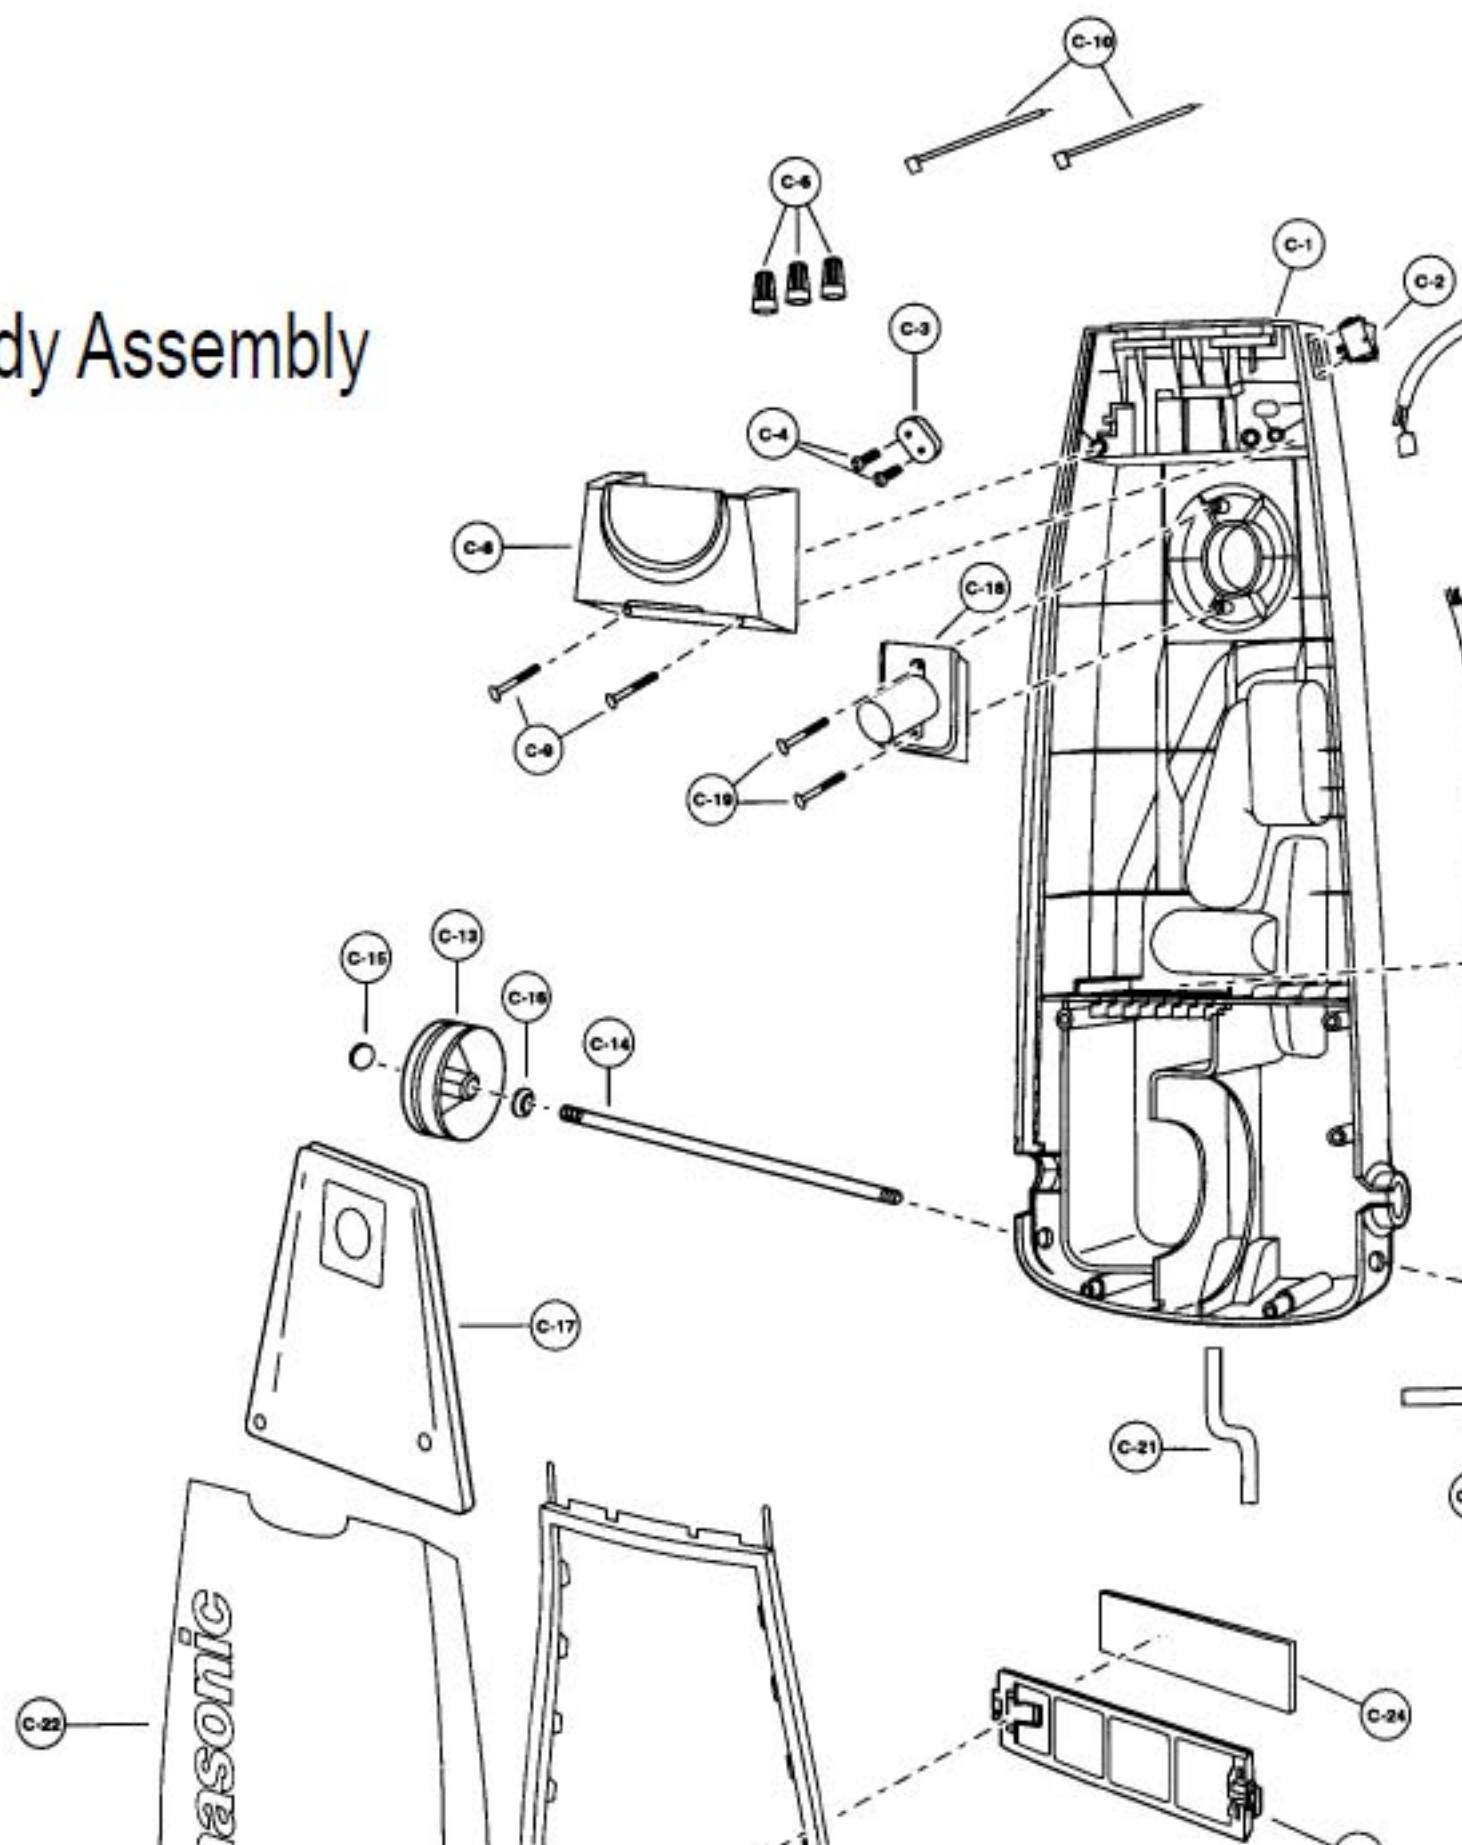


PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

1.....P-9865.....Dust Compartment, V7315	13....P-9893.....Filter Supporter	28....P-99
1.....P-8173.....Dust Compartment, V7325	14....P-7023.....Secondary Filter, foam	28....P-11
1.....P-9924.....Dust Compartment, V7335, V7355	15....P-0114.....Wheel	28....P-11
1.....P-98107.....Dust Compartment, V7337	16....P-16005.....Shaft, wheel	29....P-38
1.....P-11027.....Dust Compartment, V7375, V7395	17....P-74009.....Stopper, wheel	30....P-30
2.....P-9869.....Packing, dust cover	18....P-6115.....Washer	30....P-81
3.....N/A.....Cord Stopper	19....P-115P.....Paper Bag, type U3, 3 pack	31....P-54
3.....P-0698.....Cord Stopper, V7325, V7375, V7395	20....P-9928.....Sensor Sensitivity Knob	32....P-99
4.....P-6140.....Screw, cord stopper	21....P-7082.....Cover, bag supporter	33....P-99
5.....P-7906.....Power Cord	22....P-6140.....Screw, bag supporter	34....P-68
6.....P-000623.....Wire Connector	23....P-5470.....Bag Supporter Assembly	35....P-00
7.....P-9866.....Packing, dust container	23....P-10358.....Bag Supporter, V7315, V7337	P-98
7.....P-9869.....Packing, dust container, V7315	23....P-8175.....Bag Supporter, V7325	P-93
8.....P-9867.....Switch Cover, V7315, V7337	24....P-10602.....On/Off Switch, V7315, V7325	P-00
8.....P-8174.....Switch Cover, V7325	24....P-0696.....On/Off Switch, V7335, V7337	P-00
8.....P-9925.....Switch Cover, V7335, V7375	24....P-9929.....On/Off Switch, V7355, V7395	P-00
8.....P-9920.....Switch Cover, V7355	24....P-0696.....On/Off Switch, V7375	P-00
8.....P-11029.....Switch Cover, V7395	25....P-000024.....Switch Lever	P-41
9.....P-9927.....Partition Board	25....P-0701.....Switch Lever, V7325, V7375, V7395	
10....P-6140.....Screw, switch cover	26....P-3990.....Packing, right	
11....P-3879.....Screw, optic cells	27....P-4160.....Packing, left	
12....P-9892.....Lead Wire	27....P-5860.....Packing, left, V7325, V7375, V7395	
12....P-4410.....Lead Wire, V7315, V7355	28....P-9868.....Dust Cover, V7315	
12....N/A.....Lead Wire, V7395	28....P-8948.....Dust Cover, V7325	
	28....P-9932.....Dust Cover, V7335	
	28....P-98108.....Dust Cover, V7337	

Motor & Motor Case Assembly

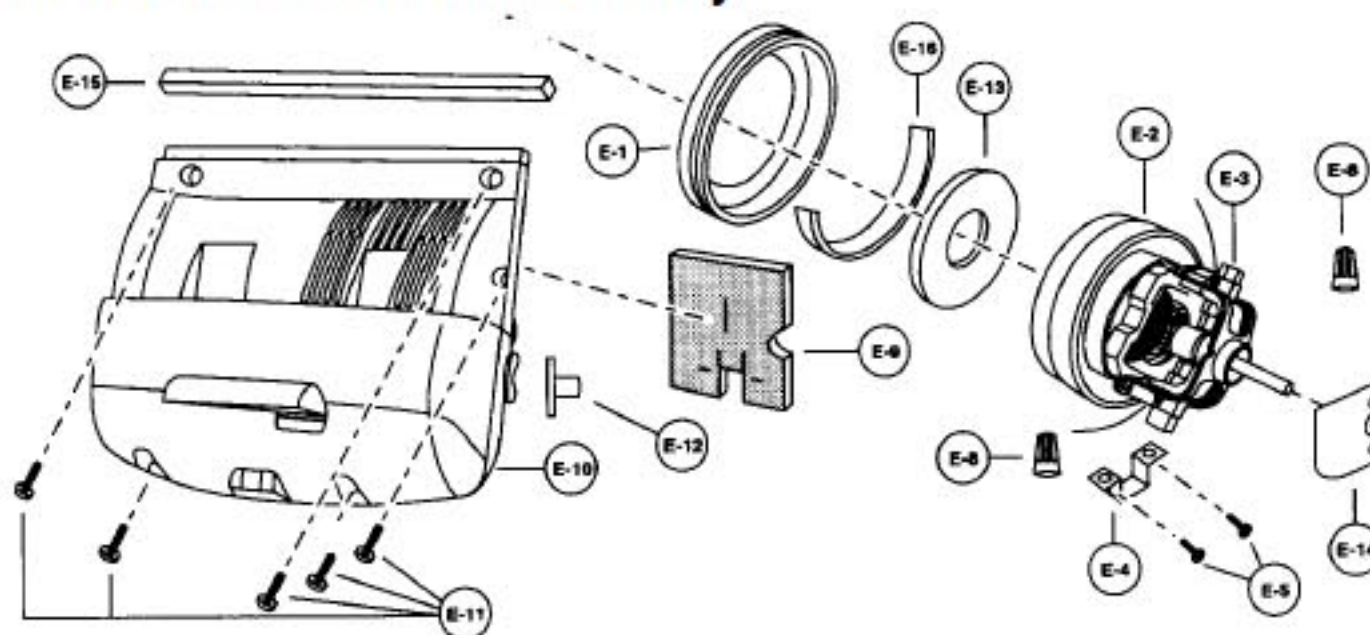


1.....P-0293.....Motor Support Rubber, front	6.....P-8183.....Motor Support Rubber, rear, V7325	13....P-98
2.....P-2908.....Motor Assy, V7315	7.....P-9931.....Noise Suppressor	14....P-04
2.....P-8181.....Motor Assy, V7325	8.....P-000023.....Noise Suppressor	15....P-41
2.....P-00005.....Motor Assy, V7325, V7355		16....P-00

PANASONIC

Models: MC-V7315, MC-V7325, MC-V7335, MC-V7355, MC-V7337, MC-V73

Handle Assembly & Rear Dust Compartment

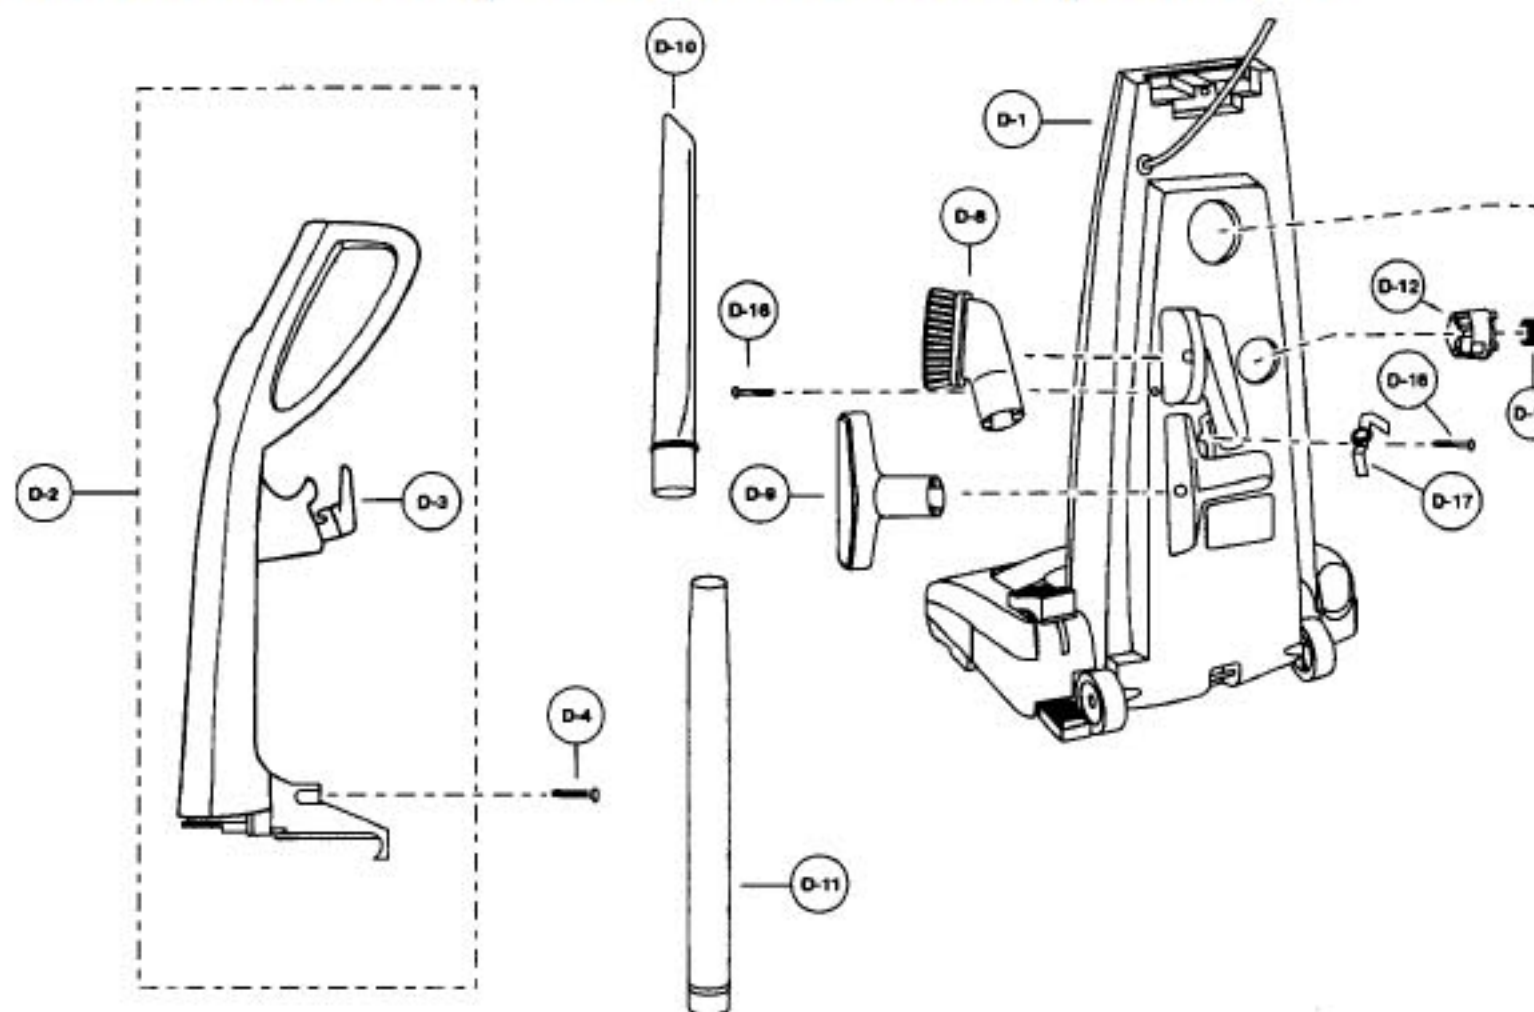

- | | | | | |
|----------------------|--------------------------------|-----------------------|-------------------------------------------------|---------------|
| 1..... P-9865 | Dust Compartment, V7315 | 4..... P-000048 | Screw, handle, V7315 | 13.... P-6806 |
| 1..... N/A..... | Dust Compartment, V7325 | 5..... P-8972 | Cover, suction inlet | 14.... P-7089 |
| 1..... P-9924 | Dust Compartment, V7335, V7355 | 6..... P-0648 | Hose | 15.... P-6096 |
| 1..... N/A..... | Dust Compartment, V7337 | 6..... P-8179 | Hose, V7325 | 16.... P-1806 |
| 1..... P-11027 | Dust Compartment, V7375, V7395 | 6..... P-0648 | Hose, V7375, V7395 | 17.... P-9896 |
| 2..... P-9872 | Handle Assy, V7315 | 7..... P-9908 | Switch Knob | 17.... P-7070 |
| 2..... P-8178 | Handle Assy, V7325 | 7..... P-9938 | Switch Knob, V7355, V7395 | 18.... P-6140 |
| 2..... P-9936 | Handle Assy, V7335 | 8..... P-9894 | Packing, suction inlet | 19.... P-9897 |
| 2..... P-98111..... | Handle Assy, V7337 | 9..... P-6088 | Dusting Brush | 20.... P-9873 |
| 2..... P-9937 | Handle Assy, V7355 | 10.... P-6620 | Upholstery Tool | 20.... P-0000 |
| 2..... P-9768 | Handle Assy, V7375 | 11.... P-6069 | Crevice Tool | P-9811 |
| 2..... P-11032 | Handle Assy, V7395 | 12.... P-9895 | Telescoping Wand, V7337 | 21.... P-6010 |
| 3..... P-7035 | Cord Hook, upper | 12.... P-8180 | Extension Wand, w/ tabs,
V7325, V7375, V7395 | |
| 4..... P-9907 | Screw, handle | | | |

Agitator Assembly

