


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



# PANASONIC V7357 Owner's Manual

[Shop genuine replacement parts for PANASONIC V7357](#)

## Nozzle Housing

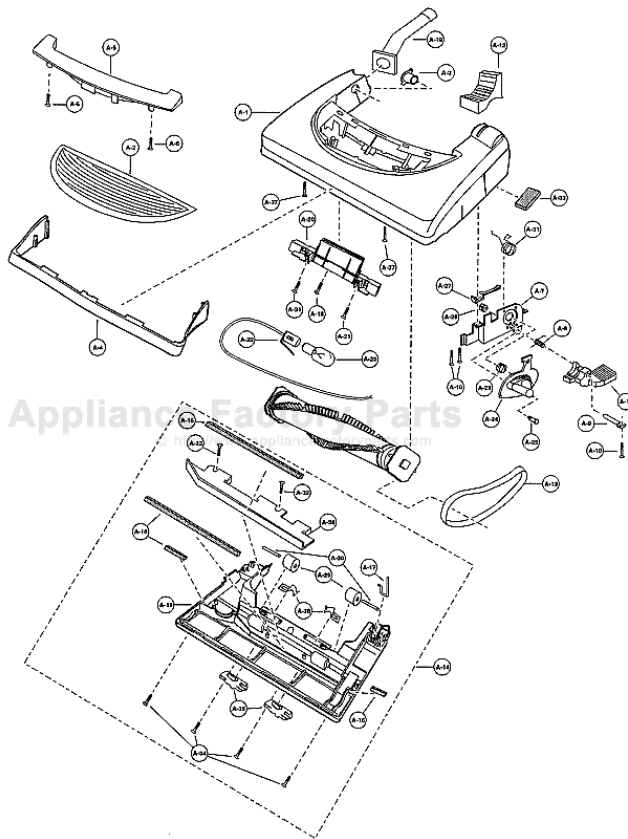


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, M

## Nozzle Housing

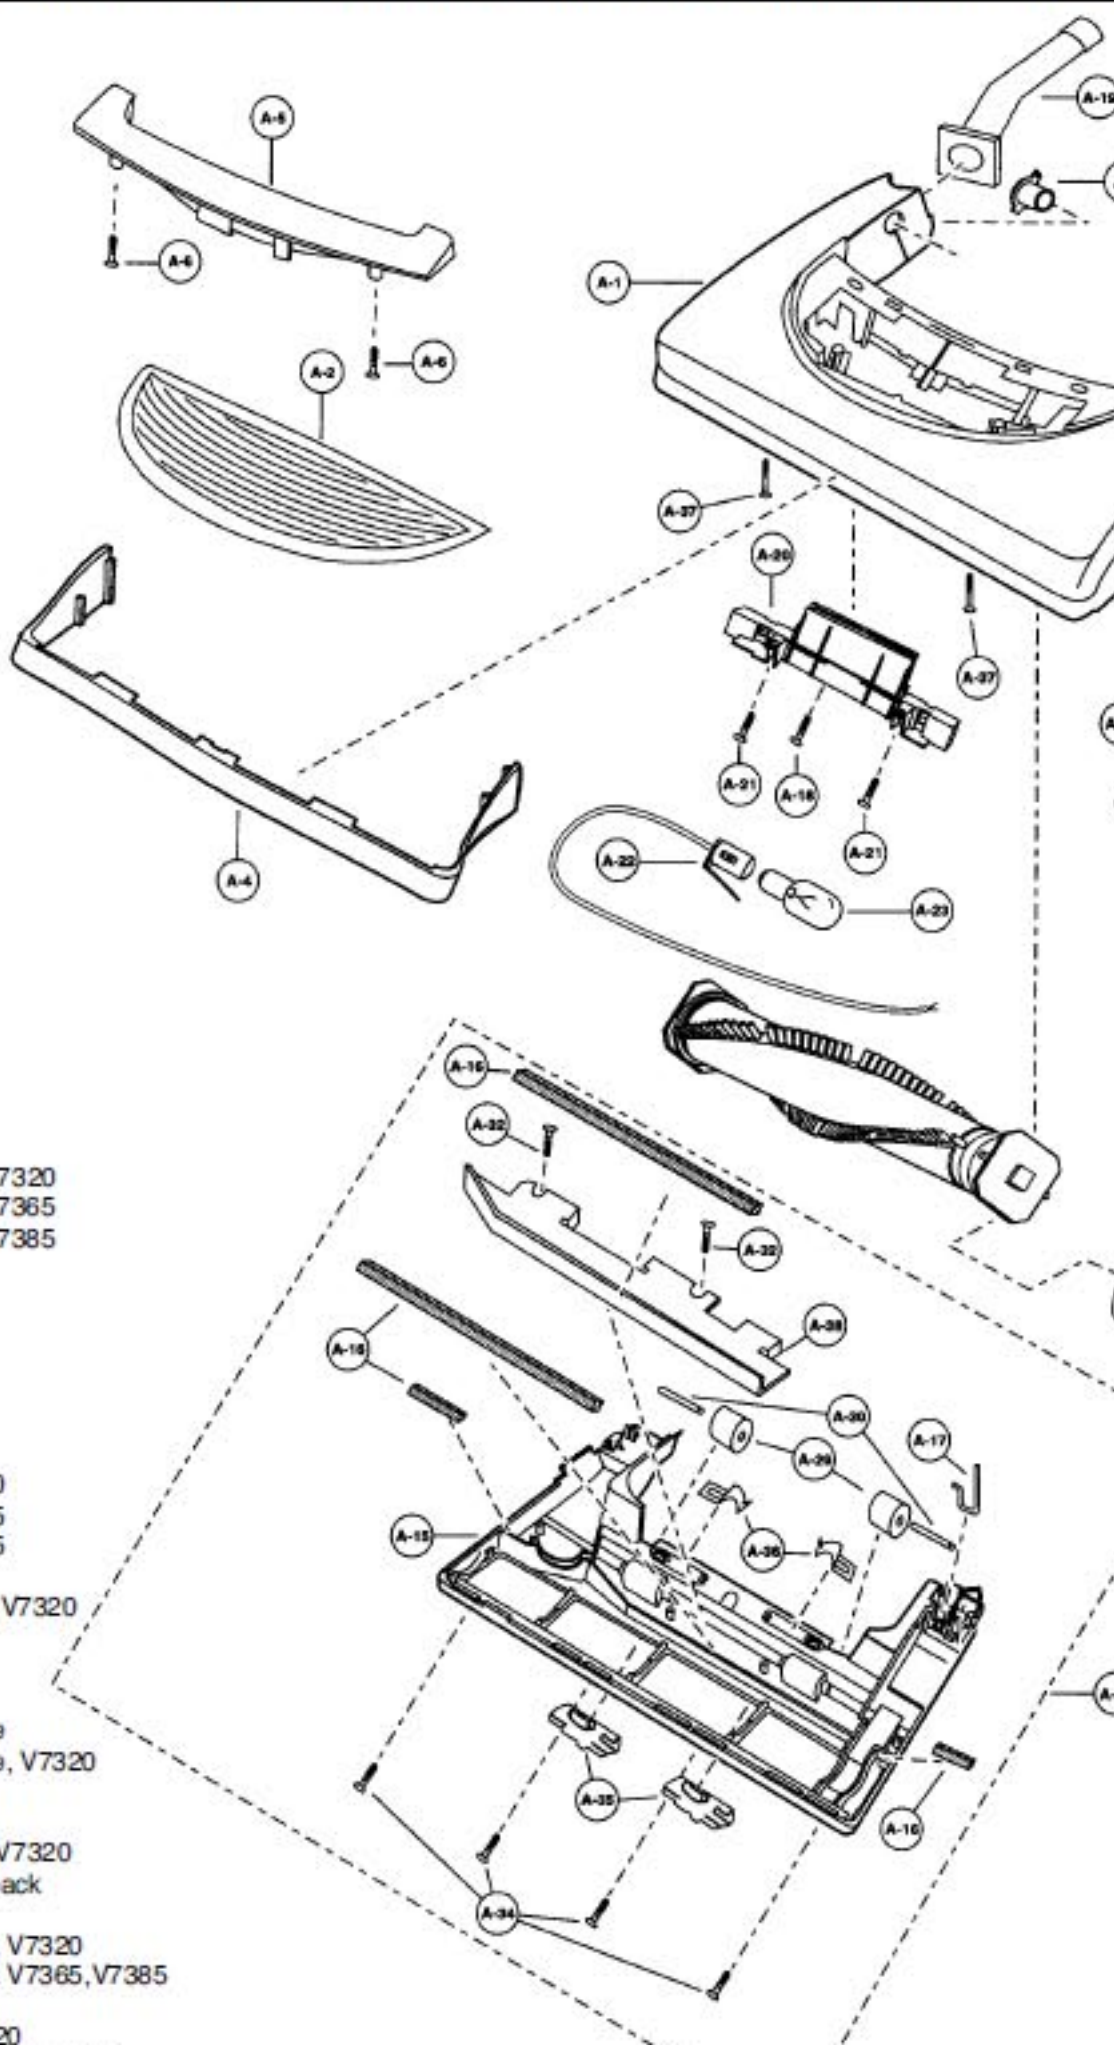


- |    |       |         |       |   |
|----|-------|---------|-------|---|
| 1  | ..... | P-8920  | ..... | Nozzle Housing                                    |
| 1  | ..... | P-10112 | ..... | Nozzle Housing, V7320                             |
| 1  | ..... | P-11025 | ..... | Nozzle Housing, V7365                             |
| 1  | ..... | P-10446 | ..... | Nozzle Housing, V7385                             |
| 2  | ..... | P-9854  | ..... | Window  |
| 3  | ..... | P-2500  | ..... | Shaft, plastic                                    |
| 4  | ..... | P-9855  | ..... | Furniture Guard                                   |
| 4  | ..... | P-10351 | ..... | Furniture Guard,<br>V7365, V7385,<br>V7367, V7377 |
| 5  | ..... | P-8921  | ..... | Light Cover                                       |
| 5  | ..... | P-9879  | ..... | Light Cover, V7320                                |
| 5  | ..... | P-9918  | ..... | Light Cover, V7365                                |
| 5  | ..... | P-9879  | ..... | Light Cover, V7385                                |
| 6  | ..... | P-8172  | ..... | Screw, light cover                                |
| 6  | ..... | P-42092 | ..... | Screw, light cover, V7320                         |
| 7  | ..... | P-9878  | ..... | Frame   |
| 8  | ..... | P-9857  | ..... | Spring, pedal                                     |
| 9  | ..... | P-513   | ..... | Shaft, pedal                                      |
| 10 | ..... | N/A     | ..... | Screw, pedal/frame                                |
| 10 | ..... | P-4104  | ..... | Screw, pedal/frame, V7320                         |
| 11 | ..... | P-4720  | ..... | Pedal, black                                      |
| 12 | ..... | P-10207 | ..... | Cover, foot pedal                                 |
| 12 | ..... | P-9880  | ..... | Cover, foot pedal, V7320                          |
| 13 | ..... | P-V270B | ..... | Belt, type UB8, 2 pack                            |
| 14 | ..... | P-8922  | ..... | Bottom Plate Assy                                 |
| 14 | ..... | P-9881  | ..... | Bottom Plate Assy, V7320                          |
| 14 | ..... | P-9764  | ..... | Bottom Plate Assy, V7365, V7385                   |
| 15 | ..... | P-8923  | ..... | Bottom Plate                                      |
| 15 | ..... | P-5964  | ..... | Bottom Plate, V7320                               |

# PANASONIC

# V-



Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V737

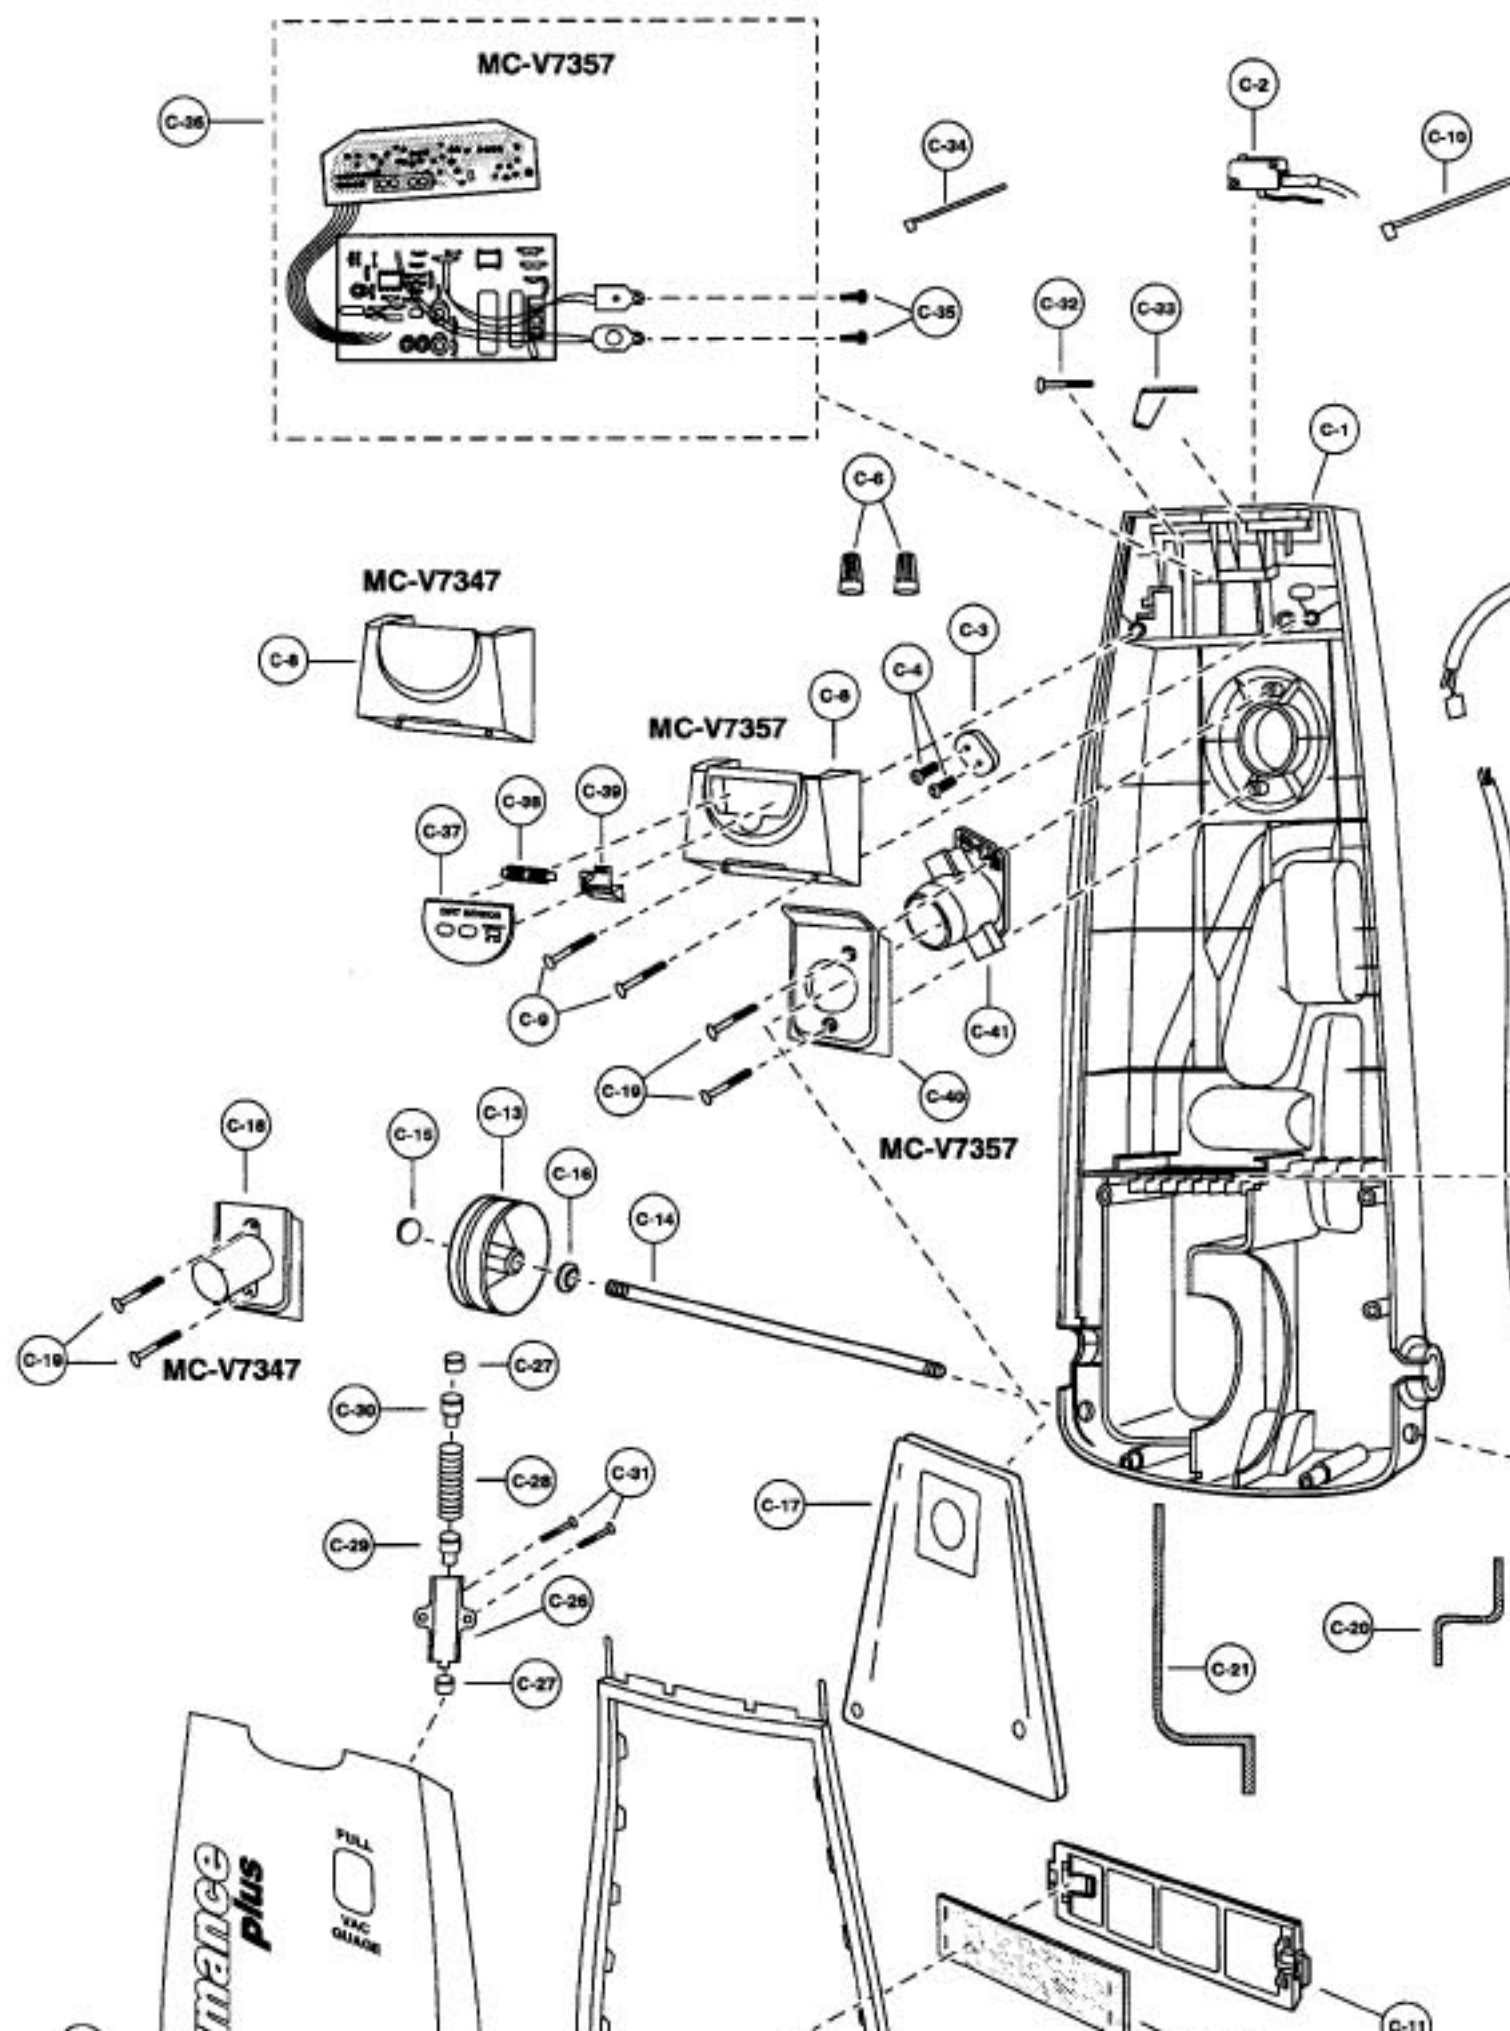

Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377

1 ... P-10396	Dust Compartment	11 ... P-9893	Filter Supporter	26 ... P-9810
1 ... P-5899	Dust Compartment, V7320	12 ... P-7023	Secondary Filter, foam	26 ... P-1039
1 ... N/A	Dust Compartment, V7347, V7357	13 ... P-0114	Wheel	27 ... P-9300
1 ... P-10359	Dust Compartment, V7365	14 ... P-16005	Shaft, wheel	28 ... P-0001
1 ... P-11027	Dust Compartment, V7385	15 ... P-74009	Stopper, wheel	29 ... P-0001
2 ... P-0696	On/Off Switch	16 ... P-6115	Washer, wheel	30 ... P-000
2 ... P-10602	On/Off Switch, V7365	17 ... P-115P	Paper Bag, type U3, 3 pack	31 ... P-4104
2 ... P-9929	On/Off Switch, V7385	17 ... P-115PT	Paper Bag, type U3, 12 pack	32 ... P-6800
3 ... P-0698	Cord Stopper	18 ... P-5470	Bag Supporter	33 ... P-0701
3 ... N/A	Cord Stopper, V7320	18 ... P-10358	Bag Supporter, V7347, V7357 V7365, V7385	33 ... P-0000
4 ... N/A	Screw, cord stopper	18 ... P-10350	Bag Supporter, V7367	34 ... P-0010
5 ... P-9816	Power Cord	19 ... P-6140	Screw, bag supporter	35 ... P-0008
5 ... P-7906	Power Cord, V7320	20 ... P-3990	Packing, right	36 ... P-5472
5 ... P-7906	Power Cord, V7365, V7385	21 ... P-5860	Packing, left	37 ... P-9934
6 ... P-000623	Wire Connector	22 ... P-7092	Dust Cover, V7320	37 ... P-0000
7 ... P-9866	Packing, dust container	22 ... P-8927	Dust Cover, V7347	38 ... P-9935
7 ... P-66306	Packing, dust container, V7320	22 ... P-8928	Dust Cover, V7357	38 ... P-0000
8 ... P-7091	Switch Cover, V7320	22 ... P-10360	Dust Cover, V7365	39 ... P-9928
8 ... P-8925	Switch Cover, V7347, V7367	22 ... P-10397	Dust Cover, V7367	39 ... P-0000
8 ... P-8926	Switch Cover, V7357, V7377	22 ... P-10398	Dust Cover, V7377	40 ... P-7082
8 ... P-8926	Switch Cover, V7365	22 ... P-10448	Dust Cover, V7385	41 ... P-5470
8 ... P-9926	Switch Cover, V7385	23 ... P-3820	Wire Cord	P-9811
9 ... P-6140	Screw, switch cover	24 ... P-3099	Exhaust Filter, electrostatic, V7320	P-9927
9 ... P-6037	Packing, switch cover, V7320	24 ... P-8176	Exhaust Filter, HEPA, V7347, V7357, V7365, V7367, V7377, V7385	
10 ... P-9892	Lead Wire	25 ... P-9869	Packing, dust cover	
10 ... P-4410	Lead Wire, black, V7347, V7357, V7365, V7385			

## Handle Assembly & Rear Dust Compartment

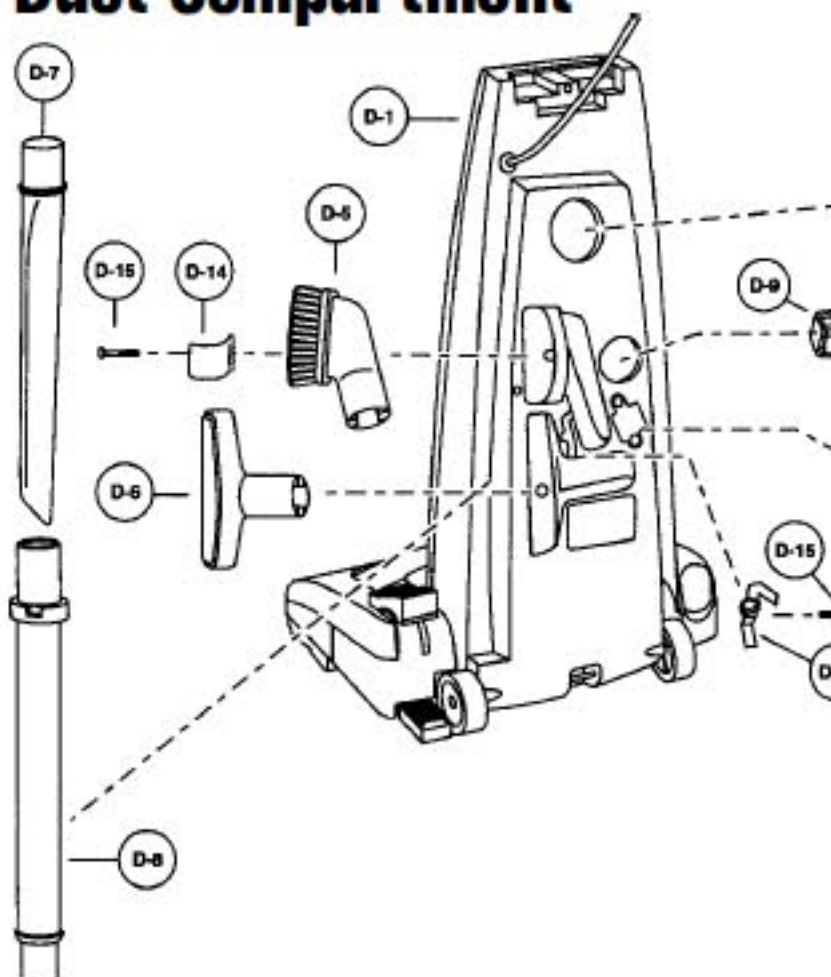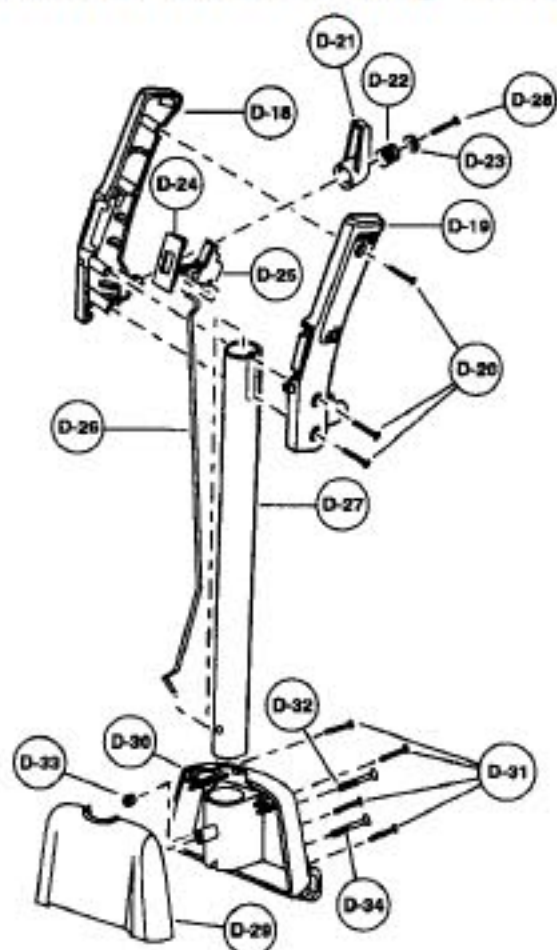


1 ... N/A	Dust Compartment, V7320	10 ... P-7089	Protector Spring	25 ... P-9938
1 ... P-8929	Dust Compartment, V7347, V7357	11 ... P-6096	Protector	26 ... P-7554
1 ... P-10361	Dust Compartment, V7365	12 ... P-1806	Protector Spring	27 ... P-8932
1 ... P-10361	Dust Compartment, V7385			27 ... P-10361

# PANASONIC

V-

Models: MC-V7320, MC-V7347, MC-V7357, MC-V7365, MC-V7367, MC-V7377, MC-V7385

## Motor Case & Motor

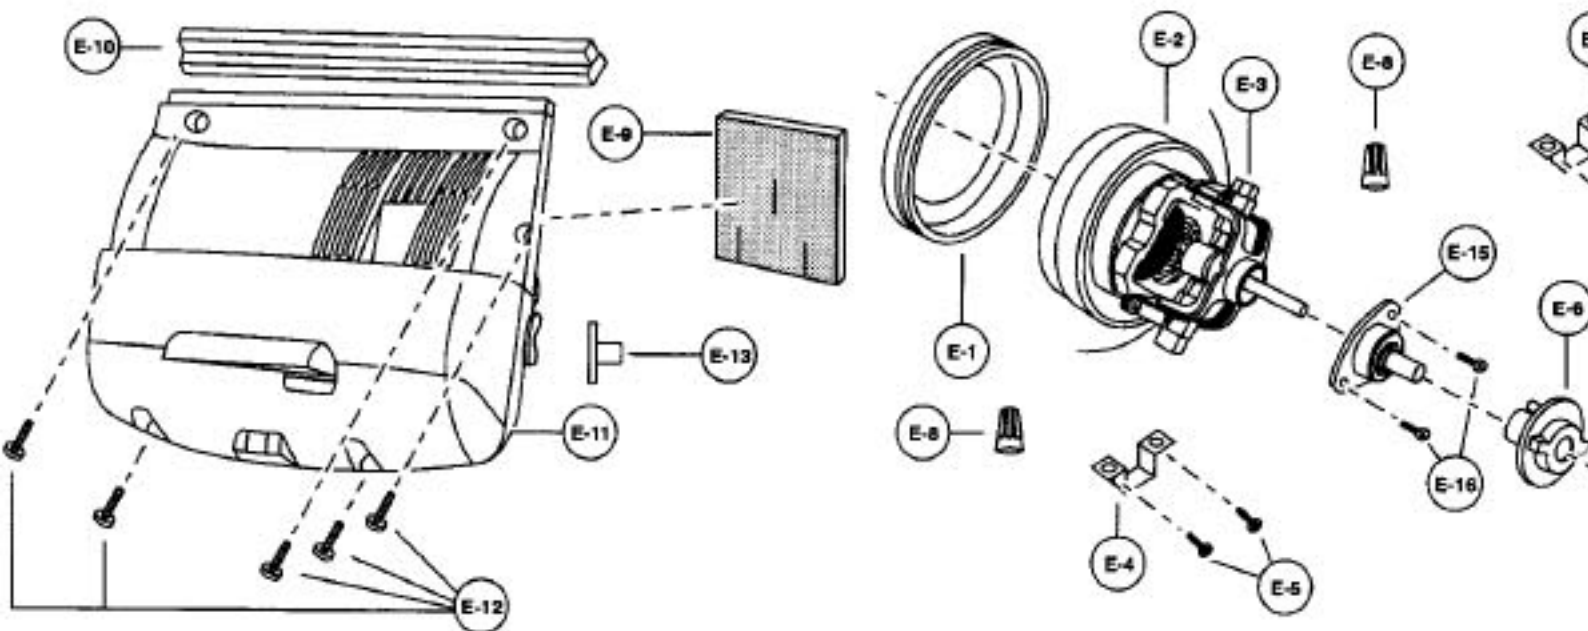


- 1 .... P-0293 ..... Motor Support Rubber, front
- 2 .... P-2908 ..... Motor Assy, V7320
- 2 .... P-8935 ..... Motor Assy, V7347, V7357
- 2 .... P-10405 .... Motor Assy, V7367, V7377
- 2 .... P-8181 ..... Motor Assy, V7365
- 2 .... P-11033 .... Motor Assy, V7385
- 3 .... P-8182 ..... Carbon Brush Assy
- 3 .... P-27009 .... Carbon Brush Assy, V7320
- P-9823 ..... Screw, carbon brush
- 4 .... P-0036 ..... Retainer Bracket, V7320
- 5 .... P-0037 ..... Screw, brush retainer, V7320
- 6 .... P-9911 ..... Motor Support Rubber, rear
- 7 .... P-9931 ..... Noise Suppressor
- 8 .... P-000623 .. Wire Connector

- 9 .... P-5960 ..... Packing, rear cover
- 9 .... P-9874 ..... Packing, rear cover, V7347, V7357, V7367, V7377, V7365, V7385
- 10 .. P-9899 ..... Packing, motor case
- 11 .. P-7094 ..... Motor Case, V7320
- 11 .. P-8937 ..... Motor Case, V7347, V7357
- 11 .. P-9939 ..... Motor Case, V7365
- 11 .. P-10406 .... Motor Case, V7367, V7377
- 11 .. P-9944 ..... Motor Case, V7385
- 12 .. P-8172 ..... Screw, motor case
- 12 .. P-42092 .... Screw, motor case, V7320
- 13 .. P-7805 ..... Plastic Holder
- 14 .. P-0410 ..... Cooling Guide

- 15 .. P-996
- 16 .. P-991
- 16 .. P-991
- P-893
- N/A ...
- P-818

## Agitator Assembly

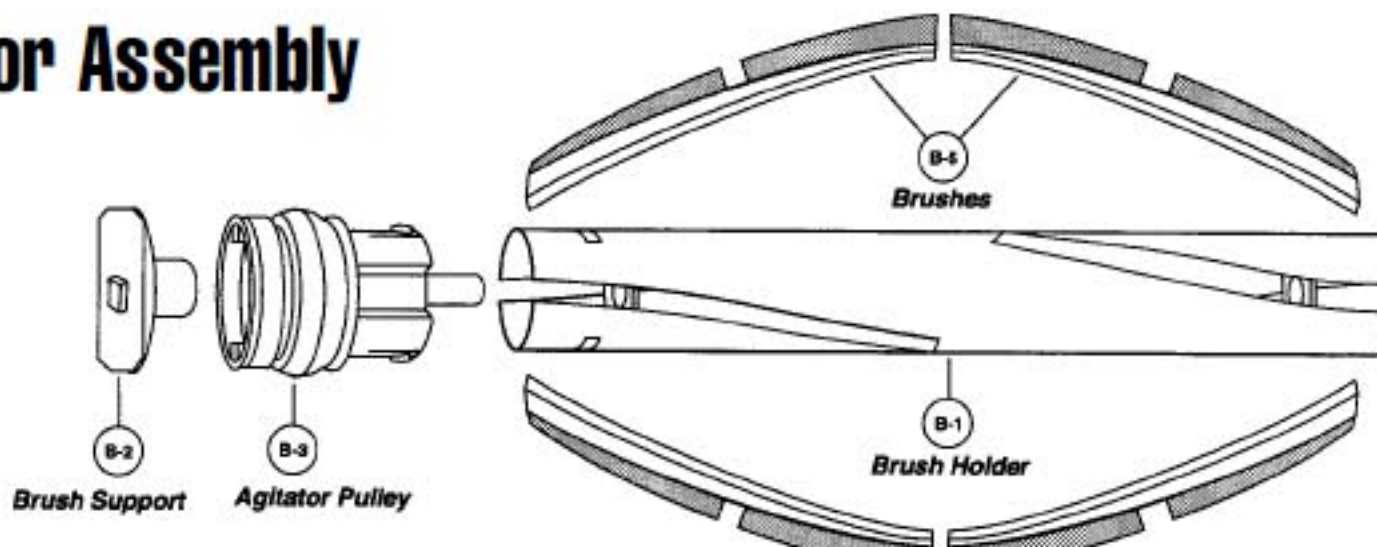

Brush Support      Agitator Pulley