


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



PANASONIC V7380 Owner's Manual

[Shop genuine replacement parts for PANASONIC
V7380](#)

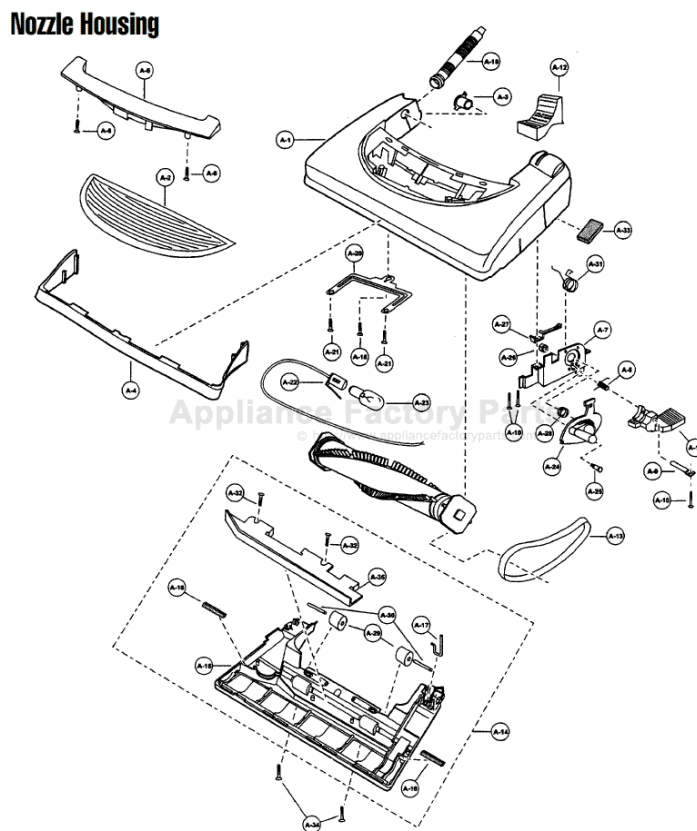

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)


----- Manual continues below -----

PANASONIC

V

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

Nozzle Housing

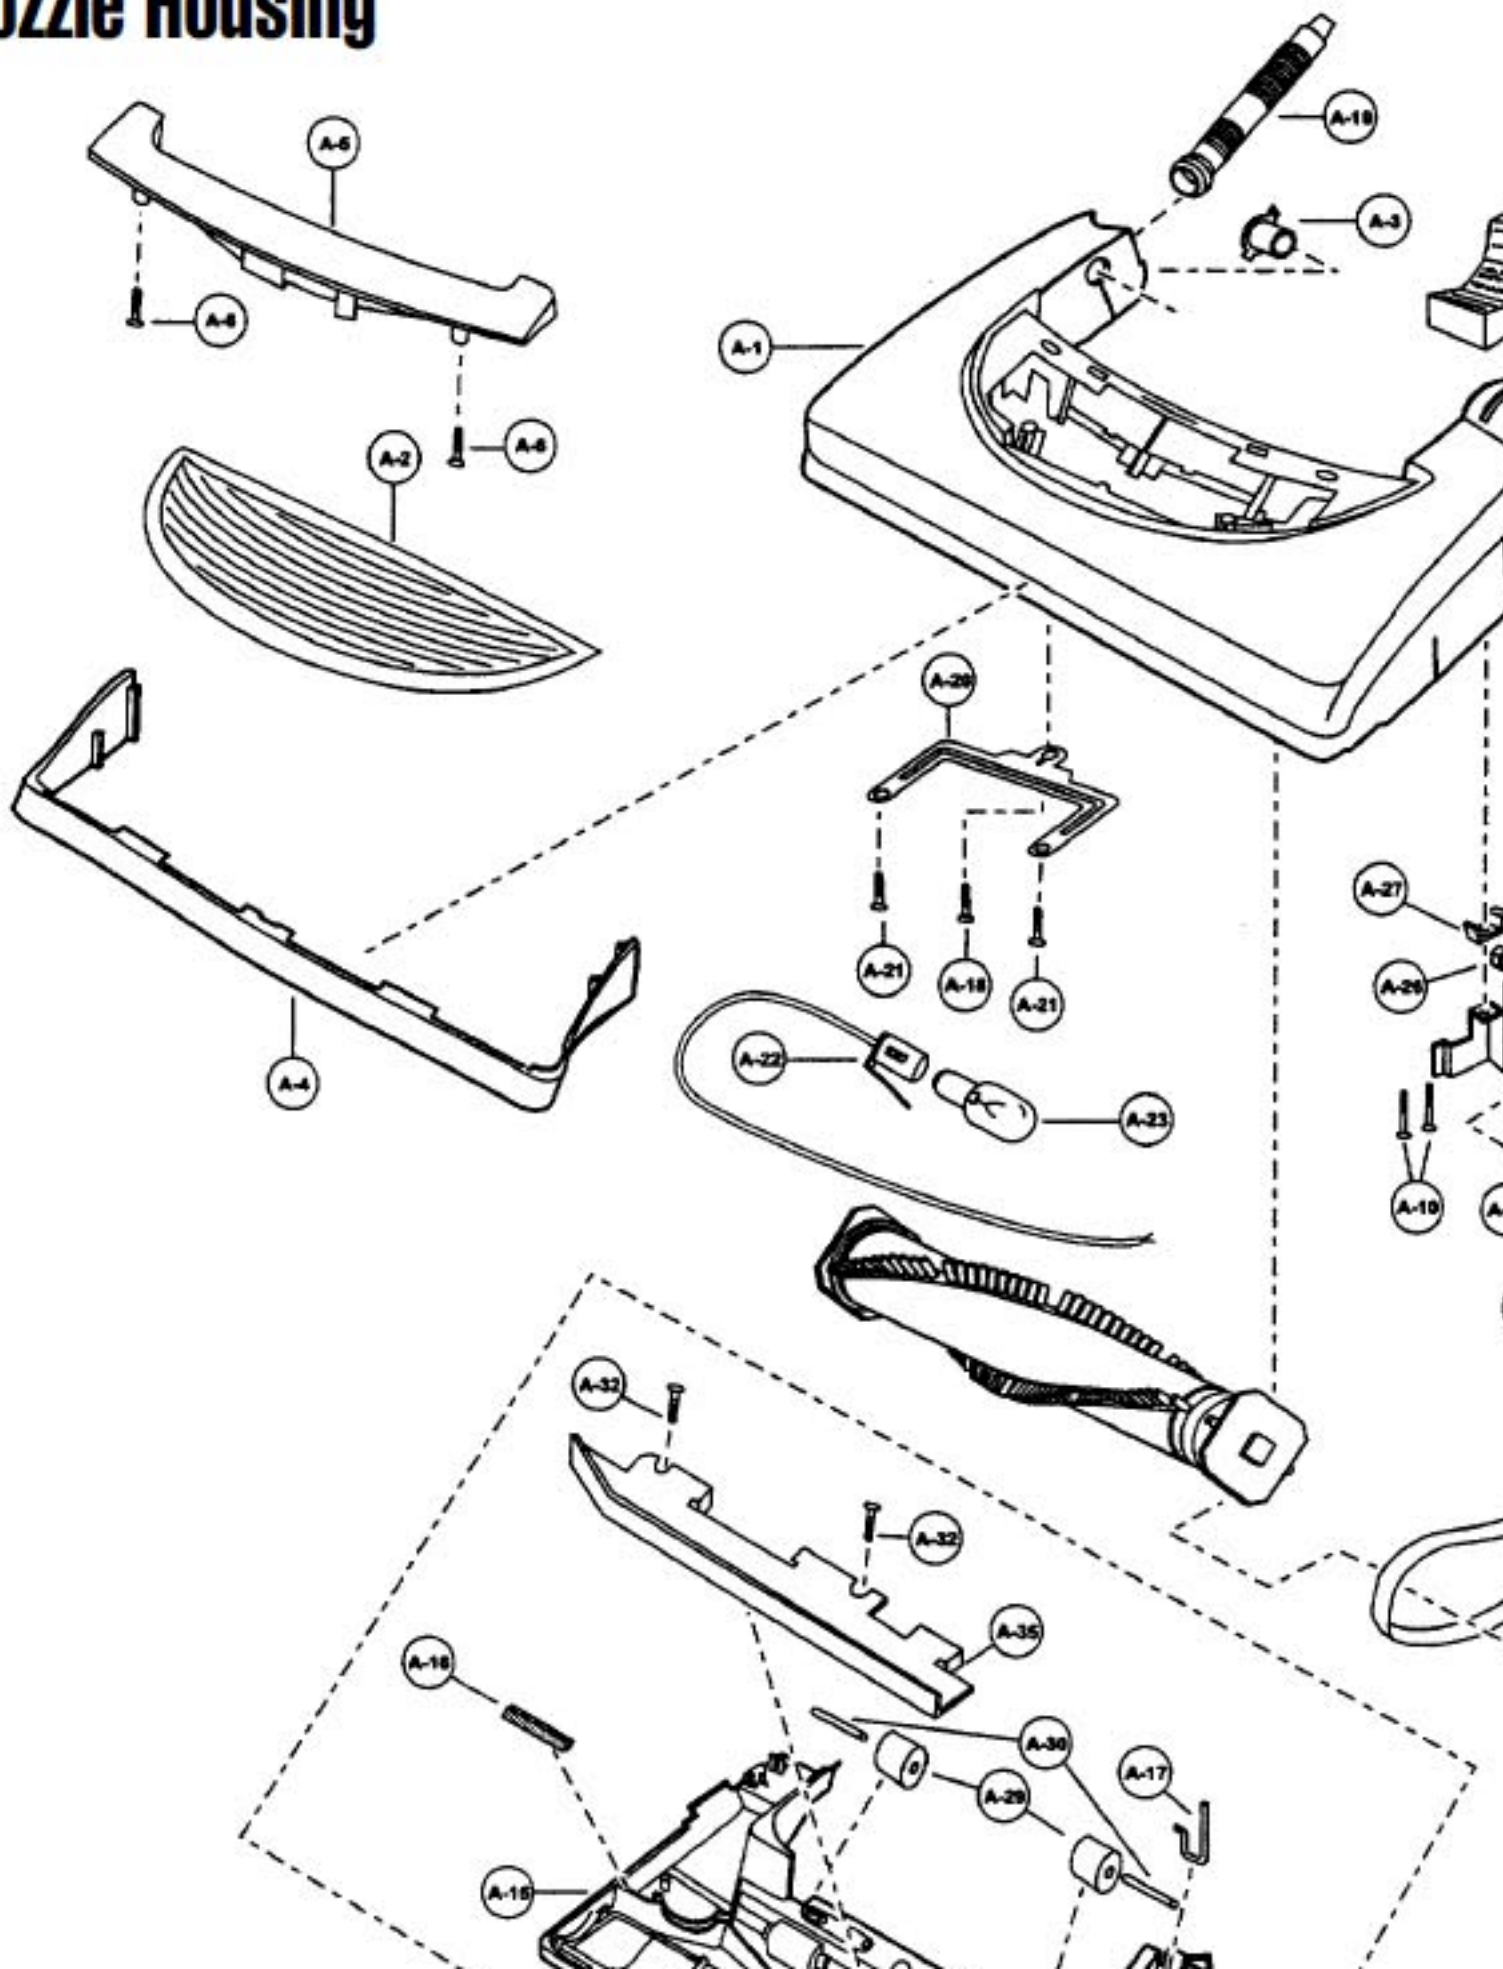


PANASONIC

V-

Models: MC-7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

1	N/A	Nozzle Housing, V7341	10	P-02181	Screw, pedal/frame assy	26	P-9885	
1	P-10702	Nozzle Housing, V7370	11	P-4720	Pedal, black	27	P-0218	
1	P-10723	Nozzle Housing, V7380	12	P-10207	Cover, foot pedal	28	P-9887	
1	P-10671	Nozzle Housing, V7387	13	P-V270B	Belt, 2pk	29	P-9888	
1	P-10651	Nozzle Housing, V7389	13	P-00181	Belt, each	30	P-1035	
1	P-10668	Nozzle Housing, V7398	14	P-10632	Lower Plate Assy	30	P-9889	
1	P-10652	Nozzle Housing, V7399	14	P-10703	Lower Plate Assy, V7370	31	P-0218	
2	P-9854	Window	14	P-10724	Lower Plate Assy, V7380	32	P-6140	
2	P-10105	Window, V7370	14	P-10672	Lower Plate Assy, V7387	33	P-9810	
3	P-2500	Shaft, plastic	15	P-10633	Lower Plate	34	P-6800	
3	P-10819	Shaft, plastic, V7341	15	P-10705	Lower Plate, V7370	34	P-9810	
4	P-10351	Furniture Guard	15	P-10725	Lower Plate, V7380	35	P-9766	
4	P-10541	Furniture Guard, V7341	15	P-10681	Lower Plate, V7387		P-2444	
4	P-11014	Furniture Guard, V7370	16	P-10394	Packing, lower		P-9846	
5	P-98100	Light Cover, V7341, V7399	17	P-9861	Belt Cover		P-683	
5	P-10653	Light Cover, V7380, V7389	17	P-43	Belt Cover, V7370		P-1073	
5	P-8921	Light Cover, V7387	18	P-6800	Screw, lower plate			
5	P-10669	Light Cover, V7398	19	P-10304	Nozzle Hose			
6	P-8172	Screw, light cover	20	P-10353	Slider Support			
7	P-9878	Frame	21	P-6140	Screw, slider support			
7	P-000095	Frame, V7370, V7380	22	P-9367	Socket, bulb			
8	P-9857	Spring, pedal	23	P-7550	Bulb			
9	P-513	Shaft, pedal	24	P-10367	Pedal Gear Assy			
9	P-00051	Shaft, pedal, V7370	25	P-9884	Shoulder Screw			

Motor Case & Motor

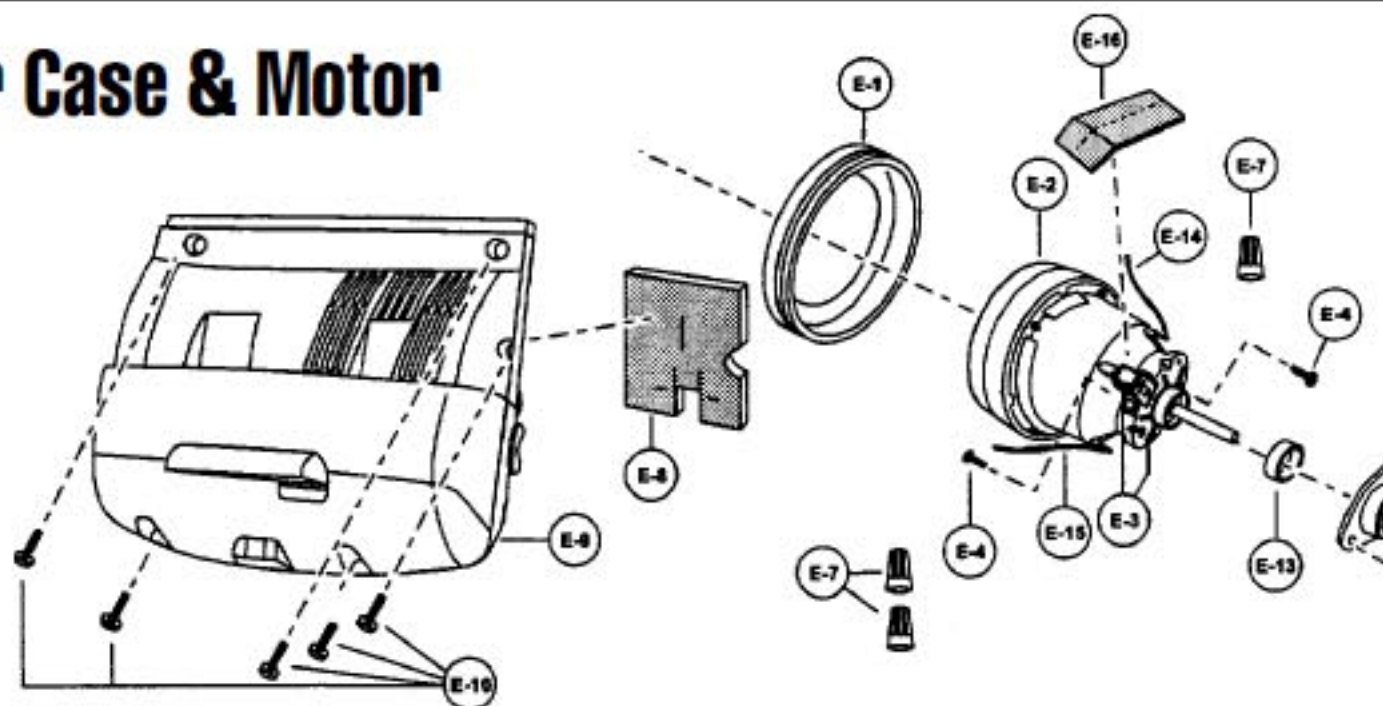

1	P-0293	Motor Support Rubber, front	7	P-000623	Wire Connector	13	P-8184	
2	P-11033	Motor Assy	8	P-10648	Packing, rear cover	14	P-8936	
2	P-10710	Motor Assy, V7370	9	P-98113	Motor Case, V7341, V7399	14	P-1071	
2	P-10405	Motor Assy, V7387	9	P-10711	Motor Case, V7370, V7380	15	P-1051	
3	P-8182	Carbon Brush Assy	9	P-10667	Motor Case, V7389	15	P-1068	
4	P-9823	Screw, carbon brush	9	P-10406	Motor Case, V7387	16	P-1064	
5	P-9911	Motor Support Rubber, rear	9	P-10689	Motor Case, V7398		P-7805	
5	P-8183	Motor Support Rubber, rear, V7370, V7387	10	P-6140	Screw, motor case			
6	P-10670	Noise Suppressor	11	N/A	Flange			
			12	P-10690	Screw, flange			


Agitator Assembly



Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

MC-V7399

Body

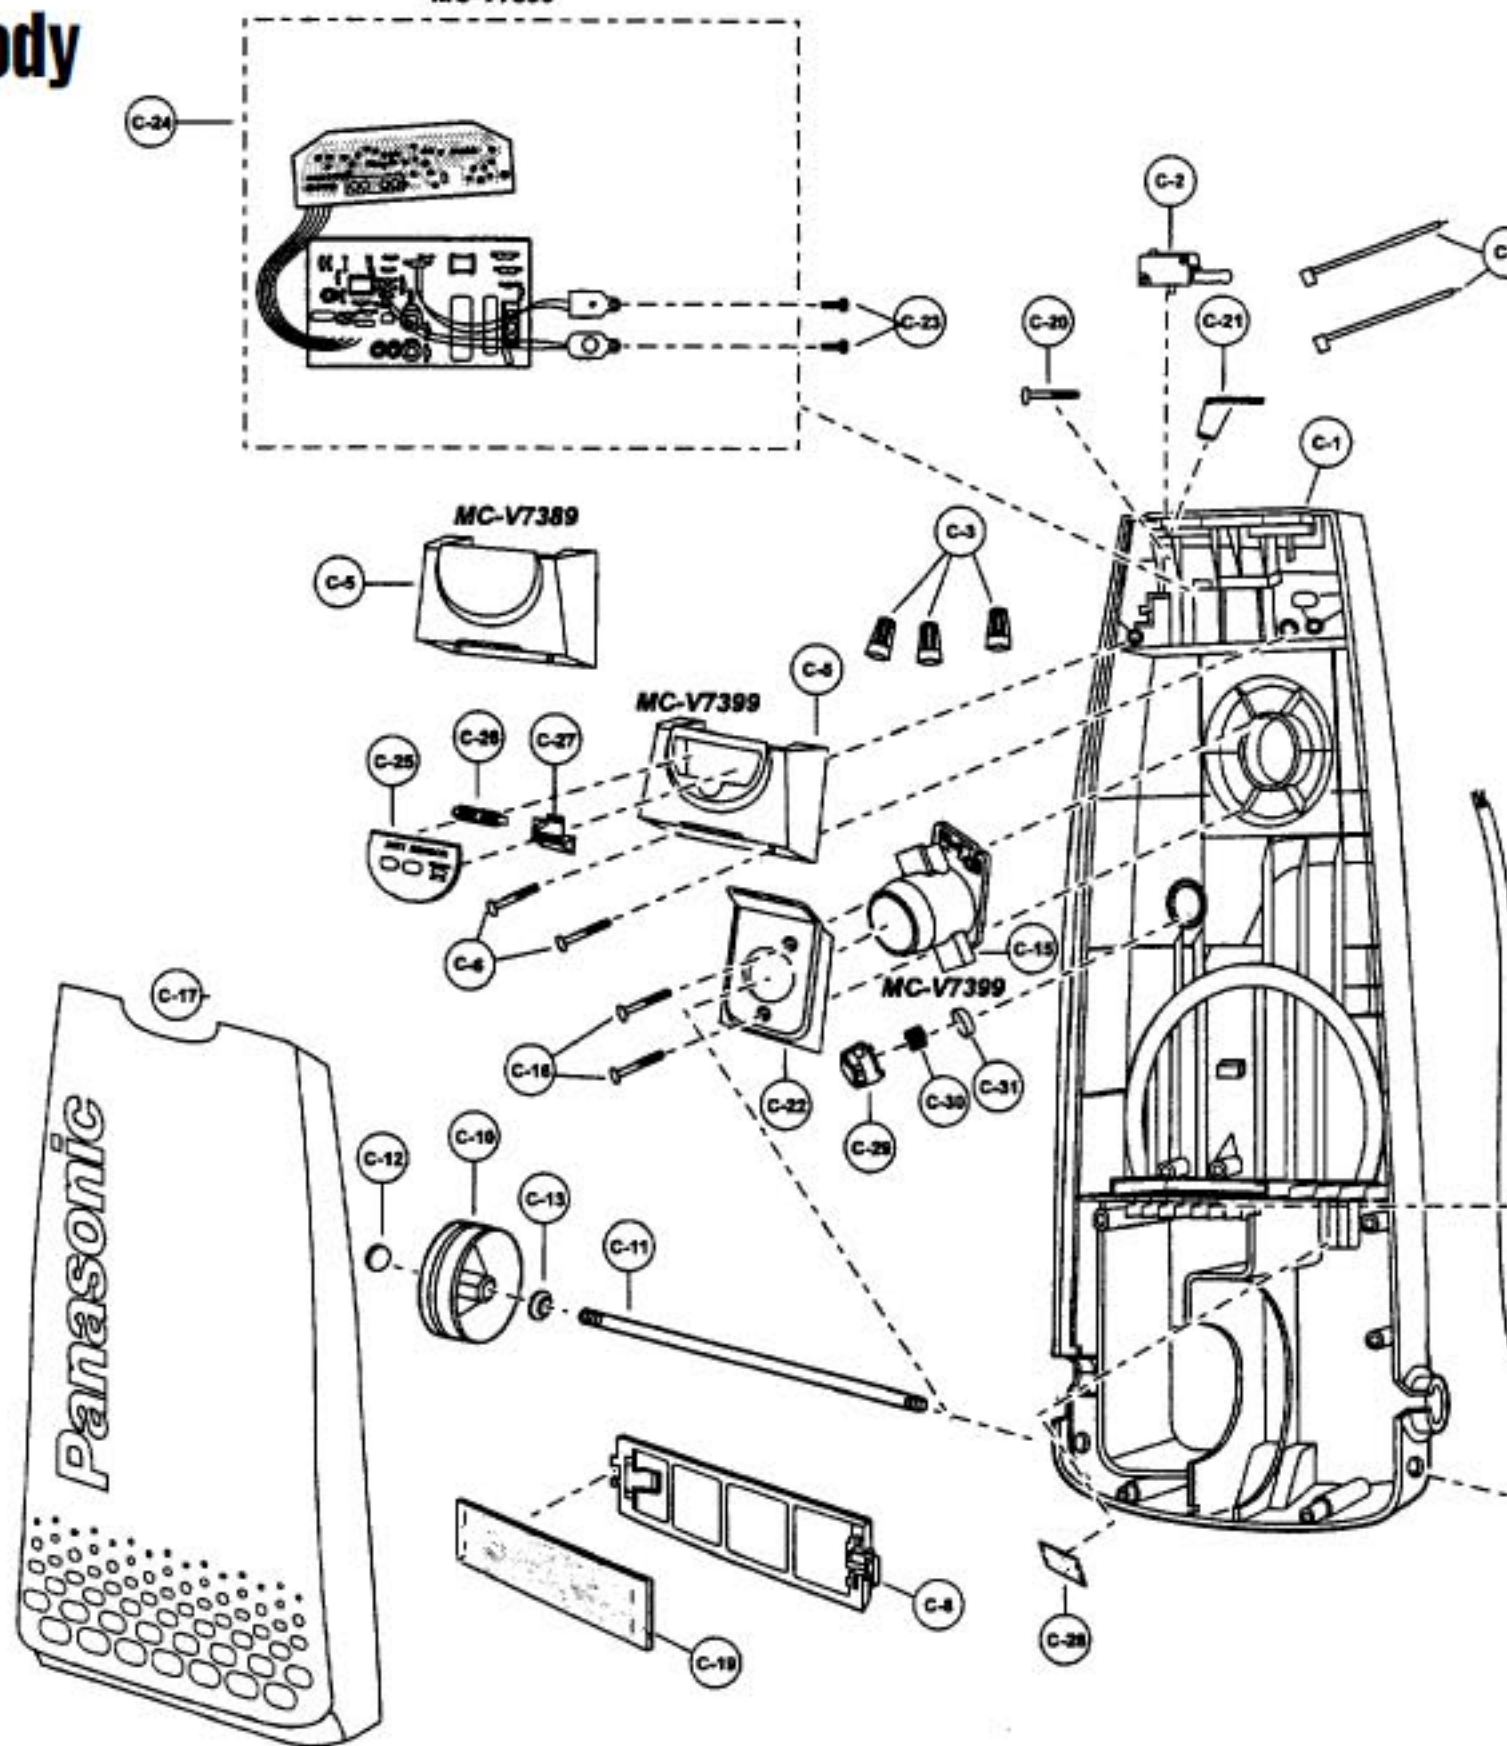


1	N/A	Dust Compartment Assy, V7341	10	P-0114	Wheel	21	P-0701
1	P-10706	Dust Compartment Assy, V7370	11	P-16005	Shaft, wheel	22	P-7082
1	P-10726	Dust Compartment Assy, V7380	12	P-74009	Stopper, wheel	23	P-0008
1	P-10785	Dust Compartment Assy, V7387	13	P-6115	Washer, wheel	24	P-5472
1	P-10654	Dust Compartment Assy, V7389	14	P-115P	Paper Bag, U3, 3pk	25	P-9934
1	P-10655	Dust Compartment Assy, V7398/99	14	P-115PT	Paper Bag, U3, 12pk	25	P-1063
2	P-10656	On/Off Switch	14	P-145M	Paper Bag, U6, 3pk, micron	26	P-9935
2	P-0686	On/Off Switch, V7341, V7387	15	P-5470	Paper Compartment Assy, V7341, V7387	27	P-0008

PANASONIC

V

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

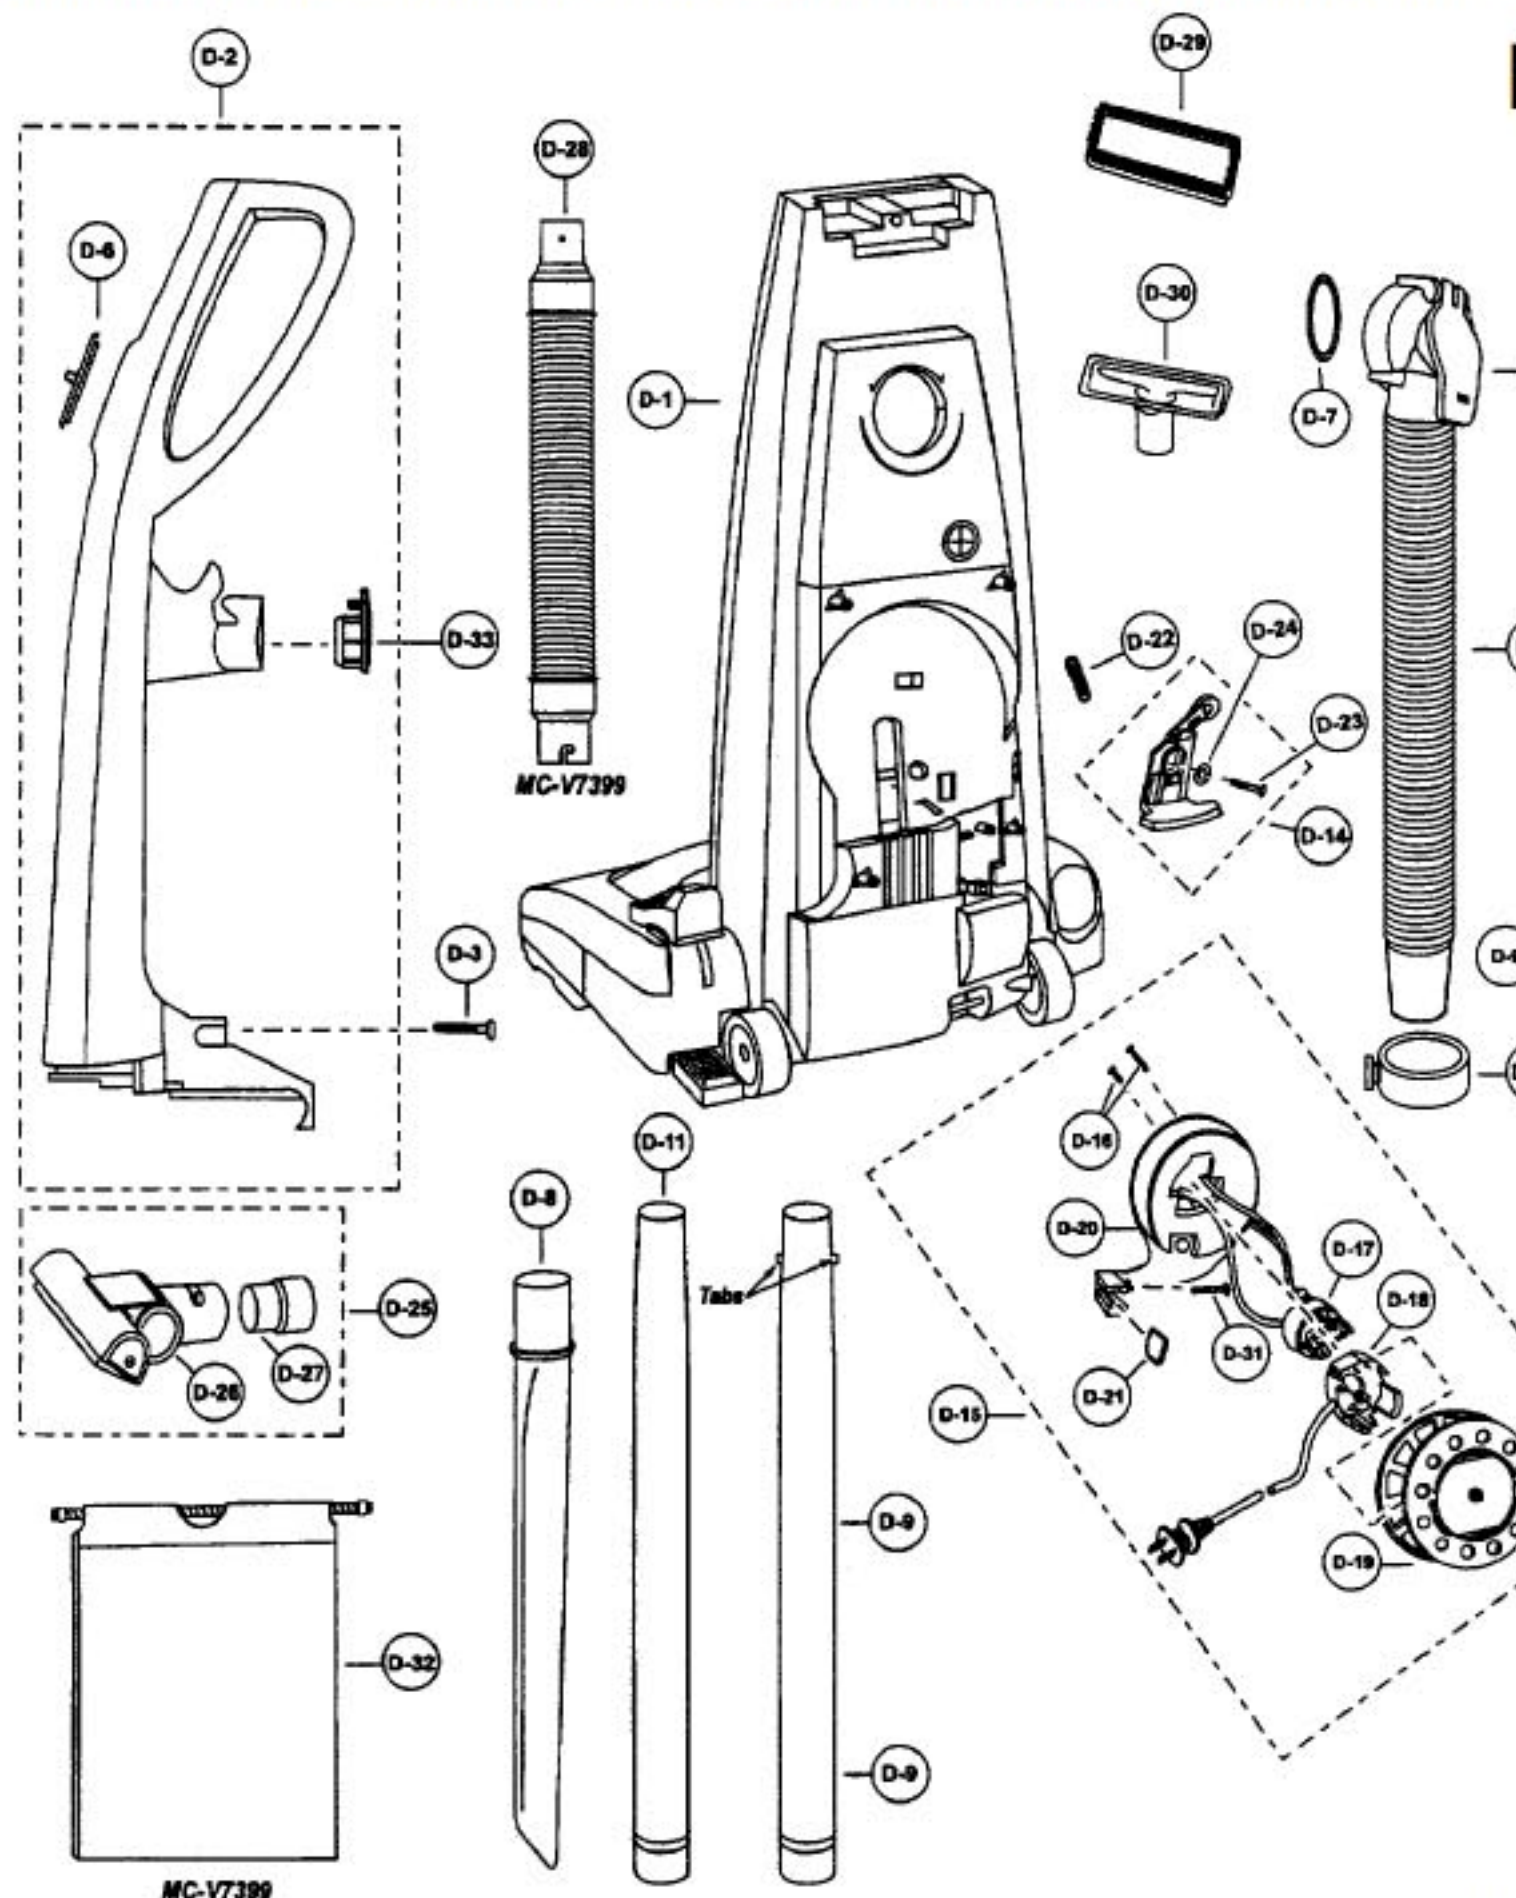

1 N/A Dust Compartment Assy, V7341
 1 P-10706 Dust Compartment Assy, V7370
 1 P-10726 Dust Compartment Assy, V7380
 1 P-10685 Dust Compartment Assy, V7387

6 N/A Switch Knob, V7341
 7 P-10512 Packing, suction inlet
 8 P-6069 Crevice Tool
 8 P-10805 Crevice Tool, V7341

19 P-10685
 20 P-1064
 21 P-1064
 22 P-1064
 23 P-1064
 24 P-1064
 25 P-1064
 26 P-1064
 27 P-1064
 28 P-1064
 29 P-1064
 30 P-1064
 31 P-1064
 32 P-1064