


Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399


## Nozzle Housing

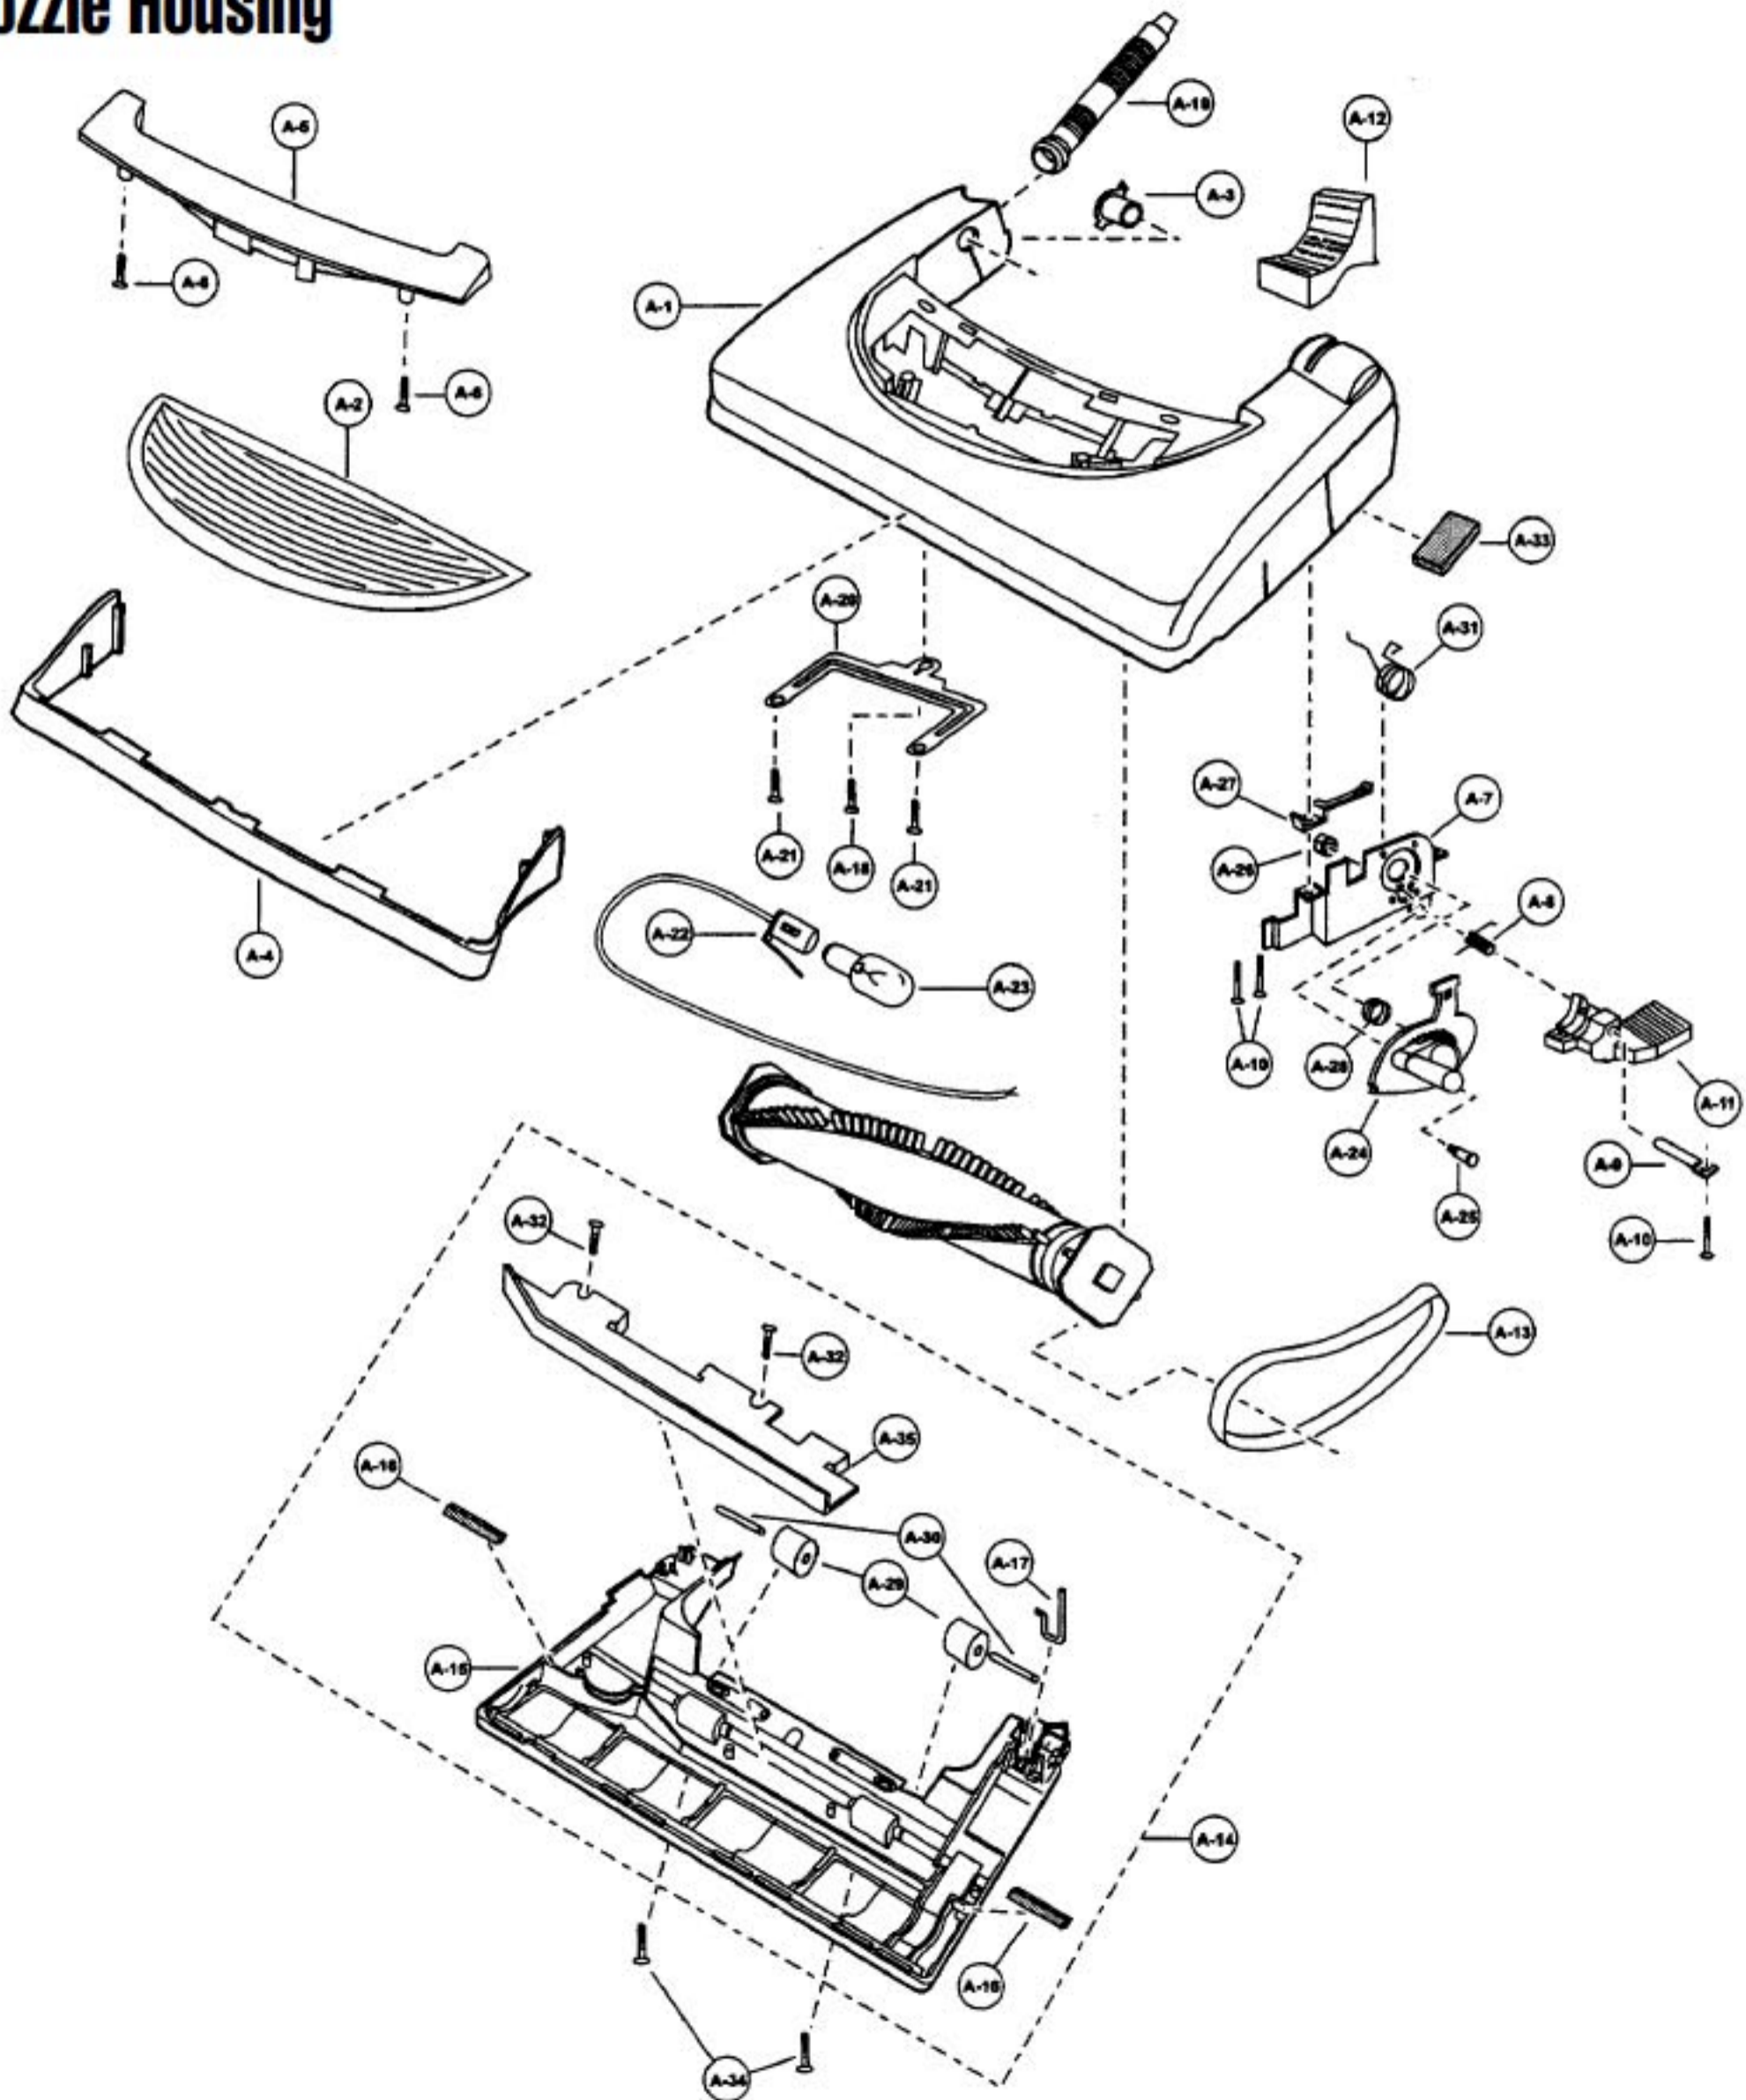

Models: MC-7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

1	N/A	Nozzle Housing, V7341	10	P-02181	Screw, pedal/frame assy	26	P-9885	Nut/Lock Washer
1	P-10702	Nozzle Housing, V7370	11	P-4720	Pedal, black	27	P-02183	Spring, foot gear pedal
1	P-10723	Nozzle Housing, V7380	12	P-10207	Cover, foot pedal	28	P-9887	Spring, pedal gear assy
1	P-10671	Nozzle Housing, V7387	13	P-V270B	Belt, 2pk	29	P-9888	Wheel
1	P-10651	Nozzle Housing, V7389	13	P-00181	Belt, each	30	P-10357	Shaft, wheel
1	P-10668	Nozzle Housing, V7398	14	P-10632	Lower Plate Assy	30	P-9889	Shaft, wheel, V7387
1	P-10652	Nozzle Housing, V7399	14	P-10703	Lower Plate Assy, V7370	31	P-02184	Spring, shifter return
2	P-9854	Window	14	P-10724	Lower Plate Assy, V7380	32	P-6140	Screw
2	P-10105	Window, V7370	14	P-10672	Lower Plate Assy, V7387	33	P-98103	Packing, nozzle
3	P-2500	Shaft, plastic	15	P-10633	Lower Plate	34	P-6800	Screw, lower plate
3	P-10819	Shaft, plastic, V7341	15	P-10705	Lower Plate, V7370	34	P-98104	Screw, lower plate, V7387
4	P-10351	Furniture Guard	15	P-10725	Lower Plate, V7380	35	P-9766	Body, lower plate
4	P-10541	Furniture Guard, V7341	15	P-10681	Lower Plate, V7387		P-2444	Latch, lower plate, V7387
4	P-11014	Furniture Guard, V7370	16	P-10394	Packing, lower		P-9846	Spring, latch, V7387
5	P-98100	Light Cover, V7341, V7399	17	P-9861	Belt Cover		P-683	Screw, latch, V7387
5	P-10653	Light Cover, V7380, V7389	17	P-43	Belt Cover, V7370		P-10733	Carpet/Bare Floor, handle release, V7341
5	P-8921	Light Cover, V7387	18	P-6800	Screw, lower plate			
5	P-10669	Light Cover, V7398	19	P-10304	Nozzle Hose			
6	P-8172	Screw, light cover	20	P-10353	Slider Support			
7	P-9878	Frame	21	P-6140	Screw, slider support			
7	P-000095	Frame, V7370, V7380	22	P-9367	Socket, bulb			
8	P-9857	Spring, pedal	23	P-7550	Bulb			
9	P-513	Shaft, pedal	24	P-10367	Pedal Gear Assy			
9	P-00051	Shaft, pedal, V7370	25	P-9884	Shoulder Screw			

## Motor Case & Motor

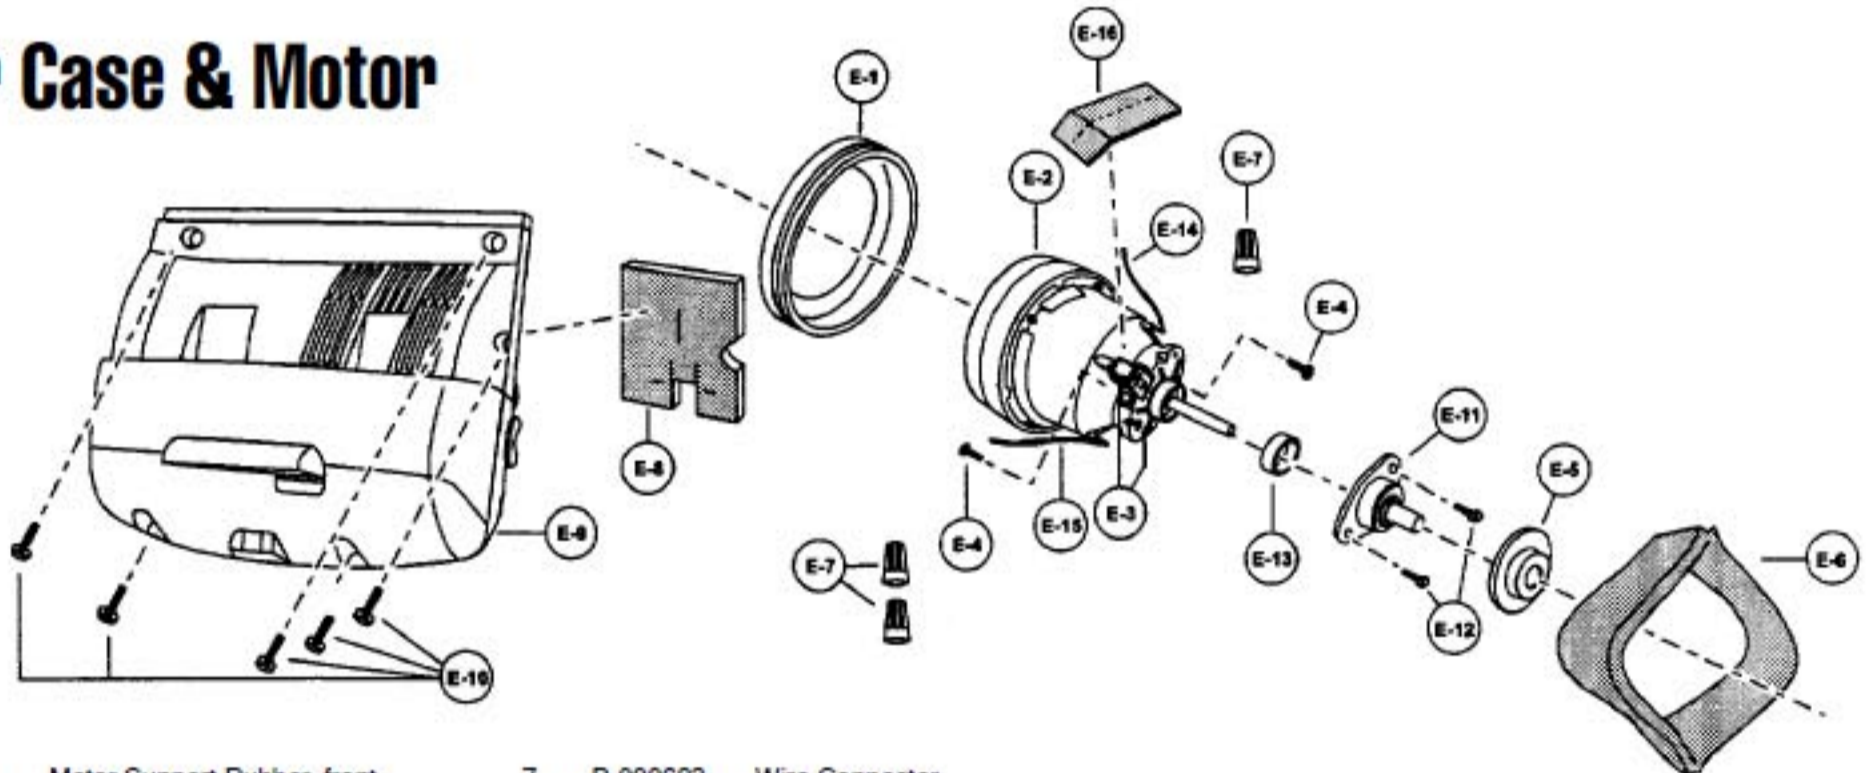


1	P-0293	Motor Support Rubber, front	7	P-000623	Wire Connector	13	P-8184	Ring Spacer
2	P-11033	Motor Assy	8	P-10648	Packing, rear cover	14	P-8936	Lead Wire, motor
2	P-10710	Motor Assy, V7370	9	P-98113	Motor Case, V7341, V7399	14	P-10712	Lead Wire, motor, V7370, V7380
2	P-10405	Motor Assy, V7387	9	P-10711	Motor Case, V7370, V7380	15	P-10515	Lead Wire Assy
3	P-8182	Carbon Brush Assy	9	P-10667	Motor Case, V7389	15	P-10688	Lead Wire Assy, V7387
4	P-9823	Screw, carbon brush	9	P-10406	Motor Case, V7387	16	P-10649	Cooling Guide
5	P-9911	Motor Support Rubber, rear	9	P-10689	Motor Case, V7398		P-7805	Plastic Holder
5	P-8183	Motor Support Rubber, rear, V7370, V7387	10	P-6140	Screw, motor case			
6	P-10670	Noise Suppressor	11	N/A	Flange			
			12	P-10690	Screw, flange			

## Agitator Assembly

1	P-10650	Agitator Unit, V7341
1	P-9212	Agitator Unit, V7370
1	P-8408	Agitator Unit, V7399
1	P-10650	Agitator Unit, V7380, V7389, V7398
2	P-7095	Brush Support
2	P-0693	Brush Support, V7370
3	P-0030	Washer


### MC-V7387 AGITATOR

P-10682	Agitator Assy
P-10375	Brush Strip, 4 piece
P-10683	Pulley, agitator
P-5919	Holder, agitator

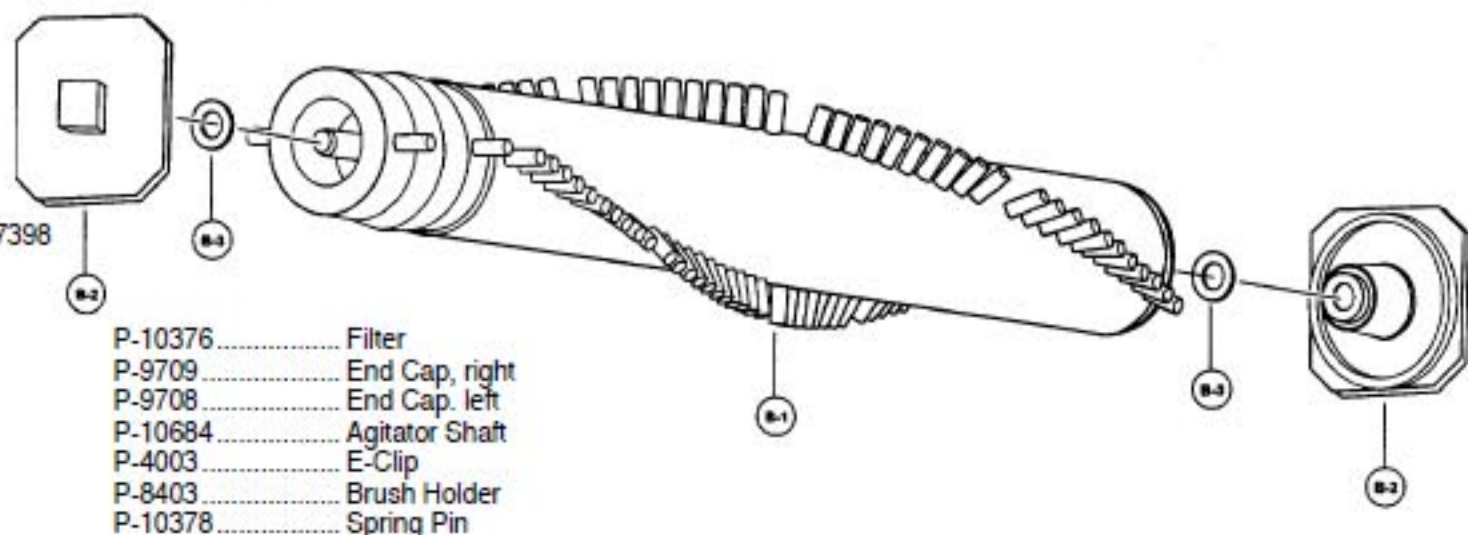

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399


## Body

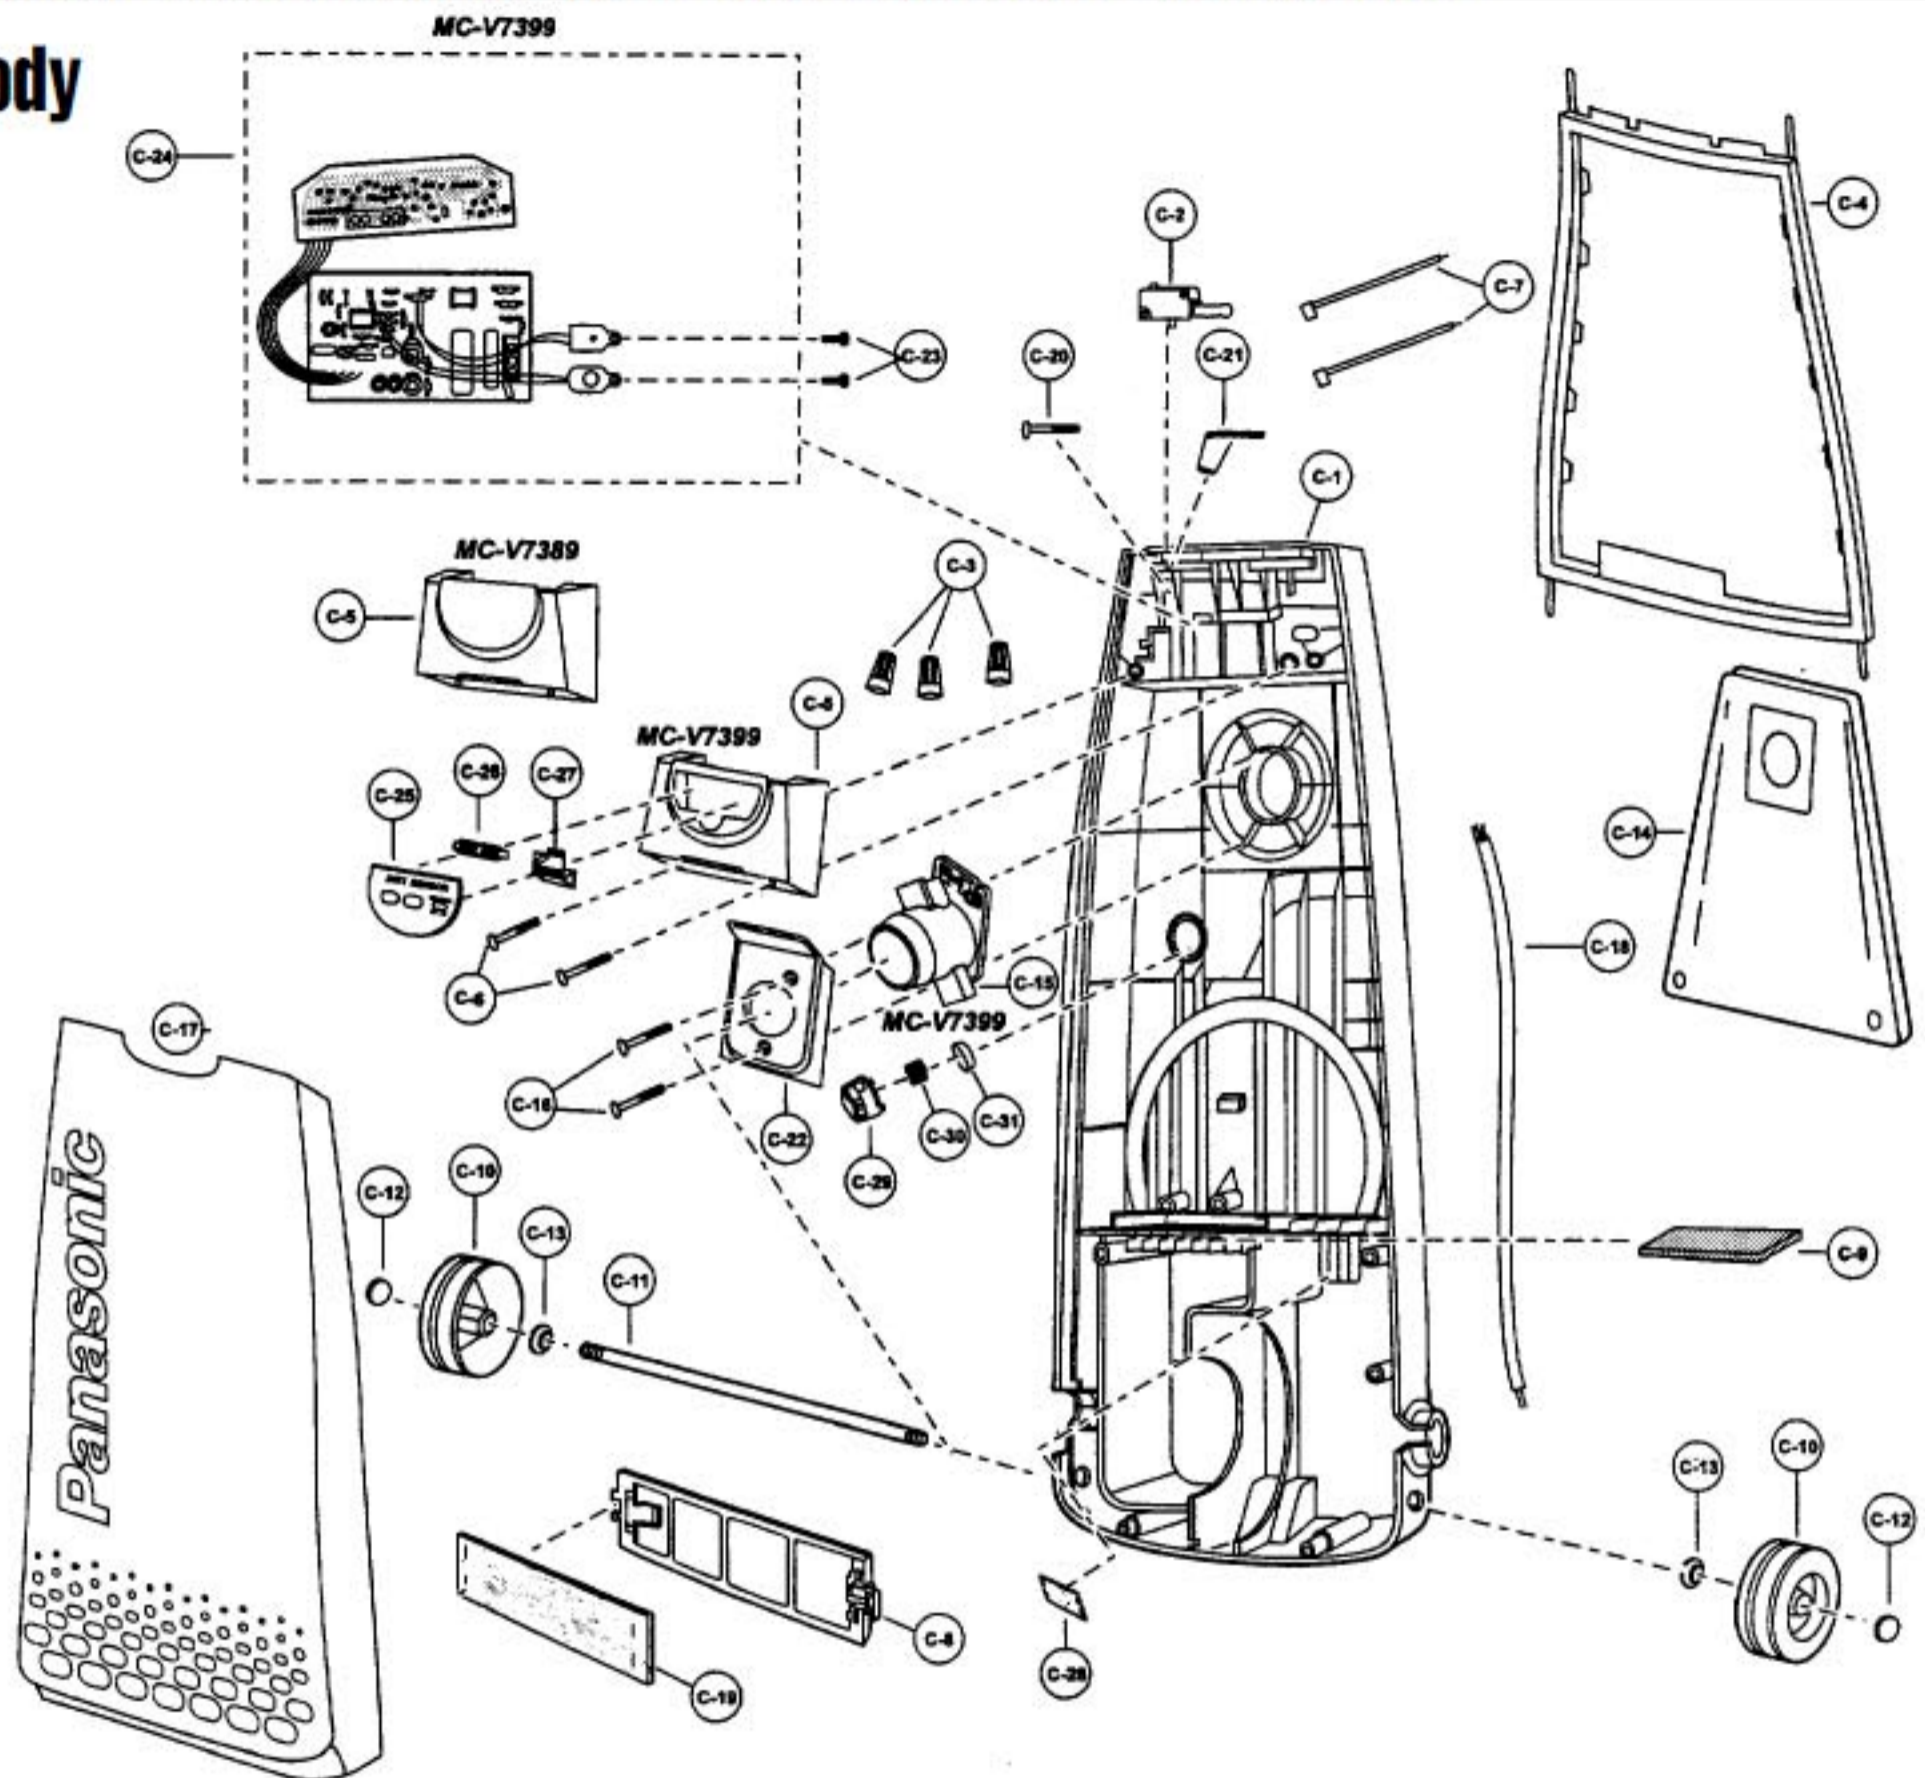

1	N/A	Dust Compartment Assy, V7341	10	P-0114	Wheel	21	P-0701	Switch Lever
1	P-10706	Dust Compartment Assy, V7370	11	P-16005	Shaft, wheel	22	P-7082	Cover, bag supporter, V41/80/98/99
1	P-10726	Dust Compartment Assy, V7380	12	P-74009	Stopper, wheel	23	P-00086	Screw, optic cells, V7341/80/98/99
1	P-10785	Dust Compartment Assy, V7387	13	P-6115	Washer, wheel	24	P-5472	PCB Assembly, V7380/98/99
1	P-10654	Dust Compartment Assy, V7389	14	P-115P	Paper Bag, U3, 3pk	25	P-9934	Ornamental Plate, V7380
1	P-10655	Dust Compartment Assy, V7398/99	14	P-115PT	Paper Bag, U3, 12pk	25	P-10636	Ornamental Plate, V7398/99
2	P-10656	On/Off Switch	14	P-145M	Paper Bag, U6, 3pk, micron	26	P-9935	LED Lens, V7380/98/99
2	P-0696	On/Off Switch, V7341, V7387	15	P-5470	Bag Supporter Assy, V7341/80/99	27	P-9928	Sensor Knob, V7380/98/99
2	P-10602	On/Off Switch, V7370, V7380	16	P-6140	Screw, bag supporter, V7341/80/99	28	P-10637	Rear Cover Packing
3	P-000623	Wire Connector	17	P-10850	Dust Cover, V7341	29	P-10661	Protector Cover
4	P-9866	Packing, dust container	17	P-10707	Dust Cover, V7370	29	P-10315	Protector Cover, V7341
5	P-10657	Switch Cover	17	P-10729	Dust Cover, V7380	29	P-6806	Protector Cover, V7398
5	P-10658	Switch Cover, V7341, V7399	17	P-10686	Dust Cover, V7387	30	P-10316	Protector Spring
5	P-10728	Switch Cover, V7380	17	P-10659	Dust Cover, V7389	31	P-6096	Protector
5	P-8925	Switch Cover, V7387	17	P-10677	Dust Cover, V7398	31	P-10730	Protector, V7380
6	P-6140	Screw, switch cover	17	P-10660	Dust Cover, V7399		P-98109	Body, indicator, V7387
7	P-9892	Lead Wire, black	18	P-10635	Wire Cord		P-9300	Packing, indicator, V7387
7	P-4410	Lead Wire, black, V7370, V7380	18	P-3820	Wire Cord, V7370, V7387, V7389		P-10400	Spring, indicator, V7387
8	P-9893	Filter Supporter	19	P-8176	Exhaust Filter, HEPA		P-10674	Lead, indicator, V7387
8	P-000505	Filter Supporter, V7341	19	P-10636	Exhaust Filter, HEPA, V7387		P-000147	Cap, indicator, V7387
9	P-10634	Secondary Filter, foam	20	P-6800	Screw, switch			

Models: MC-V7341, MC-V7370, MC-V7380, MC-V7387, MC-V7389, MC-V7398, MC-V7399

## Handle Assembly, Rear Dust Compartment and Cord Reel

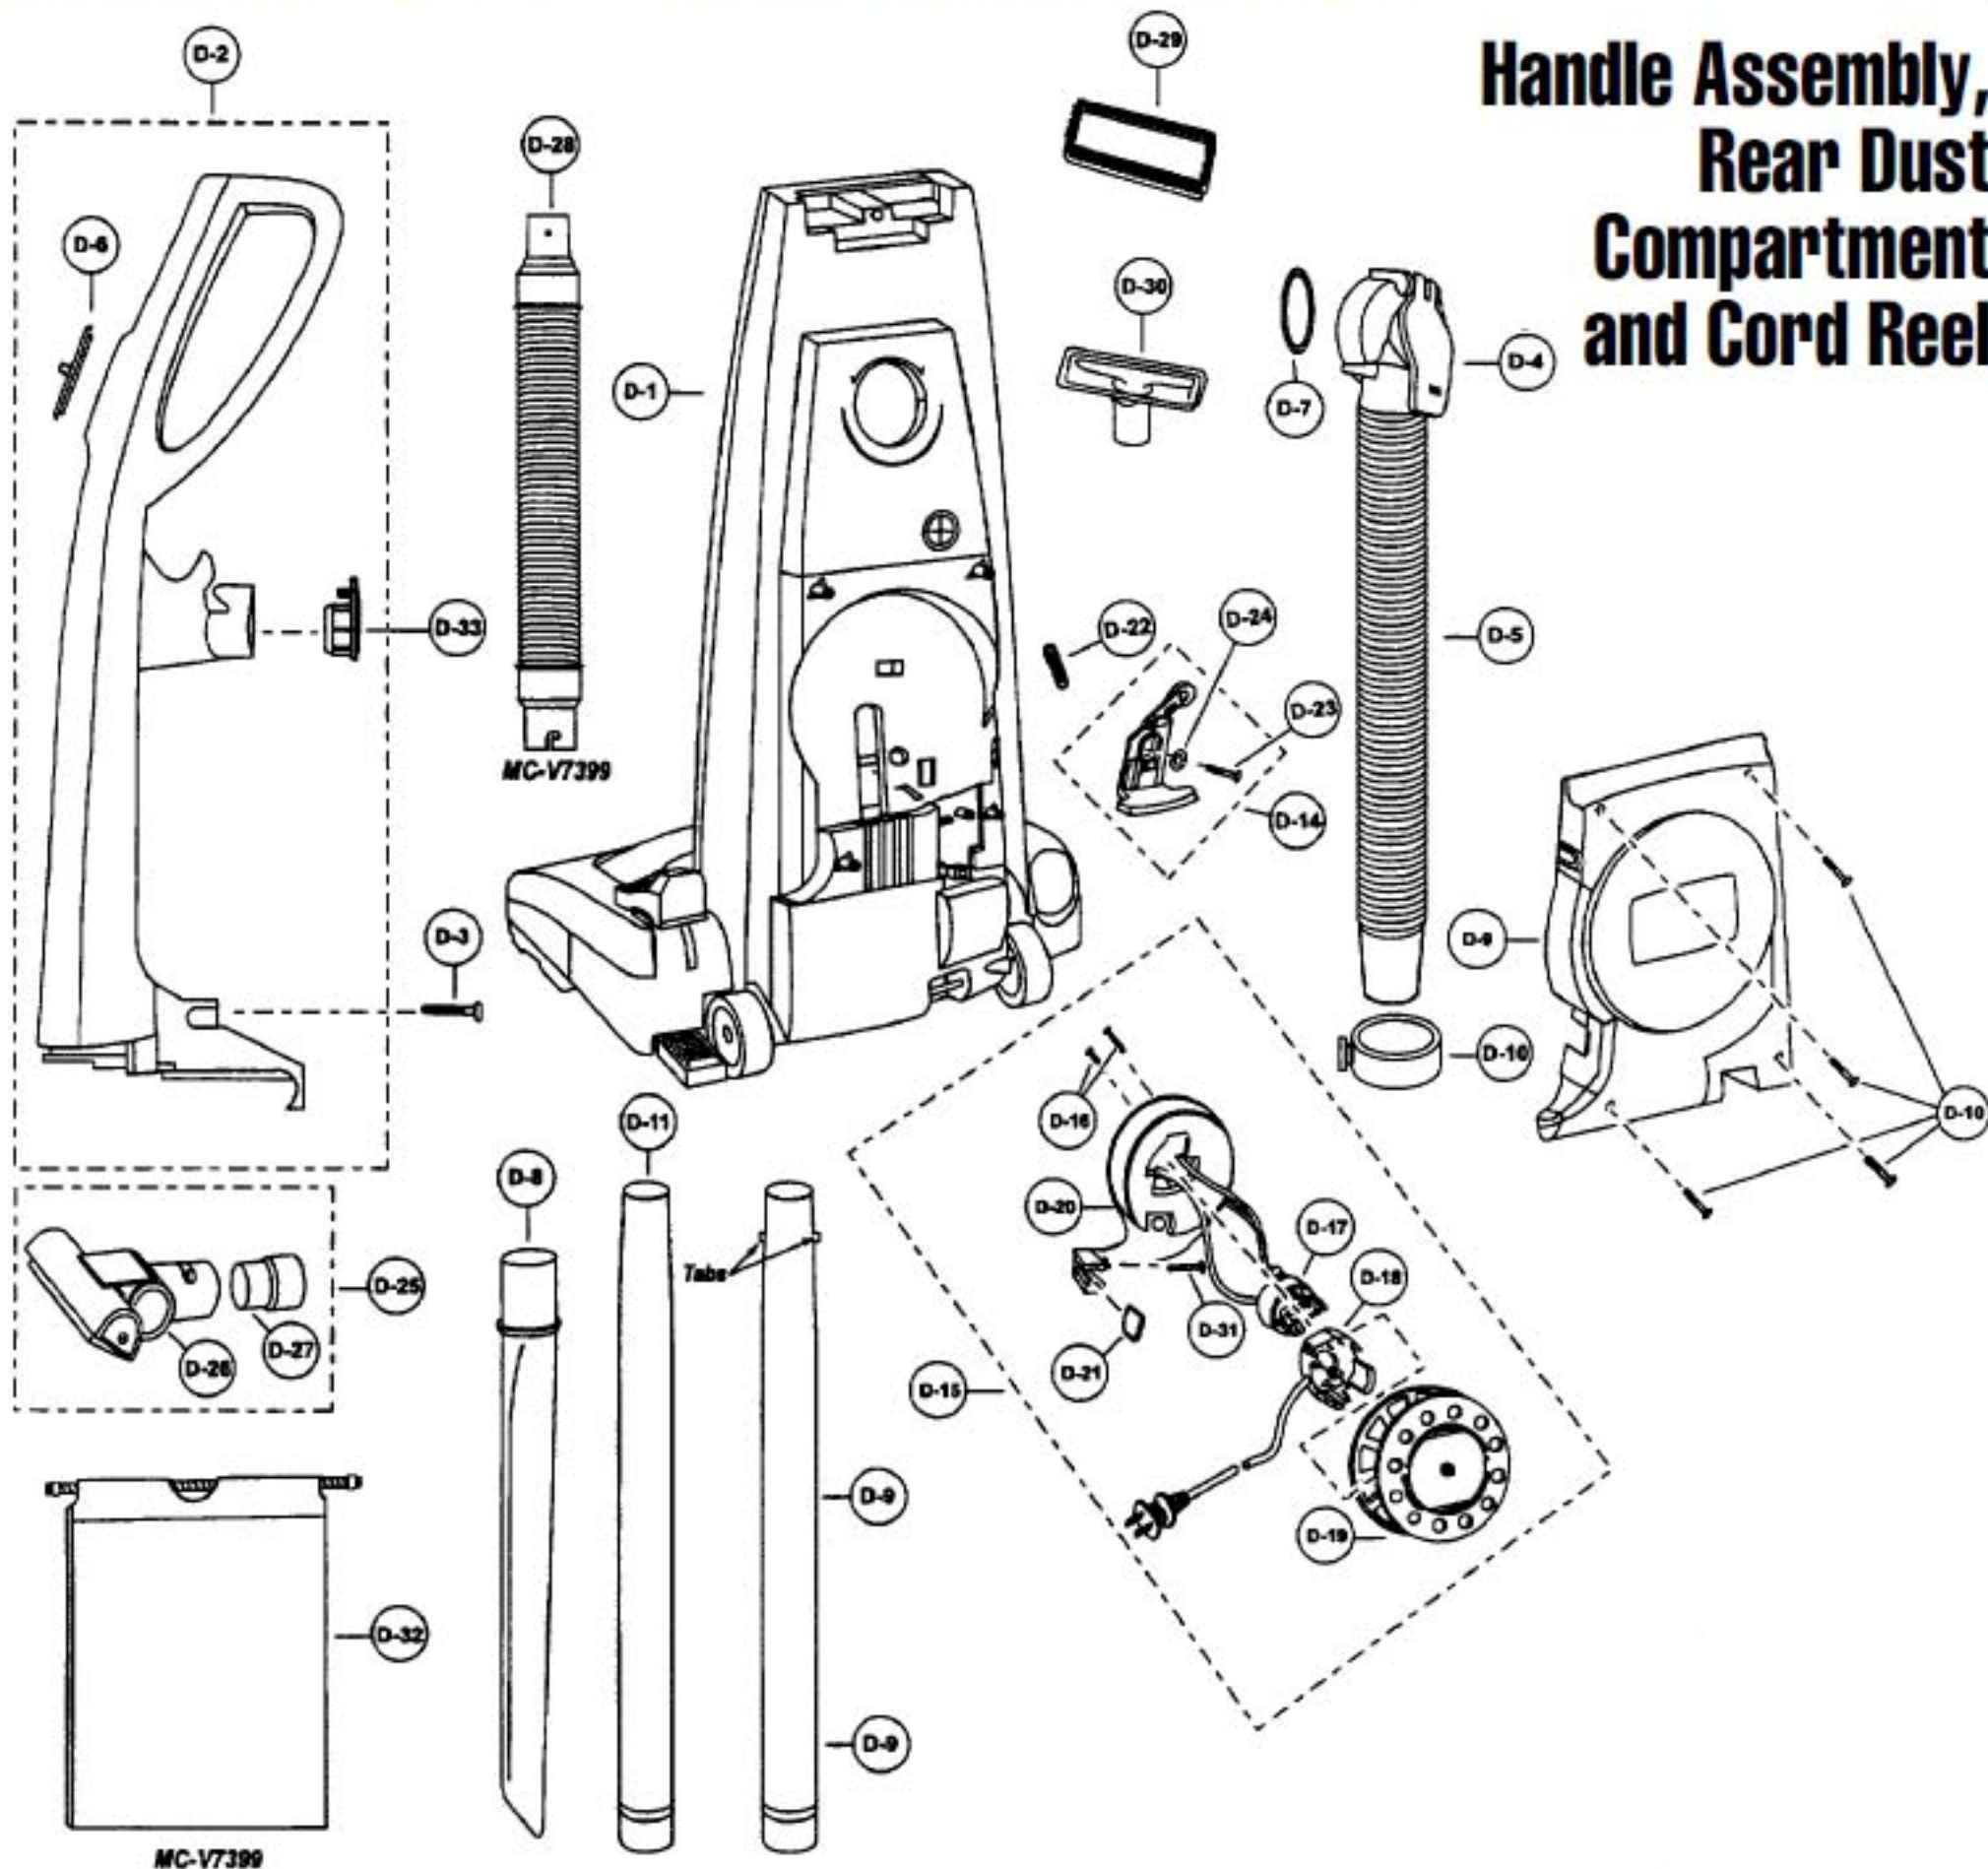

- |   |         |                                     |    |         |                                 |    |         |                                  |
|---|---------|-------------------------------------|----|---------|---------------------------------|----|---------|----------------------------------|
| 1 | N/A     | Dust Compartment Assy, V7341        | 6  | N/A     | Switch Knob, V7341              | 19 | P-10680 | Cord Reel Hub Assy               |
| 1 | P-10706 | Dust Compartment Assy, V7370        | 7  | P-10512 | Packing, suction inlet          | 20 | P-10641 | Bracket, cord reel               |
| 1 | P-10726 | Dust Compartment Assy, V7380        | 8  | P-6069  | Crevice Tool                    | 21 | P-10642 | Cord Guide                       |
| 1 | P-10685 | Dust Compartment Assy, V7387        | 8  | P-10805 | Crevice Tool, V7341             | 22 | P-10643 | Spring, brake lever              |
| 1 | P-10654 | Dust Compartment Assy, V7389        | 9  | P-8180  | Extension Wand, w/tabs          | 23 | P-6140  | Screw, brake lever               |
| 1 | P-10655 | Dust Compartment Assy, V7398, V7399 | 9  | P-10781 | Extension Wand, w/tabs, V7341   | 24 | P-587   | Washer, brake lever              |
| 2 | P-10851 | Handle Assy, V7341                  |    | P-60104 | Extension Wand, w/o tabs, V7341 | 25 | P-10664 | Attach. Assy, air turbine, V7399 |
| 2 | P-10708 | Handle Assy, V7370, V7380           | 10 | P-9873  | Hose Ring                       | 26 | P-10665 | Air Turbine, V7399               |
| 2 | P-10662 | Handle Assy, V7389                  | 11 | P-60104 | Extension Wand, w/o tabs        | 27 | P-10644 | Adaptor Tube, air turbine, V7399 |
| 2 | P-10679 | Handle Assy, V7398                  | 12 | P-10638 | Cord Reel Cover                 | 28 | P-10673 | Hose Unit, stretch, V7399        |
| 2 | P-10678 | Handle Assy, V7399                  | 12 | N/A     | Cord Reel Cover, V7341          | 29 | P-10645 | Fabric Brush                     |
| 3 | P-9907  | Screw, handle                       | 13 | P-6140  | Screw, cord reel cover          | 30 | P-10646 | Brush Holder                     |
| 4 | P-8972  | Cover, suction inlet                | 14 | P-10639 | Brake Lever Assy                | 31 | P-6140  | Screw, bracket                   |
| 5 | P-10436 | Hose                                | 15 | P-10640 | Cord Reel Assy                  | 32 | P-10666 | Drawstring Bag, V7399            |
| 5 | P-8179  | Hose, V7370                         | 15 | N/A     | Cord Reel Assy, V7341           | 33 | P-10647 | Handle Cover                     |
| 5 | P-10727 | Hose, V7380                         | 16 | P-6140  | Screw                           | 33 | N/A     | Handle Cover, V7341              |
| 6 | P-9938  | Switch Knob                         | 17 | P-10709 | Contact Base Assy               |    |         |                                  |
|   |         |                                     | 18 | P-10663 | Contact Disc Assy               |    |         |                                  |