


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



PANASONIC V120 Owner's Manual

[Shop genuine replacement parts for PANASONIC V120](#)

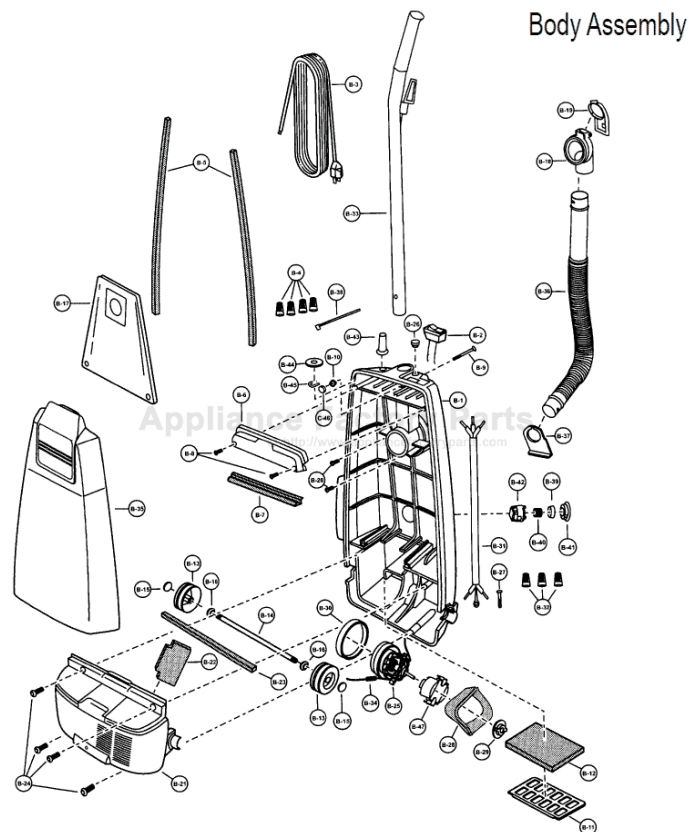


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

Models: MC-V120

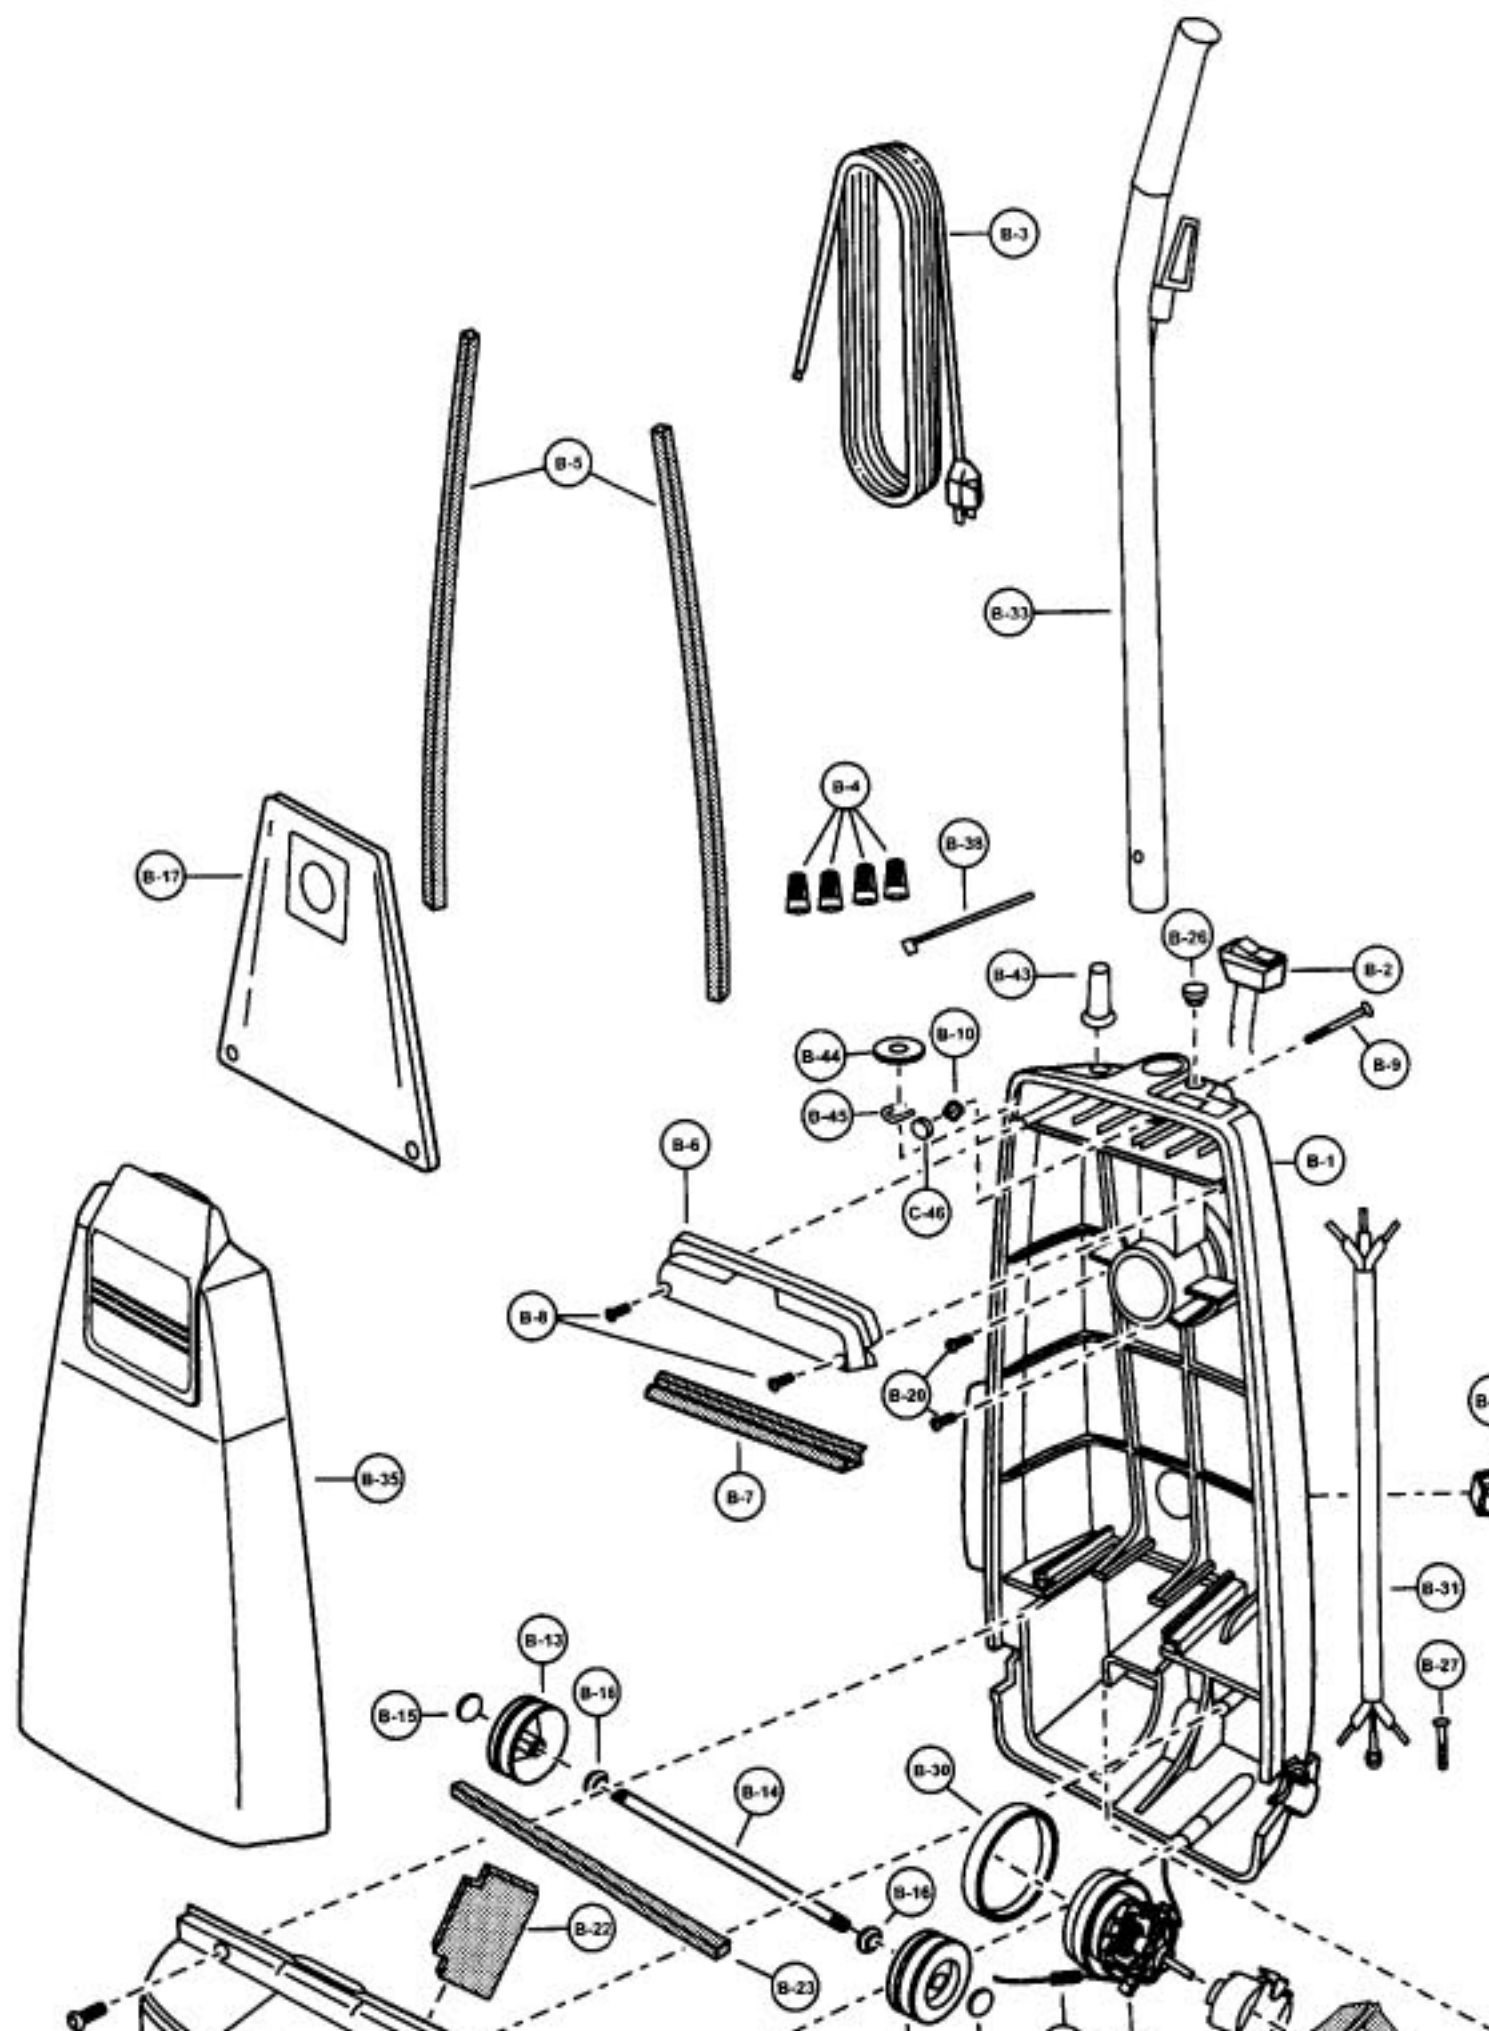


PANASONIC

Models: MC-V120

1.....	P-10814	Dust compartment unit
2.....	P-10451	On/Off switch
3.....	P-10804	Power cord
4.....	P-000623	Wire connector
5.....	P-660106	Packing, dust container
6.....	P-10452	Switch cover
7.....	P-73006	Packing, switch cover
8.....	P-000132	Screw, switch cover
9.....	P-7301	Handle screw
10.....	P-2117	Nut, handle screw
11.....	P-3200	Filter supporter
12.....	P-375	Secondary filter
	P-9994	Secondary Filter, HEPA
13.....	P-111483	Wheel
14.....	P-10968	Shaft, wheel
15.....	P-74009	Stopper, wheel
16.....	P-6115	Washer, wheel
17.....	P-111387	Dust bag, type U6
18.....	P-000625	Suction inlet
19.....	P-111484	Cover, suction inlet
20.....	P-000132	Screw, suction inlet
21.....	P-10383	Motor case
22.....	P-201	Packing, rear cover
23.....	P-10825	Packing, motor case


24.....	P-8172	Screw, motor
25.....	P-000629	Fan motor unit
26.....	P-10384	cover cap
27.....	P-9912	Screw, ground
28.....	P-10670	Noise suppressor
29.....	P-10338	Motor support
30.....	P-0293	Motor support
31.....	P-10383	Wire cord
32.....	P-000623	Wire connector
33.....	P-11185	Handle
34.....	P-10816	Lead wire assy
35.....	P-10875	Dust cover
36.....	P-8917	Hose
37.....	P-2420	Hose support
38.....	P-00104	Wire tie
39.....	P-000057	Protector
40.....	P-10388	Protector spring
41.....	P-111416	Protector support
42.....	P-111417	Protector case
43.....	P-10389	Rubber protector
44.....	P-10390	Flat washer, r
45.....	P-10391	Cord retainer
46.....	P-6106	Packing, insu
47.....	P-93033	Plastic cover,

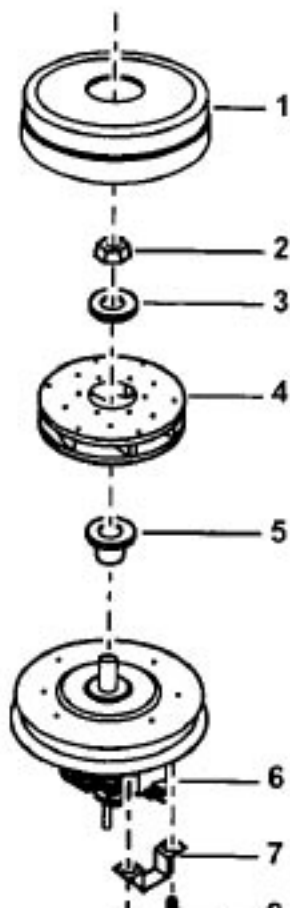

1.....	P-00067	Fan case
2.....	P-000068	Nut
3.....	P-000621	Washer (a)
4.....	P-000152	Fan
5.....	P-000071	Spacer
6.....	P-270091	Brush assembly
7.....	P-10444	Bracket
8.....	P-10445	Screws

PANASONIC

Models: MC-V120

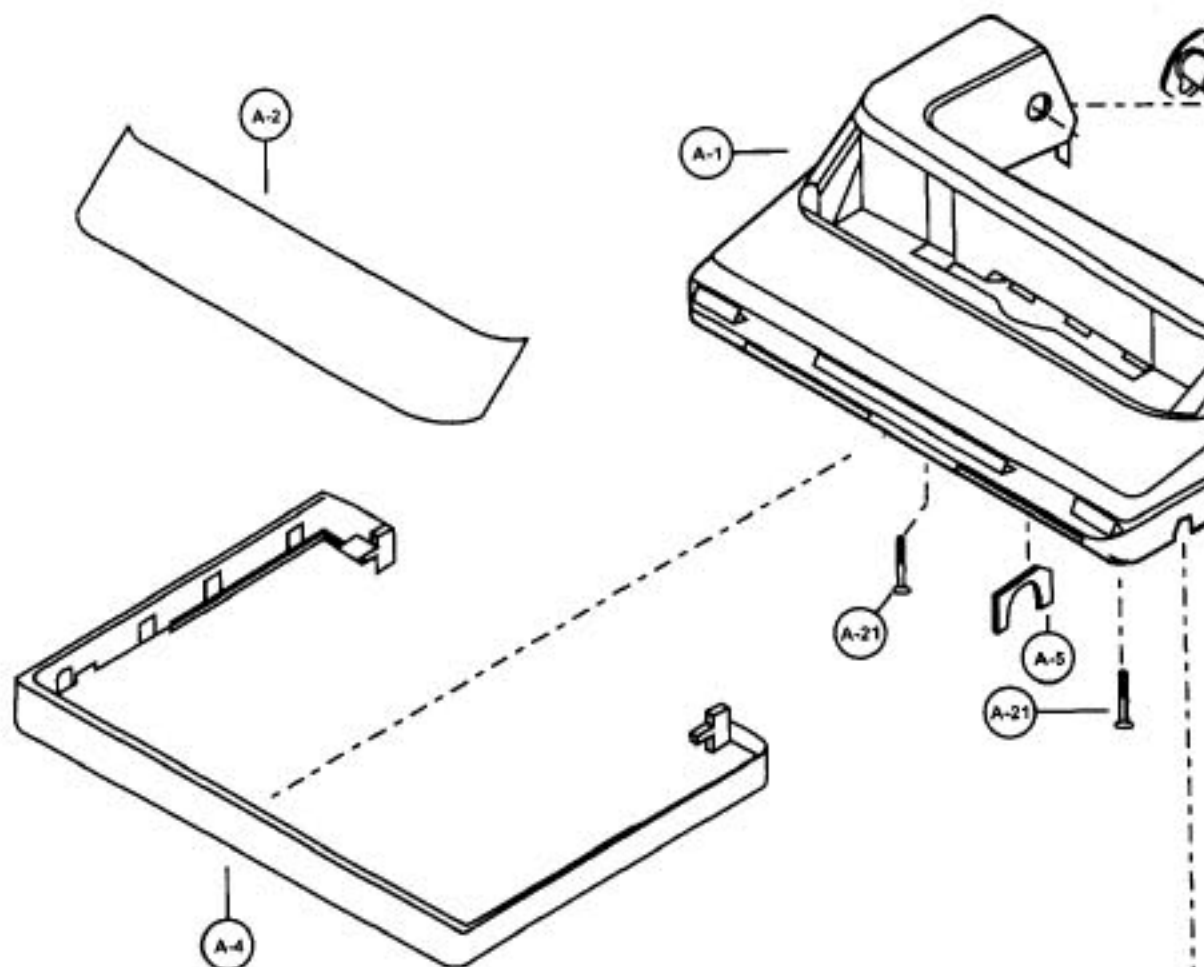

- 1..... P-111481..... Nozzle housing
- 2..... P-10811..... Window
- 3..... P-2500..... Shaft, plastic
- 4..... P-000274..... Furniture guard
- 5..... P-81..... Packing, nozzle
- 6..... P-000095..... Frame
- 7..... P-111427..... Spring, pedal
- 8..... P-4720..... Pedal
- 9..... P-000132..... Screw, frame
- 10..... P-000181..... Belt
- 11..... P-10370..... Lower plate assembly
- 12..... P-10371..... Lower plate
- 13..... P-9826..... Warning label
- 14..... P-1124..... Belt cover, rear

