


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# PANASONIC V6603 Owner's Manual

[Shop genuine replacement parts for PANASONIC  
V6603](#)

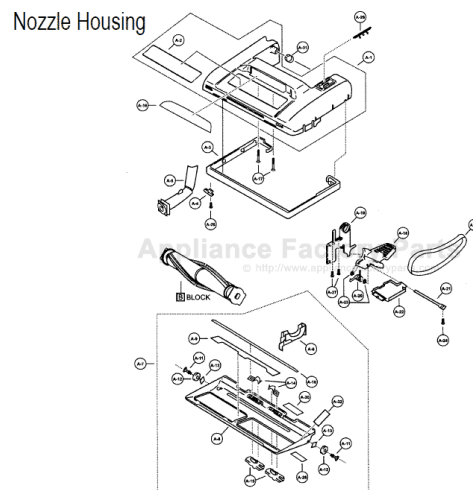


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

# PANASONIC

Models: MC-V6603

## Nozzle Housing

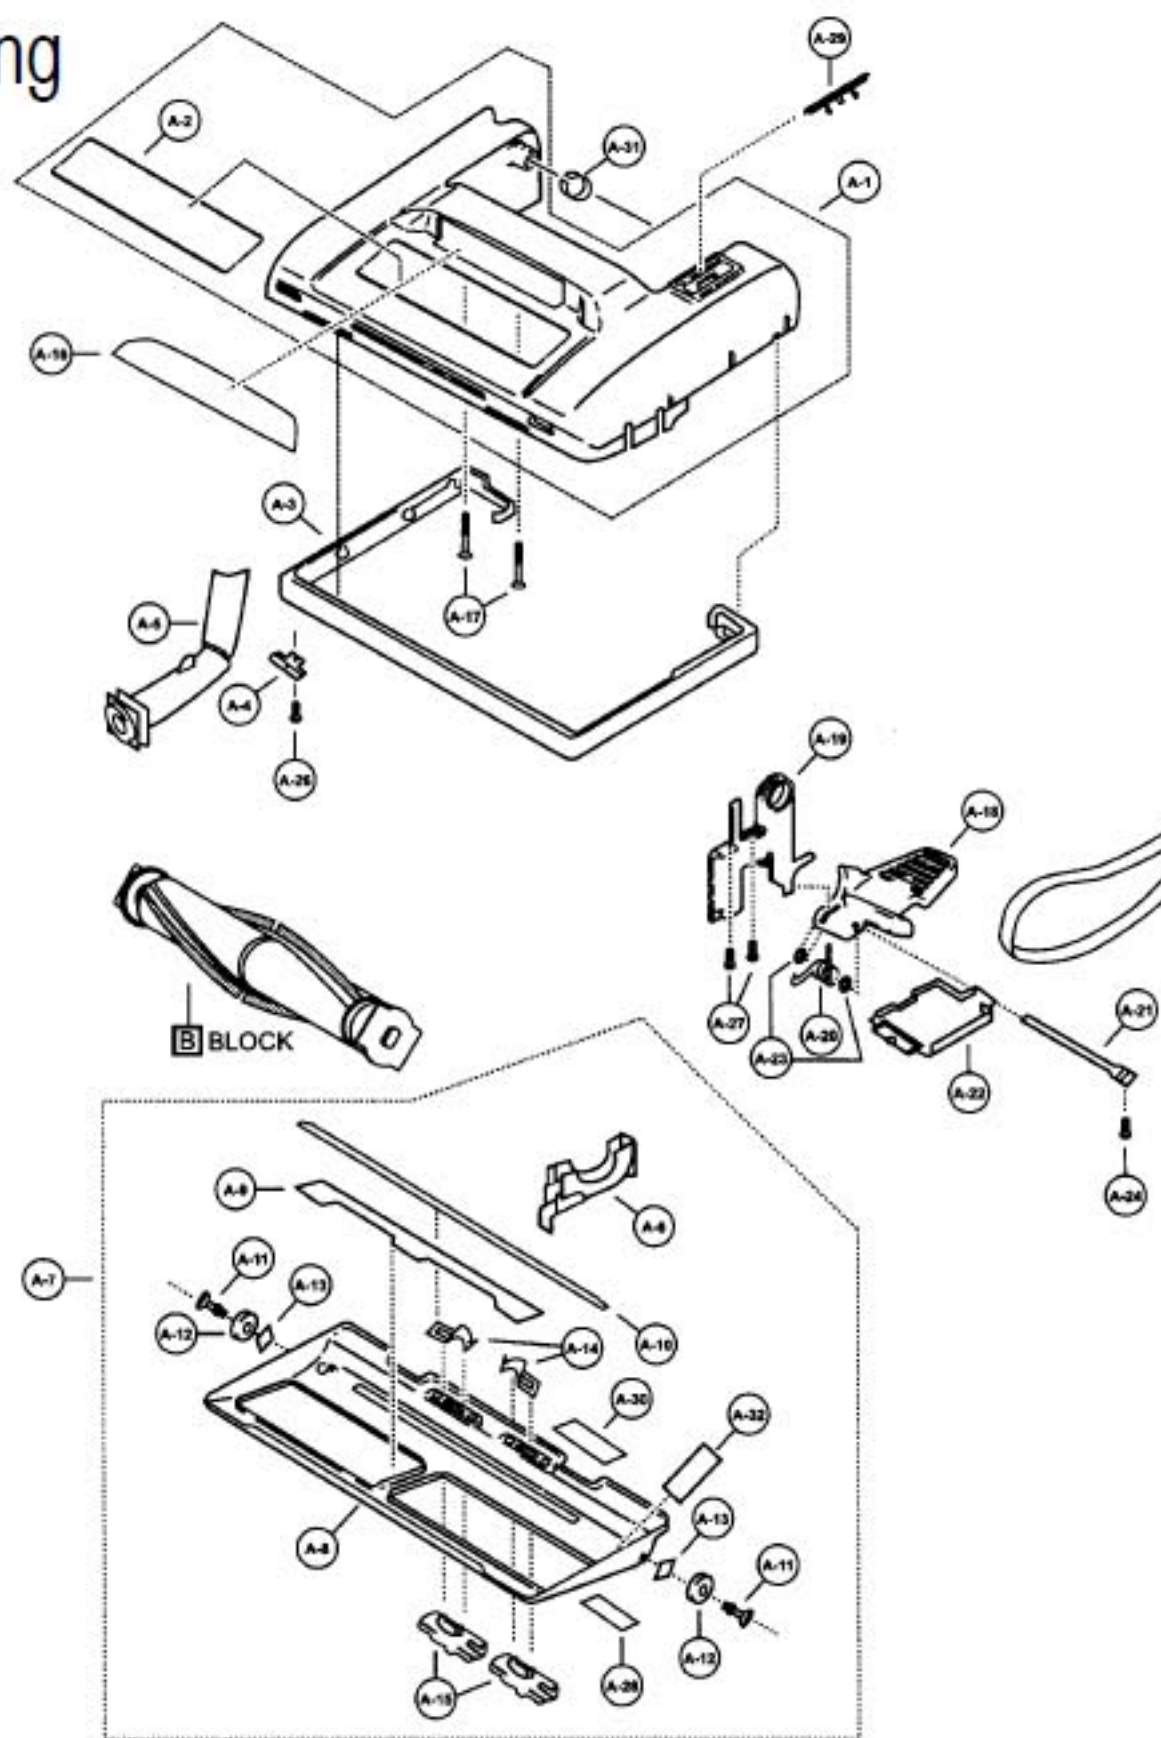


Index	Part No.	Description
1	P-111617	Nozzle housing
2	P-111618	Top mark
3	P-1035	Furniture guard
4	P-2731	Hose fitting plate
5	P-7030	Nozzle pipe
6	P-4305	Belt cover

Index	Part No.	Description
18	P-0016	Pedal
19	P-433	Frame
20	P-583	Pedal (spring)
21	P-513	Pedal shaft
22	P-1130	Rear belt cover
23	P-4003	E-clip

# PANASONIC

Models: MC-V6603

## Dust Container and Handle

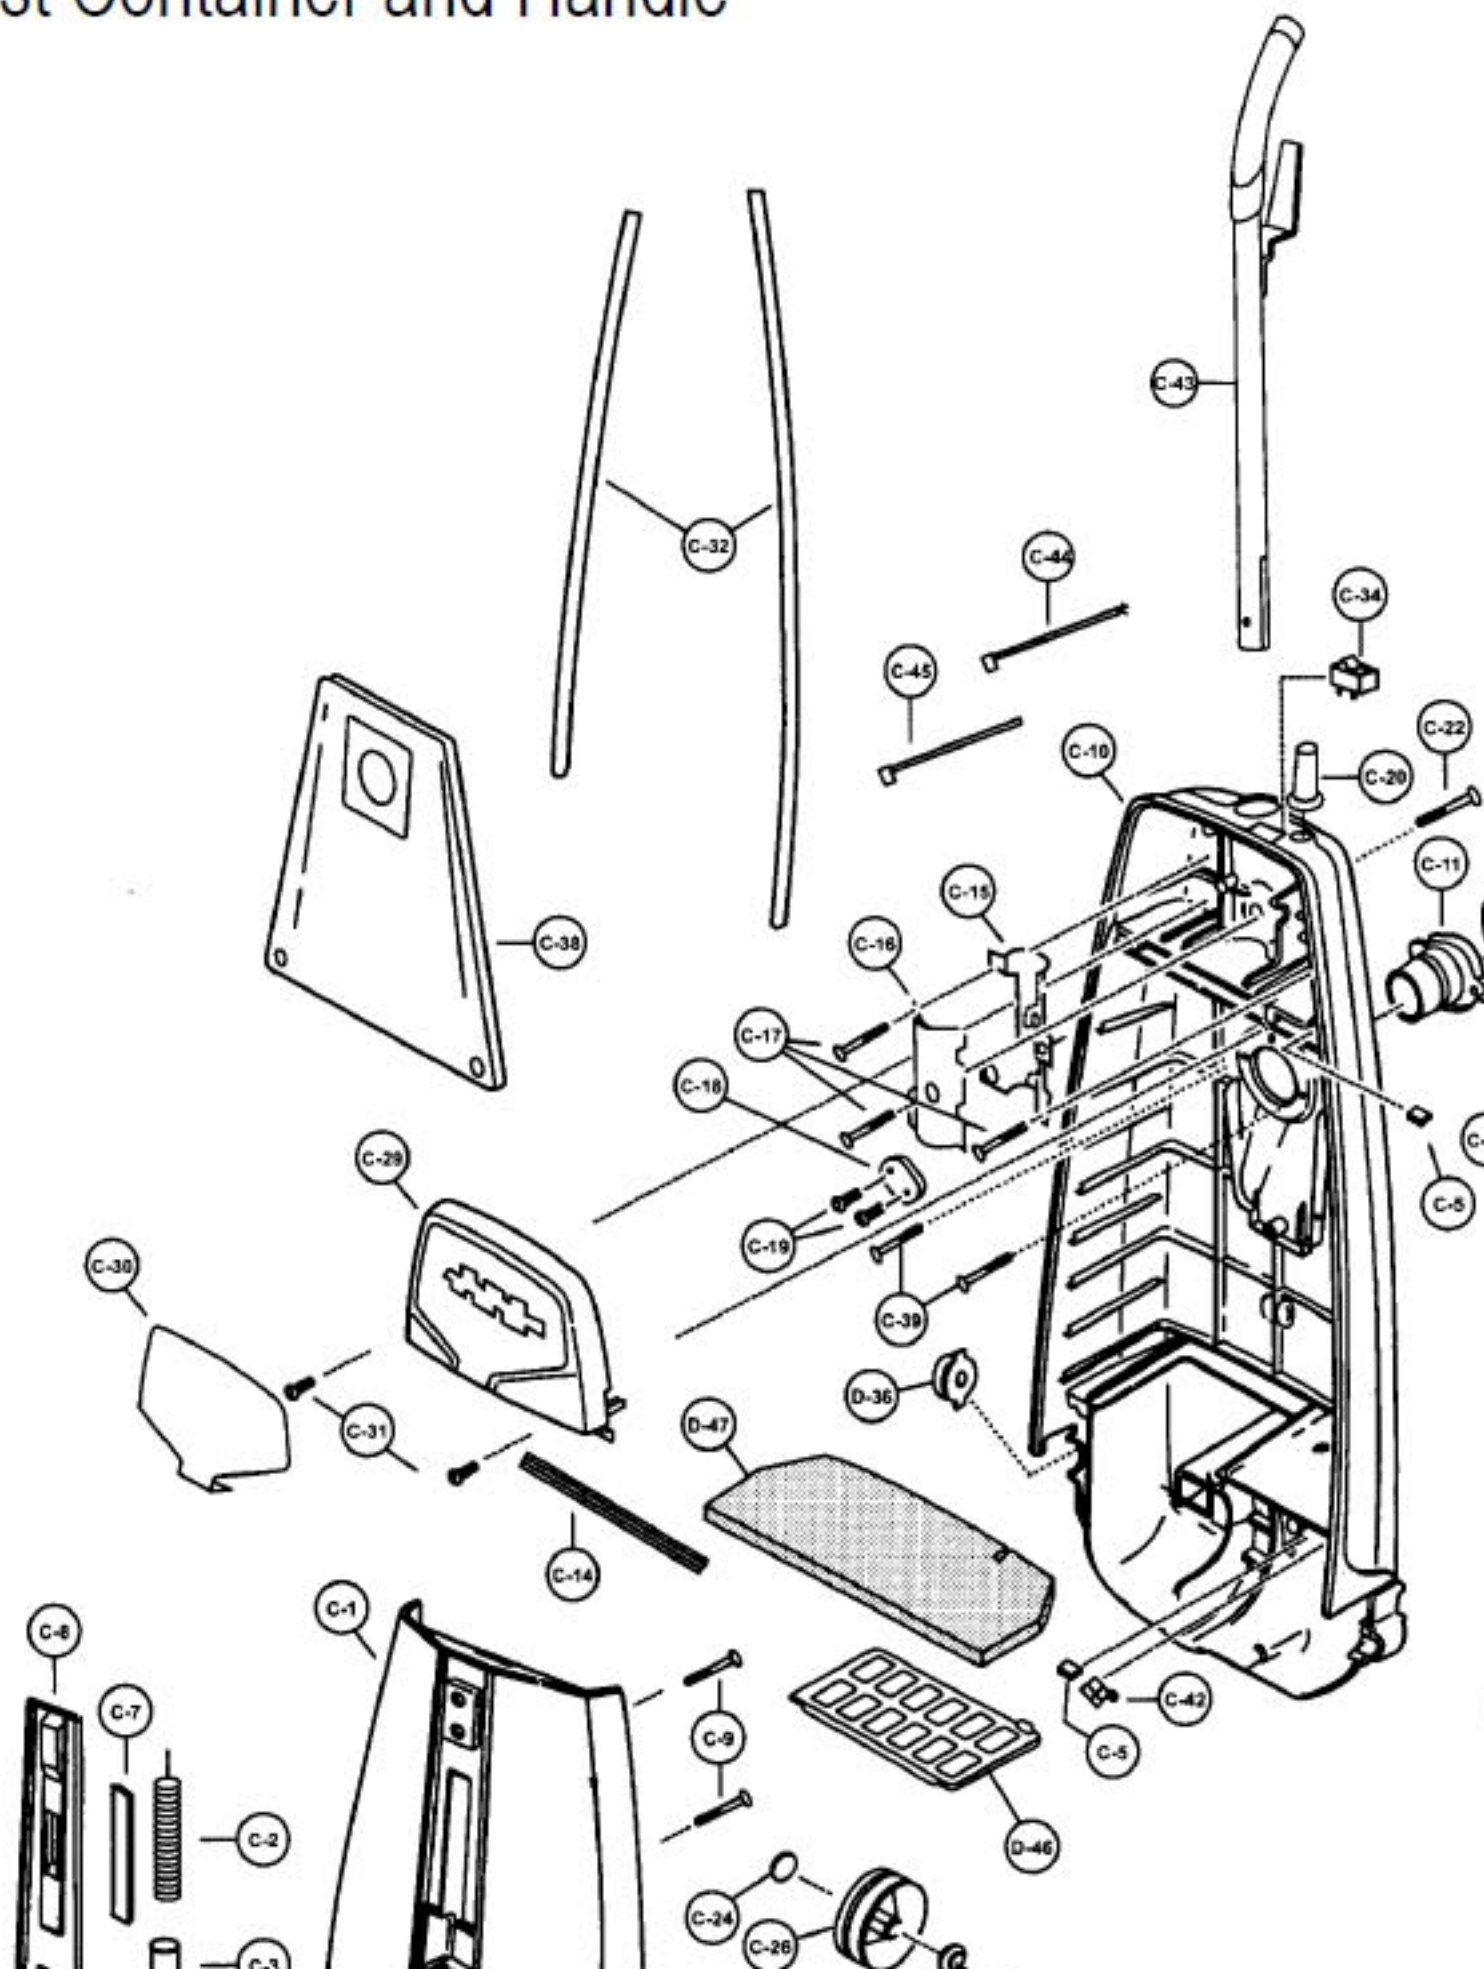

# PANASONIC

Models: MC-V6603

## Dust Container and Handle


Index	Part No.	Description
1	P-111626	Dust cover
2	P-4105	Indicator spring
3	P-0049	Indicator lead
4	P-203	Indicator lead supporter
5	P-81105	Tight packing
6	P-10425	Suction control lever
7	P-0830	Indicator window
8	P-111627	Front cover
9	P-6140	Screw (dust cover)
10	P-10509	Dust container
11	P-10509	Suction inlet packing
12	P-111484	Suction inlet
13	P-02704	Cover
14	P-10428	Packing (switch cover)
15	P-10549	Handle supporter
16	P-6930	Handle fitting
17	P-6140	Screw (handle supporter)
18	P-62001	Cord stopper
19	P-6140	Screw
20	P-10389	Rubber protector
21	P-10823	Power cord
22	P-7330	Handle screw
23	P-9912	Scew (grounding) motor handle fitting
24	P-74009	Stopper, wheel
25	P-6115	Washer

Index	Part No.	Description
26	P-111628	Wheel
27	P-111629	Wire nut
28	P-1605	Roller shaft
29	P-111630	Switch cover
30	P-111631	Ornamental
31	P-6140	Screw
32	P-2488	Packing (du
33	P-0069	Packing (in
34	P-7938	Switch - on
35	P-10432	Nozzle hose
36	P-2530	Plastic shaft
37	P-6405	Connection
38	P-111477	Dust bag ty
39	P-6140	Screw (suct
40	P-5860	Packing (le
41	P-3990	Packing (rig
42	P-62100	Cord stopper
43	P-111485	Handle ass
44	P-4410	Lead wire
45	P-00104	Tie cable
46	P-3200	Filter suppo
47	P-111632	Secondary

# PANASONIC

Models: MC-V6603

## Agitator Assembly

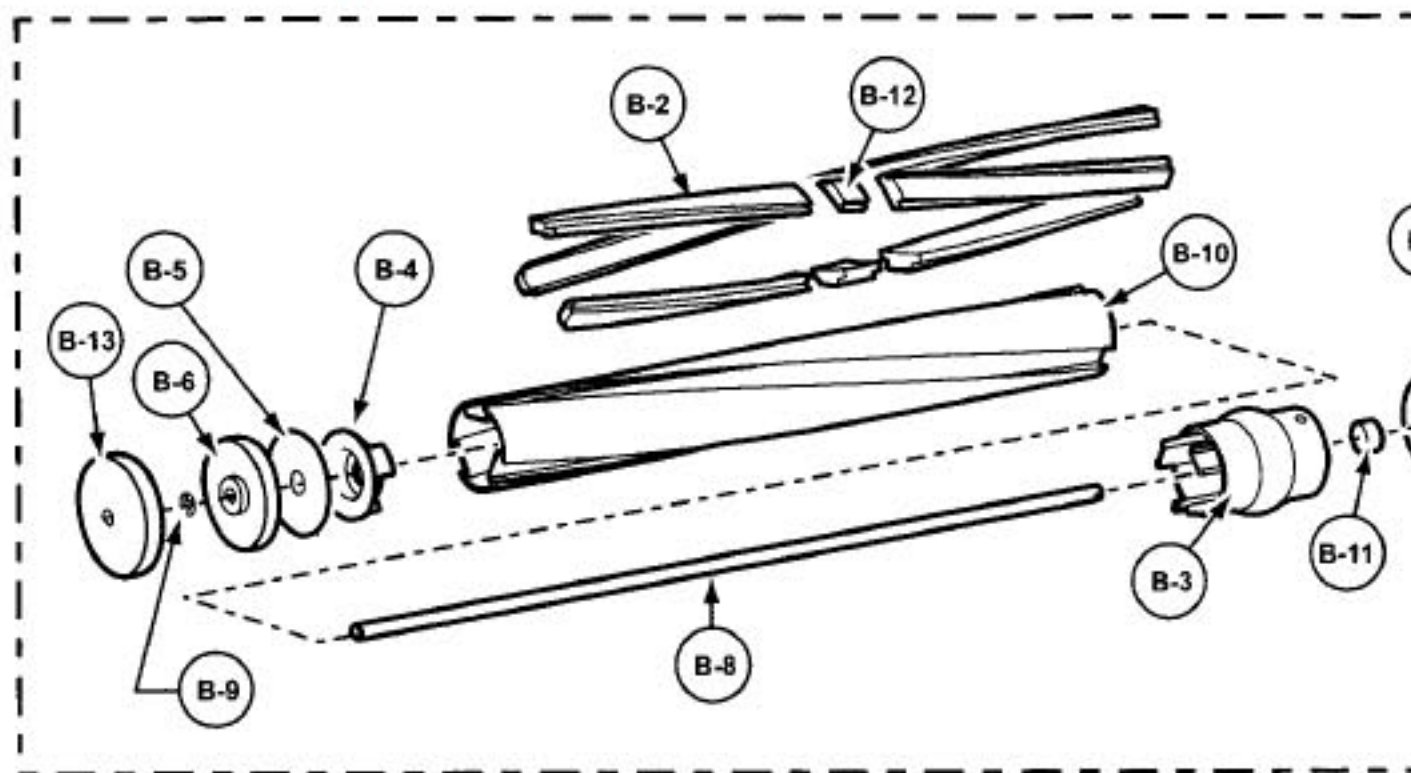

Index	Part No.	Description
1	P-111622	Agitator assembly
2	P-111623	Brush (6 pcs)
3	P-111441	Agitator pulley
4	P-111513	Agitator holder
5	P-111515	Filter
6	P-111517	End cap (right)
7	P-111516	End cap (left)

Index	Part No.	Description
8	P-111750	Agitator shaft
9	P-111465	E-clip
10	P-111624	Brush holder
11	P-111751	Spacer
12	P-111724	Spacer (brush)
13	P-111625	Agitator end cap

## Agitator Assembly

