 


This Owner's Manual is provided and hosted by Appliance Factory Parts.



PANASONIC MC-CG467 Owner's Manual

[Shop genuine replacement parts for PANASONIC
MC-CG467](#)

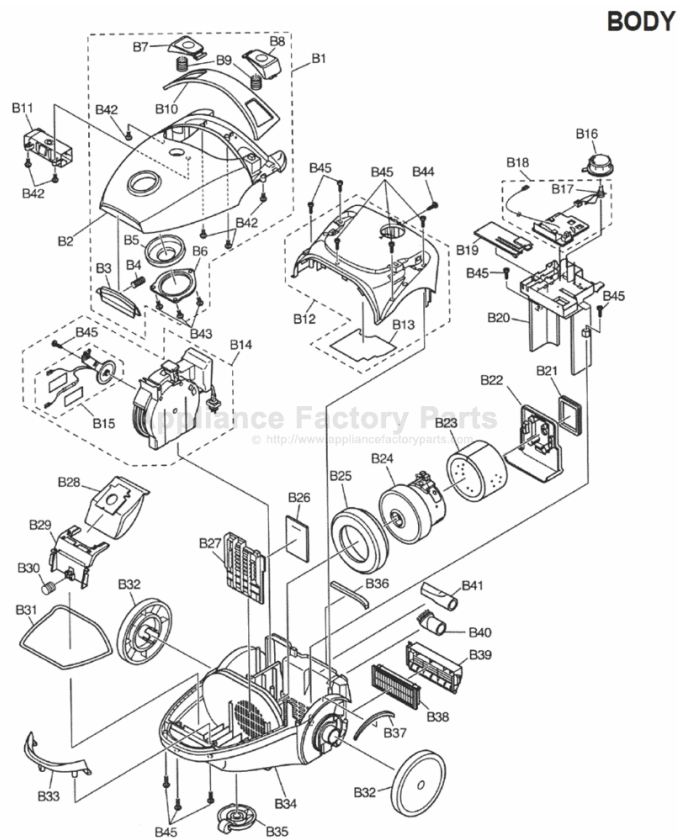 


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

Model: MC-CG467

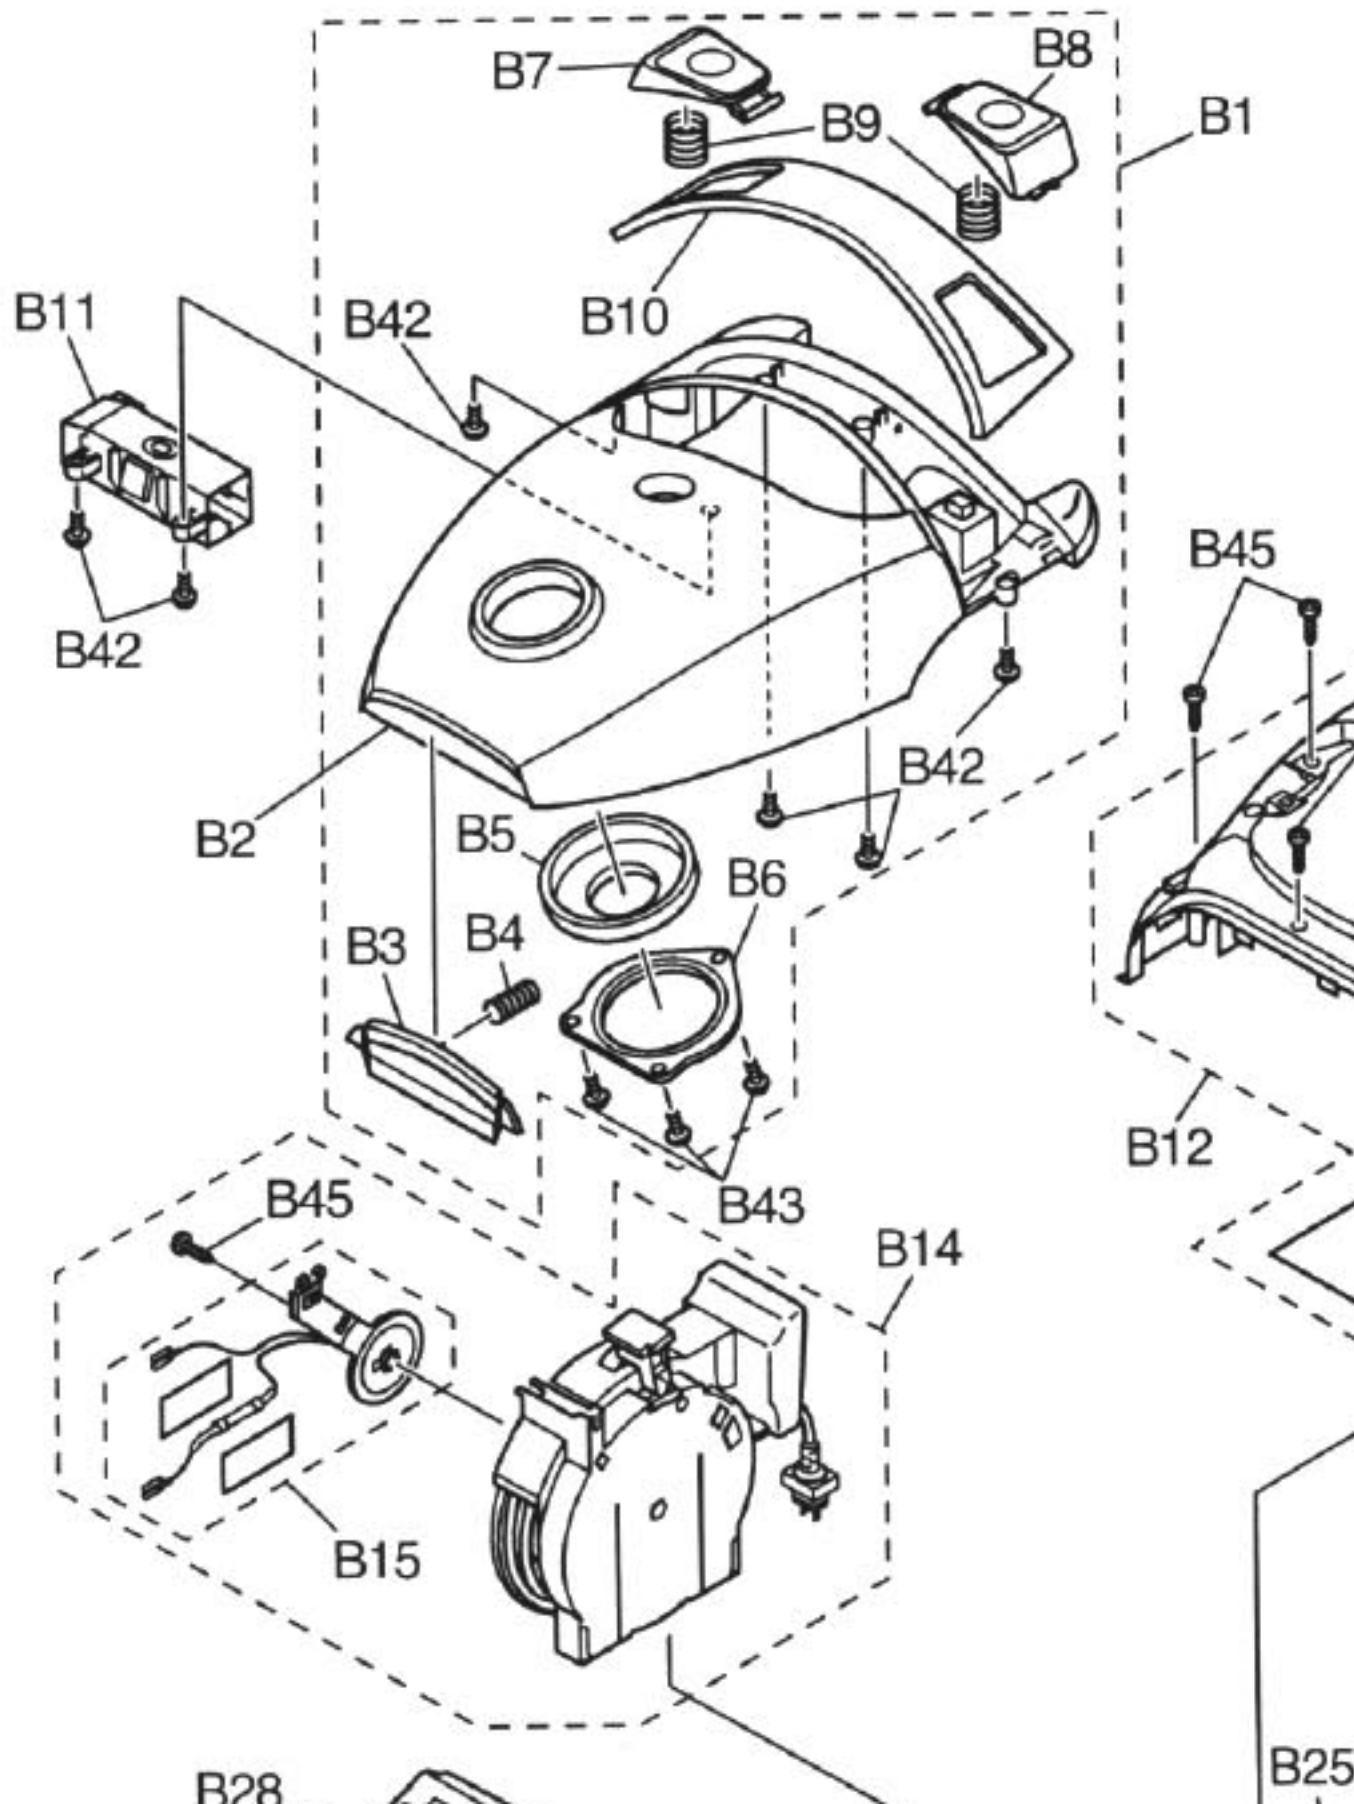

PANASONIC

Model: MC-CG467

Index	Part #	Description
B-1	P-11496	Dust Cover Assembly
B-2	P-11497	Dust Cover
B-3	P-11498	Buckle
B-4	P-11499	Buckle Spring
B-5	P-11500	Packing
B-6	P-11501	Suction Inlet Packing
B-7	P-11502	Cord Rewind Pedal
B-8	P-11503	Switch Pedal
B-9	P-11504	Pedal Spring
B-10	P-11505	Handle
B-11	P-11506	Indicator Unit
B-12	P-11507	Upper Body Unit
B-13	P-11508	Gasket
B-14	P-11509	Cord Reel Partition Unit
B-15	P-11510	Rail Base Unit
B-16	P-11511	Control Knob Unit
B-17	N/A	Control
B-18	N/A	Printed Circuit Board A Unit

PANASONIC

Model: MC-CG467

Index	Part #	Description
A1	P-11477	Hose Assembly
A2	P-11478	Extension Wand Unit
A3	P-11479	Turbin Nozzle
A4	P-11480	Crevice Tool
A5	P-11481	Dusting Brush
A6	P-11482	Floor Nozzle Upper Unit
A7	P-11483	Nozzle Lever
A8	P-11484	Supporter
A9	P-11485	Agitator Assembly
A10	P-11486	Belt
A11	P-11487	Nozzle Wand Unit
A12	N/A	Turbine Assembly
A13	P-11488	Nozzle
A14	P-11489	Floor Nozzle Lower Unit
A15	P-11490	Floor Nozzle Brush D Unit
A16	P-11491	Floor Nozzle Brush C Unit
A17	P-11492	Floor Nozzle Brush F Unit
A18	P-11493	Floor Nozzle Brush E Unit
A19	P-11494	Brush Cover Unit
A20	P-11495	Screw

