
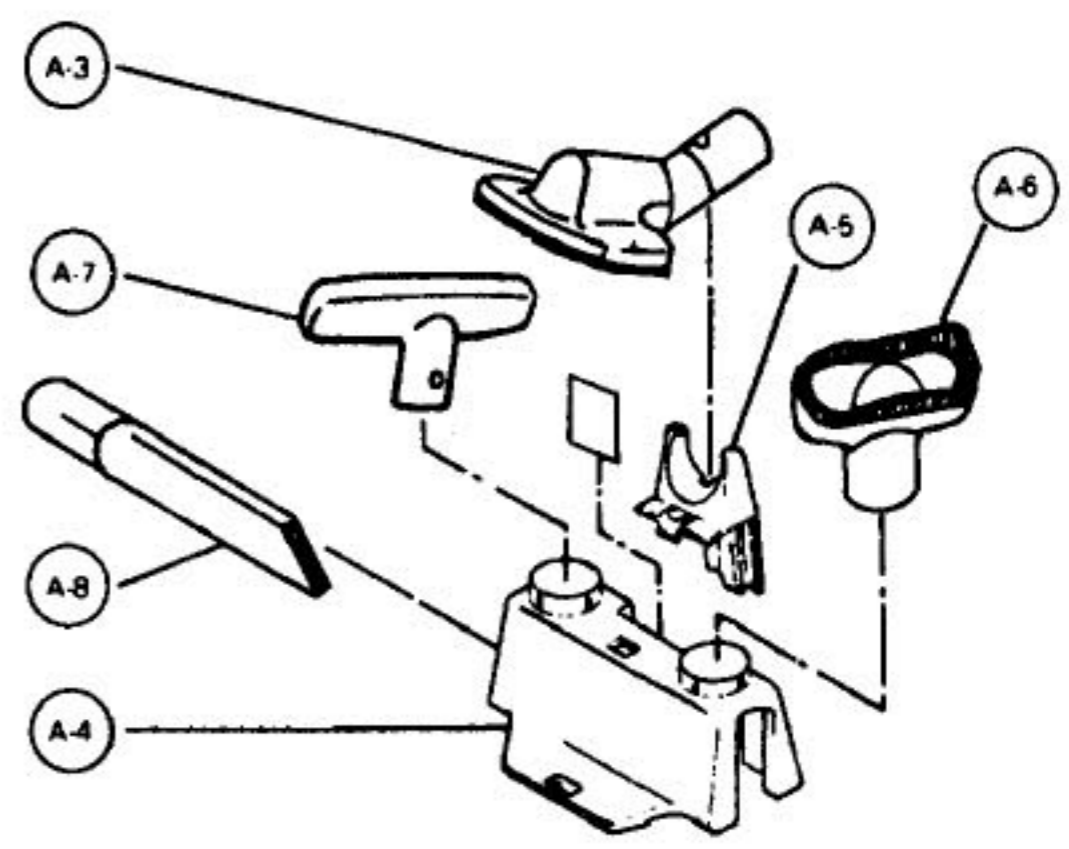


Models: MC-7420, MC-8420, MC-8430



Dust Cover and Attachments

A1	P-6060	Dust Cover
A2	P-125P	Paper Bag, 3 pack
A2	P-125PT	Paper Bag, 12 pack
A2	254	Paper Bag, 3 pack (R)
A2	254-12	Paper Bag, 12 pack (R)
A3	P-9974	Floor and Wall Brush
A4	P-3810	Attachment Tray A
A5	P-3731	Attachment Tray B
A6	P-882	Dusting Brush
A7	P-864	Upholstery Brush
A8	P-6073	Crevice Tool
A9	P-12344	Floor Nozzle Assembly, 7420
A10	P-12345	Pipe, floor nozzle, 7420
A11	P-12346	Upper Housing, floor nozzle, 7420
A12	P-364	Roller, floor nozzle, 7420
A13	P-12347	Roller Shaft, floor nozzle, 7420
A14	P-12348	Bumper, floor nozzle, 7420
A15	P-12349	Lower Housing, floor nozzle, 7420
A16	P-416	Screw, 7420, 10 pk
A17	P-12350	Hose Assembly, 7420
A17	P-97062	Hose Assembly, 8420,8430
A18	P-9840	Wand, curved
A19	P-164	Grip Cover
A20	P-9274	Spring Button
A21	P-542	Suction Regulator
A22	P-12354	Extension Wand
N/A		Label, 7420
P-614		Packing

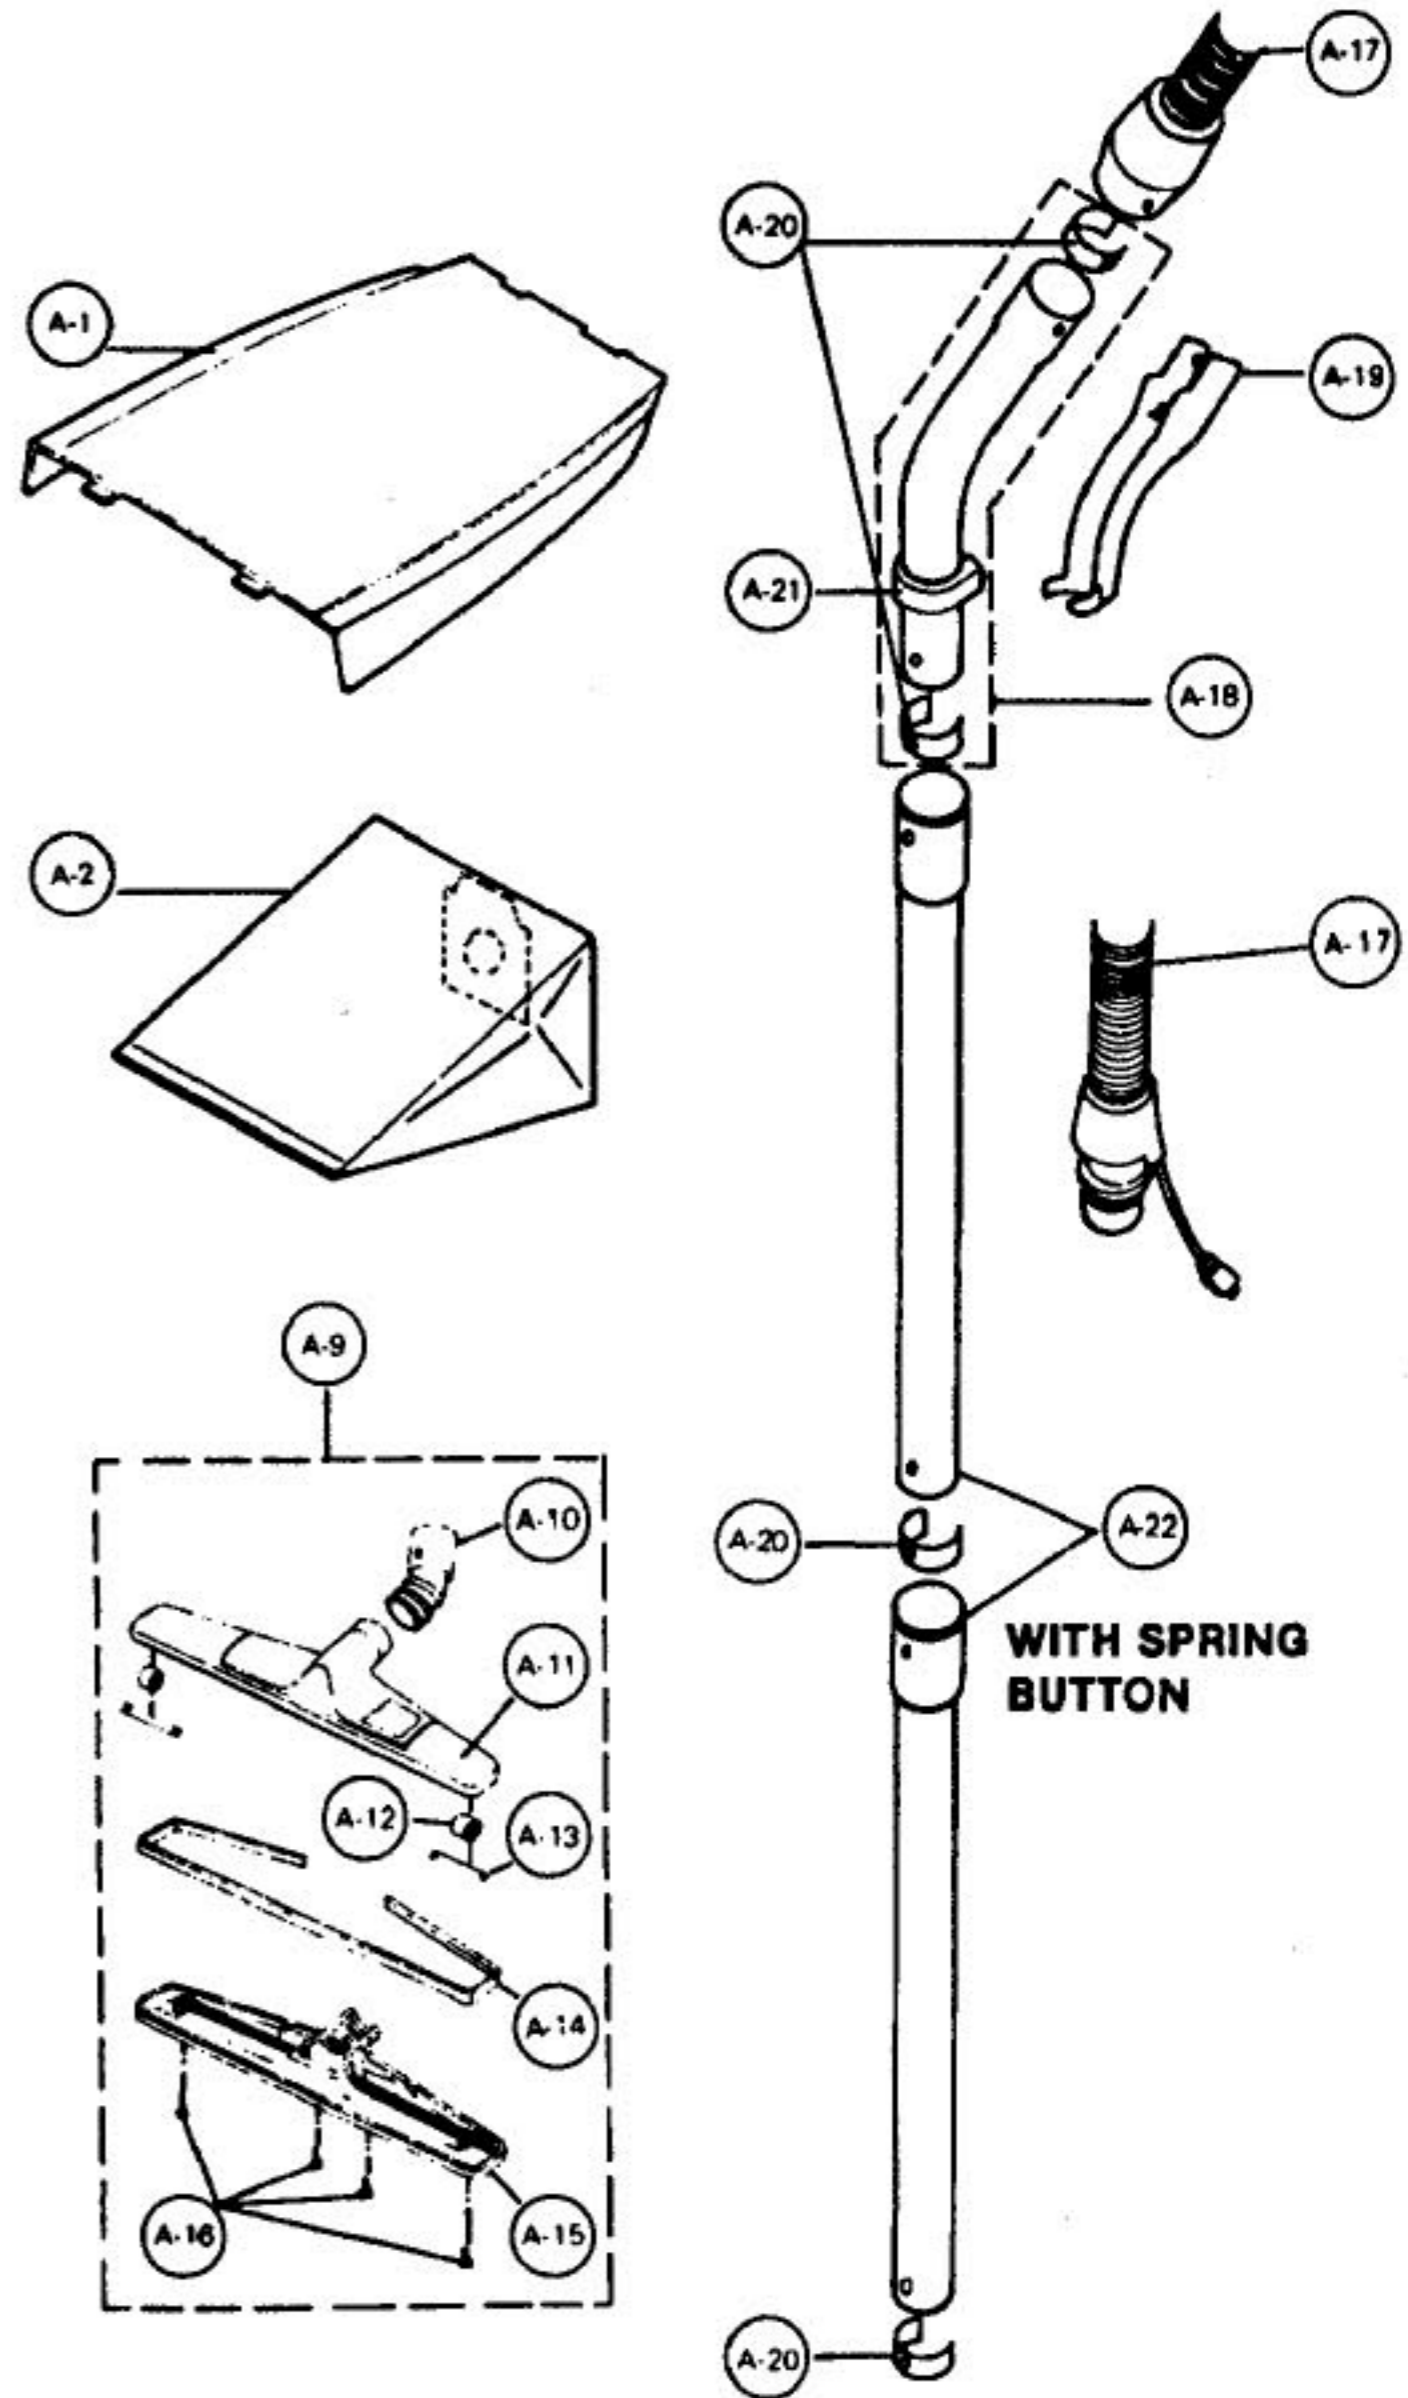

Models: MC-7420, MC-8420, MC-8430


Body Unit

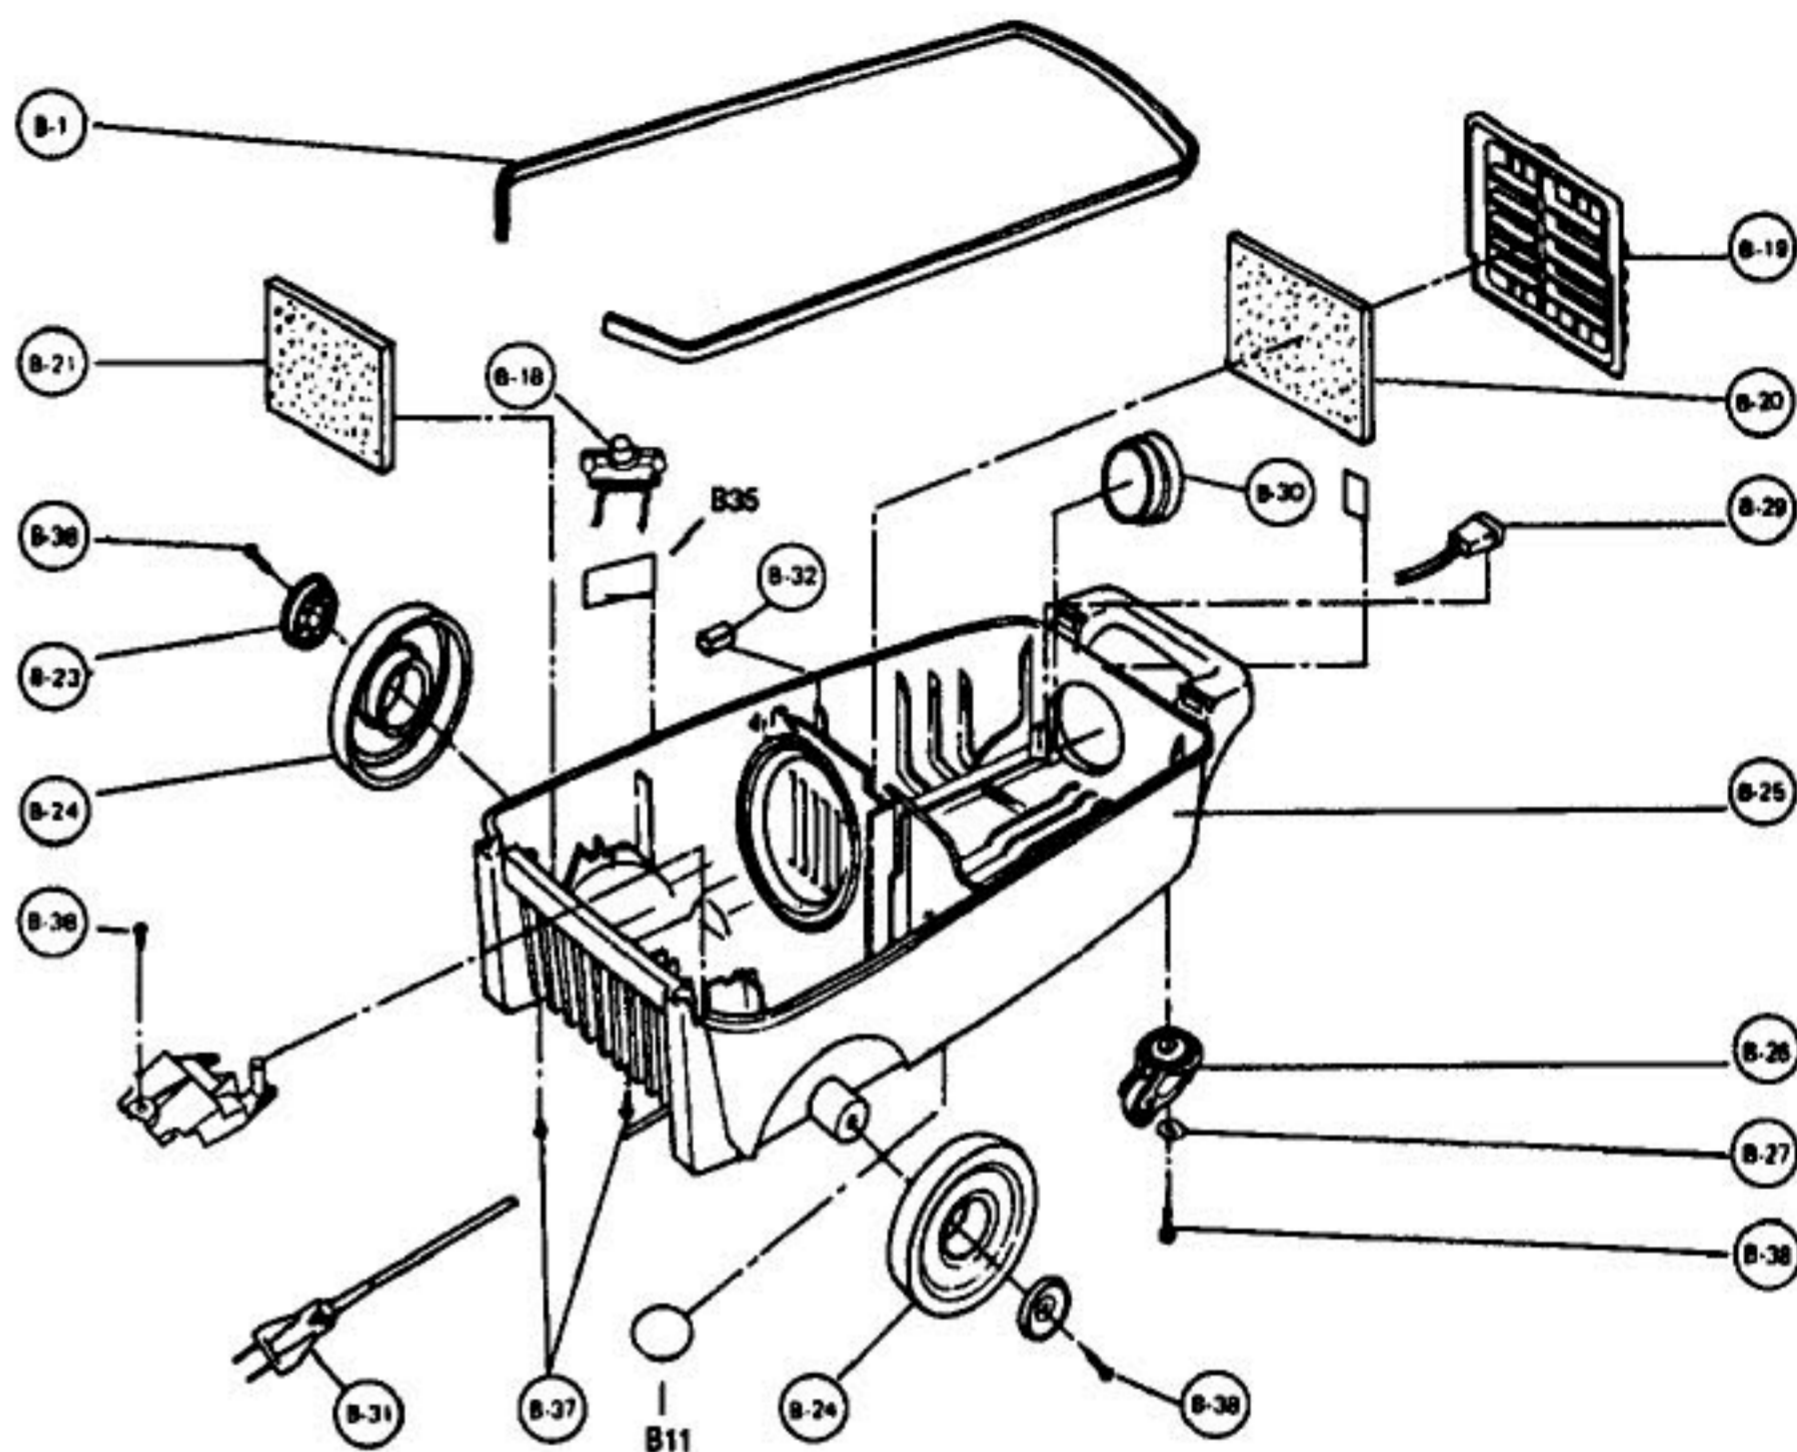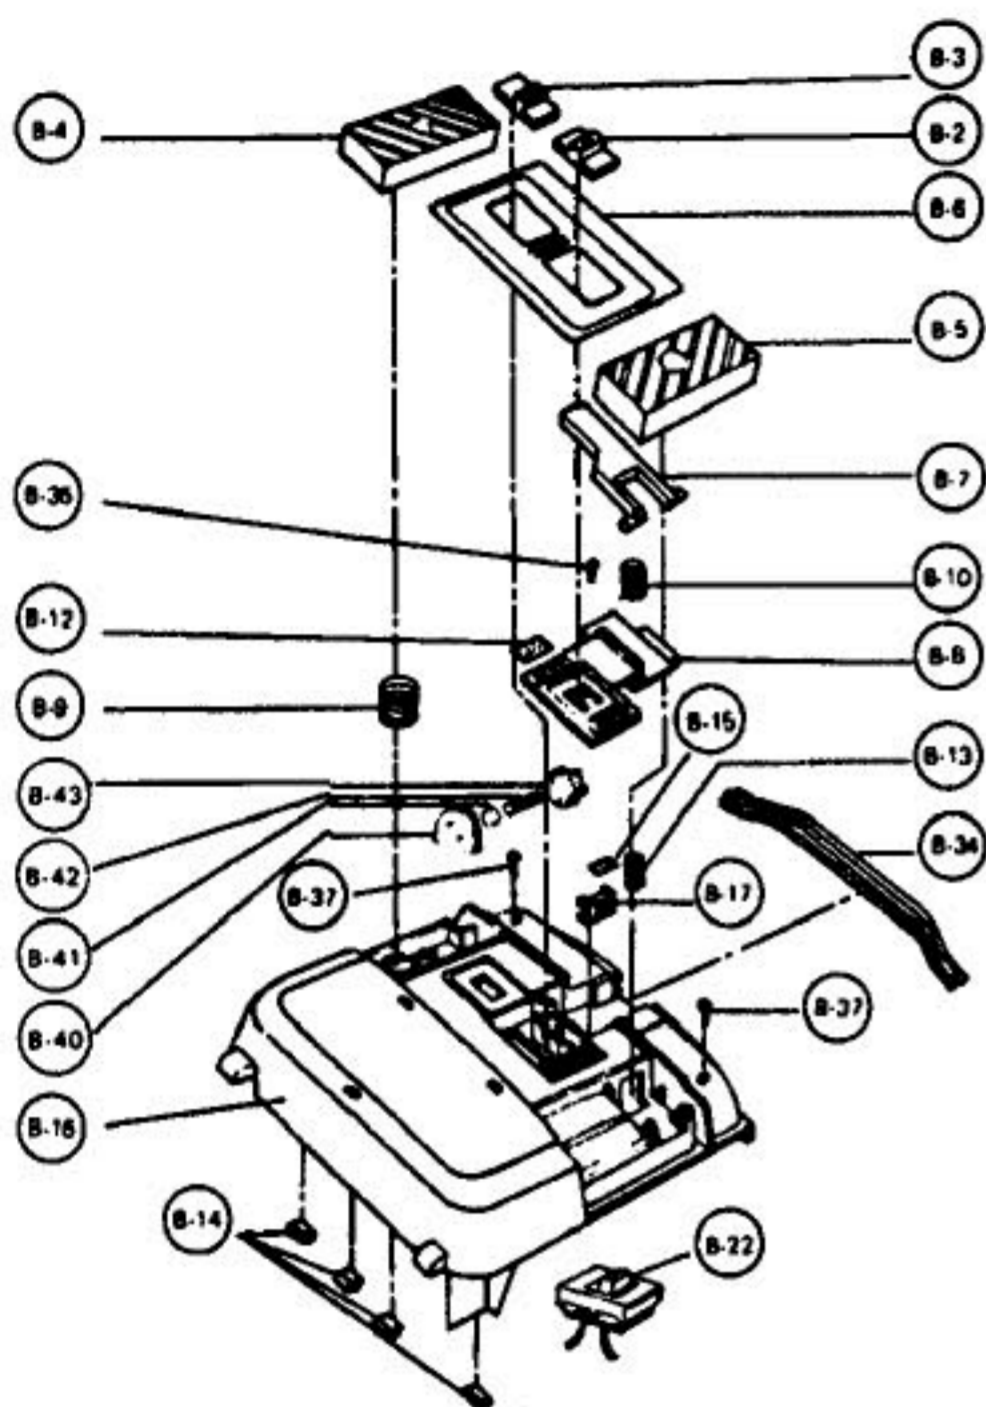

B1	N/A	Furniture Guard	B15	P-12374	Filter, indicator window	B31	N/A	Wire Connector, 8430
B2	P-0440	Knob, power selector	B16	P-02401	Upper Body	B32	P-12387	Tight Packing, 7420
B3	P-0610	Knob, full bag alarm	B17	P-4340	Alarm Blade			N/A	Tight Packing, 8420,8430
B4	P-0510	Button, on / off	B18	P-986	Switch, on/off			P-0620	Body Plate, 7420
B5	P-4610	Button, cord rewind	B19	P-312	Supporter, filter	B34	P-12390	Body Packing
B6	P-0260	Ornamental Plate, 7420	B20	P-302	Filter	B35	P-0594	Sticker
B6	N/A	Ornamental Plate, 8420	B21	P-12379	Filter, rear	B36	P-2461	Screw
B6	N/A	Ornamental Plate, 8430	B22	P-12380	Switch, power control, 8430	B37	P-418	Screw
B7	P-12366	Brake Arm			P-095	Wheel Cap	B38	P-000132	...	Screw
B8	P-19000	Protector Cover	B24	P-01090	Wheel	B40	P-1820	Protector Support
B9	P-0810	Spring, switch	B25	P-03001	Lower Body	B41	P-000058	...	Protector
B10	P-12369	Spring, brake arm	B26	P-956	Caster	B42	P-70600	Spring, protector
B11	P-3020	Sticker	B27	P-2601	Washer, caster	B43	P-000056	...	Case, protector
B12	P-12371	Indicator Filter	B29	P-632	Power Head Outlet, 8420,8430					
B13	P-12372	Spring, cord rewind button	B30	P-642	Suction Inlet Fitting					
B14	P-12373	Tight Packing										


Models: MC-7420, MC-8420, MC-8430

Cord Reel Unit

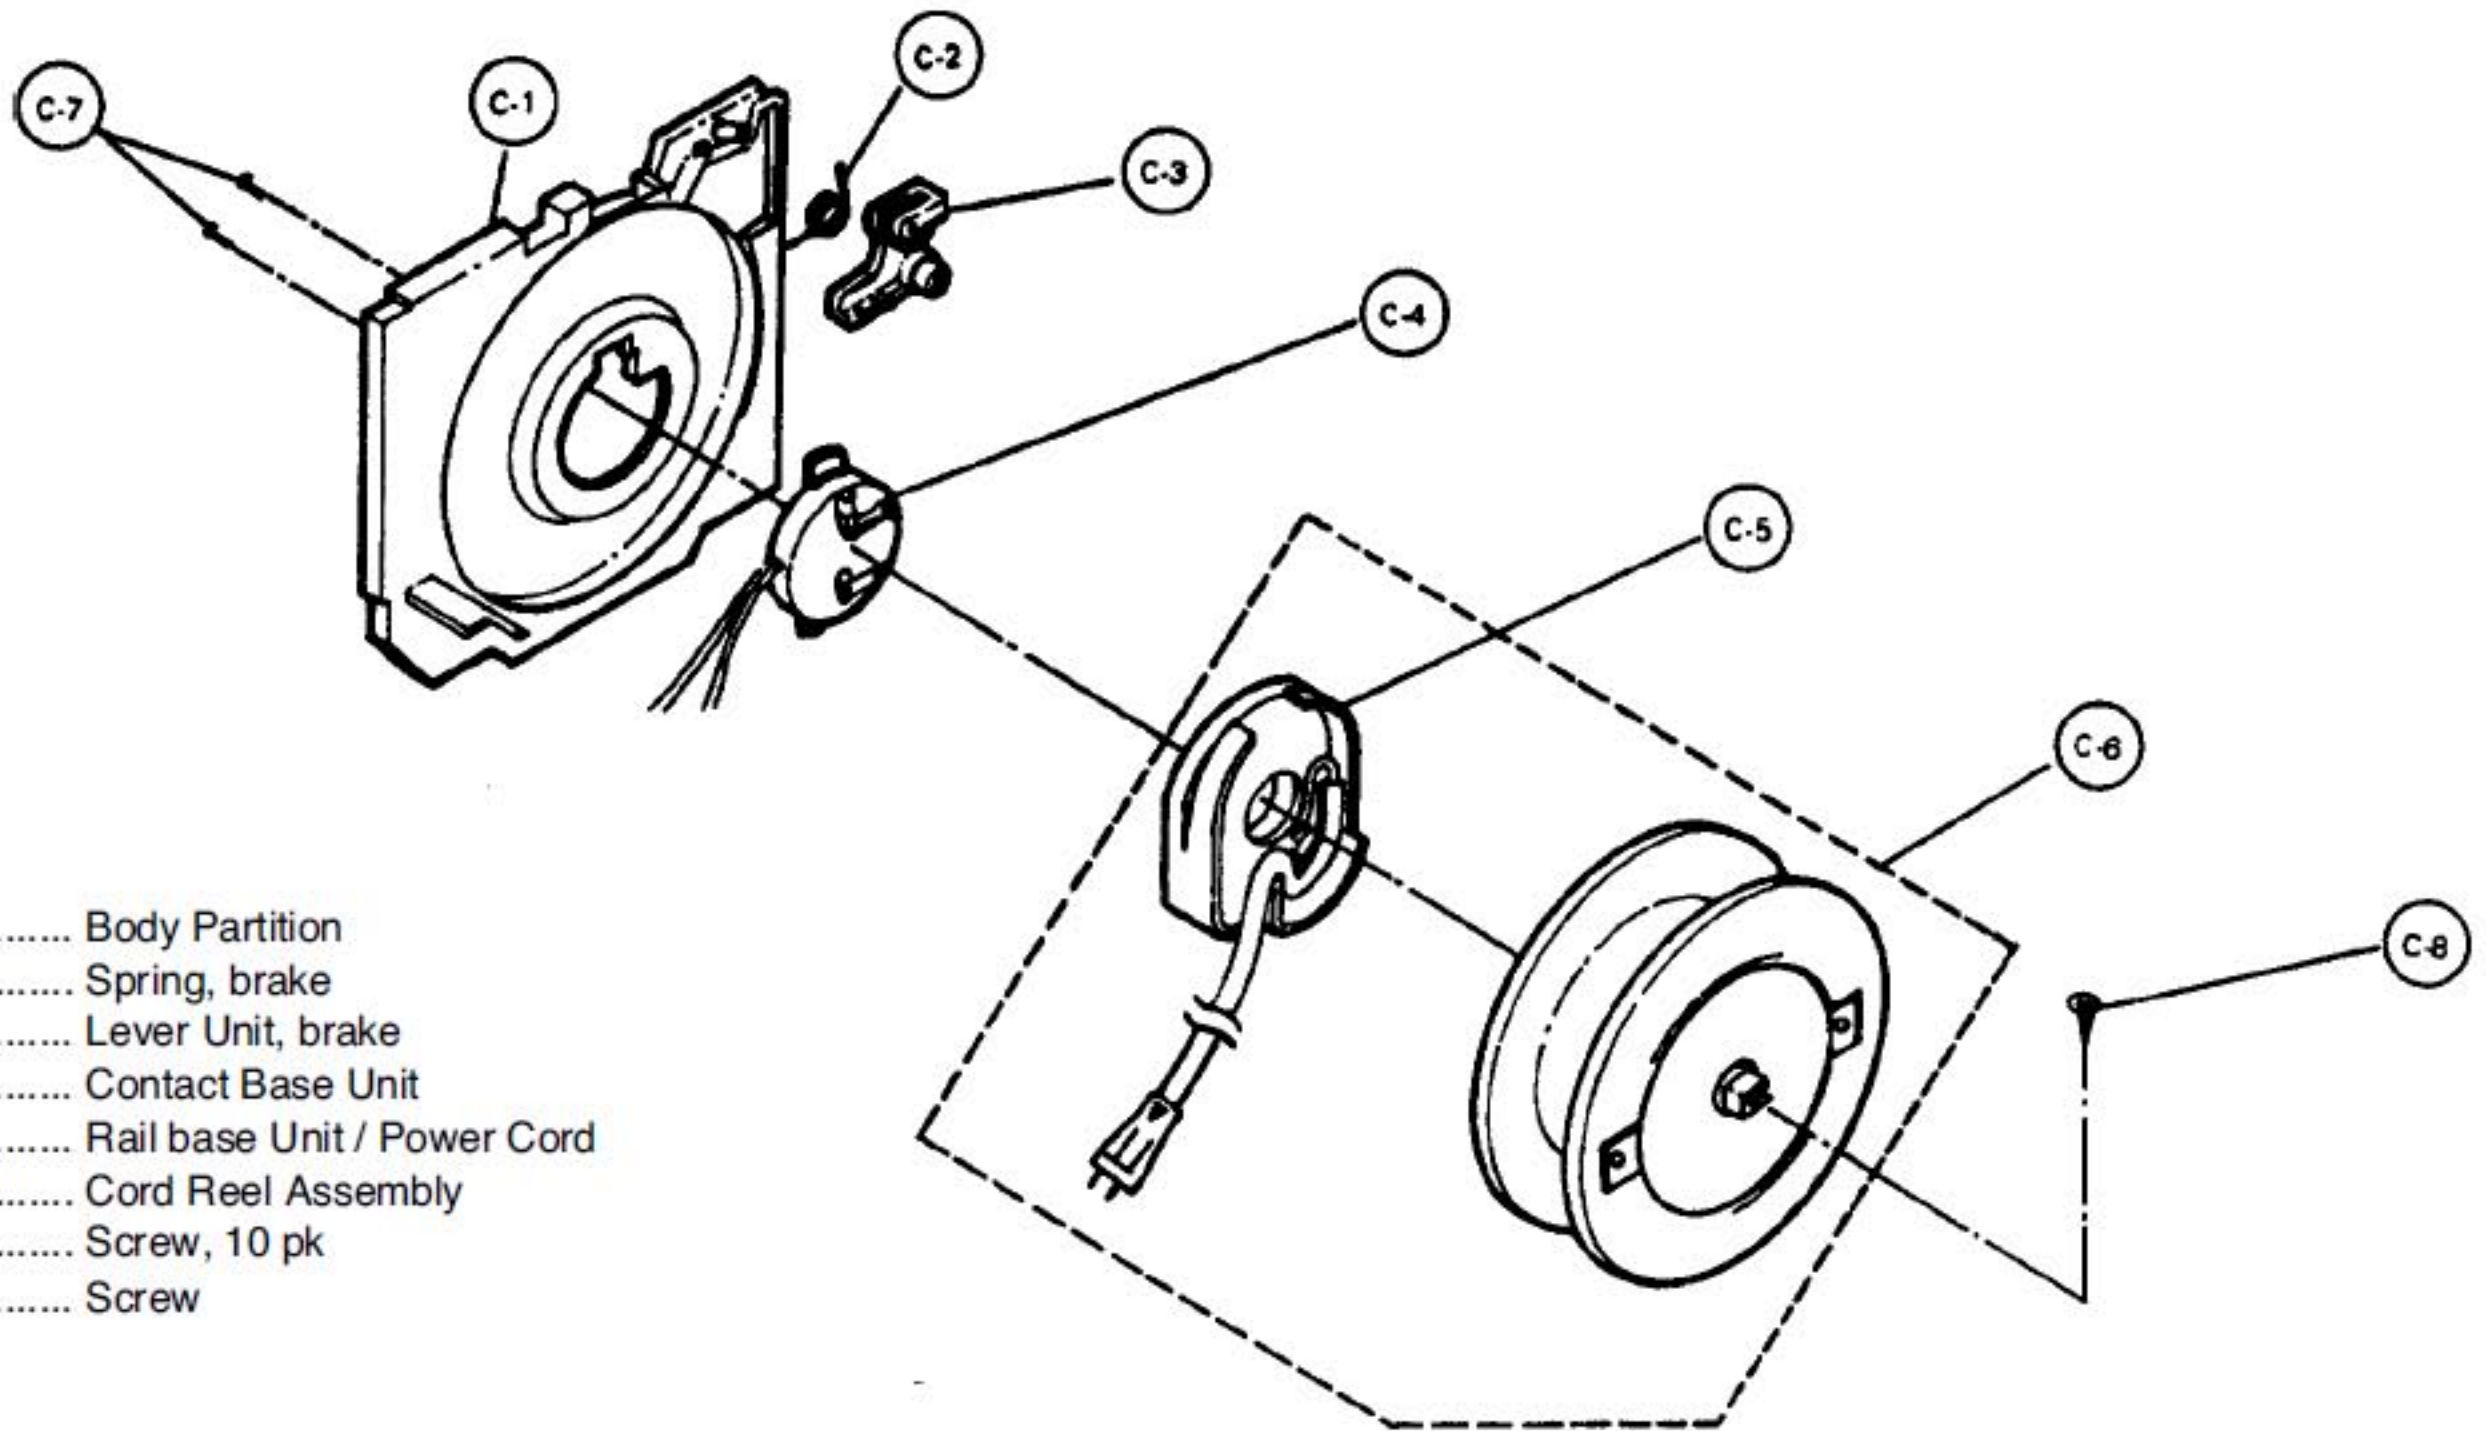

- C1 P-12395 Body Partition
- C2 N/A Spring, brake
- C3 P-12397 Lever Unit, brake
- C4 P-12398 Contact Base Unit
- C5 P-12399 Rail base Unit / Power Cord
- C6 N/A Cord Reel Assembly
- C7 P-416 Screw, 10 pk
- C8 P-12400 Screw

Motor Assembly

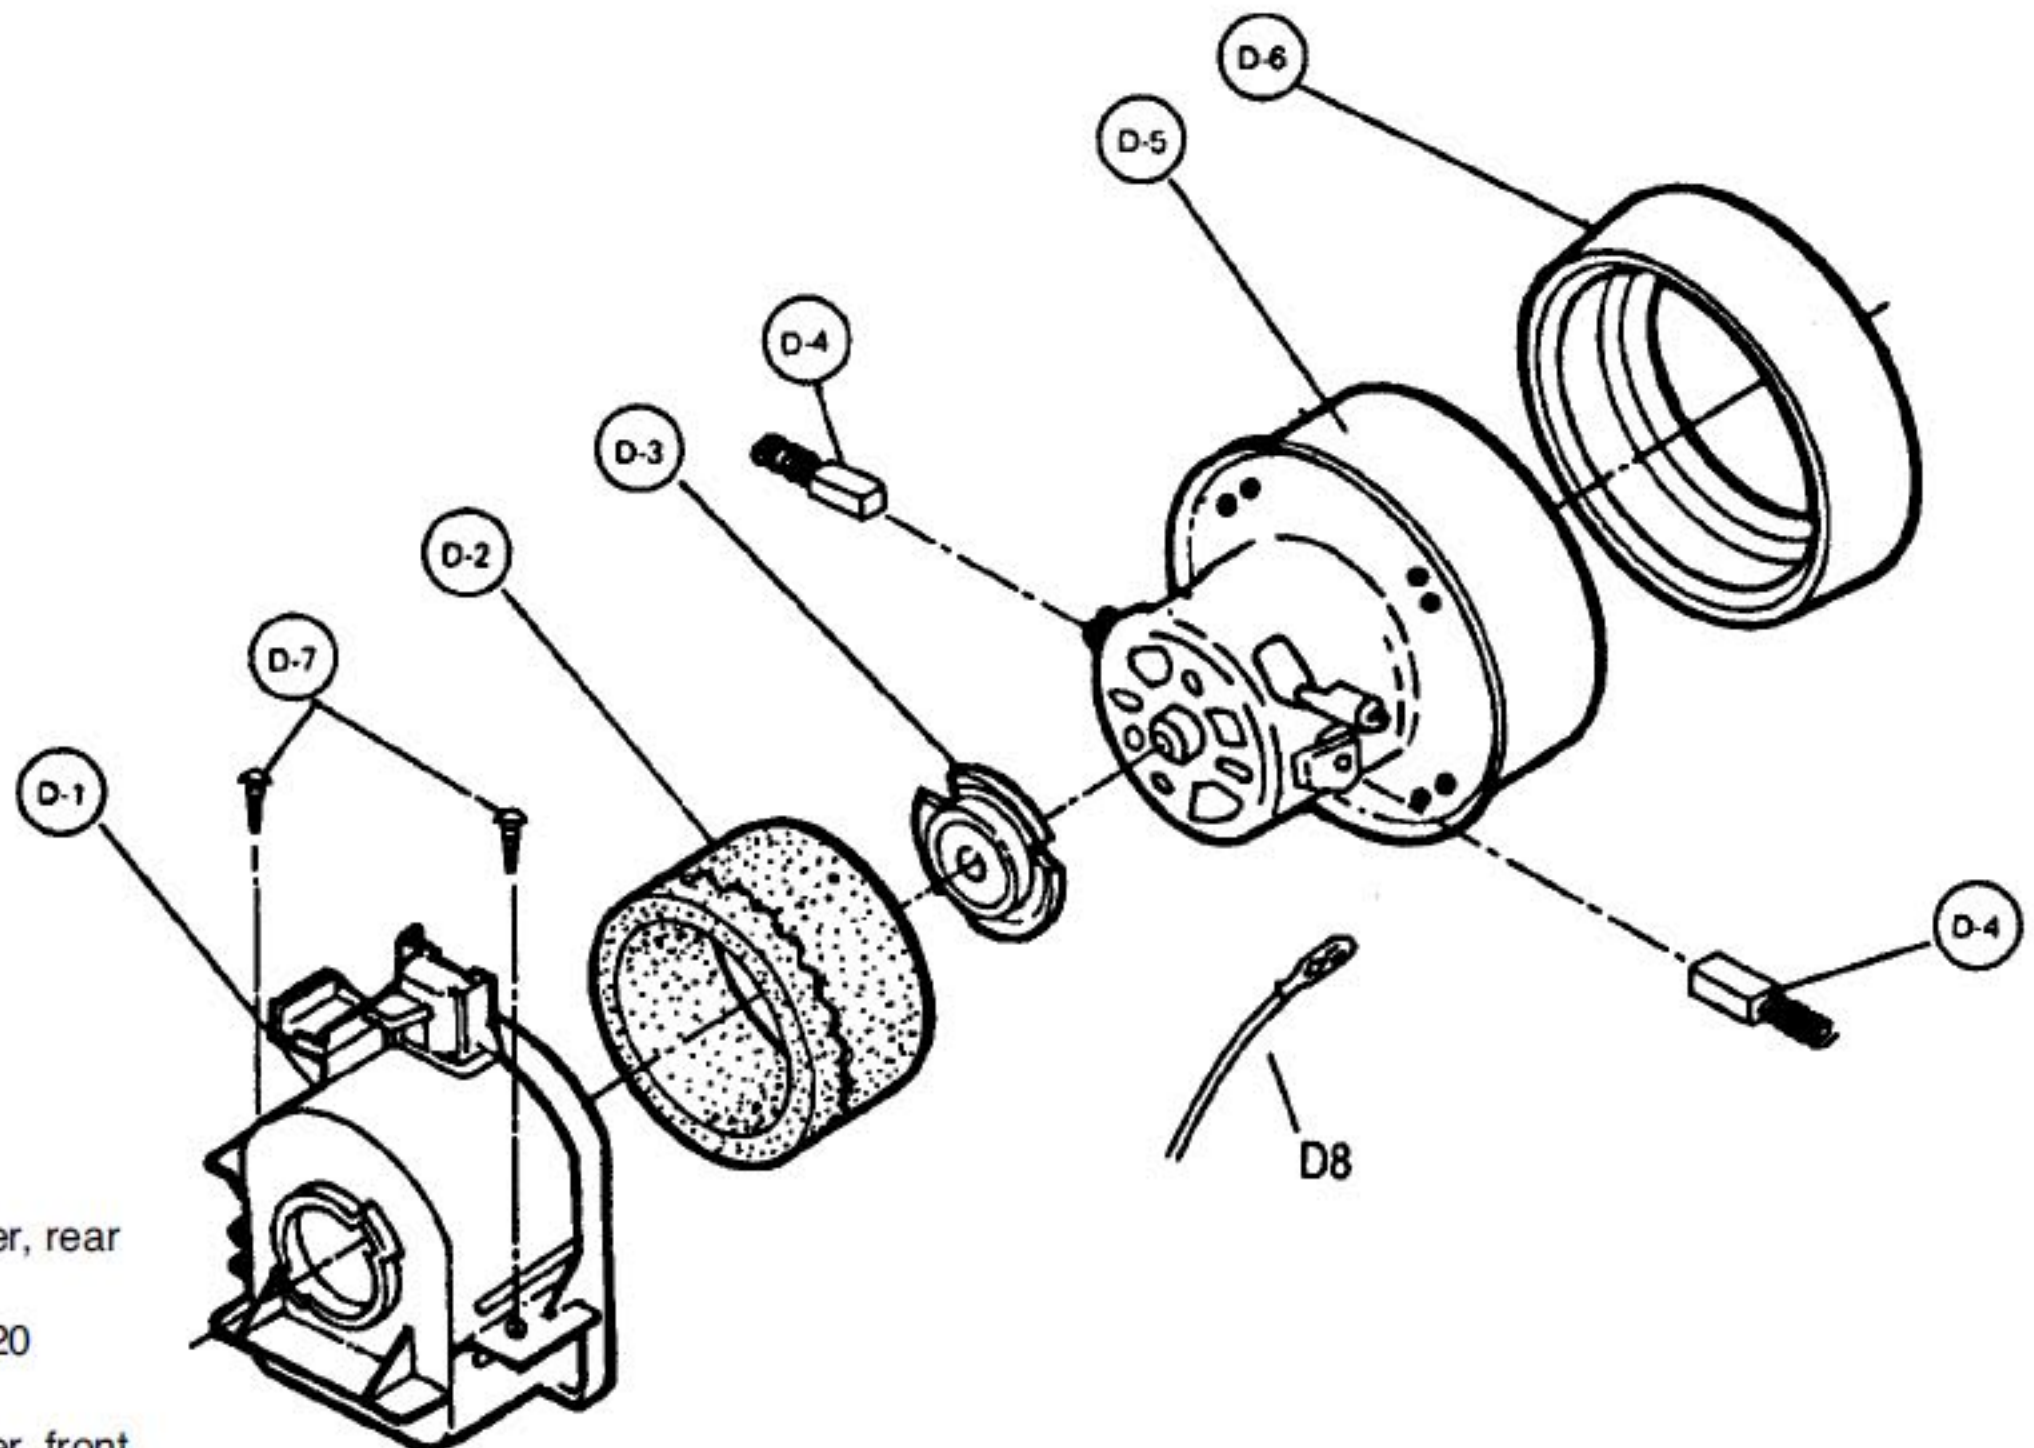


- D1 P-12401 Motor Cover
- D2 P-12402 Noise Suppressor
- D3 P-039 Motor Support, rubber, rear
- D4 P-272 Carbon Brush
- D5 P-92400 Motor Assy, 7420, 8420
- D5 P-927 Motor Assy, 8430
- D6 P-12405 Motor Support, rubber, front
- D7 P-416 Screw, 10 pk
- D8 P-3104 Lead Wire
- D8 P-4804 Lead Wire, brown, 8430

Models: MC-8420, MC-8430

Power Nozzle

E1	P-124078	Top Mark
E2	P-12098	Body
E3	P-12410	Packing, body
E4	P-12411	Furniture Guard
E5	N/A	Pipe Connector
E6	P-12413	Joint Pipe
E7	P-12414	Filter
E8	N/A	Motor Assembly, power nozzle
E9	P-12416	Motor Support, rubber, upper
E10	P-12417	Cover, motor support
E11	P-280	Belt, 2 pack
E11	P-100	Belt, 2 pack (R)
E12	P-12418	Stop Spring, pipe
E13	P-81	Tight Packing
E14	N/A	Bottom Cover
E15	P-909	Roller, floor nozzle
E16	P-12420	Shaft, floor nozzle roller
E17	N/A	Roller
E18	P-12422	Shaft, roller
E19	P-12423	Rubber, floor nozzle
E20	P-02	Motor Support, rubber, front
E21	P-394	Power Cord
E22	SS-34	Cord Bushing, sold each (R)
E23	P-430	Screw
E24	P-413	Screw
E25	P-03	Motor Support, rubber, rear
E26	P-12428	Screw

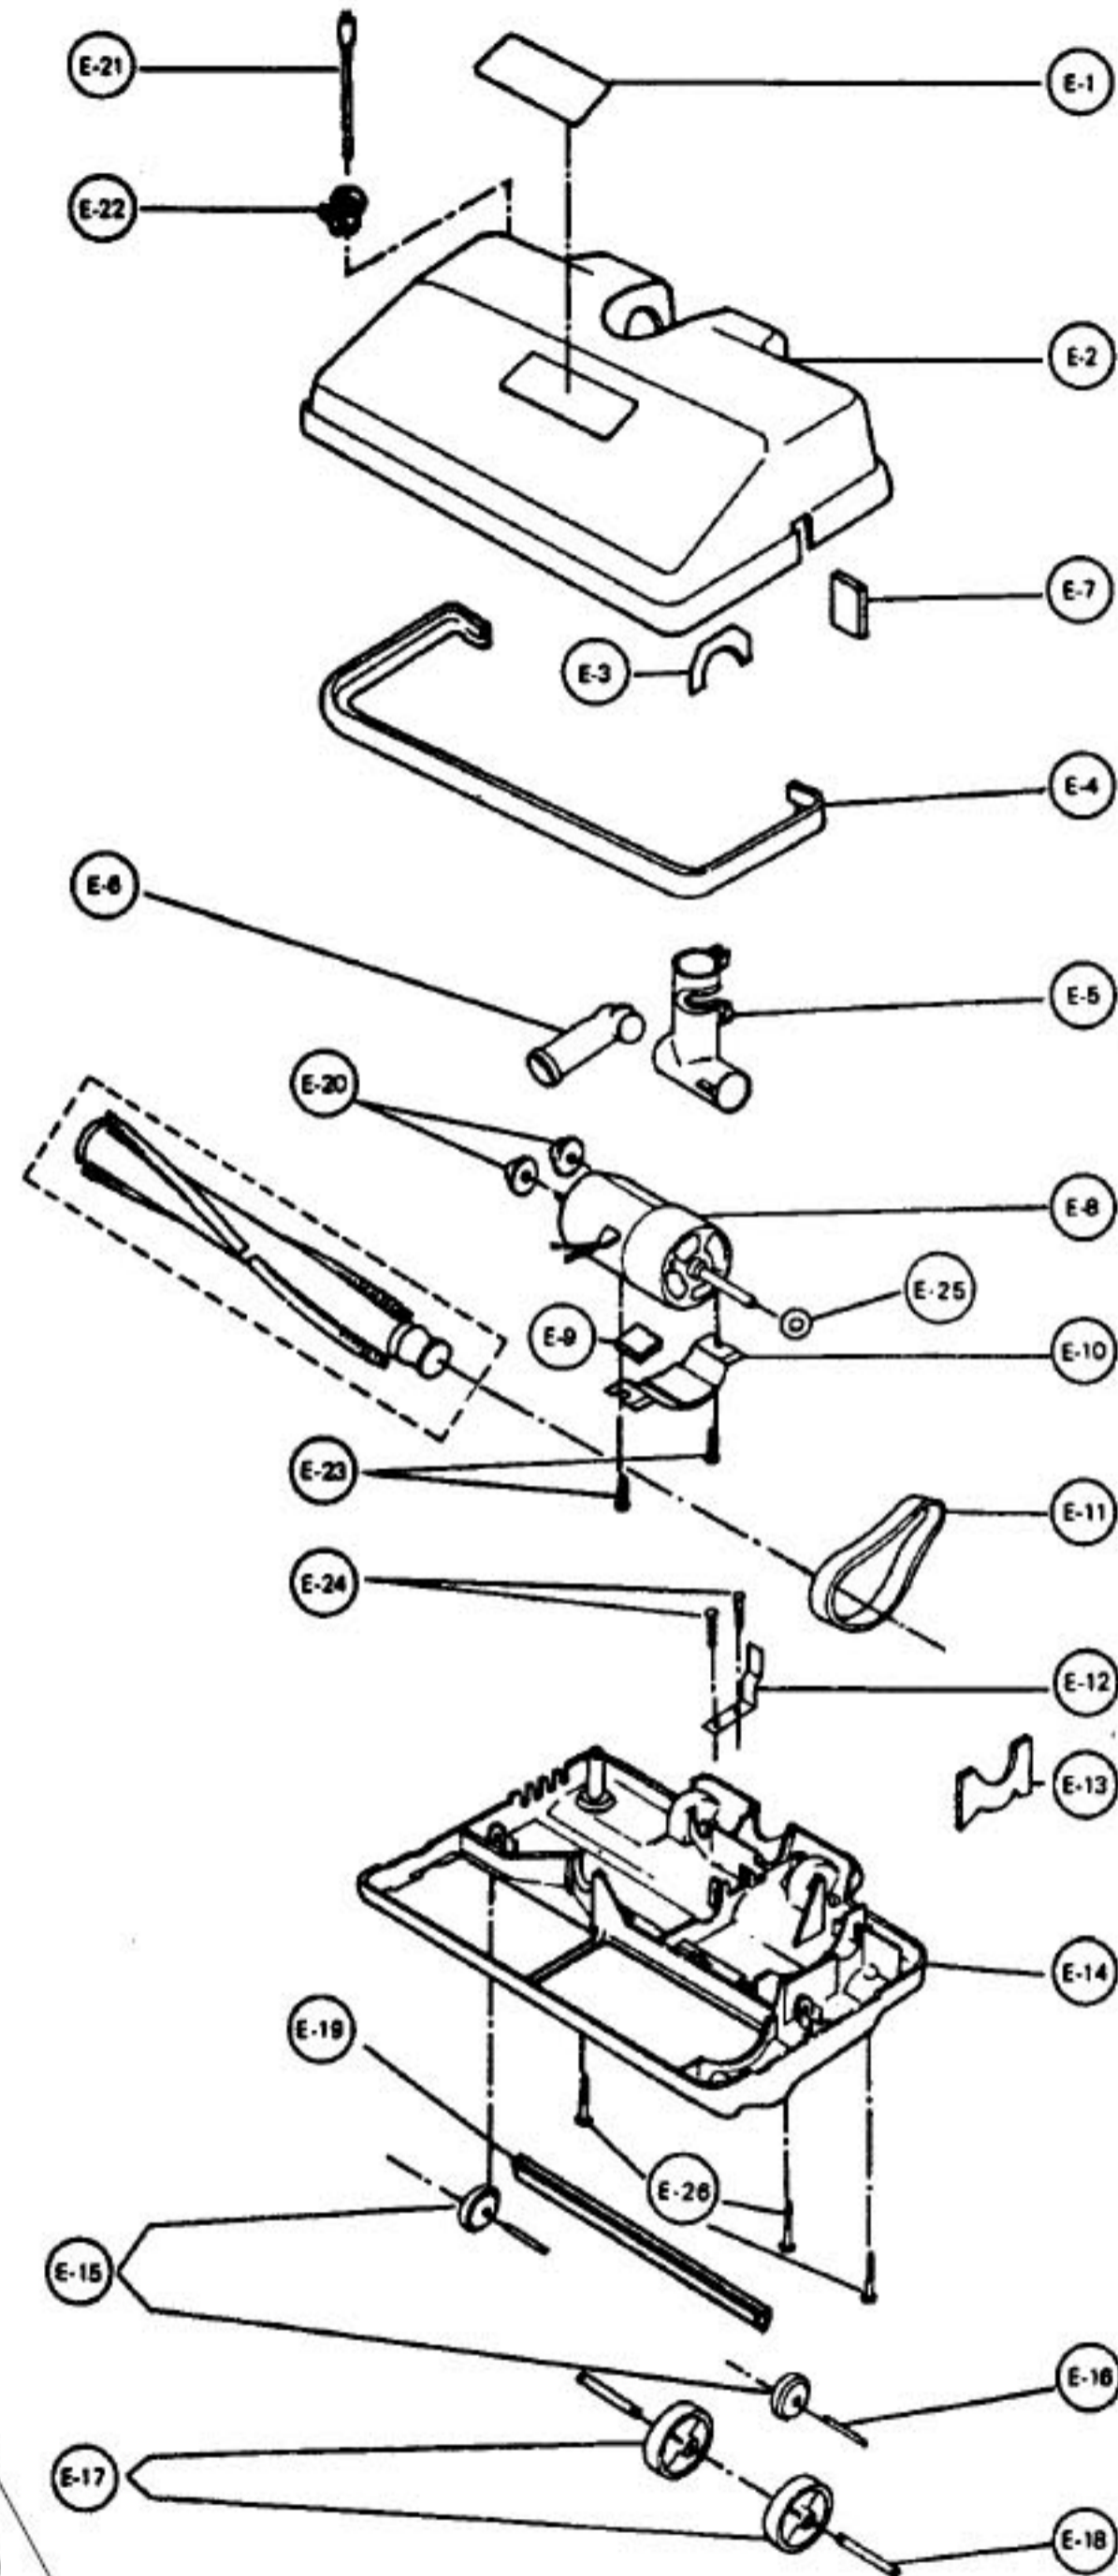

Agitator Assembly

F2	P-05	E-Clip, 30 pk
F3	P-74	Spacer
F4	P-85	Brush Strip, 4 pcs used
F4	P-425	Brush Strip, pair (R)
F5	N/A	Agitator Pulley, w/ bearing
F6	P-4101	Agitator Holder, w/ bearing
F7	P-321	Filter
F8	N/A	End Cap, left
F9	P-00125	End Cap, right
F10	P-57	Agitator Shaft
F11	P-12355	Agitator Body

