


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://ApplianceFactoryParts.com).



PANASONIC V9626 Owner's Manual

[Shop genuine replacement parts for PANASONIC V9626](#)

Power Nozzle and Agitator Assembly

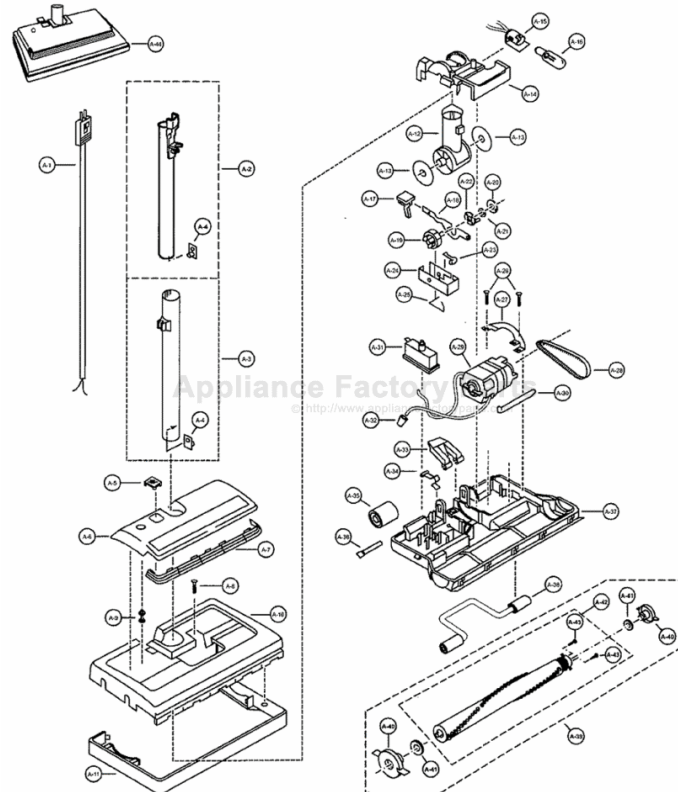


[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----


PANASONIC

Models: MC-V9626


Power Nozzle and Agitator Assembly

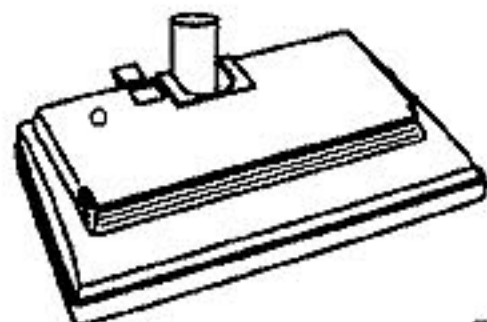

A-44

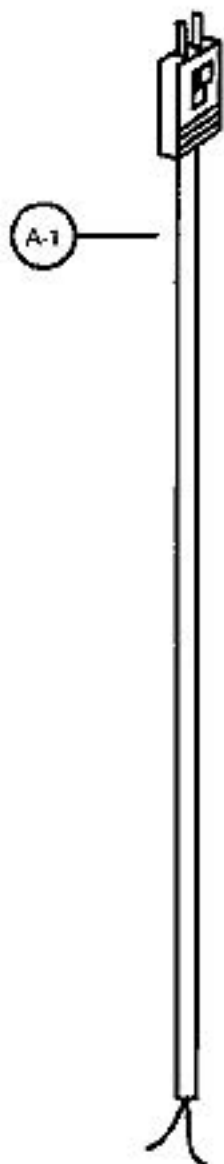


A-1

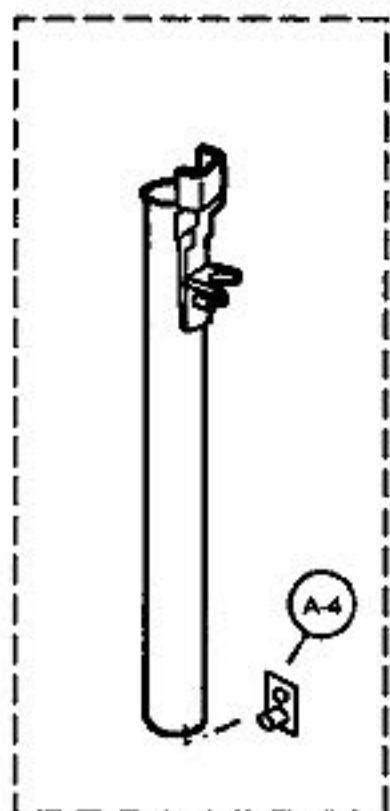


A-2

A-4

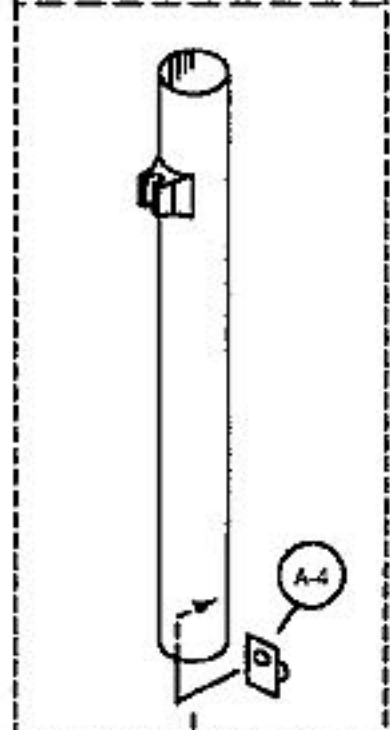

A-3

A-4

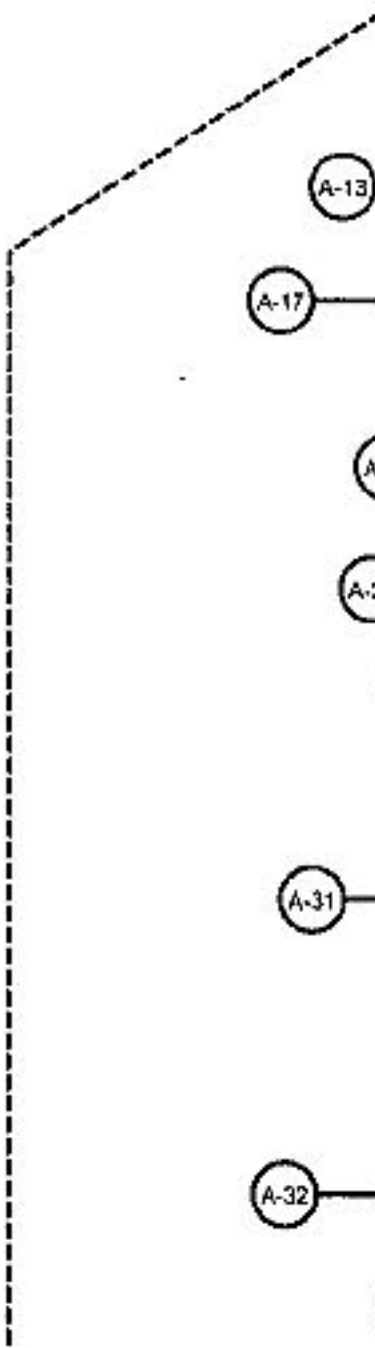

A-13

A-17

A-31

A-32

PANASONIC

Models: MC-V9626

Power Nozzle and Agitator Assembly

1	P-111527	Cord unit	24
2	P-111528	Wand assembly, upper	25
3	P-11191	Wand assembly, lower	26
4	P-000372	Lock, spring wand	27
5	P-000124	Lens, height adjustment	28
6	P-111529	Power head cover	29
7	P-00126	Lens, light cover	30
8	P-00036	Screw, nozzle cover	31
9	P-00127	Extension, button	32
10	P-111530	Cover, nozzle	33
11	P-111531	Guard, furniture	34
12	P-111400	Swivel	35
13	P-00128	Seal, swivel	36
14	P-111537	Swivel cap	37
15	P-111533	Socket, bulb	38
16	P-00075	Bulb, headlight	39
17	P-11107	Pad, foot pedal	40
18	P-00129	Lever, indicator	41
19	P-1111397	Cam, indicator	42
20	P-00130	Washer, thrust	43
21	P-00131	Washer	44
22	P-00132	Catch, indexing	
23	P-00078	Ratchet, catch	

Canister and Motor Assembly (next page)

1	P-1115367	Canopy cover	
2	P-111538	Frame, cord lock	
3	P-111539	Button, toggle	
4	P-00058	Spring, cord lock	
5	P-00055	Switch, toggle	
6	P-00052	Lead switch black	
7	P-00050	Filter, rear exhaust	
8	P-00049	Motor protector (shield)	
9	P-000104	Tie, cable	
10	P-11137	Screw	
11	P-00048	Plate, motor mount	
12	P-00044	Mount, motor	
13	P-11136	Motor	
14	P-111540	Brush, motor	
15	P-00039	Cord lock	

PANASONIC

Models: MC-V9626

Power Nozzle and Agitator Assembly

