


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



# PANASONIC MC-1050 Owner's Manual

[Shop genuine replacement parts for PANASONIC  
MC-1050](#)

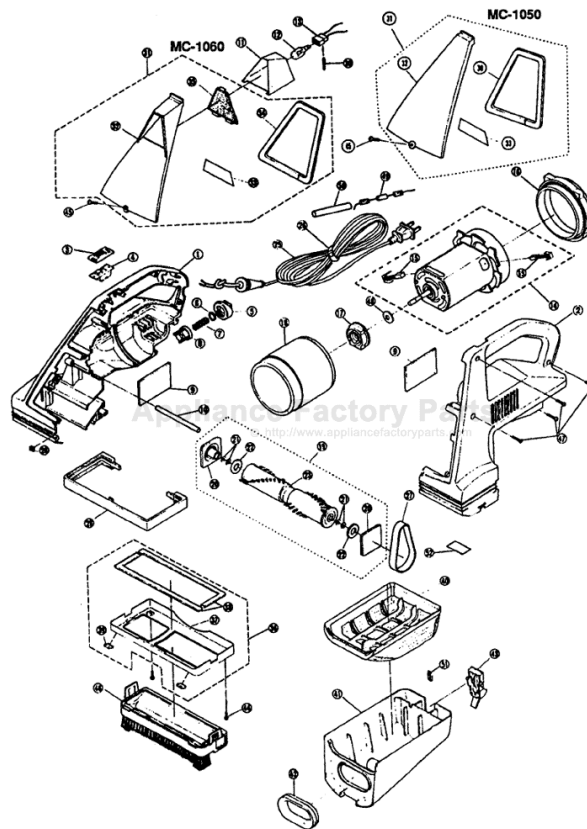

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

# PANASONIC

MC-1050 (1 speed), MC-1060 (2 speed w/ headlight)

- 1 ..... P-2343 ..... Body, right, 1050
- 1 ..... P-2344 ..... Body, right, 1060
- 2 ..... P-2240 ..... Body, left, 1050
- 2 ..... P-2241 ..... Body, left, 1060
- 3 ..... Switch Lever, 1050
- 3 ..... Switch Lever, 1060
- 4 ..... P-0145 ..... Switch, on / off, 1050
- 4 ..... P-0146 ..... Power Switch, 1060
- 5 ..... P-184 ..... Protector Support
- 6 ..... Protector
- 7 ..... Spring, protector
- 8 ..... P-6840 ..... Protector Case
- 9 ..... P-0248 ..... Packing, rear cover
- 10 ..... Stopper
- 11 ..... Reflector, 1060
- 12 .... P-284 ..... Bulb, 1060
- 13 ..... Bulb Socket, 1060
- 14 .... P-9245 ..... Motor Assy, 1050
- 14 .... P-9246 ..... Motor Assy, 1060
- 15 .... P-2740 ..... Carbon Brush, 2 used
- 16 .... P-0249 ..... Motor Support, front
- 17 .... P-0344 ..... Motor Support, rear
- 18 .... P-9941 ..... Noise Absorber
- 19 .... N/A ..... Agitator Assembly
- 20 .... N/A ..... End Cap
- 21 .... P-584 ..... Agitator Washer
- 22 .... P-3044 ..... Filter, agitator
- 23 .... P-8441 ..... Agitator
- ..... Cord Bushing
- 25 .... P-9741 ..... Cord, 1050
- 25 .... P-9742 ..... Cord, 1060
- 26 ..... Cord Band, 1050
- 26 ..... Cord Band, 1060
- 27 .... P-MC250B . Belt, 2 pack
- 28 .... NLA ..... Nut
- 29 .... P-3141 ..... Furniture Guard

