


This Owner's Manual is provided and hosted by [Appliance Factory Parts](http://www.appliancefactoryparts.com).



PANASONIC MC-1060 Owner's Manual

[Shop genuine replacement parts for PANASONIC
MC-1060](#)

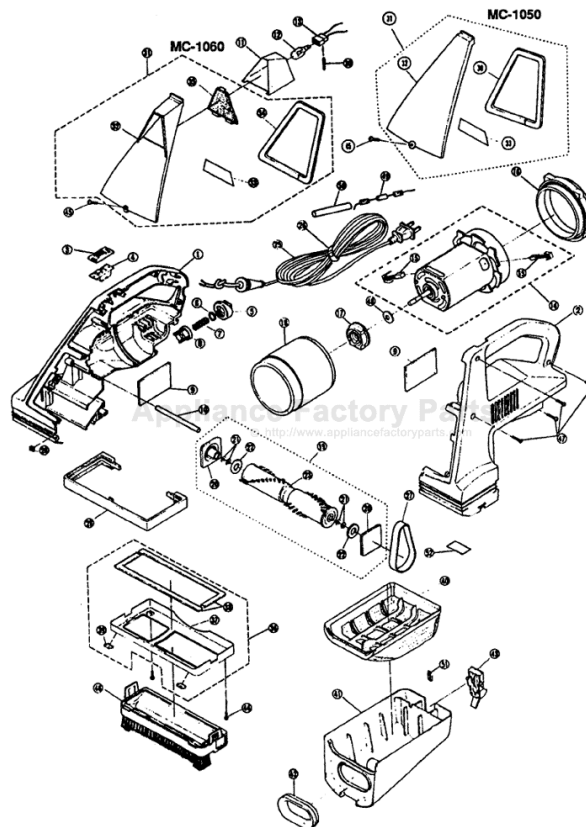

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)

----- Manual continues below -----

PANASONIC

MC-1050 (1 speed), MC-1060 (2 speed w/ headlight)

- 1 P-2343 Body, right, 1050
- 1 P-2344 Body, right, 1060
- 2 P-2240 Body, left, 1050
- 2 P-2241 Body, left, 1060
- 3 Switch Lever, 1050
- 3 Switch Lever, 1060
- 4 P-0145 Switch, on / off, 1050
- 4 P-0146 Power Switch, 1060
- 5 P-184 Protector Support
- 6 Protector
- 7 Spring, protector
- 8 P-6840 Protector Case
- 9 P-0248 Packing, rear cover
- 10 Stopper
- 11 Reflector, 1060
- 12 P-284 Bulb, 1060
- 13 Bulb Socket, 1060
- 14 P-9245 Motor Assy, 1050
- 14 P-9246 Motor Assy, 1060
- 15 P-2740 Carbon Brush, 2 used
- 16 P-0249 Motor Support, front
- 17 P-0344 Motor Support, rear
- 18 P-9941 Noise Absorber
- 19 N/A Agitator Assembly
- 20 N/A End Cap
- 21 P-584 Agitator Washer
- 22 P-3044 Filter, agitator
- 23 P-8441 Agitator
- Cord Bushing
- 25 P-9741 Cord, 1050
- 25 P-9742 Cord, 1060
- 26 Cord Band, 1050
- 26 Cord Band, 1060
- 27 P-MC250B . Belt, 2 pack
- 28 NLA Nut
- 29 P-3141 Furniture Guard

